



SIMPLE OWNER'S MANUAL

LG CHROMEBOOK 11TC50Q

For the safe and convenient use of the product, please read this simple owner's manual before use.



MFL71885625

www.lg.com

Copyright © 2023 LG Electronics Inc. All Rights Reserved

Table of Contents

Precautions before Product Use	1
User Manual Guide	1
Checking the Components	1
Product Tour	1
Power Connection	2
Turning on the System	3
Turning off the System	3
Initial Chromebook Settings	3
Lock/Unlock your Chromebook	4
Using Tablet Mode	4
Adjusting Screen Brightness	4
Adjusting the Volume	4
Using Keyboard	5
Touch Screen	6
Touchpad	6
Using Stylus Pen	7
Pre-Tech Support Checklist	8
Important Safety Precautions	9
Appendix	14
Registered Trademark Information	14

Precautions before Product Use

Any malfunction of an eMMC-built-in model may cause the loss of stored data. You must back up all critical user data to an external storage device (USB HDD, memory card, etc.).

If you shut the system down before it is completely loaded, the product may not shut down properly. Shut down the system after it is completely loaded. (It takes about one or two minutes to completely load the system and may vary depending on the conditions.)

Depending on the product specifications, some games (online, 3D or 2D) may not be supported and you may experience skipped video during the playback of some high definition video (full HD and HD-level video, etc.).

Use, duplication or reproduction of any part of Simple Owner's Manual without prior permission from LG Electronics Inc. is strictly prohibited.

If the user arbitrarily changes parts of the Chromebook, Chrome OS update may not be supported or problems may occur while using the product.

The images in the Simple Owner's Manual may differ depending on the language selected and are subject to change without prior notice.

User Manual Guide

For details on how to use the product, refer to the User Manual (online manual) and the Explore app.

For more information and questions about Chrome OS, go to <https://support.google.com/chromebook>.

Checking the Components

The components shown below are provided when you purchase the product. Check the components before use.

- When cleaning the product, use a cleaning agent dedicated to the Chromebook. If you use thinner, benzene, alcohol or other similar agent, the product may be damaged or deformed.



Chromebook Main Body



Simple Owner's Manual



AC Adapter



 
Power Cable



Stylus Pen ¹



Stylus Pen holder ¹




Stylus Pen charging cable ¹

¹ It may not be available depending on the model.


Product Tour

 Front

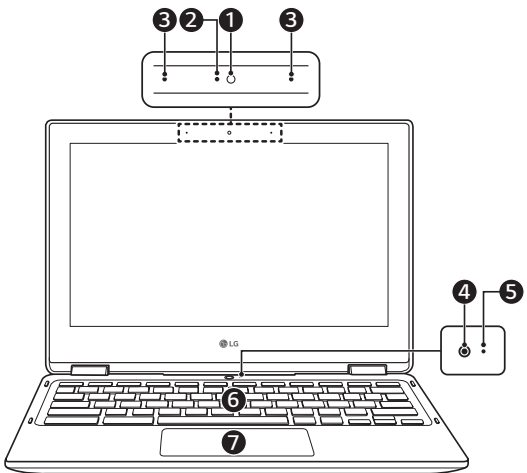


- | | |
|--------------------------------------|---|
| ① Front camera | ⑤ Rear world-facing camera
Operation status lamp |
| ② Front camera operation status lamp | ⑥ Keyboard |
| ③ Built-in Microphone | ⑦ Touchpad |
| ④ Rear world-facing camera | |

 
Left



Right

 

Back

 

- | | |
|--|--|
| 1 Security Keyhole
(Kensington Security Slot) | 6 Built-in Speakers |
| 2 USB Port (USB 3.2 Gen 1x1 ¹) | 7 microSD Card Slot |
| 3 USB-C™ Port ²
(USB 3.2 Gen 1x1 ¹ / Power port) | 8 Headphone Port
(4-pole Ear Microphone Port ³) |
| 4 Power Button [] | 9 Portable handle |
| 5 Volume button | |

- 1 The names of USB versions have changed from USB 3.0 (or USB 3.1 Gen 1) and USB 3.1 (or USB 3.1 Gen 2) to USB 3.2 Gen 1x1 and USB 3.2 Gen 2x1. Devices that are not authorized with USB may not operate normally when connected to the USB port.

The transmission speed of a USB port may differ depending on the type of storage device (NVMe™, SSD, HDD, etc.) in the system and the connected USB device.

- 2 The USB-C™ port provides Quick Charging and Always-On Charging functions for devices that support USB PD (Power Delivery).

- 3 The 4-pole ear microphone port supports US 4-pole standards, but not the European 4-pole ear microphone.


When using ear microphone (or Bluetooth headset), audio input and output are directed to the connected device and the microphone and speaker on Chromebook do not work.

The 4-pole ear microphone port does not support external microphone.

Power Connection

The AC adapter is used to power and charge the Chromebook.

 - Do not use any other AC adapter than the one that was provided when you purchased this product.
- Connect an end of the cable to the AC adapter and the other end to a power outlet.
 - The AC adapter can be used from 100 V to 240 V.
 - Connect the AC adapter jack to the Chromebook USB-C™ port.
 - Ensure that the power jack linked to the AC adapter and product is connected firmly.

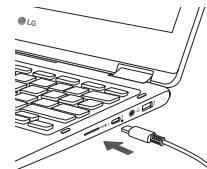

When the AC adapter is connected, the AC adapter lamp turns on.




Power Lamp	Status
Red	When the battery is charging
Blue	When the power is on or charging is complete
Off	When the power is off and the AC adapter is not connected
Blinking in red (on 1 second, off 3 seconds)	When the AC adapter is not connected in the sleep mode
Blinking in red (every 1 second)	If you need to replace the battery

- While the battery is in use, if there is no remaining battery and if the system is turned off, pressing the power button will not turn on the system. If this is the case, connect the AC adapter and charge the battery sufficiently before using the product.

Turning on the System

 Power is turned on automatically when you open the Chromebook cover.
(If the cover is open, press the power [] button to turn on the power.)

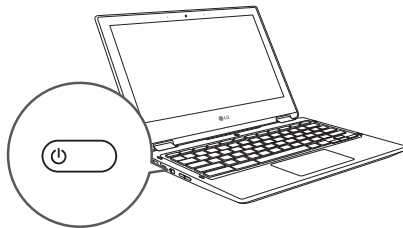

NOTE

- This product has a built-in battery pack. After purchasing your Chromebook, be sure to charge the battery pack completely before using it for the first time.

Turning off the System

Save all the work before turning off your Chromebook.

System Tray

Press [System Tray] at the bottom right of the screen, and then press the Power [] button.

Chromebook Power Button

- Press the power button of Chromebook for 3 seconds or longer.
- Press and hold the power button until the shutdown or logout menu appears.
- Press the power button for 1 second and press [Shut down] when the shutdown or logout menu appears.

Initial Chromebook Settings

To use a Chromebook, you must have a Google account and a wireless network with Internet access.

- Press the power [] button to turn on the computer.
- When the [Welcome to your Chromebook] screen appears, change the language and accessibility settings as needed.
- Click [Get started].
- Select a wireless network to connect.
- Proceed with the initial setup according to the instructions displayed on the screen.
- When the login screen appears, log in with your Google account.

NOTE

 
- If you do not have a Google account, you can create a Google account through [More options] > [Create account].

Lock/Unlock your Chromebook

- 1 If you press the Lock [] key on the keyboard for about 2 seconds, the Chromebook is locked.
- 2 Enter the password on the lock screen and press the [enter] key to unlock.

Using Tablet Mode

Unfold the Chromebook and rotate the screen as shown in the picture to use it in a tablet mode.

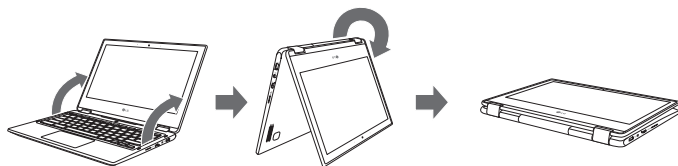

CAUTION

- When moving your Chromebook or putting it in a bag, close the Chromebook to protect the screen.

Adjusting Screen Brightness

Adjust the screen brightness depending on the usage environment.

Keyboard

 
Adjust the brightness using the Brightness down [] and Brightness up [] keys on the keyboard.

Adjusting the Volume

This allows you to easily adjust the volume when playing music or video.

Chromebook Button

Adjust the volume by pressing the volume control button on the left side of the Chromebook.

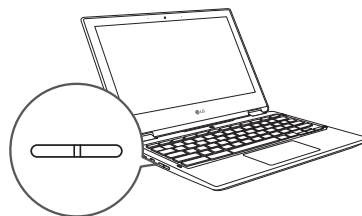

Keyboard

Use the Keyboard mute [], Volume down [], and Volume up [] keys to adjust the volume.

Using Keyboard

The keyboard allows the user to input data or give commands.

 CAUTION

- Spilling a watery substance like coffee or juice on the keyboard may cause a fault, malfunction, or electric shock.
- Some of the keys may not work properly when you use several keys at the same time while playing a game.
- Please change the key combination settings according to the combinations necessary for the game play or use an external keyboard dedicated for gameplay.

Hot Keys

You can use hot keys to use the Chrome OS function more conveniently.

Hot Keys	Function
	Previous
	Next
	Refresh the current page
	Display in the full screen
	Show all currently running apps
	Screen brightness down (16 steps)
	Screen brightness up (16 steps)
	Mute

	Volume down
	Volume up
	Locking Screen
	Run launcher, search for devices and app
[alt] + 	Caps Lock On / Off
[ctrl] + 	Screen capture
[ctrl] + [shift] + 	Partial screen capture
 + [Volume down button] (Press simultaneously)	Screen capture in the Tablet mode
 + [l]	Locking Screen
[ctrl] + [alt] + [?]	Finding shortcuts

Touch Screen

You can operate by touching the screen with your finger.

Touching Once (Click)



 
Touching Twice (Double-click)



Touching with two fingers (Right Mouse Button Function)



Touching two fingers and moving (Zoom In/Out Function)

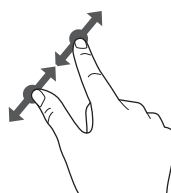

Touchpad

You can use the same functions with a touchpad as with a mouse.

⚠ CAUTION

- Do not use a sharp object such as a pen on the pad nor peel the cover. It may cause an impairment.
- Do not place more than one finger, and do not use while wearing a glove or when the hand is wet. The Touchpad will not work properly. Oil or dirt at the fingertip can also cause an impairment.
- The touchpad is sensitive. Do not impose excessive force or maintain an uncomfortable position. Otherwise, it may result in a finger or wrist injury.

✓ NOTE

 
- When using the touchpad, it is recommended to use the area noted in the image. Touching an edge or border of the touchpad may not work. (The functioning touch area may differ depending on the product.)



Moving Cursor



Click

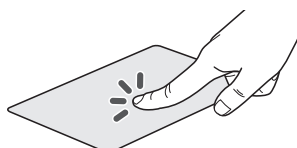


Double-click




Right Mouse Button



 Drag & Drop

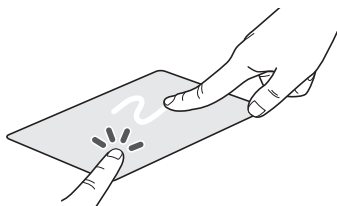


Zoom In/Out

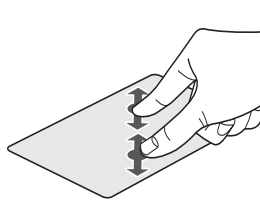 



Using Stylus Pen

 If you use the Stylus Pen, you can do fine touch operations that are difficult with fingers.

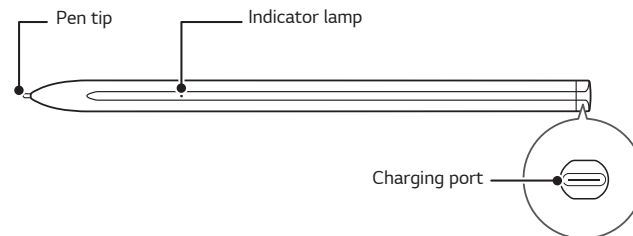


NOTE

  - It may not be available depending on the model.
- Remove the battery protective material before using the stylus pen.
- The pen tip is a consumable, and if necessary, it should be purchased separately for replacement.



Single click
(press once)

 

Double click
(press twice)



 
Drag (moving while
pressing down)

CAUTION

- The Stylus Pen requires some pressure to work.
- If the Stylus Pen is not used for more than 10 seconds, it switches to Power Saving mode to reduce battery consumption.


Charging

Use the Stylus Pen charging cable to connect the Chromebook and the Stylus Pen.

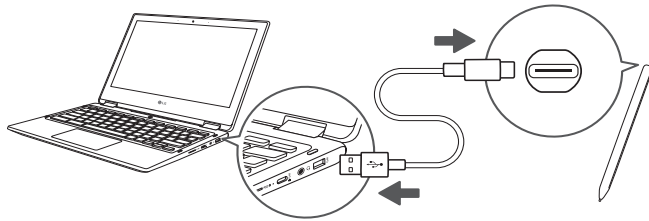

Storing

 
- 1 Put the Stylus Pen holder into the USB port of your Chromebook.

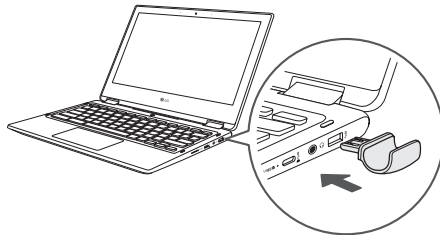

CAUTION

- When moving the Chromebook or storing it in a bag, remove the holder before moving/storing. Otherwise, there may be damage to the holder fastener.

 - 2 Put the Stylus Pen into the holder.

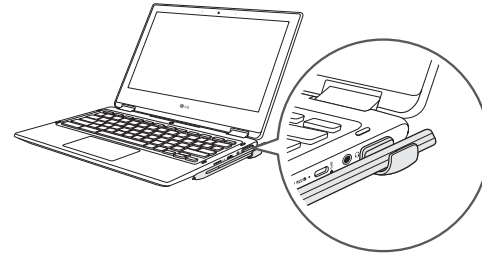

Pre-Tech Support Checklist

Troubleshooting

If the following symptoms appear while using the product, check again. It may not be a malfunction.

Symptom	Cause and Solution
The power does not turn on.	• Check if the power cord is connected. • After disconnecting the power cord and reconnecting it, press the power button of the product.
The system stops during use or does not properly turn off.	• Press the power button for approximately 9 seconds to reset the system. Once the system is reset, press the power button again to turn on the computer. - Caution: Unsaved data may be lost. Pressing the power button while the Chromebook is in use may cause damage to the storage device or a system error.

Important Safety Precautions

Check the following 'Important Safety Precautions' to prevent unexpected danger or damage in advance.

'Important Safety Precautions' is divided into 'WARNING' and 'CAUTION.'

 **WARNING:** Noncompliance with the instruction may cause serious physical damage or fatal injuries.

 **CAUTION:** Noncompliance with the instruction may cause minor damage to the body or the machine.

Product Installation/Usage Precautions

WARNING

- Dispose of the desiccating agent and plastic wrap properly.
 - The desiccating agent and plastic wrap may cause suffocation.
- Do not use the machine in damp places like a laundry room or bathroom.
 - Moisture may cause a glitch or electric shock.
 - Please use the machine within the appropriate temperature range (50 °F to 95 °F) and humidity range (20% RH to 80% RH).
- Clean the Chromebook with a proper agent and dry it completely before using it again.
 - If the Chromebook is wet while used, an electric shock or fire may occur.
- When lightning flashes in your area, disconnect the power, wired LAN and other connections.
 - An electric shock or fire may occur.
- Do not leave a cup or other containers filled with watery substance near the Chromebook.
 - In the case that liquid goes inside the Chromebook, a fire or electric shock may occur.

- If you have dropped or damaged the Chromebook, disconnect the power and contact the local service center for a safety check.
 - If a damaged Chromebook is used continuously, an electric shock or fire may occur.
- Do not put a lit candle or live cigarette on the Chromebook.
 - A fire may occur.
- If you detect or smell smoke from the Chromebook, stop use immediately and disconnect the power source before contacting your local service center.
 - A fire may occur.
- As the AC adapter can be hot, do not touch it with bare skin while using it.
 - Extended period of exposure may cause burn.
- The bottom of the Chromebook gets hot when the system is in operation. Do not touch or put it on your lap.
 - Extended period of exposure may cause burn.
- Do not play the games excessively.
 - Playing a game for an extended period of time may cause a mental disorder. It may also inflict physical impairments on the elderly and children.
- Do not put your finger or an object into Chromebook ports.
 - An injury or electric shock may occur.
- Ask one of our engineers to run a safety check after your computer has been repaired.
 - Otherwise, an electric shock or fire may occur.
- For minors, make sure them not to access to illegal or pornographic web sites.
 - Minors' exposure to adult-only contents may inflict psychological instability or even trauma on them. Take an extra precaution for your children if the whole family is using this machine.
- Keep the machine away from heat-emitting devices such as a heater.
 - The product may get deformed or catch on fire.

- Do not block the ventilation hole with any object.
 - Otherwise, an electric shock may occur.
- When upgrading your Chromebook, turn off the power and disconnect the power cable, battery, and LAN.
 - There is a risk of electric shock or fire and the product may be damaged.
- When you upgrade the Chromebook, ensure that children will not swallow any parts including bolts.
 - If a child swallows a nut, he or she may suffocate.
 - In that case, seek emergency help immediately.
- Do not disassemble or modify the machine arbitrarily.
 - There is a risk of electric shock and the product may be no longer covered by the warranty.
- If you disassemble the Chromebook, connect the power after reassembly is done.
 - There is a risk of electric shock or product damage, if you touch the disassembled Chromebook.
- Do not put in metal items such as coins, hair pin or other irons or inflammables such as paper or matches. Especially, ensure that children will not do so.
 - There is a risk of product damage, fire, or electric shock.
 - If any foreign substance gets in the product, unplug the product and contact the local service center.

CAUTION

- Place the machine in a safe place so it does not fall.
 - If dropped, the machine may be damaged or cause an injury.
- Use the product in a clean, dust-free environment.
 - Otherwise, the system may not function properly.
- Do not place any objects within 6 inches of the Chromebook.
 - Lack of ventilation may overheat the Chromebook from inside and put users at risk of burn injuries.

- Do not store or use the Chromebook near a magnetic object (i.e. a bag with a magnetic object, a diary, a wallet, a memo board, high-powered speakers, a bracelet, or etc.).
 - Otherwise, the storage device (HDD, SSD, eMMC) and the system may be damaged, and the system may fail to operate properly.
- Do not use the Chromebook on a bag with magnetic objects attached to it.
 - Otherwise, the storage device and the system may be damaged, and the system may fail to operate properly.
- Operate the product where there is no electromagnetic interference.
 - Keep a proper distance between the Chromebook and electronic appliances such as radios or speakers that generate strong magnetic fields.
 - Otherwise, data may be lost from the storage device (HDD, SSD, eMMC) or the LCD color may be damaged.
- Do not connect a key-phone line to a wired LAN port.
 - A fire may occur or the product may get damaged.
- If the LCD screen is damaged, do not touch LCD with your hands.
 - Contact the service center as it may cause an injury.
- Do not leave any objects such as a pen between the keypad and the LCD.
 - You might break the LCD by unwittingly closing it with a foreign object remaining on the pad.
- Do not press or scratch the LCD with a sharp object.
 - It may cause impairment.
- Ensure the power is off before shutting the LCD.
 - The product may catch fire, be broken or deformed due to temperature rise.
- Do not impose excessive force on the LCD screen or drop it.
 - You may break the LCD glass panel.
- Do not lean the LCD screen backward too much. Do not apply too much force to the LCD screen.
 - The LCD screen or the moving parts may be damaged.

- To clean the LCD screen, use designated agents and soft cloth and rub the screen in one direction.
 - Too much force may damage the LCD screen.
- When handling Chromebook parts, follow the instructions in the manual.
 - Otherwise, the product may get damaged.
- Do not download illegal programs nor access any corruptive web site such as those pushing pornographic contents.
 - The system may be infected and impaired.
- Do not insert devices other than designated ones in the ports.
 - Otherwise, the product may get damaged.
- Avoid using a wireless LAN connection within the 16 foot radius of a microwave or plasma lamp. If you have to use wireless LAN and a plasma bulb within the range, do so between channels 11 and 13.
 - The transmission rate may drop even if the connection is made.
- Turn off the Chromebook if you are not going to use it for an extended period of time.
 - It may overheat the battery.
- Make sure that the memory cover is securely closed before turning on the Chromebook.
 - Do not use the machine when the memory cover is open. It may damage the machine.
- Please use parts certified by LG Electronics Inc.
 - Otherwise, a fire or product damage may occur.
- If there is a problem with peripheral devices, contact the device manufacturer.
 - The product may get damaged.
- Handle devices and parts of the machine with care.
 - The product may get damaged.
- Do not drop any part or device of the machine while disassembling it.
 - If dropped, it may be damaged and cause an injury.

Product Storage/Transportation Precautions

WARNING

- During air travel, follow the directions of flight attendants.
 - Using the Chromebook during flight may cause an aircraft accident.
- When leaving the machine in a car, avoid exposure to direct sunlight.
 - The product may get deformed or catch on fire due to a temperature rise.
- Do not put any heavy object on the power cable and AC adapter, and avoid damage from impacts.
 - A malfunction or fire may occur.
- Do not leave the powered-on Chromebook in a space without enough ventilation (i.e. bags) for an extended or repeated time.
 - The battery may overheat and cause a fire.

CAUTION

- Before carrying the machine, turn off the power and disconnect all the cables.
 - Otherwise, you may trip over the wire, damaging the Chromebook and sustaining an injury.
- Do not carry the machine with the LCD open.
 - Otherwise, the product may get damaged.
- Protect the machine from any shock while carrying it.
 - System damage or an injury may result.
- Carry the product in a bag designed for it.
 - Carrying it in another type of bag may result in product damage.
- Do not put any heavy object on the Chromebook.
 - There is the risk of malfunction. If the object were to fall, it may cause an injury or damage the machine.

Battery and AC Adapter Precautions

WARNING

- Do not throw or disassemble the battery.
 - The resulting damage may cause an injury, explosion, or fire.
- Do not short-circuit the battery.
 - Otherwise, it may explode.
- Do not dispose of a spent or backup (standby) battery arbitrarily.
 - It may explode or cause a fire.
 - Disposal methods may differ by country and region. Dispose of spent batteries in accordance with the laws and safety rules of the country and region you reside in.
- Keep the battery out of the reach of children or pets.
 - If damaged, it may cause an injury.
- Keep the battery from being pierced by a sharp object or chewed by pets.
 - It may explode or cause a fire.
- Do not put the battery in water.
 - Otherwise, the battery may be damaged or explode.
- Read the battery usage precautions carefully before use.
 - The battery should be stored indoors and used and stored in accordance with the usage method described in the user manual.
- Connect the power plug properly by pushing it to the end.
 - If a contact failure occurs, it may cause product damage or fire.
- Do not bend the power cable for AC adapter too much or get stamped by a sharp object.
 - The wires inside the cable may break and cause electric shock or fire.
- Do not use loose plugs or damaged power cords.
 - An electric shock or fire may occur.
- Do not touch the power cord with your hands wet.
 - Otherwise, an electric shock may occur.
- Pull the plug, not the cord, to disconnect the AC adapter and power jack.
 - Otherwise, a fire or product damage may occur.
- Operate the product at the proper voltage.
 - Excessive voltage may result in damage on the product, electric shock or fire.
- Use power outlets with an earth pin installed and proper supply of rated electricity.
 - An electric leakage may cause an electric shock or fire.
 - The shape of the power cord and outlet may differ by country and region.
- In the case of strange noise from the cord or plug, disconnect the power cord from the outlet immediately and contact the service center.
 - A fire or electric shock may occur.
- Use the power supply/adapter provided with the product and never disassemble the product.
 - Using a different product or disassembling it may cause an electric shock or fire.
- Always keep the AC adapter and power outlet clean.
 - A fire may occur.
- Keep children and pets from damaging the power cord.
 - It may cause a fire or an electric shock.
- Disconnect the Chromebook completely before cleaning it.
 - Otherwise, an electric shock or impairment may occur.
- If the power/AC adapter or the product is soaked, disconnect the battery, power/AC adapter, and all other lines before contacting the local service center.
 - An electric shock or fire may occur.
- Ensure that the battery pack is locked to the machine after installation.
 - Otherwise, the battery may be damaged.

Other Safety Precautions

⚠ CAUTION


- Handle the machine with care to prevent loss of data from the storage device (HDD, SSD, eMMC).
 - Since the storage device is fragile, you need to back up your important data frequently.
 - The manufacturer is not responsible for any storage device data loss caused by a user's mistake.
- Damage to the storage device (HDD, SSD, eMMC) and data loss may occur when:
 - External shocks are inflicted on the machine while disassembling or installing it.
 - The machine is reset (i.e. restarted) or turned on again after a power outage while the storage device is operating.
 - The Chromebook is infected with a virus, tainting the data irrecoverably.
 - Abrupt turning-off of the Chromebook can damage the Chromebook.
 - If the product is moved, shaken or exposed to external shock while the storage device is running, file damage or bad sectors may occur.
- To minimize data loss resulting from storage device damage (HDD, SSD, eMMC), frequently back up important data.
 - The manufacturer is not responsible for any data loss.
- We do not refund or replace a product that malfunctions due to the installation or use of an operating system other than the one provided by LG Electronics Inc.
 - Some software applications may not work properly in other operating systems. Such malfunctions are not covered by the warranty.

While Using the Product

⚠ WARNING

	Use batteries certified and acknowledged by LG Electronics Inc. • Otherwise, an explosion or fire may occur.		Keep the battery away from heat. • Otherwise, an explosion or fire may occur.
	Avoid humidity and heat above 140 °F as in cars or saunas. • Otherwise, an explosion or fire may occur.		If you find leakage or smell bad odor from the battery, contact the local service center. • Otherwise, an explosion or fire may occur.

 ⚠ CAUTION

	Do not use the product on top of carpet, blanket or bed. Also, do not put the adapter under the blanket. • The product may malfunction, cause a fire or burn the user due to temperature rise.		Prevent the battery from coming in contact with any metallic object like a car ignition key or a paper clip. • Otherwise, this may cause damage to the battery, a fire or burn due to overheat in the battery.
	Do not leave the powered on product in a space without enough ventilation (i.e. bags) repeatedly or for an extended time. • The battery may overheat and cause a fire.		Charge the battery only with the provided charger. • Otherwise, the battery may be damaged presenting a risk of fire.
		Do not bend the cable for the AC adapter too much. • Otherwise, the wires inside the cable may break and cause an electric shock or fire.	

Guide on Battery Usage

	When the Chromebook is not used for an extended period of time, keep the battery level at about 50 % to increase the battery lifespan.		To increase battery lifespan, use the battery for a while before charging it rather than keeping the battery completely charged.
	If you don't use the product for a long time with the battery completely charged, the battery lifespan may decrease.		

✓ NOTE

- This product has a built-in battery pack. After purchasing your Chromebook, be sure to charge the battery pack completely before using it for the first time.
 - The battery is a wearable good and thus the battery may not last as long as before after the battery has been used for a long time.
 - The internal battery cannot arbitrarily be removed or replaced. Removing it may void the warranty.
 - If you need to remove or replace the battery, visit a designated service center.
 - We charge a fee for removing or replacing the battery.

Appendix

Registered Trademark Information

USB Type-C™ and USB-C™ are the trademarks of USB Implementers Forum.

Google, Android, Google Play and related logos are trademarks of Google LLC.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.



LG logo is a registered trademark of LG Electronics Inc.



microSD® and the microSD logo are trademarks or registered trademarks of SD-3C, LLC.



The SuperSpeed USB Trident logo is a registered trademark of USB Implementers Forum, Inc.

ENERGY STAR®



ENERGY STAR® Specifications

- LG Electronics Inc. participates in ENERGY STAR® and the energy efficiency of this product complies with the specifications of ENERGY STAR®.
- ENERGY STAR® is a set of regulations that encourages manufacturers of electronic devices to create more energy efficient products.
- The energy consumption of this product was decreased along with the cost. Also, it helps preserve natural resources.
- The PC is set to switch to an alternate low power mode after 10 minutes of inactivity.
- To leave sleep mode, click a mouse button or press any key on the keyboard.

Regulatory Notices

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radio Frequency Interference Requirements (for UNII devices)

High power radars are allocated as primary users of the 5.25 to 5.35 GHz and 5.65 to 5.85 GHz bands. These radar stations can cause interference with and/or damage this device. This device cannot be co-located with any other transmitter.

FCC/IC Radio Frequency Exposure

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. This device has been tested and found to comply with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules (<1.6W/kg).

Supplier's Declaration of Conformity

Trade Name	LG
Responsible Party	LG Electronics USA, Inc.
Address	111 Sylvan Avenue, North Building Englewood Cliffs, New Jersey 07632
Email	lg.environmental@lge.com

LG Take-back & Recycling Policy

LG Electronics offers a customized e-waste take-back & recycling service that meets local needs and requirements in the countries where e-waste regulations are in place, and also provides product take-back & recycling service voluntarily in some regions. LG Electronics evaluates products' recyclability at the design step selectively, with the goal of improving recyclability where practicable. Through these activities, LG Electronics seeks to contribute to conserving natural resources and protecting the environment. For more information, please visit our global site at <https://www.lg.com/global/recycling>

Battery take-back information

In case rechargeable battery is included in this product, the entire device should be recycled in compliance with rechargeable battery recycling standards because of the internal battery. To dispose of properly, call (800) 822-8837 or visit www.call2recycle.org.

SAFETY REGULATION NOTICE

Battery

- Risk of fire or explosion if the battery is replaced by an incorrect type.
- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Do not store or transport at pressures lower than 1.68 psi and at above 49212.5 feet altitude.

Stylus Pen Product Specifications

Item	Content	Details
Dimension	6.53 in / 0.37 x 0.39 in	Length / Diameter
Weight	Around 0.039 lbs	Including battery
Protocol	US1 1.0	100 ~ 500 kHz
Operation Temperature	41 °F ~ 104 °F	-

FCC compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

FCC RF Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Stylus Pen Service Information

Repairs and product servicing arising out of the following circumstances are subject to service fees. Refer to the Service section on the Limited Warranty Statement of your LG 11TC50Q Chromebook for service and support instructions.

- Improper use of the product
- User's negligence (breaking or submerging the product in water, dismantling or remodeling of the product by someone other than a technician at a designated service center)
- Failure to heed the precautions in the user manual
- Natural disaster (fire, salt air, gas, earthquake, storm and flood, etc.)
- Using incorrect voltage or defect in the connecting device
- Replacing expendable parts
- Damage from external causes (not product defect)

