



LG

Life's Good

ENGLISH

OWNER'S MANUAL

MONITOR SIGNAGE

Please read this manual carefully before operating your set and retain it for future reference.

MONITOR SIGNAGE MODELS

47VT30

www.lg.com

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. ***Wash hands after handling.***

Table of Contents

Licenses	3
Accessories	4
Separate Purchase	4
To Install in Portrait Orientation	5
Using the Remote Control	6
Name and Function of the Parts	8
Rear View.....	8
Connecting to External Devices	9
When Connecting to your PC.....	9
When Using the LAN	11
Daisy Chain Monitors	12
VESA FDMI Wall Mounting.....	13
Video Input	14
Component Input (480i/480p/576i/576p/720p/1080i/1080p)	15
HDMI Input (480p/576p/720p/1080i/1080p)	16
User Menus	17
Screen Adjustment Options	17
OSD Menu	19
How to Adjust the Screen Automatically	20
How to Adjust the OSD (On Screen Display) Screen	20
Adjusting Screen Color	21
Adjusting the Audio Function	27
Adjusting the Timer Function.....	28
Selecting the Options	29
Adjusts the USB Options.....	31
Cautions When Using the Touch Screen	45
Using the Touch Screen (Windows 7).....	46
Using the Touch Screen (Windows XP).....	47
Troubleshooting	49
Specifications	56
Controlling the Multiple Product	A1
IR Codes	A26

Licenses

Supported licenses may differ by model. For more information of the licenses, visit www.lg.com.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX Certified® to play DivX® video, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

Covered by one or more of the following U.S. patents:
7,295,673; 7,460,668; 7,515,710; 7,519,274



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Accessories

● Accessories

Thank you for your purchase. Please check the product as well as the accessories shown below.

❖ Note that the accessories may look different from those shown here.



**Remote Control
/ Batteries**



**D-Sub Signal
Cable**



Power Cable



USB Cable



CD-ROM/ Cards

● Separate Purchase

 
Without prior notice, optional accessories are subject to change to improve the performance of the product, and new accessories may be added.

❖ Optional accessories (purchased separately) may vary depending on the model.

❖ Note that optional accessories may look different from those shown here.

❖ You can obtain additional accessories from most electronics stores.

NC2100/ NA2000/ NA2100 Kit



**NC2100
NA2000
NA2100**




Screws (2)



CD-ROM/ Cards

To Install in Portrait Orientation

- Only on some models.

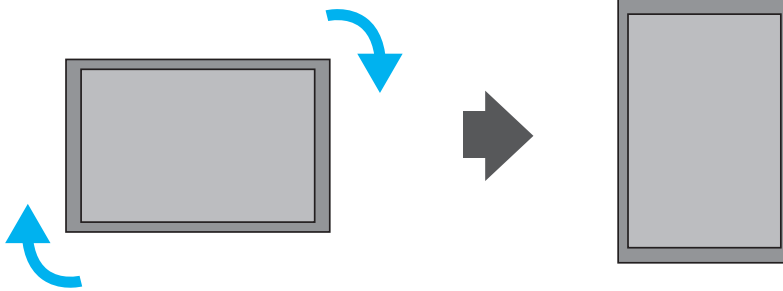

"To install in a portrait orientation, rotate the screen 90 degrees clockwise."




Note

- When using the wall mounting bracket or the portrait scene mode, the opening can be covered by the stand hole cover.


Using the Remote Control

● Name of the Remote Control Buttons

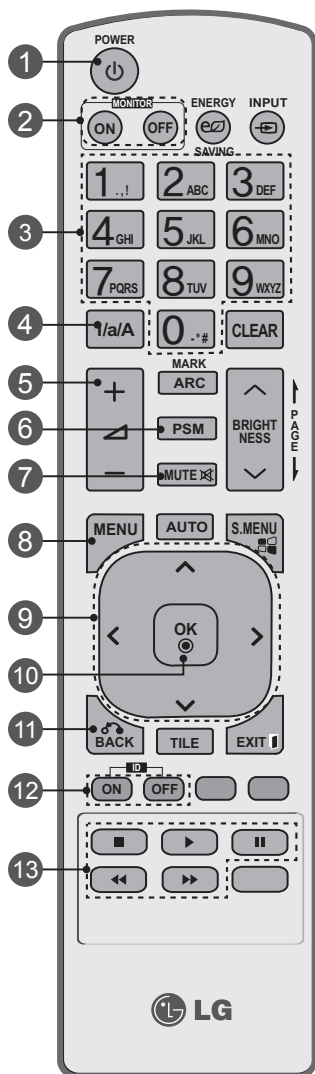

- 1 Power On / Off Button**
- Switches the set on from standby or off to standby.
- 2 Monitor On / Off Button**
- Turn off the monitor and then turn it back on.
- 3 Number and Alphabet Buttons**
- Type numbers and alphabets.
- 4 1/a/A Button**
- Selects the number and alphabet.
(SuperSign input only)
- 5 Volume Up/Down Button**
- Adjusts the volume.
- 6 PSM Button**
- Selects the Picture Status Mode.
- 7 MUTE Button**
- Switches the sound on or off.
- 8 MENU Button**
- Selects a menu.
- Clears all on-screen displays and returns to Monitor viewing from any menu.
- 9 Up/Down/Left/Right Buttons**
- Allows you to navigate the on-screen menus and adjust the system settings to your preference.
- 10 OK Button**
- Accepts your selection or displays the current mode.
- 11 BACK Button**
- Allows the user to move
return one step in an interactive application.
- 12 ID ON/OFF Button**
- When the number of input ID is equal to the number of ID Mode, you can control the monitor which you want in the multi display condition.
- 13 USB Menu Control Buttons**
- Adjust the USB menu(Photo List, Music List and Movie List).

Using the Remote Control

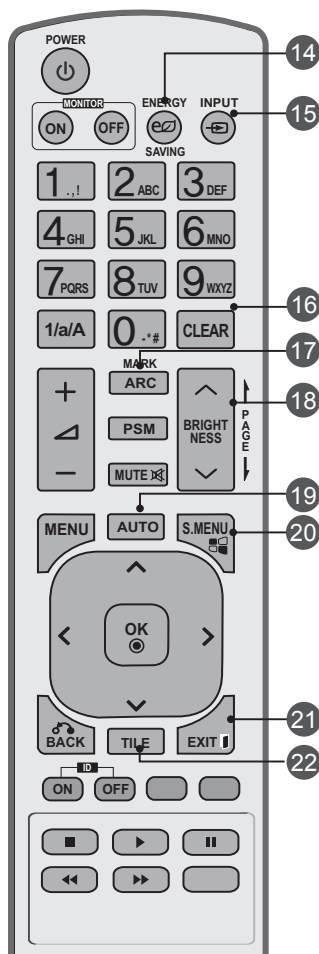

- 14 Energy Saving Button**
- Adjust the Energy Saving mode of the SET.

- 15 INPUT Select Button**
If you press the button once, the following Input Signal Window will appear. Select the signal type you want using the < > button.



- 16 Clear Button**
- Delete the numbers and alphabets you typed.(SuperSign input only)

- 17 ARC Button**
- Selects the Aspect Ratio Mode.
MARK
- Selects a specific file in the USB mode.

- 18 Brightness Key**
- Adjust the resolution and brightness by pressing the Up and Down buttons on the remote control.
- In USB mode, the OSD menu has the Page function to move to the next file list.


- 19 AUTO Button**
- Automatically adjusts picture position and minimizes image instability.(RGB input only)

- 20 S.MENU Button (SuperSign Menu Key)**
- Selects the SuperSign OSD Menu.
(SuperSign input only)

- 21 EXIT Button**
- Clears all on-screen displays and returns to monitor viewing from any menu.

- 22 TILE Button**
- Selects the TILE Mode.
- This button selection is not applicable.

Inserting batteries into remote control

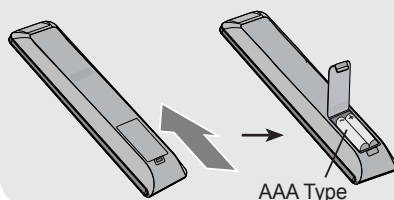


1. Slide off the battery cover.
 2. Insert the batteries with correct polarity (+ / -).
 3. Close the battery cover.
 4. To remove the batteries, perform the installation actions in reverse.
- Dispose of used batteries in the recycle bin to prevent environmental pollution.

Name and Function of the Parts

* The product image in the user's guide could be different from the actual image.

Rear View

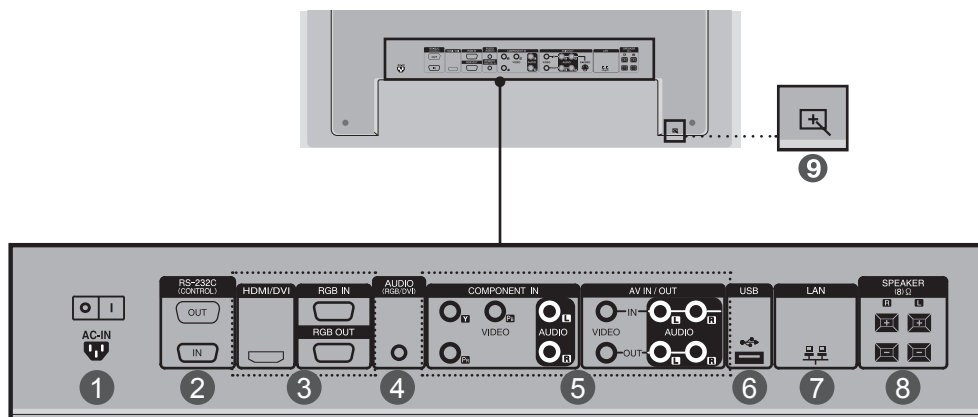

- 1 Power Connector**
Connect the power cord
- 2 RS-232C Serial Ports**
- 3 RGB, HDMI/DVI Ports**
HDMI Supports High Definition input and HDCP (High-bandwidth Digital Content Protection). Some devices require HDCP in order to display HD signals.
- 4 PC Sound Jack**
Connect an audio cable to the *LINE OUT jack of the PC sound card.
- 5 Component, AV Ports**
- 6 USB Port**
- 7 LAN Port**
- 8 Speaker Ports**
- 9 Touch Port**
Connects the monitor and the PC with USB cable.

* LINE OUT


A terminal used to connect to the speaker including a built-in amplifier (Amp). Make sure that the connecting terminal of the PC sound card is checked before connecting. If the Audio Out of PC sound card has only Speaker Out, reduce the PC volume. If the Audio Out of the PC sound card supports both Speaker Out and Line Out, convert to Line Out using the card jumper of the program (Refer to the Sound Card Manual).

Connecting to External Devices

● When Connecting to your PC


- 1 First of all, see if the computer, product and the peripherals are turned off. Then, connect the signal input cable.

- A. When connecting with the D-Sub signal input cable.
B. When connecting with the HDMI-DVI signal input cable (not included).
* When HDMI PC is used, a compatibility problem might occur.

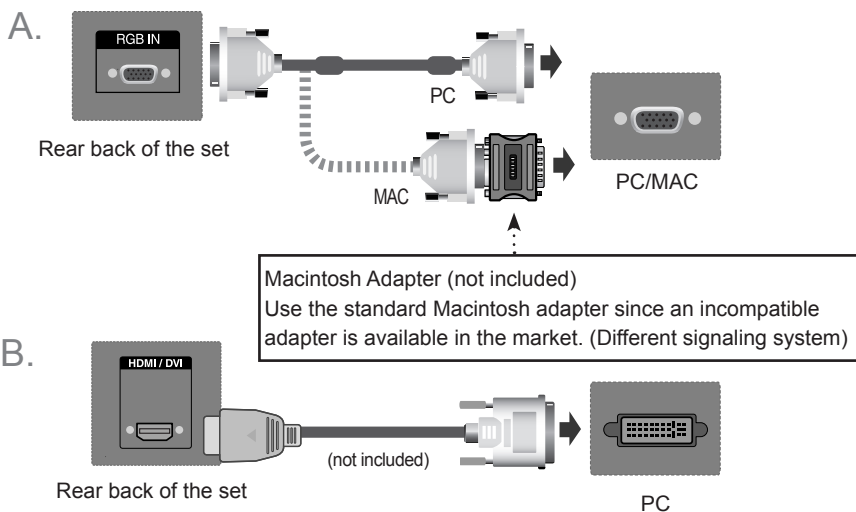


* User must use shielded signal interface cables (D-sub 15 pin cable, HDMI-DVI cable) with ferrite cores to maintain standard compliance for the product.

- 2 Connect the Audio cable.

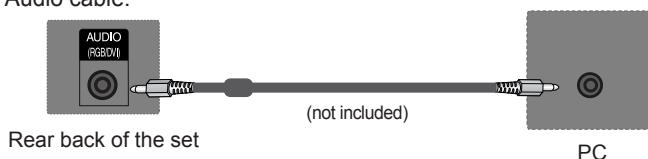

- 3 Connect the USB cable.

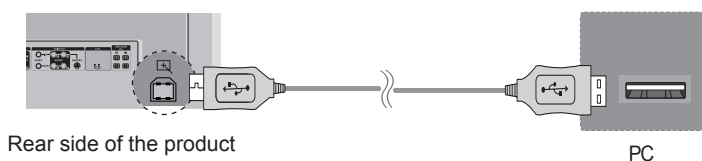


Note


- The monitor's USB terminal supports USB 2.0 and full speed (12Mbps).

Connecting to External Devices

- 4 Connect the power cord.

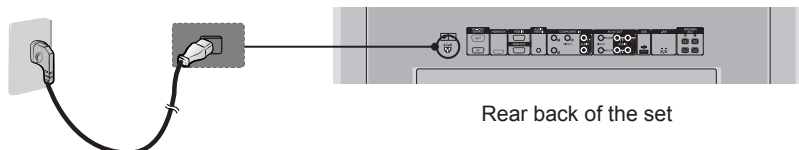

- 5 1. Turn on power by pressing the power button on the product.

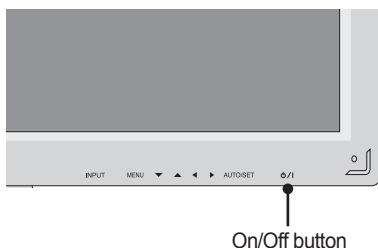

2. Turn on the PC.

 
- 6 Select an input signal.
Press the **INPUT** button on the remote control to select the input signal.

INPUT → < > → **OK**

Or, press **INPUT** on the bottom of the set.

INPUT → ◀ ▶ → **AUTO/SET**

- A. When connecting with a D-Sub signal input cable.
• Select **RGB** : 15-pin D-Sub analog signal.



- B. When connecting with a HDMI-DVI signal input cable and HDMI Signal Cable.
• Select **HDMI/DVI** : DVI Digital signal or HDMI Digital signal.



Note




- How to connect to two computers.
Connect the signal cables (HDMI-DVI and D-Sub) to each computer.
Press the INPUT button on the remote control to select the computer to use.
- Directly connect to a grounded power outlet on the wall or a power bar with a ground wire.

Connecting to External Devices


● When Using the LAN

- 1 Connect the LAN cable as shown in the below figure .


A. Connect PC to Monitor directly.

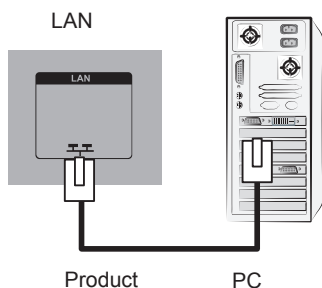

B. Using a router(Switch)

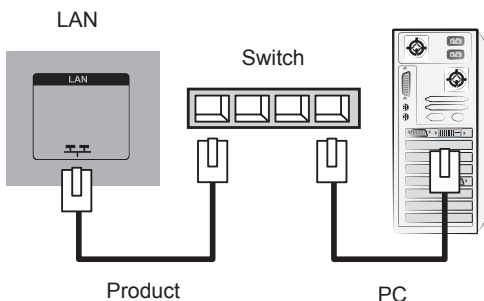

C. Using the Internet.

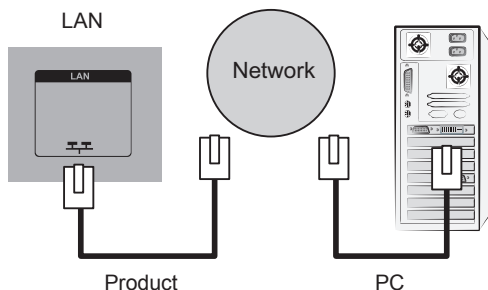

- 2 Connect the LAN cable and install the eZ-Net Manager program on the CD-ROM. For more information about the program, please refer to eZ-Net Guide in the enclosed CD-ROM.

Note




- Using LAN establishes communication between your PC and the monitor and enables to use the OSD menus on the PC as well as on the monitor.

Connecting to External Devices


● Daisy Chain Monitors

A. When using RGB input

To use different products connected to each other Connect one end of the signal input cable (15-pin D-Sub Signal Cable) to the RGB OUT connector of product 1 and connect the other end to the RGB IN connector of other products.

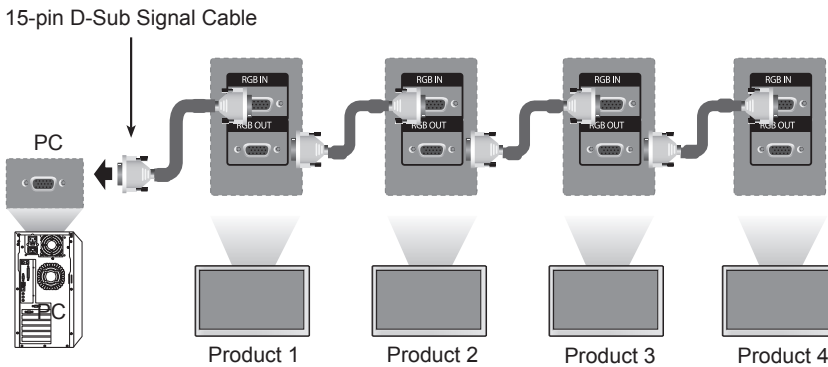

B. When using AV input

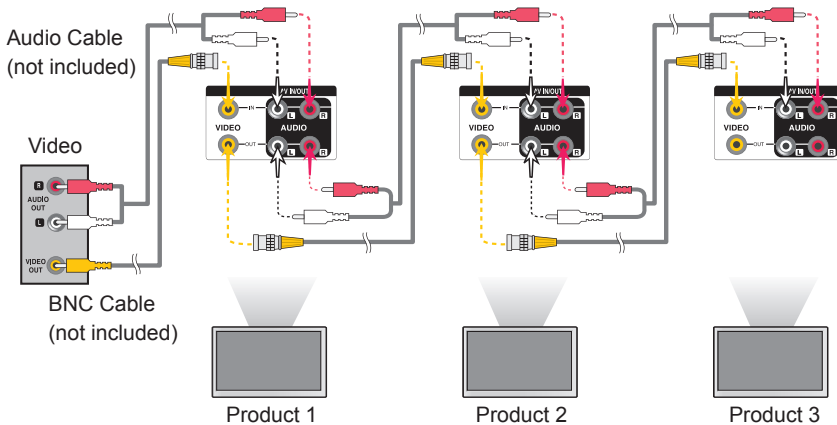

Note




- The number of monitors that can be connected to one output may vary depending on signal status and cable loss. If the signal status is good, and there is no cable loss, it is possible to connect up to 9 monitors. If you want to connect more than this number of monitors, it is recommended to use an amplified splitter or a distributor.

Connecting to External Devices

● VESA FDMI Wall Mounting

This product supports a VESA FDMI compliant mounting interface. These mounts are purchased separately and not available from LG. Refer to the instructions included with wall mount for more info.

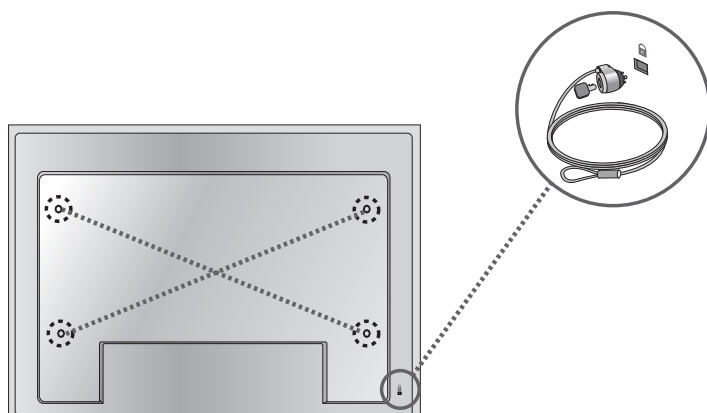

Kensington Security Slot

The Set is equipped with a Kensington Security System connector on the back panel. The cable and lock are available separately and are not sold by LG. For more info, visit <http://www.kensington.com>, the internet home page of the Kensington company.

Note



- There is a switch on the lower side of the back. You can set the switch to "On" before connecting a power cord to make it more convenient for use.


Connecting to External Devices

● Video Input

- 1 Connect the video cable as shown in the below figure and then connect the power cord.

When connecting with a BNC cable.

- Connect the input terminal with a proper color match.

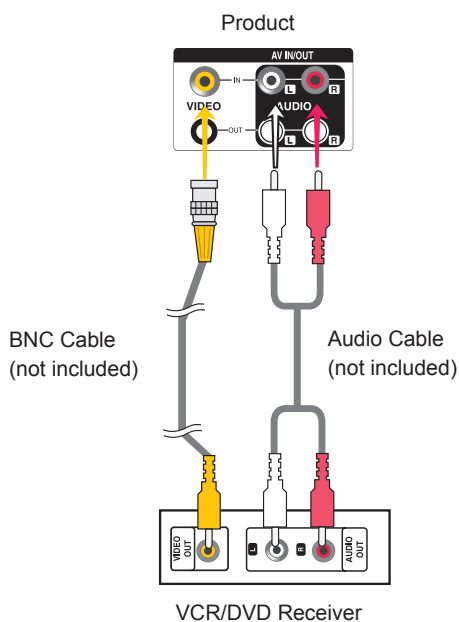

- 2 Select an input signal.
Press the **INPUT** button on the remote control to select the input signal.

 
INPUT → < > → **OK**

Or, press **INPUT** on the bottom of the set.

INPUT → ◀ ▶ → **AUTO/SET**

When connecting with an BNC cable.

- Select **AV**.




Connecting to External Devices

● Component Input (480i/480p/576i/576p/720p/1080i/1080p)

- 1 Connect the video/audio cable as shown in the below figure and then, connect the power cord.

- Connect the input terminal with a proper color match.

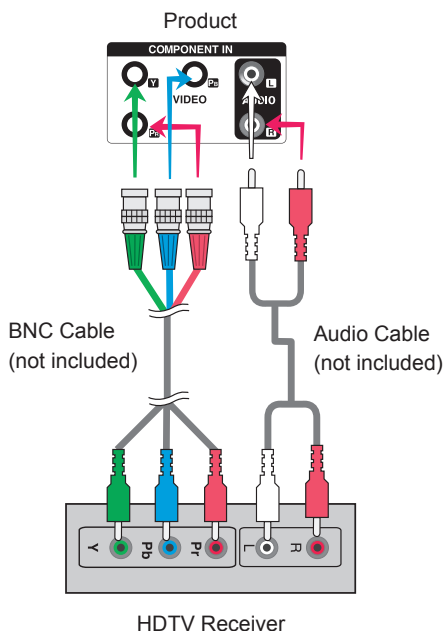

Note

- Some devices may require HDCP in order to display HD signals.
- Component doesn't support HDCP.

- 2 Select an input signal.
Press the **INPUT** button on the remote control to select the input signal.

INPUT → < > → **OK**

Or, press **INPUT** on the bottom of the set.

INPUT → ◀ ▶ → **AUTO/SET**

- Select **Component**.




Connecting to External Devices

HDMI Input (480p/576p/720p/1080i/1080p)

HDMI Supports High Definition input and HDCP (High-bandwidth Digital Content Protection). Some devices require HDCP in order to display HD signals.

- 1 Connect the video/audio cable as shown in the below figure and then connect the power cord.

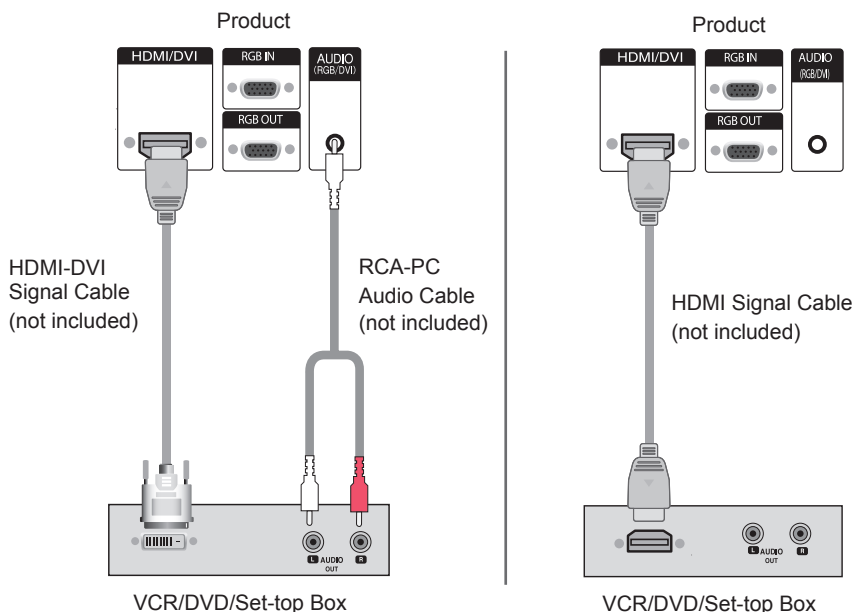

Note : Dolby Digital is not supported.

- 2 Select an input signal.
Press the **INPUT** button on the remote control to select the input signal.

INPUT → < > → **OK**

Or, press **INPUT** on the bottom of the set.

INPUT → ◀ ▶ → **AUTO/SET**



When connecting with a HDMI-DVI signal input cable.
When connecting with a HDMI signal input cable.

- Select **HDMI/DVI**



User Menu

● Screen Adjustment Options

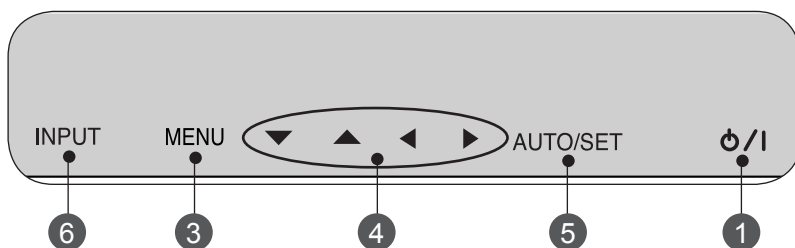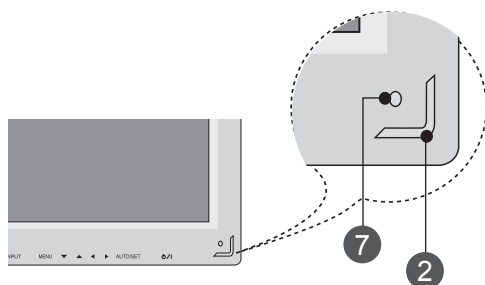

- | | | |
|----------|-----------------------------------|--|
| 1 | On/Off Button | Press this button to turn on the power. Press this button again to turn it off. |
| 2 | Power Indicator | This Indicator lights up red when the display operates normally (on mode). If the display is in sleep (Energy Saving) mode, this indicator color changes to amber. |
| 3 | MENU Button | Use this button to show/hide the OSD (On Screen Display) menu screen. |
| 4 | OSD Select / Adjust Button | Use this button to select an icon or adjust the setting in the OSD screen.

▲ ▼ Adjust the up and down.

◀ ▶ Adjust the volume. |



User Menus

5 Screen Adjustment Options

5

AUTO/SET Button

[For PC Analog signal]

Auto in progress
For optimal display change
resolution to 1920 x 1080

[When XGA Mode is active and
1920 x 1080 is selected]

Auto in progress

6

INPUT Button

INPUT → ◀ ▶ → AUTO/SET

- Toggles between inputs

AV	Composite Video
Component	HDTV, DVD
RGB	15-pin D-Sub analog signal
HDMI/DVI	Digital signal
SuperSign	SuperSign



7

IR Receiver

This is where the unit receives signals from the remote control.

User Menus

OSD Menu

Icon	Function Description
 Picture	Adjusts screen brightness, contrast and color that you prefer.
 Audio	Adjusts the audio options.
 Time	Adjusts the timer options.
 Option	Adjusts the screen status according to the circumstances.
 USB	Adjusts the USB Options.

Note




OSD(On Screen Display)

- The OSD function enables you to adjust the screen status conveniently since it provides graphical presentation.

User Menus

● How to Adjust the OSD (On Screen Display) Screen

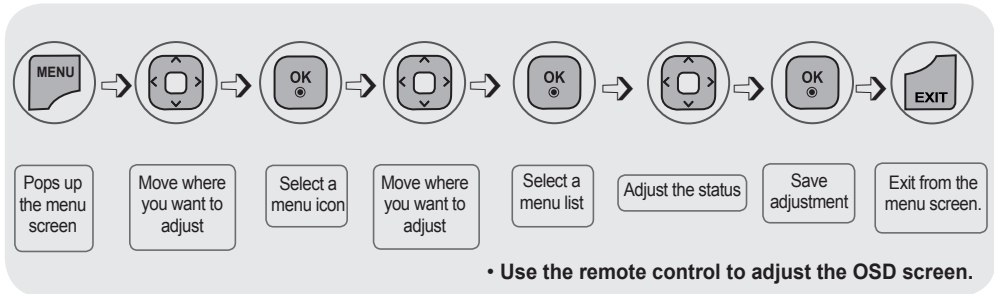

1 Press the **MENU** Button, then the main menu of the OSD appears.

2 To access a control, use the $\wedge \vee$ Buttons.

3 When the icon you want becomes highlighted, press the **OK** Button.

4 To access a control, use the $\wedge \vee$ Buttons.

5 When the list you want becomes highlighted, press the **OK** Button.

6 Use the $\wedge \vee < >$ Buttons to adjust the item to the desired level.

7 Accept the changes by pressing the **OK** Button.

8 Exit the OSD by pressing the **EXIT** Button.

● How to Adjust the Screen Automatically

When using an analog PC signal, press the AUTO/SET button (AUTO button on a remote Control). Then optimal screen settings will be selected that fit into the current mode. If adjustment is not satisfactory, you can adjust the screen manually.


[When XGA mode is active and
1920 x 1080 is selected.]

Auto in progress

User Menus

Adjusting Screen Color

Aspect Ratio

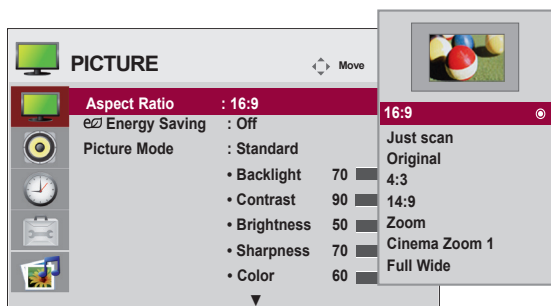

To select the image size of the screen.

16:9: Widescreen mode.

Just Scan: Displays the full signal data without cropping any of the image.

(*This menu is activated only in 720p, 1080p, 1080i (HDMI/DVI-DTV, Component mode)

Original: The aspect ratio is not adjusted from the original signal and is set by the program being watched.

4:3: Selects a 4:3 aspect ratio image.

1:1: The aspect ratio is not adjusted from the original. Used in PC mode (only HDMI/ DVI PC, RGB PC).

14:9: 14:9 programs are viewed normally in 14:9 with black bars added to the top and bottom.

4:3 programs are magnified on the top/bottom and left/right sides.

Zoom: 4:3 programs are magnified until they fill the 16:9 screen. The top and bottom will be cut off.

Cinema Zoom 1: Choose Cinema Zoom when you wish the picture to be altered, both horizontally extended and vertically cropped. This is a good compromise between signal alteration and screen coverage.


Full Wide: When the set receives a wide screen signal, it causes you to adjust the picture horizontally or vertically, in linear proportion, to fill the entire screen.

MODE	ARC					
	AV	Component	RGB PC	HDMI / DVI		SuperSign
				DTV	PC	
16 : 9	●	●	●	●	●	●
Just Scan	×	●	×	●	×	×
Original	●	×	×	×	×	×
4 : 3	●	●	×	●	×	×
1 : 1	×	×	×	×	×	×
14 : 9	●	●	×	●	×	×
Zoom	●	●	×	●	×	×
Cinema Zoom 1	●	●	×	●	×	×
Full Wide	●	×	×	×	×	×

User Menus

Adjusting Screen Color

Energy Saving

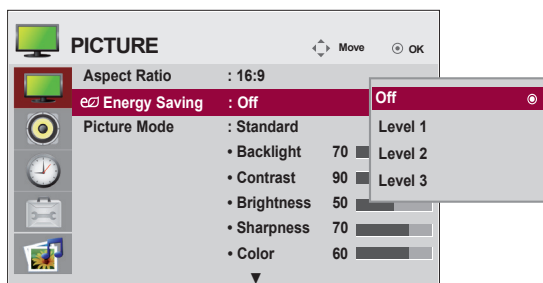

The screen brightness adjusting menu helps you save energy.

Level: 4 screen brightness levels are available.

- **Off:** 100% light
- **Level 1:** 80% light
- **Level 2:** 60% light
- **Level 3:** 40% light

Note




- If the 'Picture Mode' is set to 'Cinema', the 'Energy saving' mode is disabled.

User Menus



Adjusting Screen Color

Picture Mode

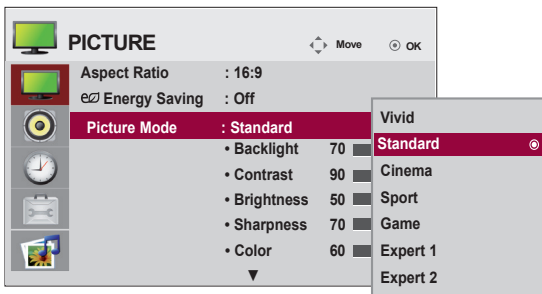

The picture mode menu toggles between screen presets.

Standard: This is the optimum viewing condition for general users.

Vivid: Displays a sharp image.

Cinema: This mode optimizes video for watching movies.

Sport: This mode emphasizes dynamic video and primary colors (e.g. white, uniforms, grass, sky blue, etc.) by realizing the optimal image settings for sports.

Game: This is the mode for fast response speeds for video games.

Expert1,2 : Select this option to use the user-defined settings.

Note




- If the 'Picture Mode' setting in the Picture menu is set to Vivid, Standard, Cinema, Sport or Game the subsequent menus will be automatically set.

User Menus



Adjusting Screen Color

Picture Mode

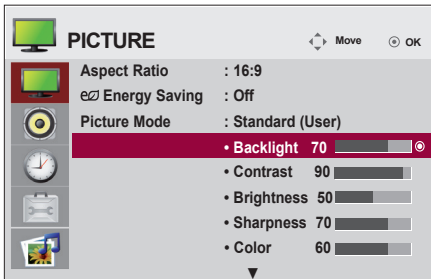

Backlight: Adjusts the brightness of LCD panel.

Contrast: Adjusts the difference between light and dark levels.

Brightness: Adjusts the brightness of the screen.

Sharpness: Adjusts the clearness of the screen.

(This function can be used only under AV, Component and HDMI/DVI(DTV).)

Color: Adjusts the color.

(This function can be used only under AV, Component and HDMI/DVI(DTV).)


Tint: Adjusts the tint.

(This function can be used only under AV, Component and HDMI/DVI(DTV).)

User Menus

Adjusting Screen Color

Advanced Control

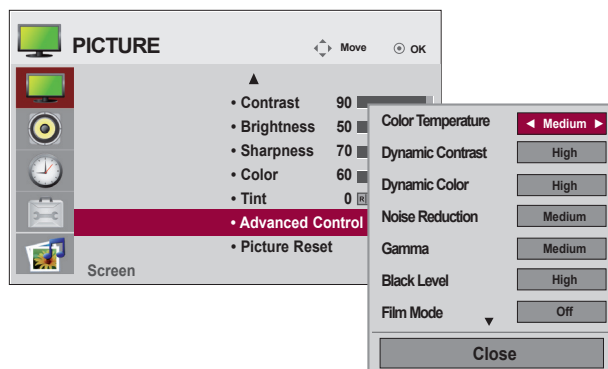

Color Temperature: Color Settings

Cool: Slightly purple temperature.

Medium: Slightly blue temperature.

Warm: Slightly red temperature.

Dynamic Contrast: Optimizes the contrast automatically according to the brightness of the reflection. (This function can be used only under AV, Component and HDMI/DVI(DTV).)

Dynamic Color: Adjusts the color of the reflection automatically to reproduce natural colors as closely as possible. (This function can be used only under AV, Component and HDMI/DVI(DTV).)

Noise Reduction: Removes noise up to the point where it does not damage the original picture. (This function can be used only under AV, Component and HDMI/DVI(DTV).)

Gamma: Sets your own gamma value.

On the set, high gamma values display whitish images and low gamma values display high contrast images.

Black Level: Adjusts the contrast and the brightness using the black level of the screen (function works in the following modes: AV, Component, HDMI-DTV).

Low: The reflection of the screen gets darker.

High: The reflection of the screen gets brighter.

Film Mode: When you watch a movie, this function adjusts the set to the best picture appearance (function works in the following modes: AV, Component 480i/576i/1080i, HDMI/DTV 480i/576i/1080i).


White Balance: Adjusts the overall color of the screen to your preferences (function works in the following modes - Expert 1, Expert 2 Picture mode).

Color Management System: This is an expert tool used to make adjustments by using test patterns. This does not affect other colors but can be used to selectively adjust the 6 color areas (red/green/blue/cyan/magenta/yellow). Color differences may not be distinct even when you make general adjustments for video (function works in the following modes: Expert 1, Expert 2 Picture mode).

User Menus


Adjusting Screen Color

Picture Reset

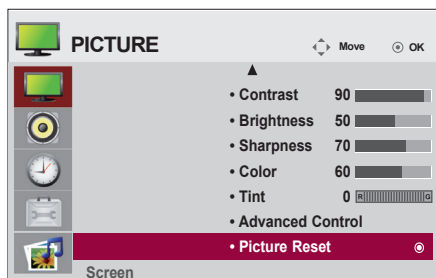

Returns Picture Mode to the default factory settings.

Screen

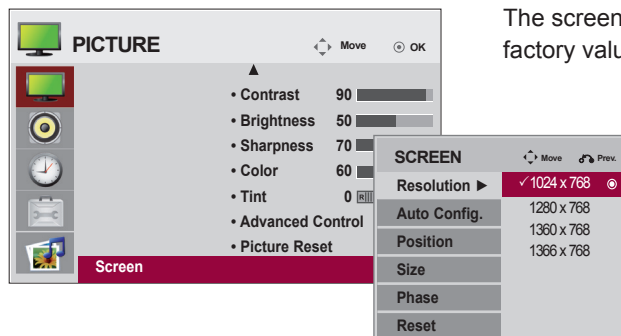

The screen may blink when resetting to factory values.

Adjusts the screen video.

Resolution: Displays a normal picture and matches the resolution of RGB mode and PC mode.
This function works in the following mode: RGB[PC] mode.

Auto Config. (RGB input only): Automatically adjusts the screen position, clock and phase. This function is available for analog signals only.

Position: Moves the screen position.

Size: Adjusts the size of the screen.



Phase: Adjusts the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters. This function is available for analog signals only.

Reset: Returns Manual config. to the default factory settings.

User Menus



Adjusting the Audio Function

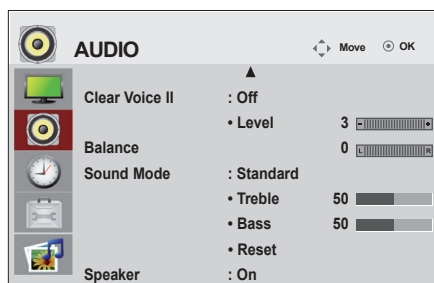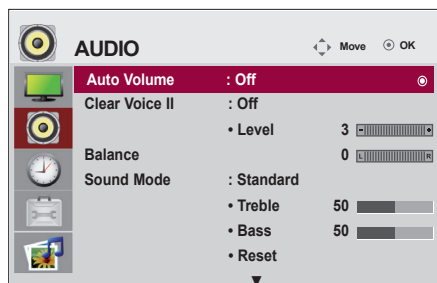

Auto Volume

Automatically adjusts uneven sound volumes across all channels or signals to the most appropriate level. To use this feature, select On.

Clear Voice II

By differentiating the human sound range from others, Clear Voice II improves voice quality.

Balance

Balances the sound from the left and right speakers.

Sound Mode

Selects the best sound tone quality automatically depending on the current video being watched.

Standard: Offers standard-quality sound.

Music: Optimizes sound for listening to music.

Cinema: Optimizes sound for watching movies.

Sport: Optimizes sound for watching sports events.

Game: Optimizes sound for playing video games.

Speaker


Adjusts internal speaker status.

If you want to use your external hi-fi stereo system, turn off the internal speakers of the set.

User Menus



Adjusting the Timer Function

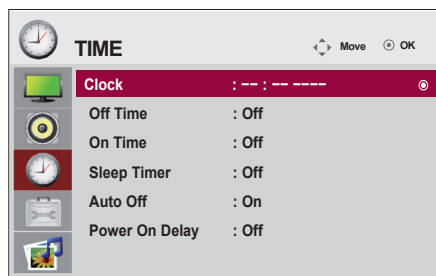

Clock

If the current time is incorrect, reset the clock manually.

- 1) Press the **MENU** button and then use $\wedge \vee < >$ button to select the Time menu, input OK button to enter.
- 2) Press the $>$ button and then use $\wedge \vee$ button to select clock menu.
- 3) Press the $>$ button and then use $< >$ button to select date.
- 4) Press the $\wedge \vee$ button and then use $< >$ button to set the hour(00h to 23h).
- 5) Press the $\wedge \vee$ button and then use $< >$ button to set the minutes(00 min to 59 min).

On/Off time

The off time automatically switches the set to standby at the pre-set time.

- 1) Press the **MENU** button and then use $\wedge \vee < >$ button to select the Time menu, input OK button to enter.
- 2) Press the $>$ button and then use $\wedge \vee$ button to select On/Off Timer.
- 3) Press the $>$ button and then use $< >$ button to select date
- 4) Press the $\wedge \vee$ button and then use $< >$ button to set the hour(00h to 23h).
- 5) Press the $\wedge \vee$ button and then use $< >$ button to set the minutes(00 min to 59 min).
- 6) Press the $\wedge \vee$ button ,According to the personal needs, choose to add button.

Sleep timer

The power is automatically turned off when the time set by a user is passed.

- 1) Press the **MENU** button and then use $\wedge \vee < >$ button to select the Time menu, input OK button to enter
- 2) Press the $>$ button and then use $\wedge \vee$ button to select Sleep timer menu.
- 3) Press the $\wedge \vee$ button and then use $< >$ button to select the minutes(Off to 240 min).

Auto off

If Auto off is active and there is no input signal, the set switches to off mode automatically after 15 minutes.

- 1) Press the **MENU** button and then use $\wedge \vee < >$ button to select the Timer menu, input OK button to enter.
- 2) Press the $>$ button and then use $\wedge \vee$ button to select the Auto off menu.
- 3) Press the $>$ button and then use $\wedge \vee$ button to select On or Off.

Power on delay

When connecting multiple monitors and turning the power on, the monitors are turned on individually to prevent overload.

Note




- Once the on or off time is set, these functions operate daily at the preset time.
- The scheduled power-off function works properly only when the device time is set correctly. When the scheduled power-on and power-off times are the same, the power-off time has priority over the power-on time if the set is turned on, and vice versa if the set is turned off.
- When On time is operated, input screen is turned on as it was turned off.

User Menus



Selecting the Options

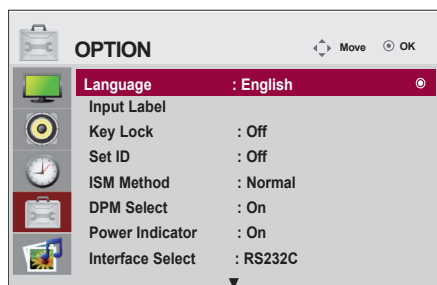

Language

Chooses the language in which the control names are displayed.

Input Label

Selects a label for each input source. For example, when connecting to PC in RGB mode, * Select "PC" for the connecting device field. Otherwise, the screen may not display properly.

Key Lock

Use $\wedge$ $\vee$ to select **On** or **Off**. The set can be set up so that it can only be used with the remote control. This feature can prevent unauthorized viewing.

To lock OSD screen adjustment, set the **Key Lock** tab to the 'On' position.

To unlock it, do the following:

Push **MENU** on the remote control and set **Key Lock** to the 'Off' position.

Set ID

You can assign a unique **Set ID** NO (name assignment) to each set when several set are connected for display. Specify the number (1 to 99) using $<$ $>$ and exit. Use the assigned **Set ID** to individually control each set using the Set Control Program.

ISM Method

Leaving a fixed image on the screen for a long time may cause image burn-in. To use the set for a long period of time, use a screen saver on the PC or utilize the residual image prevention function on the set, and when the set is not used, turn the power off. Burn-in and related problems are not covered by the warranty on this set.

Normal: Leave on normal if you don't foresee image burn in being a problem.

Orbiter: May help prevent ghost images. However, it is best not to allow any fixed image to remain on the screen. To avoid a permanent image on the screen, the screen will move every 2 minutes.


Inversion: This function inverts the panel color of the screen. The panel color is automatically inverted every 30 minutes.

White wash: White wash fills the screen with solid white. This helps removes permanent images burned into the screen. A permanent image may be impossible to clear entirely with white wash.

User Menus



Selecting the Options

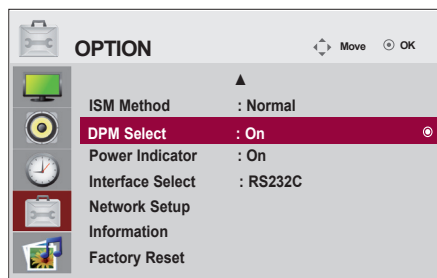

DPM Select

Turns power saving on/off.

Power Indicator

Sets the power indicator on the front side of the set to On or Off. If you set to Off, it will go Off. If you set On at any time, the power indicator will automatically be turned on.

Interface Select

Sets up network connections.

- **Network:** LAN - Enables communication via Ethernet.
- **RS-232C:** Enables communication via Serial.

Network Setup

- **DHCP:** Allocates and sets up IP automatically.
- **Manual:** Sets up IP address, Gateway, Subnet Mask, Primary DNS and Secondary DNS.
The setup process is complete when you select Execute, and "**IP Setup Completed**" is displayed at the bottom of the screen. While "**Wait for IP Setup**" is displayed, you cannot use the local keys and remote control. "**Wait for IP Setup**" is displayed for up to 40 seconds.

*If Network select is set to RS232C.DHCP and Manual are disabled.

Information

You can find information about your set serial number, F/W version, IP address and MAC address here.

Factory Reset

Returns the set to the default factory settings.

User Menus



Adjusts the USB Options.


When connecting the USB device

When you connect a USB device, this popup menu is displayed, automatically. "POPUP MENU" will not be displayed while the OSD including Menu, EPG or Schedule list is activated.

When the Popup menu appears, you can select Music List, Photo List or Movie List in the MY MEDIA menu.

In USB device, you cannot add a new folder or delete the existing folder.

1. Connect the USB device to the **USB** jack on the product.

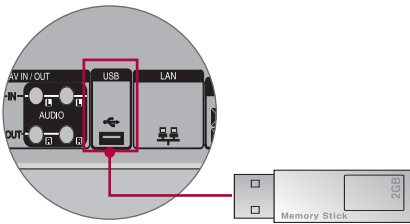

2. Select **PHOTO LIST**, **MUSIC LIST** or **MOVIE LIST**.



User Menus



Adjusts the USB Options.

Precautions when using the USB device

- Only a USB storage device is recognizable.
- If the USB storage device is connected through a USB hub, the device is not recognizable.
- A USB storage device using an automatic recognition program may not be recognized.
- A USB storage device which uses its own driver may not be recognized.
- The recognition speed of a USB storage device may depend on each device.
- Please do not turn off the Monitor or unplug the USB device when the connected USB storage device is working. When such device is suddenly separated or unplugged, the stored files or the USB storage device may be damaged.
- Please do not connect the USB storage device which was artificially maneuvered on the PC. The device may cause the product to malfunction or fail to be played. Never forget to use only a USB storage device which has normal music files or image files.
- Please use only a USB storage device which was formatted as a FAT16, FAT32, NTFS file system provided with the Windows operating system. In case of a storage device formatted as a different utility program which is not supported by Windows, it may not be recognized. Data in a USB storage device cannot be deleted in the NTFS file system.
- Please connect power to a USB storage device which requires an external power supply. If not, the device may not be recognized.
- Please connect a USB storage device with cable is offered by USB maker. If connected with cable is not offered by USB maker or an excessively long cable, the device may not be recognized.
- Some USB storage devices may not be supported or operated smoothly.
- Maximum of 999 files and folders can be recognized.
- Data in a USB storage device cannot be aligned. Up to 128 English characters can be recognized as a file name.
- Please back up the important file because a data of USB device may be damaged. Data management is consumer's responsibility and in consequence the manufactures does not cover the product bearing data damage.
- If the USB is connected in Standby Mode, specific hard disk will automatically be loaded when the Monitor is turned on.
- The recommended capacity is 1TB or less for a USB external hard disk and 32GB or less for USB memory.
- Any device with more than the recommended capacity may not work properly.
- If a USB external hard disk with a "Power Saving" function does not work, turn the hard disk off and on again to make it work properly.
- Names and subtitles of some language files may not display properly.(Korean, Chinese, Japanese)
- When using Korean, Japanese or Chinese subtitles or file names, it is recommended to set the language to the corresponding one.

User Menus



Adjusts the USB Options.

Photo List

You can view photo files on USB storage device.

The On Screen Display may be different from your product. Images are an example to assist with the product operation.


PHOTO(*.JPEG) supporting file

Baseline: 15360 x 8640

Progressive : 1024 x 768

- You can play JPEG files only.
- Non-supported files are displayed in the form of bitmap.

Screen Components

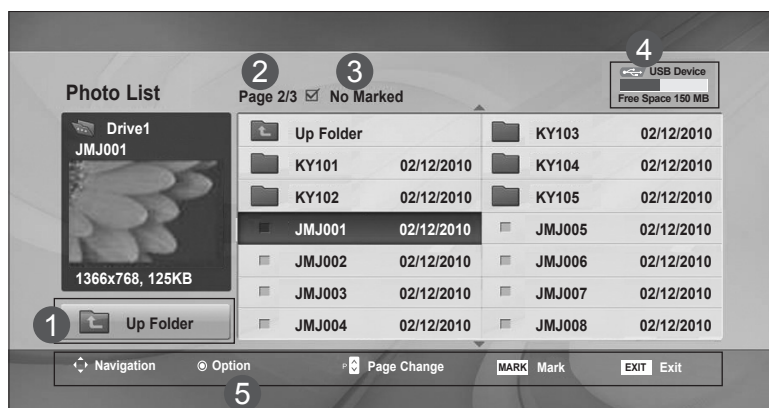



- 1 Moves to upper level folder
- 2 Current page / Total pages
- 3 Total number of marked photos
- 4 Usable USB memory
- 5 Corresponding buttons on the remote control

User Menus



Adjusts the USB Options.

Photo Selection and PopUp Menu

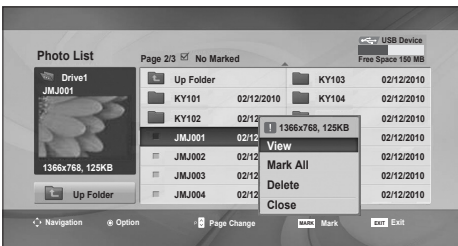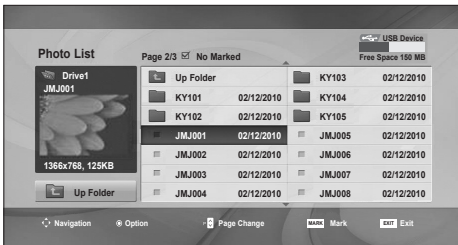

View : Display the selected item.
Mark All : Mark all photos on the screen.
Unmark All : Deselect all marked photos.
Delete : Delete the selected photo item.
Close : Close the pop-up menu.


User Menu



Adjusts the USB Options.

How to view photo

Detailed operations are available on full-sized photo view screen.

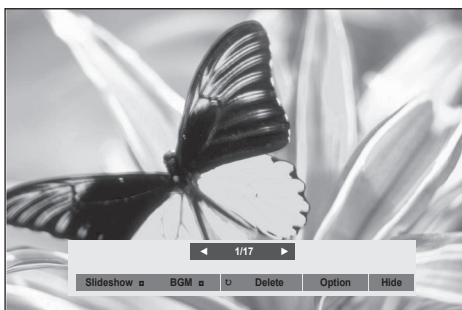

The aspect ratio of a photo may change the size of the photo displayed on the screen in full size. Press the **EXIT** button to move to the previous menu screen.

► Slideshow

When no picture is selected, all photos in the current folder are displayed during slide show. If some photos are selected, those photos are displayed in a slide show.

- Set the time interval of the slide show in **Option**.

► BGM (Background Music)

Listen to music while viewing photos in full size.

- Set the Music Folder for **BGM** in Options before using this function.

► (Rotate)

- Rotate photos. Rotates the photo 90°, 180°, 270°, 360° clockwise.

► Delete

Delete photos.

► Option

Set values for **Slide Speed** and **Music Folder** for **BGM**.

- Use $\wedge$ $\vee$ $<$ $>$ button and **OK** button to set values. Press OK to save the settings.
- You cannot change **Music Folder** while **BGM** is **playing**.

► Hide

Hide the menu on the full-sized screen. To see the menu again on the full-sized screen, press **OK** button to display. If you press the ARC key on the remote control after hiding the menu, you can toggle between normal and full screen mode.

User Menus



Adjusts the USB Options.

Music List

You can play music files on USB storage device.

Purchased music files(*.MP3) may contain copyright restrictions. Playback of these files may not be supported by this model. Music file on your USB device can be played by this unit.


The On Screen Display may be different from your product. Images are an example to assist with the product operation.

MUSIC (*.MP3) supporting file

Bit rate 32 to 320kbps

• Sampling rate MPEG1 layer 3: 32 kHz, 44.1 kHz, 48 kHz.

Screen Components

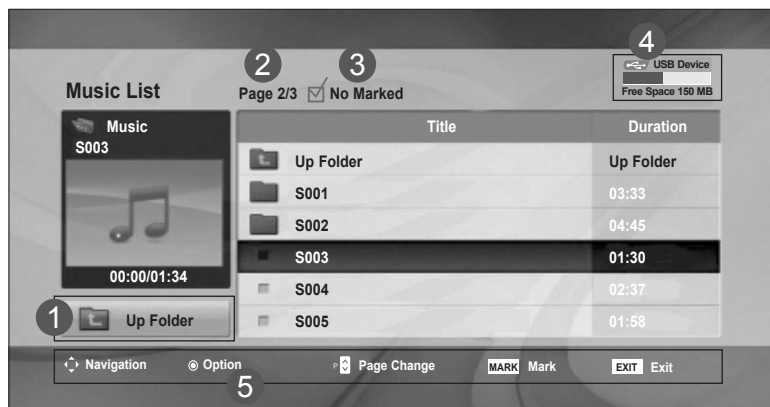

- 1 Moves to upper level folder
- 2 Current page / Total pages
- 3 Total number of marked music title
- 4 Usable USB memory
- 5 Corresponding buttons on the remote control



User Menus



Adjusts the USB Options.

Music Selection and PopUp Menu

As shown, up to 6 music titles are listed per page.

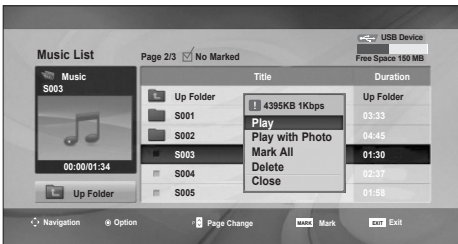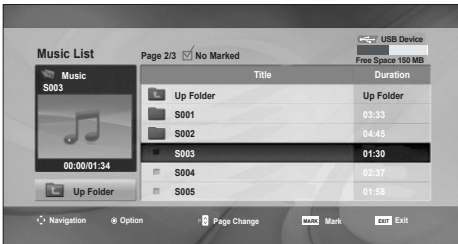

Play (During stop) : Play the selected music titles.

One playback of a piece of music finishes, the next selected one will be played. When there are no selected music titles to play, the next one in the current folder will be played. If you go to a different folder and press the OK button, the current music in playback will stop.

Play Marked: Play the selected music titles. Once a music finishes playing, the next selected one will be played automatically.

Stop Play (During playback): Stop the playing music titles.

Play with Photo: Start playing the selected music titles and then move to the Photo List.

Mark All : Mark all music titles in the folder.

Unmark All : Deselect all marked music titles.

Delete : Delete the selected music titles.


Close : Close the pop-up menu.

User Menus



Adjusts the USB Options.

- If you don't press any button for a while during the playing, the play information box (as shown in the below) will float as a screen saver.
- The '**Screen Saver**'?
Screen saver is to prevent screen pixel damage due to an fixed image remaining on the screen for a extended period of time.

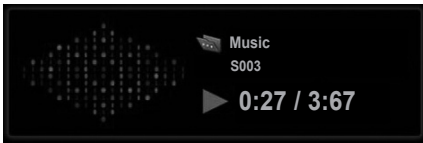

Note



- A damaged or corrupted music does not play but displays 00:00 in playtime.
- A music downloaded from a paid service with copyright protection does not start but displays inappropriate information in playtime.
- If you press OK, ■ buttons, screen saver is stopped.
- The PLAY(▶), Pause(⏸), ■, ▶▶, ◀◀ buttons on the remote control are also available in this mode.
- You can use the ▶▶ button to select the next music and the ◀◀ button to select the previous music.

User Menus



Adjusts the USB Options.

Movie List

The movie list is activated once USB is detected. It is used when playing movie files on monitor.

Displays the movies in the USB folder and supports Play.

Allows playback of all movies in the folder and user desired files.

Video editing is not supported but files can be deleted.

It is a movie list that displays folder information and DivX file.

Supports up to four drives.

Movie List(*.avi/*.DivX) supporting file

Video format : MPEG1, MPEG2, MPEG4(Doesn't support Microsoft MPEG 4-V2, V3), DivX 3.11, DivX4, DivX5, DivX6

Audio format : Mpeg, Mp3, PCM, Dolby Digital

Sampling frequency : within 32k to 48 khz

Bit rate : 32k to 320 kbps

Subtitle format : *.smi/ *.srt/ *.sub(MicroDVD, SubViewer 2.0)/ *.ass/ *.ssa/*.txt(DVD Subtitle System)

- DivX may not be played depending on its types or recording methods.
- If the video and audio structure of recorded file is not interleaved, either video or audio is outputted.
- Maximum FPS (Frame Per Second) can be reached only at SD level. FPS is 25 FPS (720*576) or 30 FPS (720*480) depending on Resolution.
- Max bitrate of playable DivX is 4Mbps.
- Files more than 25 FPS or 30 FPS or higher may not be played properly.
- A DivX movie file and its subtitle file must be located in the same folder.
- A video file name and its subtitle file name must be identical for it to be displayed.
- Playing a video via a USB connection that doesn't support high speed may not work properly.
- USB storage devices below USB 2.0 are supported as well. But they may not work properly in the movie list.
- Files encoded with GMC(Global Motion Compensation) may not be played.


Extension name	Video Decoder	Audio Codec	Max Resolution
mpg, mpeg, vob, dat	MPEG1, MPEG2	AC3,MPEG,MP3,PCM	720x576@25p 720x480@30p
Avi, DivX, m4v	MPEG4-SP, MPEG4-ASP, DivX 3.11, DivX4, DivX5, DivX6, XviD	AC3,MPEG,MP3,PCM	

User Menus



Adjusts the USB Options.

Screen Components

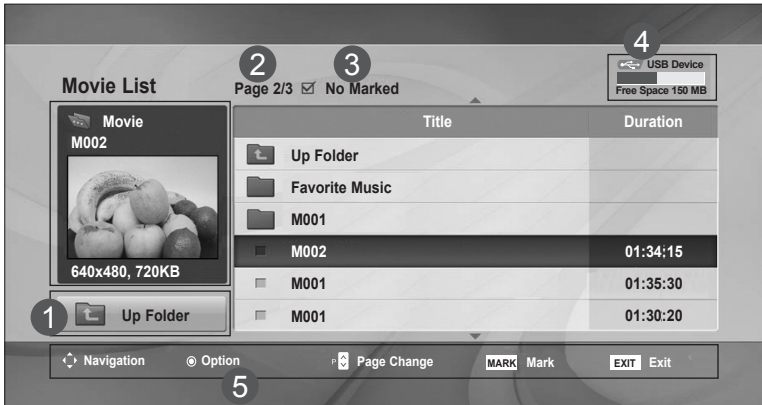

- 1 Moves to upper level folder
- 2 Current page / Total pages
- 3 Total number of marked movie title
- 4 Usable USB memory
- 5 Corresponding buttons on the remote control



Note



- Use the left/right (< / >) keys to move to a specific frame forward or backward while playing a movie. (The left/right (< / >) keys may not work properly for some files while playing a movie.)

User Menus



Adjusts the USB Options.

Movie Selection and PopUp Menu

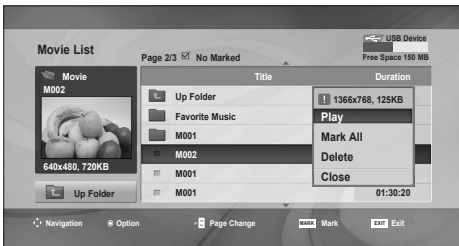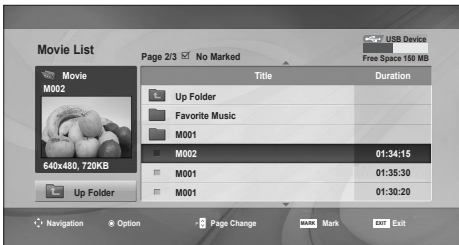

Play : Play the selected movie. DivX Play is executed while screen changes.

Mark All : Mark all Movie in the folder.

Unmark All : Deselect all marked movies.

Delete : Delete the selected Movie item.

Close : Close the pop-up menu.

Using the remote control

◀◀ / ▶▶	When playing, repeatedly, press REW (◀◀) to speed up ◀◀(x2) -> ◀◀◀◀ (x4) -> ◀◀◀◀◀◀(x8) -> ◀◀◀◀◀◀◀◀(x16) -> ◀◀◀◀◀◀◀◀◀(x32). Repeatedly, press FF (▶▶) to speed up ▶▶(x2)-> ▶▶▶▶ (x4) -> ▶▶▶▶▶▶ (x8) -> ▶▶▶▶▶▶▶▶(x16) -> ▶▶▶▶▶▶▶▶▶▶(x32). Pressing these buttons repeatedly increases the fast forward/reverse speed.
	During playback, press Pause () and the still screen is displayed.
■	During playback, stops the screen.
▶	Press Play(▶) to return to normal playback.



Note


- In the case of files not supported, a message regarding non-supported file is displayed.

User Menus



Adjusts the USB Options.

When you select the Set Video Play,

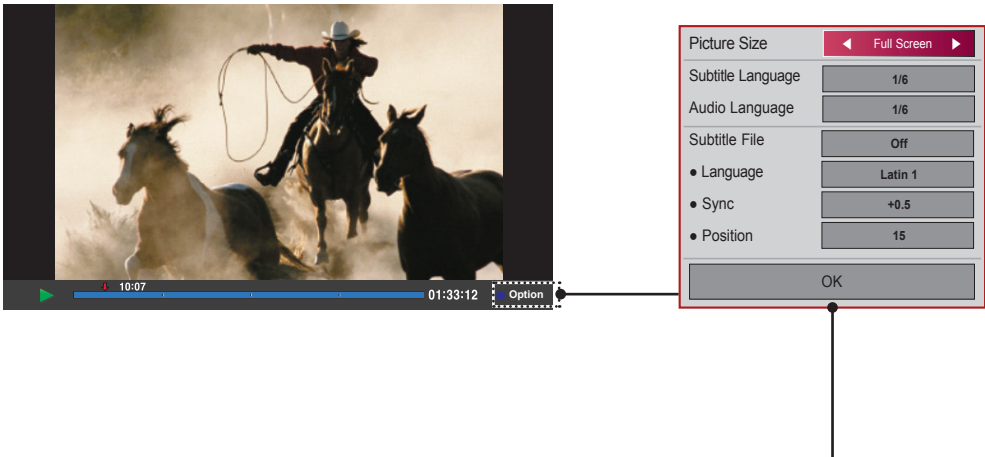

Picture Size : Sets to [Full Screen] or [Original Size].

Subtitle Language : Allows to select the language you want for the file with multiple subtitle tracks.

This option is not available if the file has only one subtitle track.

Audio Language : Allows to select the language you want for the file with multiple audio tracks.

This option is not available if the file has only one audio track.

Subtitle File : Sets to **On** or **Off**.

Language : Sets to one of Latin1, Latin2, Latin4, Latin5, Cyrillic, Arabic, Greek and Hebrew

Sync : Adjusts the subtitle delay from 0 and +5.0 in 0.5 second increments.

Position : Moves the subtitle position from 0 to 16.


* You can move the video back or forward by clicking < or > key.

User Menus



Adjusts the USB Options.

DivX Registration Code

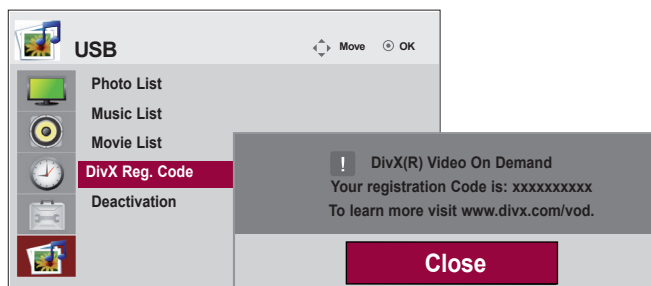

Confirm the DivX registration code number of the monitor. Using the registration number, movies can be rented or purchased at www.divx.com/vod.

With a DivX registration code from other monitor, playback of rented or purchased DivX file is not allowed. (Only DivX files matched with the registration code of the purchased monitor are playable.)

Note




- Supported movie file
Resolution : under 25 frames/sec(720x576 WxH pixels).
Frame rate : under 30 frames/sec(720x480)
- Video Codec : MPEG1, MPEG2, MPEG4(Doesn't support Microsoft MPEG4-V2, V3), DivX 3.11, DivX4, DivX5. DivX6.
- When loading, some buttons may not work.

User Menus



Adjusts the USB Options.

Deactivation

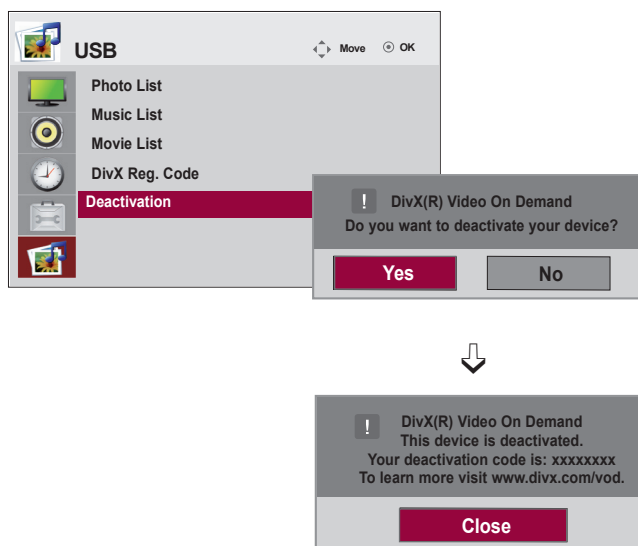

The purpose of deactivation is to allow deactivation of devices for users who have activated all the available devices through the web server and are blocked from activating more devices. DivX VOD allowed the consumer to activate up to 6 devices under one account, but to replace or deactivate any of those devices, the consumer had to contact DivX Support and request deletion. Now with this added feature, consumers will be able to deactivate the device themselves and hence better manage their DivX VOD devices.

Cautions When Using the Touch Screen

Cautions When Using the Touch Screen

- The monitor is optimized for indoor use.
- The touch screen monitor is optimized for Windows 7.
- Do not remove the USB cable when using the touch screen monitor.
- Use LG TDS(Touch Display Settings) provided with the monitor to set touch coordinates when rotating the monitor connected to a Windows XP computer.
- The LG TDS provided with the monitor only supports the following graphic cards: nVidia, ATI and Intel.
- If touch does not respond, remove the USB cable and connect it back in ten minutes.
- Touch responds when the monitor is powered on.
- Up to five touch-points are supported when the monitor is connected to a Windows 7 computer; one when connected to a Windows XP computer.
- Set the monitor as the primary monitor in Windows XP.
- Touch accuracy is optimized by using full screen mode.
- Your action may not work properly on the edge area of the touch screen.
- If the five touch-points are not detected, restart your PC. (Windows 7)
- The touch operation (e.g. touches count, gesture, etc.) may vary depending on the content.
- The spot that you try to touch and the one which is actually touched on the screen may differ depending on the angle you view the monitor screen.


Using the Touch Screen (Windows 7)

● Using the Touch Screen (Windows 7)


To Use the Touch Screen on Windows 7

* The monitor can respond to as many as five touch-points at any one time when connected to a Windows 7 computer.

Plug a USB cable into a USB port on the back of the monitor.

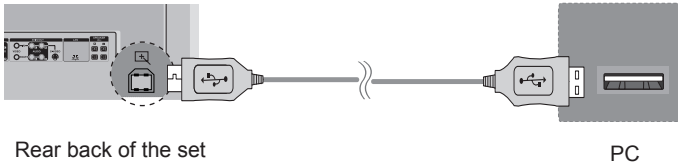

Then, connect the USB cable to your PC so that it automatically recognizes the touch screen monitor.

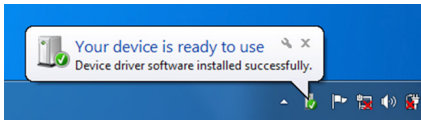

* Once your PC recognizes the monitor, you will be able to use the touch screen.

Go to Control Panel > System and Security > System. You will see the number of touch-points supported under Pen and Touch.

Gestures and Settings on Windows 7


For information about gestures and settings on Windows 7, refer to the Windows Help.

Using the Touch Screen (Windows XP)


● Using the Touch Screen (Windows XP)

To Use the Touch Screen on Windows XP

* The monitor can respond to one touch-point when connected to a Windows XP computer.
Plug a USB cable into a USB port on the back of the monitor.

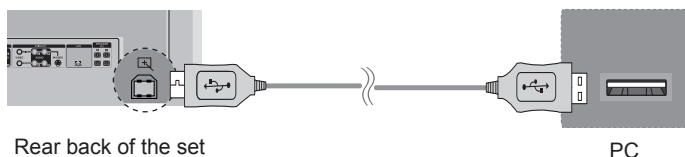


Then, connect the USB cable to your PC so that it automatically recognizes the touch screen monitor.

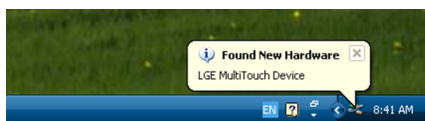

* Once your PC recognizes the monitor, you will be able to use the touch screen.

You can see the details of the current touch screen on the Device Manager window. Go to Control Panel > System > Hardware > Device Manager > Human Interface Devices.

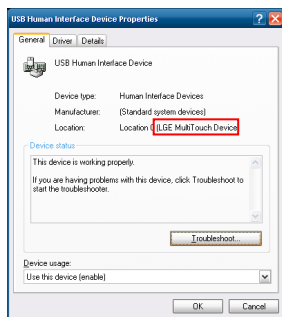

You can see "LGE MultiTouch Device" on the USB Human Interface Device Properties window.

Using the Touch Screen (Windows XP)

● Using the Touch Screen (Windows XP)

Touch Response to Windows XP


Touch: Mouse click (action)

Long-press: Mouse right click (context menu)

* The touch screen monitor is optimized for Windows 7.

How to Use LG TDS

LG TDS is required to enable portrait mode and the long-touch on Windows XP.

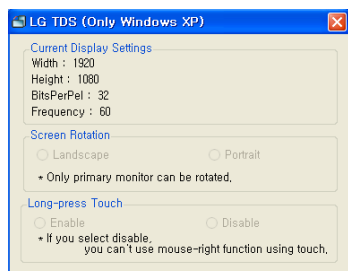

• Current Display Settings

Displays the current screen information.


• Screen Rotation

Touch Screen Rotation Settings


• Long-press Touch

Whether to enable the mouse's right click function (context menu), when you touch and hold the screen.

Touch Screen Rotation Settings

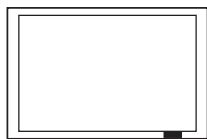

Landscape

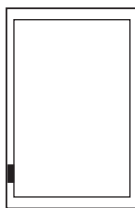

Portrait

* The Portrait mode is supported only when the monitor is rotated 90° clockwise.

* Landscape: No rotation

* Portrait: 90° rotation clockwise

Touch Long-press setting (mouse right click)

* Enable: Enables the mouse's right click function (context menu) when a long-touch is applied.

* Disable: Disables the mouse's right click function (context menu).

Troubleshooting

No image is displayed

- | | |
|---|--|
| <ul style="list-style-type: none">• Is the power cord connected?• Is the power indicator light on?• Power is on, power indicator is red. But the screen appears extremely dark.• Is the power indicator amber?• Does the 'Out of range' message appear?• Does the 'Check signal cable' message appear? | <ul style="list-style-type: none">• See if the power cord is properly connected to the outlet.• See if the power switch is turned on.• May need service.• Adjust brightness and contrast again.• Backlight may need repair.• If the set is in power saving mode, move the mouse or press any key.• Turn both devices off and then back on.• The signal from the PC (video card) is out of the vertical or horizontal frequency range of the set. Adjust the frequency range by referring to the specifications in this manual.
* Maximum Resolution
RGB : 1920 x 1080 @ 60 Hz
HDMI/DVI : 1920 x 1080 @ 60 Hz• The signal cable between PC and set is not connected. Check the signal cable.• Press INPUT on the remote control to check the input signal. |
|---|--|

'Unknown Product' message appears when the product is connected.

- | | |
|---|--|
| <ul style="list-style-type: none">• Did you install the driver? | <ul style="list-style-type: none">• Install the product driver, which is provided with the product, or download it from the web site. (http://www.lg.com)• See if the plug&play function is supported by referring to the video card user manual. |
|---|--|

'Key Lock On' message appears.

- | | |
|--|---|
| <ul style="list-style-type: none">• The 'Key Lock On' message appears when pressing the Menu button. | <ul style="list-style-type: none">• The Lock function prevents the OSD settings from being changed inadvertently. To release the lock, go to Menu and Option and disable the Key Lock option. |
|--|---|

Troubleshooting

The screen image looks abnormal.

- | | |
|---|--|
| <ul style="list-style-type: none">• Is the screen position wrong?• Do thin lines appear on the background screen?• Horizontal noise appears or the characters look blurred.• The screen is displayed abnormally.• Nothing is displayed on the screen. | <ul style="list-style-type: none">• D-Sub analog signal - Press the "AUTO" button in the remote control to automatically select the optimal screen status that fits into the current mode. If adjustment is not satisfactory, use the Position OSD menu.• See if the video card resolution and frequency are supported by the product. If the frequency is out of range, set to the recommended resolution in the Control Panel "Display" Setting menu.• D-Sub analog signal - Press the "AUTO" button in the remote control to automatically select an optimal screen status that fits into the current mode. If adjustment is not satisfactory, use the Clock OSD menu.• D-Sub analog signal - Press the "AUTO" button in the remote control to automatically select an optimal screen status that fits into the current mode. If adjustment is not satisfactory, use the Phase OSD menu.• The proper input signal is not connected to the signal port. Connect the signal cable that matches with the source input signal.• Check if the power is turned on.• Check the network connection- If your network connection is unstable, the power may be turned off. |
|---|--|

Note



- **Vertical frequency:** To enable the user to watch the product display, screen image should be changed tens of times every second like a fluorescent lamp. The vertical frequency or refresh rate is the times of image display per second. The unit is Hz.
- **Horizontal frequency:** The horizontal interval is the time to display one vertical line. When 1 is divided by the horizontal interval, the number of horizontal lines displayed every second can be tabulated as the horizontal frequency. The unit is kHz.

Troubleshooting

After-image appears on the product.

- After-image appears when the product is turned off.
- If you use a fixed image for a long time, the pixels may be damaged quickly. Use the screen-saver function.
- If you use a fixed image for a long time, the pixels may be damaged quickly. Use the screen-saver function.
- When a dark image is displayed on the screen after an image with high contrast (black and white or gray), this may cause image sticking. The image sticking will disappear after 2 or 3 minutes. This is normal for LCD screen.
* Please avoid displaying images on the screen as shown below. It is recommended to display images with relatively high brightness.



The audio function does not work.

- No sound?
 - See if the audio cable is connected properly.
 - Adjust the volume.
 - See if the sound is set properly.
- Sound is too dull.
 - Adjust the Clear Voice II, Treble and Bass appropriately.
- Sound is too low.
 - Adjust the volume.

Troubleshooting

Screen color is abnormal.

- | | |
|---|---|
| <ul style="list-style-type: none">• Screen has poor color resolution (16 colors).• Screen color is unstable or mono-colored.• Do black spots appear on the screen? | <ul style="list-style-type: none">• Set the number of colors to more than 24 bits (true color)
Select Control Panel - Display - Settings - Color Table menu in Windows.• Check the connection status of the signal cable.
Or, re-insert the PC video card.• Several pixels (red, green, white or black color) may appear on the screen, which can be attributable to the unique characteristics of the LCD panel. It is not a malfunction of the LCD. |
|---|---|

The operation does not work normally.

- | | |
|---|--|
| <ul style="list-style-type: none">• The power suddenly turned off. | <ul style="list-style-type: none">• Is the sleep timer set?• Check the power control settings.
Power interrupted.• "CAUTION! FAN STOP!"
If the power is turned off after this message appears, it means that the fan is out of order. In this case, contact your local service center. |
|---|--|

Troubleshooting

I have a problem with touch response.

- **Touch does not respond.**

- Check the USB cable connection.
 - This may occur when the USB cable between PC and monitor is not connected. Check the USB cable and make it firmly connected.
 - * Check the connection on Windows 7
Control Panel > System and Security > System
 - Check the number of touch-points supported under Pen and Touch.
 - * Check the connection on Windows XP
Go to Control Panel > System > Hardware > Device Manager > Human Interface Devices.
You need to be able to see "LGE MultiTouch Device" on the USB Human Interface Device Properties window.
- Check the PC power.
 - This may occur when the PC is powered off. Make sure that your PC's power cord is firmly plugged into a power outlet.
- Restart your PC.
 - Touch may not respond when the system is down due to the unstable network. Reconnect the LAN cable or restart your PC.
- Check the signal cable connection.
 - If your PC and monitor are not connected using a signal cable, touch does not respond. Check the signal cable connection.
- Check the monitor power.
 - Touch may not respond when the monitor is powered off. Check if the power indicator turns red and the screen is displayed.

- **I cannot use five touch points in Windows 7.**

- Make sure that you use a content that supports up to five touch points.
 - The content played (e.g. Flash Player, Paint, etc.) may not support 5 touch points.
- Remove the USB cable and connect it again in 10 seconds.
- Run the content (e.g. Flash Player, Paint, etc.) again.
- Restart your PC.
- If the gap between two touch points is 30 mm or less, the touch error may occur.
- On the edge of the touch screen, five touch points may work unstably.

Troubleshooting

I have a problem with touch response.

- | | |
|---|---|
| <ul style="list-style-type: none">• The location of a touch does not correspond to the touch coordinates.• Touch coordinates appear to be rotated 90 degrees (Windows XP).• A touch is applied to a monitor other than the one I intended.• I cannot start LG TDS. | <ul style="list-style-type: none">• Change your tablet PC settings (Windows 7).<ul style="list-style-type: none">- This may occur when the touch screen is not calibrated properly.
Control Panel > Hardware and Sound > Tablet PC Settings > Display > Display options > Calibrate or Reset* For information about gestures and settings on Windows 7, refer to the Windows Help.
Change the display setting to Full Screen (Windows XP).- On Windows XP, rotation of touch coordinates works only in full screen mode.* Refer to help of the graphic card installed on your PC.• Change the Screen Rotation setting with LG TDS.<ul style="list-style-type: none">- Run the LG TDS provided with the monitor and set to Landscape or Portrait.• Set 47VT30 as the primary monitor.<ul style="list-style-type: none">- This may occur if 47VT30 is not set as the primary monitor when you are using multiple monitors.
Go to Control Panel > Display > Settings tab and select the monitor. Then, select Use this device as the primary monitor and click Apply.• Check whether the operating system is Windows XP.<ul style="list-style-type: none">- LG TDS is supported only in Windows XP.• Install .NET Framework 3.5 or later.<ul style="list-style-type: none">- You can download it at Microsoft Download Center. |
|---|---|

Troubleshooting


My network connection is unstable.

- My network connection is unstable.
- Check the PC's or monitor's power.
- Check the Internet cable connection.
Restart your PC.
- Touch may not respond when the system is down due to the unstable network.

There is a problem with the power.

- I cannot turn on the power.
- Check if the power cord is correctly plugged in to the outlet.
- Check if the power switch is turned on (power connector).
- Check whether there is a blackout or the power cord is properly connected to the outlet.
- Check if the PC is turned on.
- The monitor's power may turned off if the computer is not working properly.
- The power is turned off.

Specifications

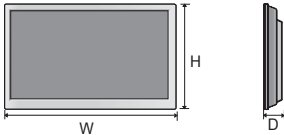LCD Panel	47" class (46.9" diagonal) TFT (Thin Film Transistor) LCD (Liquid Crystal Display) Panel Visible diagonal size : 119.28 cm 0.5415 mm x 0.5415 mm x RGB (Pixel Pitch)		
Power	Rated Voltage Power Consumption	AC 100-240 V~ 50 / 60 Hz 3.3 A On Mode : 240 W Typ. Sleep Mode : ≤ 1 W (RGB) / 1 W (HDMI/DVI) (If LAN OFF is selected) Off Mode : ≤ 0.5 W	
Touchscreen	OS (Operating System)	Windows XP Windows 7	1 Point 5 Points
Space between touches : at least 30mm or more			
Dimensions & Weight			
	Width x Height x Depth 111.6 cm (44 inch) x 66.10 cm (26 inch) x 12.40 cm (4.8 inch)		
	Net 34kg (74.96 lb)		

Note



- The specifications shown above may be changed without prior notice for quality improvement.

Specifications

Video Signal	Max. Resolution	RGB: 1920x1080 @ 60 Hz HDMI/DVI: 1920x1080 @ 60 Hz - It may not be supported depending on the OS or video card type.
	Recommended Resolution	RGB: WXGA 1920x1080 @ 60 Hz HDMI/DVI: WXGA 1920x1080 @ 60 Hz - It may not be supported depending on the OS or video card type.
	Horizontal Frequency	RGB: 30 kHz to 83 kHz HDMI/DVI: 30 kHz to 83 kHz
	Vertical Frequency	RGB: 56 Hz to 75 Hz HDMI/DVI: 56 Hz to 60 Hz
	Synchronization Type	Composite/Separate/Digital
Input Connector		15-pin D-Sub type, HDMI/DVI(digital) Composite Video, Component, RS-232C, LAN, USB
Environmental Conditions	Operational Condition	Temperature: 0 °C to 40 °C , Humidity: 10 % to 80 %
	Storage Condition	Temperature: -20 °C to 60 °C , Humidity: 5 % to 95 %

Applicable only for models that support the speakers

Audio	RMS Audio Output	10 W + 10 W (R + L)
	Input Sensitivity	0.7 Vrms
	Speaker Impedance	8 Ω

Note



- The specifications shown above may be changed without prior notice for quality improvement.

Specifications

● PC Mode - Preset Mode

Preset mode		Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Preset mode		Horizontal Frequency (kHz)	Vertical Frequency (Hz)
1	640 x 350	31.469	70.8	*10	1280 x 1024	63.981	60.02
2	720 x 400	31.468	70.8	11	1280 x 1024	79.98	75.02
*3	640 x 480	31.469	59.94	*12	1680 x 1050	65.290	59.954
4	640 x 480	37.5	75	*13	1920 x 1080	67.5	60
*5	800 x 600	37.879	60.317				
6	800 x 600	46.875	75				
7	832 x 624	49.725	74.55				
*8	1024 x 768	48.363	60				
9	1024 x 768	60.123	75.029				

1 to 13: RGB mode

*: HDMI/DVI mode

● DTV Mode

	Component	HDMI/DVI (DTV)
480i	o	x
576i	o	x
480p	o	o
576p	o	o
720p	o	o
1080i	o	o
1080p	o	o

● Power Indicator

Mode	Set
On Mode	Red
Sleep Mode	Amber
Off Mode	-

Note



- DTV/PC selection on HDMI/DVI inputs is available for PC resolutions : 640 x 480/60 Hz, 1280 x 720/60 Hz, 1920 x 1080/60 Hz and DTV resolutions : 480p, 720p, 1080p.

Use this method to connect several products to a single PC. You can control several products at a time by connecting them to a single PC.


If the [Set ID] menu in [Option] is set to OFF, the monitor ID value should be set between 1 and 99.

Connecting the cable

Connect the RS-232C cable as shown in the picture.

You need to purchase a cable to connect the RS-232C socket as it is not provided as the accessory.

The RS-232C protocol is used for communication between the PC and product. You can turn the product on/off, select an input source or adjust the OSD menu from your PC.

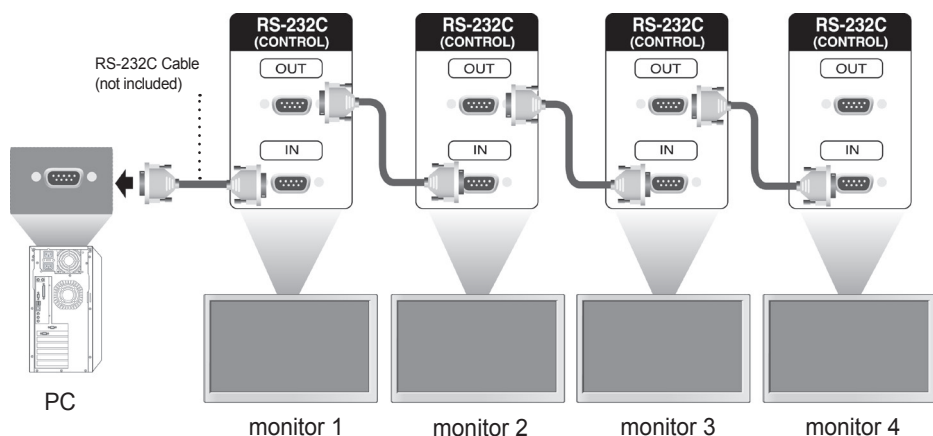

RS-232C Configurations

7-Wire Configurations (Standard RS-232C cable)

PC	Monitor	
RXD	2	3
TXD	3	2
GND	5	5
DTR	4	6
DSR	6	4
RTS	7	8
CTS	8	7
D-Sub 9 (Female)	D-Sub 9 (Female)	

3-Wire Configurations (Not Standard)

PC	Monitor	
RXD	2	3
TXD	3	2
GND	5	5
DTR	4	6
DSR	6	4
RTS	7	7
CTS	8	8
D-Sub 9 (Female)	D-Sub 9 (Female)	

Communication Parameter

- ▶ Baud Rate : 9600 baud Rate (UART)
- ▶ Data Length : 8 bit
- ▶ Parity Bit : None
- ▶ Stop Bit : 1bit
- ▶ Flow Control : None
- ▶ Communication Code : ASCII code
- ▶ Use a crossed (reverse) cable

 Command Reference List

	COMMAND 1	COMMAND 2	DATA1	DATA2	DATA3
01. Power	k	a	00H to 01H		
02. Aspect Ratio	k	c	01H to 1FH		
03. Screen Mute	k	d	00H to 01H		
04. Volume Mute	k	e	00H to 01H		
05. Volume Control	k	f	00H to 64H		
06. Contrast	k	g	00H to 64H		
07. Brightness	k	h	00H to 64H		
08. Color	k	i	00H to 64H		
09. Tint	k	j	00H to 64H		
10. Sharpness	k	k	00H to 64H		
11. OSD Select	k	l	00H to 01H		
12. Remote Lock/ key Lock	k	m	00H to 01H		
13. Balance	k	t	00H to 64H		
14. Color Temperature	k	u	00H to 02H		
15. Abnormal state	k	z	FFH		
16. ISM mode	j	p	01H to 08H		
17. Auto configuration	j	u	01H		
18. Key	m	c	Key Code		
19. Picture mode (PSM)	d	x	00H to 06H		
20. Sound mode	d	y	01H to 05H		
21. Fan Fault check	d	w	FFH		
22. Elapsed time return	d	l	FFH		
23. Temperature value	d	n	FFH		
24. Lamp fault check	d	p	FFH		
25. Auto Volume	d	u	00H to 01H		
26. Speaker	d	v	00H to 01H		
27. Time	f	a	00H to 06H	00H to 17H	00H to 3BH
28. On Timer (On/Off Timer) Time	f	d	F1H to F4H E0H to E4H 01H to 80H	00H to 17H	00H to 3BH
29. Off Timer (On/Off Timer) Time	f	e	F1H to F4H E0H to E4H 01H to 80H	00H to 17H	00H to 3BH

Controlling the Multiple Product

	COMMAND 1	COMMAND 2	DATA1	DATA2	DATA3
30. Scheduling input select	f	u	F1H to F4H	02H to 0BH	
31. Sleep Time	f	f	00H to 08H		
32. Auto Sleep	f	g	00H to 01H		
33. Power On Delay	f	h	00H to 64H		
34. Language	f	i	00H to 09H		
35. DPM Select	f	j	00H to 01H		
36. Reset	f	k	00H to 02H		
37. Power Saving	f	l	00H to 03H		
38. Power Indicator	f	o	00H to 01H		
39. Serial no.	f	y	FFH		
40. S / W Version	f	z	FFH		
41. Input Select	x	b	20H to B0H		

● Transmission / Receiving Protocol

Transmission

[Command1][Command2][][Set ID][][Data][Cr]

- * [Command 1]: First command. (k, j, m, d, f, x)
- * [Command 2]: Second command.(a to u)
- * [Set ID]: Set up the Set ID number of product.
range : 01H to 63H. by setting '0', server can control all products.
- * In case of operating with more than 2 sets using set ID as '0' at the same time, it should not be checked the ack message. Because all sets will send the ack message, so it's impossible the check the whole ack messages.
- * [DATA]: To transmit command data.
Transmit 'FF' data to read status of command.
- * [Cr]: Carriage Return
ASCII code '0 x 0 D'
- * []: ASCII code Space (0 x 20)

OK Acknowledgement

[Command2][][Set ID][][OK][Data][x]

- * The Product transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer.

Error Acknowledgement

[Command2][][Set ID][][NG][Data][x]

- * If there is error, it returns NG

● Transmission / Receiving Protocol

01. Power(Command : k a)

► To control Power On / Off of the Set.

Transmission

[k][a][][Set ID][][Data][Cr]

Data 0 : Power Off 1 : Power On

Acknowledgement

[a][][Set ID][][OK][Data][x]

► To show the status of Power On / Off.

Transmission

[k][a][][Set ID][][FF][Cr]

Acknowledgement

[a][][Set ID][][OK][Data][x]

Data 0 : Power Off 1 : Power On
9: DPM maintained

● Transmission / Receiving Protocol

02. Aspect Ratio(Command : k c) (Main picture format)

► To adjust the screen format.

You can also adjust the screen format using the ARC (Aspect Ratio Control) button on remote control or in the Screen menu.

Transmission

[k][c][][Set ID][][Data][Cr]

Data 1 : Normal Screen (4 : 3)

2 : Wide Scan (16 : 9)

4 : Zoom (AV, Component, HDMI-DTV)

6 : Original (AV)

7 : 14 : 9 (AV, Component, HDMI-DTV)

9 : Just Scan(Component (HD DTV), HDMI-DTV (HD DTV))

* 1:1 (RGB, HDMI-PC, SuperSign)

10 to 1F : Cinema Zoom 1 to 16 (AV, Component, HDMI-DTV)

B : Full Wide (AV)

Acknowledgement

[c][][Set ID][][OK][Data][x]

03. Screen Mute(Command : k d)

► To select screen mute on / off.

Transmission

[k][d][][Set ID][][Data][Cr]

Data 0 : Screen mute off (Picture on)

1 : Screen mute on (Picture off)

Acknowledgement

[d][][Set ID][][OK][Data][x]

● Transmission / Receiving Protocol

04. Volume Mute(Command : k e)

- To control On/Off of the Volume Mute.

Transmission

[k][e][][Set ID][][Data][Cr]

Data 0 : Volume Mute On (Volume Off)

1 : Volume Mute Off (Volume On)

Acknowledgement

[e][][Set ID][][OK][Data][x]

Data 0 : Volume Mute On (Volume Off)

1 : Volume Mute Off (Volume On)

05. Volume Control(Command : k f)

- To adjust Volume

Transmission

[k][f][][Set ID][][Data][Cr]

Data Min : 00H to Max : 64H
(Hexadecimal code)

Acknowledgement

[f][][Set ID][][OK][Data][x]

Data Min : 00H to Max : 64H

* Real Data Mapping

0 : STEP 0

:

A : STEP 10

:

F : STEP 15

10 : STEP 16

:

64 : STEP 100

● Transmission / Receiving Protocol

06. Contrast(Command : k g)

- ▶ To adjust screen contrast.

You can also adjust the contrast in the Picture menu.

Transmission

[k][g][][Set ID][][Data][Cr]

Data Min : 00H to Max : 64H

Acknowledgement

[g][][Set ID][][OK][Data][x]

* Refer to 'Real data mapping' page A7.

07. Brightness(Command : k h)

- ▶ To adjust screen brightness.

You can also adjust the brightness in the Picture menu.

Transmission

[k][h][][Set ID][][Data][Cr]

Data Min : 00H to Max : 64H

* Refer to 'Real data mapping' as shown below.

Acknowledgement

[h][][Set ID][][OK][Data][x]

* Refer to 'Real data mapping' page A7.

● Transmission / Receiving Protocol

08. Color(Command : k i) (Video Timing only)

► To adjust the screen color.

You can also adjust the color in the Picture menu.

Transmission

[k][i][][Set ID][][Data][Cr]

Data Min : 00H to Max : 64H

(Hexadecimal code)

* Refer to 'Real data mapping' page A7.

Acknowledgement

[i][][Set ID][][OK][Data][x]

Data Min : 00H to Max : 64H

09. Tint(Command : k j) (Video Timing only)

► To adjust the screen tint.

You can also adjust the tint in the Picture menu.

Transmission

[k][j][][Set ID][][Data][Cr]

Data Red : 00H to Green: 64H

(Hexadecimal code)

* Refer to 'Real data mapping' page A7.

Acknowledgement

[j][][Set ID][][OK][Data][x]

Data Red : 00H to Green : 64H

* Tint Real data mapping

0 : Step 0 to Red

:

64 : Step 100 to Green

● Transmission / Receiving Protocol

10. Sharpness(Command : k k) (Video Timing only)

- To adjust the screen Sharpness.

You can also adjust the sharpness in the Picture menu.

Transmission

[k][k][][Set ID][][Data][Cr]

Data Min : 00H to Max : 64H

(Hexadecimal code)

* Refer to 'Real data mapping' page A7.

Acknowledgement

[k][][Set ID][][OK][Data][x]

Data Min : 00H to Max : 64H

11. OSD Select(Command : k l)

- To control OSD on/off to the set.

Transmission

[k][l][][Set ID][][Data][Cr]

Data 0 : OSD Off 1 : OSD On

Acknowledgement

[l][][Set ID][][OK][Data][x]

Data 0 : OSD Off 1 : OSD On

12. Remote Lock /Key Lock (Command : k m)

- To control Remote Lock on/off to the set.

This function, when controlling RS-232C, locks the remote control and the local keys.

Transmission

[k][m][][Set ID][][Data][Cr]

Data 0 : Off 1 : On

Acknowledgement

[m][][Set ID][][OK][Data][x]

Data 0 : Off 1 : On

● Transmission / Receiving Protocol

13. Balance(Command : k t)

► To adjust the sound balance.

Transmission

[k][t][][Set ID][][Data][Cr]

Data Min : 00H to Max : 64H
(Hexadecimal code)

00H : Step L50

64H : Step R50

Acknowledgement

[t][][Set ID][][OK][Data][x]

Data Min : 00H to Max : 64H

00H : Step 0 to L50

64H : Step 100 to R50

* Balance : L50 to R50

14. Color Temperature (Command : k u)

► To adjust the screen color temperature.

Transmission

[k][u][][Set ID][][Data][Cr]

Data 0 : Medium

1 : Cool

2 : Warm

Acknowledgement

[u][][Set ID][][OK][Data][x]

Data 0 : Medium

1 : Cool

2 : Warm

● Transmission / Receiving Protocol

15. Abnormal state (Command : k z)

► Abnormal State : Used to Read the power off status when Stand-by mode.

Transmission

[k][z][][Set ID][][Data][Cr]

Data FF : Read

Acknowledgement

[z][][Set ID][][OK][Data][x]

- 0 : Normal (Power on and signal exist)
- 1 : No signal (Power on)
- 2 : Turn the monitor off by remote control
- 3 : Turn the monitor off by sleep time function
- 4 : Turn the monitor off by RS-232C function
- 8 : Turn the monitor off by off time function
- 9 : Turn the monitor off by auto off function

16. ISM mode(Command: j p)

► Used to select the afterimage preventing function.

Transmission

[j][p][][Set ID][][Data][Cr]

Data 1H : Inversion
 2H : Orbiter
 4H : White Wash
 8H : Normal

Acknowledgement

[p][][Set ID][][OK][Data][x]

● Transmission / Receiving Protocol

17. Auto Configure(Command: j u)

- To adjust picture position and minimize image shaking automatically. it works only in RGB(PC) mode.

Transmission

[j][u][][Set ID][][Data][Cr]

Data 1 : To set

Acknowledgement

[u][][Set ID][][OK][Data][x]

18. Key(Command : m c)

- To send IR remote key code.

Transmission

[m][c][][Set ID][][Data][Cr]

Data Key code : Refer to page A 28.

Acknowledgement

[c][][Set ID][][OK][Data][x]

19. Picture Mode (Command : d x)

- To adjust the picture mode.

Transmission

[d][x][][Set ID][][Data][x]

Data Structure

Data(Hex)	MODE
00	Vivid
01	Standard
02	Cinema
03	Sport
04	Game
05	Export 1
06	Export 2

Acknowledgement

[x][][Set ID][][OK/NG][Data][x]

● Transmission / Receiving Protocol

20. Sound Mode (Command : d y)

► To adjust the Sound mode.

Transmission

[d][y][][Set ID][][Data][X]

Data Structure

Data(Hex)	Mode
01	Standard
02	Music
03	Cinema
04	Sport
05	Game

Acknowledgement

[y][][Set ID][][OK/NG][Data][x]

21. Fan Fault check (Command : d w)

► To check the Fan fault of the monitor.

Transmission

[d][w][][Set ID][][Data][x]

* The data is always FF(in Hex).

Data ff: Read Status

Acknowledgement

[w][][Set ID][][OK/NG][Data][x]

* Data is the status value of the Fan fault.

Data 0: Fan fault

1: Fan OK

2: N/A(Not Available)

● Transmission / Receiving Protocol

22. Elapsed time return(Command : d l)

- To read the elapsed time.

Transmission

[d][l][][Set ID][][Data][x]

- * The data is always FF(in Hex).

Acknowledgement

[l][][Set ID][][OK/NG][Data][x]

- * The data means used hours.
(Hexadecimal code)

23. Temperature value (Command : d n)

- To read the inside temperature value.

Transmission

[d][n][][Set ID][][Data][x]

- * The data is always FF(in Hex).

Acknowledgement

[n][][Set ID][][OK/NG][Data][x]

- * The data is 1 byte long in Hexadecimal.

24. Lamp fault Check(Command : d p)

- To check lamp fault.

Transmission

[d][p][][Set ID][][Data][x]

- * The data is always FF(in Hex).

Acknowledgement

[p][][Set ID][][OK/NG][Data][x]

Data 0 : Lamp Fault

1 : Lamp OK

2 : N/A(DPM/Power Off)

 Transmission / Receiving Protocol

25. Auto volume (Command : d u)

► Automatically adjust the volume level.

Transmission

[d][u][][Set ID][][Data][x]

Data 0 : Off

1 : On

Acknowledgement

[u][][Set ID][][OK/NG][Data][x]

26. Speaker (Command : d v)

► Turn the speaker on or off.

Transmission

[d][v][][Set ID][][Data][x]

Data 0 : Off

1 : On

Acknowledgement

[v][][Set ID][][OK/NG][Data][x]

● Transmission / Receiving Protocol

27. Time (Command : f a)

► Set the current time.

Transmission

[f][a][][Set ID][][Data1][][Data2][][Data3][Cr]

[Data1]

0 : Monday

1 : Tuesday

2 : Wednesday

3 : Thursday

4 : Friday

5 : Saturday

6 : Sunday

[Data2]

0H to 17H (Hours)

[Data3]

00H to 3BH (Minutes)

Acknowledgement

[a][][Set ID][][OK/NG][Data1][Data2][Data3][x]
--

*When reading data, FFH is inputted for [Data1], [Data2] and [Data3].

In other cases, all are treated as NG.

● Transmission / Receiving Protocol

28. On Timer (On/Off Timer) Time (Command : f d)

► Set On Timer.

Transmission

[f][d][][Set ID][][Data1][][Data2][][Data3][Cr]

[Data1]

1. f1h to f4h(read one index)

f1: read 1st index of On Time List,

f2: read 2nd index of On Time List

f3: read 3rd index of On Time List

f4: read 4th index of On Time List

2. e1h~e4h(delete one index), e0h(delete all indexes)

e0: delete all indexes of On Time List

e1: delete 1st index of On Time List

e2: delete 2nd index of On Time List

e3: delete 3rd index of On Time List

e4: delete 4th index of On Time List

3. 01h to 80h (write) (Day of Week)

bit0 (01h) : Monday

bit1 (02h) : Tuesday

bit2 (04h) : Wednesday

bit3 (08h) : Thursday

bit4 (10h) : Friday

bit5 (20h) : Saturday

bit6 (40h) : Sunday

bit7 (80h) : Everyday

(1fh) : Monday to Friday

(3fh) : Monday to Saturday

(60h) : Saturday to Sunday

[Data 2]

00h to 17h (Hours)

[Data 3]

00h to 3bh (Minutes)

*When you read/delete the current on time list, all of [Data2][Data3] are have to be FFH.

ex1: fd 01 f1 ff ff - when you read 1st index of On Time List

ex2: fd 01 e1 ff ff - when you delete 1st index of On Time List

ex3: fd 01 3f 02 03 - when you write one On Time Data, "Monday to Saturday, 02:03"

Acknowledgement

[d][][Set ID][][OK][Data1][Data2][Data3][x]

● Transmission / Receiving Protocol

29. Off Timer (On/Off Timer) Time (Command : f e)
 ► Set Off Timer.

Transmission

[f][e][Set ID][Data1][Data2][Data3][Cr]

[Data 1]

1. f1h to f4h(read one index)
 f1: read 1st index of Off Time List,
 f2: read 2nd index of Off Time List
 f3: read 3rd index of Off Time List
 f4: read 4th index of Off Time List

2. e1h to e4h(delete one index), e0h(delete all indexes)
 e0: delete all indexes of Off Time List
 e1: delete 1st index of Off Time List
 e2: delete 2nd index of Off Time List
 e3: delete 3rd index of Off Time List
 e4: delete 4th index of Off Time List

3. 01h to 80h (write) (Day of Week)
 bit0 (01h) : Monday
 bit1 (02h) : Tuesday
 bit2 (04h) : Wednesday
 bit3 (08h) : Thursday
 bit4 (10h) : Friday
 bit5 (20h) : Saturday
 bit6 (40h) : Sunday
 bit7 (80h) : Everyday
 (1fh) : Monday to Friday
 (3fh) : Monday to Saturday
 (60h) : Saturday to Sunday

[Data 2]

00h to 17h (Hours)

[Data 3]

00h to 3bh (Minutes)

*When you read/delete the current on time list, all of [Data2][Data3] are have to be FFH.

- (ex1: fd 01 f1 ff ff - when you read 1st index of Off Time List
 ex2: fd 01 e1 ff ff - when you delete 1st index of Off Time List
 ex3: fd 01 3f 02 03 - when you write one Off Time Data, "Monday to Saturday, 02:03")

Acknowledgement

[e][Set ID][OK][Data1][Data2][Data3][x]

● Transmission / Receiving Protocol

30. Scheduling Input select (Command : f u) (Main Picture Input)

► To select input source for monitor depending on day.

Transmission

[f][u][][Set ID][][Data1][][Data2][Cr]

[Data 1]

1. f1h to f4h(write/read one index)

f1: read 1st index of On Time Input

f2: read 2nd index of On Time Input

f3: read 3rd index of On Time Input

f4: read 4th index of On Time Input

[Data 2]

Input

Data(Hex)	INPUT
02	AV
04	Component
07	RGB - PC
08	HDMI/DVI - HD-DVD
09	HDMI/DVI - PC
0B	SuperSign

*When you read/delete the current On Time Input, [Data2] needs to be FFh.

(ex1: fu 01 f1 ff - when you read 1st index of On Time Input

ex2: fu 01 f3 02 - when you write one On Time Input Data in to 3rd index, "AV")

Acknowledgement

[u][][Set ID][][OK][Data1][Data2][x]
--

● Transmission / Receiving Protocol

31. Sleep Time (Command : f f)

► Set Sleep Time.

Transmission

[f][f][Set ID][Data][Cr]

Data

0 : Off

1 : 10

2 : 20

3 : 30

4 : 60

5 : 90

6 : 120

7 : 180

8 : 240

Acknowledgement

[f][Set ID][OK/NG][Data][x]

32. Auto Sleep (Command : f g)

► Set Auto Sleep.

Transmission

[f][g][Set ID][Data][Cr]

Data 0 : Off

1: On

Acknowledgement

[g][Set ID][OK/NG][Data][x]

● Transmission / Receiving Protocol

33. Power On Delay (Command : f h)

► Set the schedule delay when the power is turned on (Unit: second).

Transmission

[f][h][][Set ID][][Data][Cr]

Data : 00H to 64H (Data value)

* Refer to 'Real data mapping' page A7

Acknowledgement

[h][][Set ID][][OK/NG][Data][x]

34. Language (Command : f i)

► Set the OSD language.

Transmission

[f][i][][Set ID][][Data][Cr]

Data

- 0 : English
- 1 : French
- 2 : German
- 3 : Spanish
- 4 : Italian
- 5 : Portuguese
- 6 : Chinese
- 7 : Japanese
- 8 : Korean
- 9 : Russian

Acknowledgement

[i][][Set ID][][OK/NG][Data][x]

● Transmission / Receiving Protocol

35. DPM Select (Command : f j)

- ▶ Set the DPM (Display Power Management) function.

Transmission

[f][j][][Set ID][][Data][Cr]

Data 0 : Off
1 : On

Acknowledgement

[j][][Set ID][][OK/NG][Data][x]

36 Reset (Command : f k)

- ▶ Execute the Picture, Screen and Factory Reset functions.

Transmission

[f][k][][Set ID][][Data][Cr]

Data

0 : Picture Reset
1 : Screen Reset
2 : Factory Reset

Acknowledgement

[k][][Set ID][][OK/NG][Data][x]

● Transmission / Receiving Protocol

37. Power saving(Command : f l)

► To set the Power saving mode.

Transmission

```
[f][l][Set ID][Data][Cr]
```

Data 0 : Off

- 1: (static level 1)
- 2: (static level 2)
- 3: (static level 3)

Acknowledgement

```
[l][Set ID][OK/NG][Data][x]
```

38. Power Indicator (Command : f o)

► To set the LED for Power Indicator

Transmission

```
[f][o][Set ID][Data][Cr]
```

Data 0 : Off

- 1: On

Acknowledgement

```
[o][Set ID][OK/NG][Data][x]
```

39. Serial no.Check (Command : f y)

► To read the serial numbers

Transmission

```
[f][y][Set ID][Data][Cr]
```

Data FF (to read the serial numbers)

Acknowledgement

```
[y][Set ID][OK/NG][Data1] ~ [Data13][x]
```

* The data format is ASCII Code.

● Transmission / Receiving Protocol

40. S/W Version (Command : f z)

► Check the software version.

Transmission

[f][z][][Set ID][][Data][Cr]

Data FFH : Read

Acknowledgement

[z][][Set ID][][OK/NG][Data][x]

41. Input Select (Command : x b)

► To select input source for the Set.

Transmission

[x][b][][Set ID][][Data][Cr]

Data 20H : AV

40H : Component

60H : RGB (PC)

90H : HDMI/DVI (DTV)

A0H : HDMI/DVI (PC)

B0H : SuperSign

Acknowledgement

[b][][Set ID][][OK][Data][x]

Data 20H : AV

40H : Component

60H : RGB (PC)

90H : HDMI/DVI (DTV)


A0H : HDMI/DVI (PC)

B0H : SuperSign

Remote Control IR Code

Output waveform

single pulse, modulated with 37.917kHz signal at 455kHz

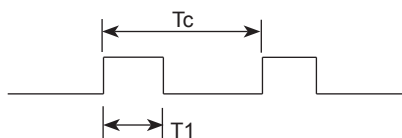


Carrier frequency

$$FCAR = 1 / T_c = f_{osc} / 12$$


$$\text{Duty ratio} = T_1 / T_c = 1 / 3$$

► Configuration of frame

 
▪ 1st frame




▪ Repeat frame

 

► Lead code

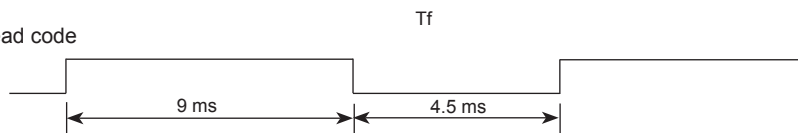


► Repeat code

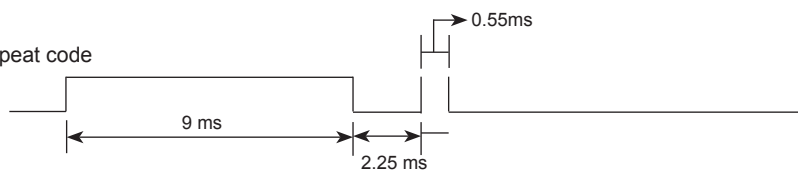


► Bit description

▪ Bit "0"

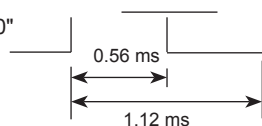

▪ Bit "1"

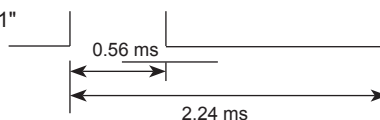► Frame interval : T_f

▪ The waveform is transmitted as long as a key is depressed.



$T_f = 108 \text{ ms @ } 455 \text{ kHz}$

Code(Hex)	Function	Note
40	UP (^)	R/C Button
41	DOWN (v)	R/C Button
06	RIGHT (>)	R/C Button
07	LEFT (<)	R/C Button
08	POWER ON/OFF	R/C Button
C4	MONITOR ON	R/C Button (Discrete IR Code)
C5	MONITOR OFF	R/C Button (Discrete IR Code)
09	MUTE	R/C Button
95	Energy Saving	R/C Button
0B	INPUT	R/C Button
43	MENU	R/C Button
5B	EXIT	R/C Button
4D	PSM	R/C Button
44	OK	R/C Button
10	Number Key 0	R/C Button
11	Number Key 1	R/C Button
12	Number Key 2	R/C Button
13	Number Key 3	R/C Button
14	Number Key 4	R/C Button
15	Number Key 5	R/C Button
16	Number Key 6	R/C Button
17	Number Key 7	R/C Button
18	Number Key 8	R/C Button
19	Number Key 9	R/C Button
79	ARC(MARK)	R/C Button (Discrete IR Code)
02	Vol+	R/C Button
03	Vol-	R/C Button

Code(Hex)	Function	Note
E0	Bright $\wedge$ (Page UP)	R/C Button
E1	Bright $\vee$ (Page Down)	R/C Button
28	BACK	R/C Button
99	AUTO CONFIC	R/C Button (Discrete IR Code)
72	ID ON(Red Color)	R/C Button
71	ID OFF(Green Color)	R/C Button
63	(Yellow Color)	R/C Button
61	(Blue Color)	R/C Button
7B	TILE	R/C Button
B0	►	R/C Button
B1	■	R/C Button
BA	II	R/C Button
8F	◀◀	R/C Button
8E	▶▶	R/C Button
5A	AV	Discrete IR Code (Input AV Selection)
BF	COMPONENT	Discrete IR Code(Input COMPONENT Selection)
D5	RGB PC	Discrete IR Code (Input RGB PC Selection)
C6	HDMI/DVI	Discrete IR Code (Input HDMI/DVI Selection)
76	ARC (4:3)	Discrete IR Code (Only 4 : 3 mode)
77	ARC (16:9)	Discrete IR Code (Only 16 : 9 mode)
AF	ARC (ZOOM)	Discrete IR Code (Only ZOOM, Cinema ZOOM1 mode)



ENERGY STAR is a set of power-saving guidelines issued by the U.S. Environmental Protection Agency(EPA).



As an ENERGY STAR Partner LGE U. S. A.,Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Make sure to read the Important Precautions before using the product. Keep the Owner's Manual(CD) in an accessible place for future reference. The model and serial number of the SET is located on the back and one side of the SET. Record it below should you ever need service.

MODEL _____

SERIAL _____

Important

WARRANTY VOID
IF REMOVED

Warranty void if removed.

WARNING -This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Temporary noise is normal when powering ON or OFF this device.

CHILD SAFETY:

It Makes A Difference How and Where
You Use Your Flat Panel Display

Congratulations on your purchase! As you enjoy your new product, please keep these safety tips in mind:



THE ISSUE

- The home theater entertainment experience is a growing trend and larger flat panel displays are popular purchases. However, flat panel displays are not always supported on the proper stands or installed according to the manufacturer's recommendations.
- Flat panel displays that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests or carts may fall over and cause injury.

THIS MANUFACTURER CARES!

- The consumer electronics industry is committed to making home entertainment enjoyable and safe.

TUNE INTO SAFETY

- One size does NOT fit all. Follow the manufacturer's recommendations for the safe installation and use of your flat panel display.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't allow children to climb on or play with furniture and television sets.
- Don't place flat panel displays on furniture that can easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger than life" flat panel display. Care should be taken to place or install the display where it cannot be pushed, pulled over, or knocked down.
- Care should be taken to route all cords and cables connected to the flat panel display so that they cannot be pulled or grabbed by curious children.

WALL MOUNTING: IF YOU DECIDE TO WALL MOUNT YOUR FLAT PANEL DISPLAY, ALWAYS:

- Use a mount that has been recommended by the display manufacturer and/or listed by an independent laboratory (such as UL, CSA, ETL).
- Follow all instructions supplied by the display and wall mount manufacturers.
- If you have any doubts about your ability to safely install your flat panel display, contact your retailer about professional installation.
- Make sure that the wall where you are mounting the display is appropriate. Some wall mounts are not designed to be mounted to walls with steel studs or old cinder block construction. If you are unsure, contact a professional installer.
- A minimum of two people are required for installation. Flat panel displays can be heavy.



 **CEA**
Consumer Electronics Association
www.CE.org/safety

P/NO : 3840TRL098E (0801-REV00)