



Owner's Manual

LG MiniBeam UST

DLP Projector

Please read the safety information carefully before using this product.

Green : the buttons and the text to be displayed on the projector screen.

PF1000UA

www.lg.com

P/NO : SAC37034671 (1801-REV01)

Copyright © 2018 LG Electronics Inc. All Rights Reserved.

LICENSES

Supported licenses may differ by model. For more information about licenses, visit www.lg.com.

 **DOLBY AUDIO™**

Manufactured under license from Dolby Laboratories. Dolby, Dolby Vision, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.

DIVX®
HD

This DivX Certified® device has passed rigorous testing to ensure it plays DivX® video.

To play purchased DivX movies, first register your device at vod.divx.com. Find your registration code in the DivX VOD section of your device setup menu.

DivX Certified® to play DivX® video up to HD 1080p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of DivX, LLC and are used under license.

Covered by DivX Patents 7,295,673; 7,515,710; RE45,052; and others available at [www.divx.com/patents]

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



NOTE

- Image shown may differ from your projector.
- Your projector's OSD (On Screen Display) may differ slightly from that shown in this manual.

SAFETY PRECAUTIONS

Please take note of the safety instructions to prevent any potential accident or misuse of the projector.

- Safety precautions are given in two forms, i.e., **WARNING** and **CAUTION** as detailed below.

 **WARNING** Failure to follow the instructions may cause serious injury and even death.

 **CAUTION** Failure to follow the instructions may cause personal injury or product damage.

- Read the owner's manual carefully and keep it on hand.



WARNING/CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



 The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING/CAUTION

- TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Read these instructions.

Keep these instructions.

Heed all warnings.

Follow all instructions.

Indoor Installation

WARNING

- Do not use the projector outside and do not expose the product to any humidity or water.
 - Since the product is not waterproof, this may result in a fire or electric shock.
- Do not place the projector in direct sunlight or near heat sources such as radiators, fires, stoves, etc.
 - This may result in fire.
- Do not place flammable materials such as aerosols near the projector.
 - This may result in fire.
- Do not allow children to cling to or climb up to the projector.
 - This may cause the projector to fall, causing injury or death.

- Do not install the product in a place with no ventilation (e.g., on a bookshelf or in a closet) or on a carpet or cushion.
 - This may result in fire due to the increase in internal temperature.
- Do not place the product close to sources of steam, oil or oil mist, such as humidifiers and kitchen counters.
 - Failure to do so may result in fire, electric shock, or corrosion.
- Do not install the product onto a wall or ceiling that is close to sources of oil or oil mist.
 - The product may be damaged and fall, resulting in serious injury.
- Do not place the projector where it might be exposed to dust.
 - This may result in fire.
- Do not use the projector in a damp place such as a bathroom where it is likely to get wet.
 - This may result in fire or electric shock.
- Do not allow a tablecloth or curtain to block the air vent.
 - This may result in fire due to the increase in the internal temperature.
- Ensure good ventilation around the projector. The distance between the projector and the wall should be at least 30 cm.
 - This will prevent fire due to the increase in the internal temperature.

 CAUTION

- When placing the projector on a table or shelf, be careful not to put it near the edge.
 - The projector could fall due to balance problems, which may cause personal injury or damage to the product. Make sure to use the projector cabinet or stand that fits the projector.
- When moving the projector, make sure to switch it off and remove the power plug and cords.
 - The power cord may be damaged, resulting in fire or electric shock.
- Do not place the projector on an unstable or vibrating surface such as a wobbly shelf or a slope.
 - It may fall and cause injury.
- Be careful not to tip the projector over when connecting external devices to the projector.
 - This may cause personal injury or damage to the projector.

Power

WARNING

- DISCONNECTING THE DEVICE FROM THE MAIN POWER
 - The Power plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.
- The grounding wire should be connected. (Except for devices which are not grounded.)
 - Ensure that you connect the grounding cable to avoid electric shock. If it is not possible to ground the unit, have a qualified electrician install a separate circuit breaker. Do not try to ground the projector by connecting it to telephone wires, lightning rods or gas pipes.
- The power plug should be inserted fully into the power outlet.
 - An unstable connection may cause a fire.
- Do not place heavy objects on the power cord.
 - This may result in fire or electric shock.
- Never touch the power plug with wet hands.
 - This may result in electric shock.
- Do not plug too many devices into one multi-power outlet.
 - This may result in fire due to the power outlet overheating.
- Keep the AC adapter, power plug, and the used power outlet clean from dust or foreign materials building up.
 - This may result in fire.
- If there is any smoke or a burning smell from the projector or AC adapter, stop using the product immediately. Disconnect the power cord from the power outlet, and then contact the customer service center.
 - This may result in fire.
- To turn off the main power, remove the power plug, which should be positioned so it is easy to access for operation.

 CAUTION

- Always grab the plug to remove the AC adapter or power cord.
 - Otherwise, this may result in a fire or may damage the product.
- Refrain from constantly bending the power cord of the AC adapter.
 - If the power cord is bent excessively for a long period of time, the cord may break inside. This may result in a fire or electric shock.
- Ensure the power cord and plug are not damaged, modified, severely bent, twisted, pulled, sandwiched or hot. Do not use the product if the power outlet is loose.
 - This may result in fire or electric shock.
- Keep the power cord away from heating devices.
 - The wire's sheath may melt, which may result in fire or electric shock.
- Place the projector where people will not trip over or step on the power cord to protect the power cord and plug from any damage.
 - This may result in fire or electric shock.
- Do not turn the projector on or off by plugging in the power plug or unplugging it from the power outlet. (Do not use the power plug as a switch.)
 - This may result in electric shock or damage to the product.
- Do not insert a conductor into the other side of the wall outlet while the power plug is inserted into the wall outlet. In addition, do not touch the power plug immediately after it is disconnected from the wall outlet.
 - This may result in electric shock.
- Only use the official power cord provided by LG Electronics. Do not use other power cords.
 - This may result in fire or electric shock.
- If any water or foreign materials have gone into the AC adapter, power cord, or the interior of the projector, turn off the projector by pressing the power button. Remove all the cables, and then contact the customer service center.
 - This may result in fire or electric shock.
- The surface of the AC adapter is hot. Keep the AC adapter out of the reach of children and avoid touching it during use.

- Never disassemble the power supply devices (AC adapter/power cord, etc.).
 - This may damage the power cord and result in a fire or electric shock.
- Connect the AC adapter and the power cord firmly.
 - Not doing so may result in a product failure or fire.
- Do not place heavy objects or put pressure on the power cord and AC adapter and avoid damage.
 - This may result in a fire or may damage the product.
- Always use the AC adapter provided or any AC adapters approved and certified by LG Electronics.
 - Any other AC adapter connected may result in the screen flickering.

When in Use

WARNING

- Do not place anything containing liquid on top of the projector such as a vase, flower pot, cup, cosmetics, medicine, or ornaments, candles, etc.
 - This may result in fire or electric shock, or cause injury due to falling.
- In the event that there is a heavy impact or the cabinet is damaged, switch it off, unplug it from the power outlet and contact an authorized service center.
 - This may result in electric shock.
- Do not insert pieces of metal such as coins, hairpins or metal debris, nor flammable materials such as paper or matches into the projector.
 - This is to prevent electric shock or fire.
- Make sure that a child does not swallow the batteries when you replace the old batteries in the remote control with new ones. Keep batteries out of reach of children.
 - If a child swallows a battery, consult a doctor immediately.
- Never open any cover on the projector.
 - There is a high risk of electric shock.

- Do not look directly into the lens when the projector is in use.
 - The bright light may damage your eyes.
- When the lamp is on or has just been turned off, avoid touching the air vent or lamp, because these will be very hot.
- If there is a gas leak in the room with the projector, do not touch the projector or power outlet. Open the windows for ventilation.
 - Sparks may cause fire or burns.
- Unplug the power cord from the outlet during a lightning storm.
 - This will prevent shock or damage to the projector.
- Do not use the projector near electronic devices that generate a strong magnetic field.
- Keep the plastic film used for packaging the projector out of the reach of children.
 - If not handled safely, it can cause suffocation.
- Do not keep your hand on the projector for a long time when it is running.
- When you play a game by connecting a game console to a projector, it is recommended that you maintain a distance of more than four times the diagonal length of the screen.
 - Make sure that the connecting cable is long enough. Otherwise, the product may fall causing personal injury or damage to the product.
- Do not place the projector or its remote control with batteries in an extremely high temperature environment.
 - This may result in fire.
- Do not use 3D glasses if you do not watch 3D.

 CAUTION

- Do not place heavy objects on the projector.
 - It may fall down and cause personal injury.
- Be careful not to allow any impact to the lens during transport.
- Do not touch the lens of the projector.
 - The lens may be damaged.
- Do not use any sharp tools on the projector such as a knife or hammer, because this may damage the casing.
- In the event that no image appears on the screen or no sound is heard, stop using the projector. Switch off the projector, unplug it from the power outlet and contact our service center.
 - This may result in fire or electric shock.
- Do not drop anything onto the projector or allow anything to bang into the projector.
 - This may cause damage to the projector or personal injury.
- It is recommended that you maintain a distance of more than 5 to 7 times the diagonal length of the screen.
 - If you watch the screen at a close distance for a long time, your eye sight may become worse.
- Do not block the light beam emitted from the projector using a book or other object.
 - Lengthy exposure to the projector beam may result in fire. In addition, the lens may be overheated and damaged by the reflected heat. Disable the AV function to stop projection temporarily or turn off the power.
- Do not start the projector with the volume turned up high.
 - High volume may damage hearing.
- Do not use high voltage electrical equipment near the projector, (e.g., a bug zapper). This may result in product malfunction.

Cleaning

WARNING

- Do not spray the projector with water when cleaning. Make sure water does not flow into the projector.
 - This may result in fire or electric shock.
- When there is smoke or a strange smell coming out from the projector or a foreign object falls into the projector, please switch it off and unplug it from the power outlet and contact our service center.
 - Otherwise, this may result in fire or electric shock.
- Use air spray, a soft cloth or a cotton swab moistened with a lens cleaning chemical or alcohol to remove dust or stains on the front projection lens.

CAUTION

- Contact your seller or our service center once a year to clean the internal parts of the projector.
 - If you do not clean the projector for a long period of time, dust will accumulate, which may result in fire or damage to the projector.
- When cleaning plastic parts such as the projector case, unplug the power first and wipe with a soft cloth. Do not spray with water or wipe with a wet cloth. Never use glass cleaner, automobile or industrial polish, abrasives, wax, benzene, or alcohol as these can damage the projector.
 - This can result in fire, electric shock or cause damage to the product (deformation and corrosion).

- Do not wipe the optical system (lens, mirror) right after the product has been turned off or while the product is being operated. When cleaning each part of the product, remove the power cord and wipe gently with a soft cloth. Do not spray with water or wipe with a wet cloth. Do not use detergents, automobile or industrial polish, abrasive substances, wax, benzene, alcohol, water, etc. on the product's main unit or optical system (lens, mirror) as this may damage the product.
 - This can result in fire, electric shock or cause damage to the product (deformation and corrosion).
- Remove the plug from the outlet before cleaning the product.
 - Otherwise, this may result in electric shock.

Others

WARNING

- Some users may experience a seizure or other abnormal symptoms when they are exposed to a flashing light or particular patterns from a video game.
- When you go out, place the projector out of reach of animals, and remove the power plug from the wall outlet.
 - Using a damaged power cord may result in short circuit or fire.
- Do not use the projector near high-precision electronic devices or those that transmit weak radio signal.
 - This may affect the operation of the product, causing an accident.
- Only a qualified technician can disassemble or modify the projector. For diagnosis, adjustment, or repair, contact your seller or our service center.
 - This may result in fire or electric shock.
- Proper ventilation required, do not block airflow around unit. Doing so can cause injury and internal overheating.

- Do not touch the lens; doing so can result in burns or damage to lens. Lens and unit may be HOT during and immediately after use. Use caution when handling unit, allowing for proper cool down.
- Only use a grounded electrical outlet. (Except for devices which are not grounded.)
- Do not insert anything into or cover up the exhaust vents.
 - This may result in fire or electric shock.
- Follow all maintenance guidelines for optimal use; service only at an authorized service center.
- Keep the batteries and remote out of reach of children.
 - This will prevent personal injury or damage to the product.

 CAUTION

- Do not use or store the projector outdoors for long periods of time.
- Do not mix new batteries with old ones.
 - Burst or leaking batteries may result in damage or injury.
- Be sure to unplug if the projector is not to be used for a long period.
 - Accumulated dust may result in fire or electric shock due to overheating, ignition, or poor insulation.
- Only use the specified type of battery.
 - Burst or leaking batteries may result in damage or injury.
- Make sure you use the same type of battery when replacing.
 - In the case of a battery contact failure, the battery may drain quickly or the remote control may not work properly.
- Dispose of used batteries properly.
 - This may result in explosion or fire. The correct method of disposal may vary depending on your country or region. Dispose of the battery pack as instructed.
- Do not throw or disassemble the battery.
 - This may result in fire or explosion due to damage to the battery.

- Store batteries away from metallic objects, such as keys and paper clips.
 - Excess current may cause a rapid increase in temperature, resulting in fire or burns.
- Do not store the batteries near any heat source, such as a heater.
 - This may result in fire or damage to the product.
- Do not store batteries at temperatures higher than 60 °C or in high humidity.
 - This may result in explosion or fire.
- Make sure that the battery is installed correctly.
 - This prevent explosion or fire.
- Incorrect battery replacement may cause fire.
- Batteries: Store the accessories (battery, etc.) in a safe location out of the reach of children.

ANTENNA

WARNING

- If you are using an outdoor antenna, please install it away from electrical wires to make sure it does not touch any nearby wires even when it falls down due to heavy wind.
 - Failure to do so may cause electric shock or physical injury.


CAUTION

- To prevent any water flowing into the product, install a drip loop in the outdoor antenna wire where it comes indoors.
 - Raindrops flowing into the product may cause fire or electric shock.

Outdoor Antenna Grounding

- If an outdoor antenna is installed, follow the precautions below. An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits as death or serious injury can occur. Be sure the antenna system is grounded to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code (NEC) in the U.S.A. provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements for the grounding electrode.

Antenna grounding according to the National Electrical Code, ANSI/NFPA 70

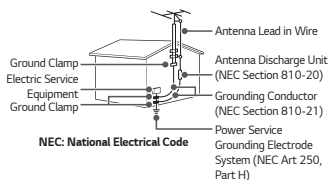

For USA

NOTE TO CABLE/TV INSTALLER

This reminder is provided to call the CATV system installer's attention to Article 820 - 40 of the National Electric Code (U.S.A.). The code provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of the cable entry as practical.

Risk Group 2

CAUTION Possibly hazardous optical radiation emitted from this product. Do not stare at operating lamp. May be harmful to the eye.

This label is attached to the bottom of the product and language may differ.

CONTENTS

LICENSES 2

SAFETY PRECAUTIONS 3

PREPARATION 17

Accessories 17

Optional Extras 18

Parts and Components 19

- Main Unit 19
- Side 20
- Back 21

Using the Joystick Button 22

- Basic functions 22
- Adjusting the menu 23

Projector Status Indicators 23

Installation 24

- Installation Precautions 24
- Projection Distance per Screen Size 25
- Kensington Security System 26

REMOTE CONTROL 27

USING THE PROJECTOR 30

Connecting the Antenna or Cable 30

Watching Projector 31

- Turning on the Projector 31
- Focus of the Screen Image 33
- Watching With the Projector 33

To Set Channel 34

- Memorizing the Available Channels 34

Additional Options 38

- Adjusting Aspect Ratio 38
- Using the Edge Adj (4 Corner Keystone) Function 39
- Changing Input Device 40
- Blank Function 42

Using the Quick Menu 43

ENTERTAINMENT 44

Using SCREEN SHARE 44

Setting up bluetooth on the projector 45

- Searching for bluetooth devices and connecting 46
- Connecting, disconnecting, or deleting bluetooth devices in the list of registered devices 48
- Adjusting AV Sync. Adjust 49

MY MEDIA 50**Before Using 50**

- Connecting a USB Device 50
- Removing a USB Device 50

To Use My Media 52

- Watching the Videos 56
- Viewing the Photos 62
- Listening to Music 66
- Viewing Files 70

3D FUNCTION 74**While Watching 3D 74****Requirements for Watching 3D****Images 78**

- Using the DLP-LINK (DLP-Ready) Type Glasses 79

To view 3D images 79

- Supported 3D Mode 80

CUSTOMIZING SETTINGS 81**SETTINGS 81****PICTURE Settings 82****AUDIO Settings 88****CHANNEL Settings 92****TIME Settings 93****WIRELESS Settings 95****LOCK Settings 96****OPTION 1 Settings 100****OPTION 2 Settings 103****CONNECTING DEVICES 105****Connecting to HD Receiver, DVD, VCR Player, or External Devices 106**

- HDMI Connection 106
- HDMI to DVI Connection 106
- Composite (AV) connection 107
- Component connection 107

Connecting a PC 109

- HDMI Connection 109
- HDMI to DVI Connection 109
- RGB connection 111

Connecting a Laptop 112

- HDMI Connection 112

Connecting Headphones 113**Connecting a Digital Amp 113****Using the Mirroring Function of a****Mobile Phone 115**

- MHL Connection 115

MAINTENANCE 116**Cleaning 116**

- Cleaning the Lens 116
- Cleaning the Projector Case 116

SPECIFICATIONS 117**SYMBOLS 122**

PREPARATION

The pictures may differ slightly from the actual product.

Accessories

Accessories included with the projector are show below.

Accessories are subject to change without prior notice.

New accessories may be added or old ones removed.

 
ENGLISH



Remote Control
Two AAA Batteries



Owner's Manual



Composite Gender




Power cord



AC-DC Adaptor

- When connecting an HDMI or USB cable, or connecting a USB flash drive to the HDMI or USB port, use a product that has a width of 18 mm or less and a height of 10 mm or less. If the USB cable or USB flash drive does not fit the USB ports of the projector, use an extension cable that supports USB 2.0.

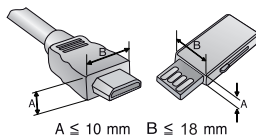

- Use a certified cable with the HDMI logo attached.
- If you do not use a certified HDMI cable, the screen may not display or a connection error may occur. (Recommended HDMI cable types)
 - High-Speed HDMI[®]/TM Cable
 - High-Speed HDMI[®]/TM Cable with Ethernet

Optional Extras

To purchase optional accessories, visit an electronics store or online shopping site or contact the retail store where you purchased the product. Optional accessories are subject to change without prior notice.



Projection Screen



HDMI Cable



RF Cable



 
Video Cable



Audio Cable



Optical Cable



LG Audio Device



MHL cable



3D glasses
(DLP-LINK or DLP
Ready Type)



Component Gender



Computer Cable




Component Cable

Parts and Components

This projector is manufactured using high-precision technology. You may, however, see tiny black dots and/or bright colored dots (red, blue, or green) that continuously appear on the projector screen. This is a normal result of the manufacturing process and does not indicate a malfunction.


Main Unit

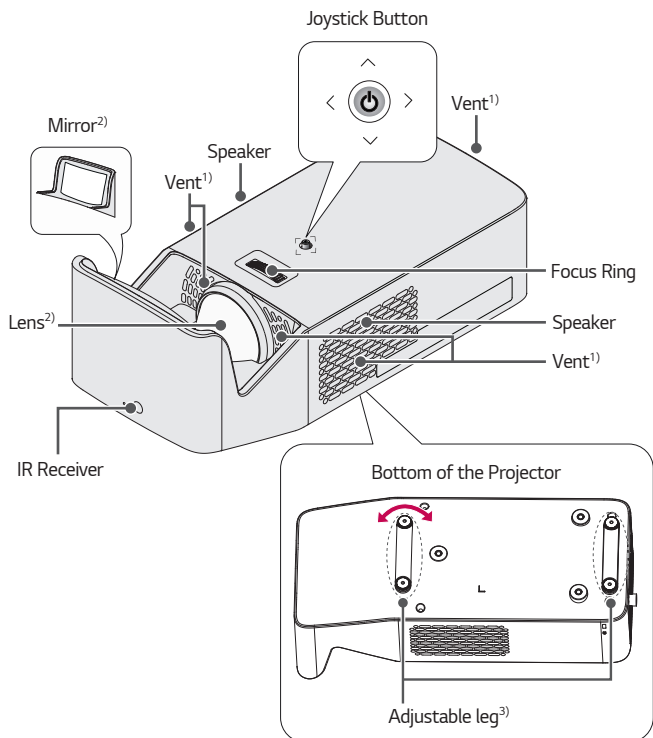


- 1) Due to the high temperature of vent area, do not get close to the vent area.
- 2) Do not touch the lens and mirror when using the projector. The lens may be damaged. (Keep lens away from sharp objects.)
- 3) Turn the adjustable leg left or right to adjust the angle.

Side

ENGLISH

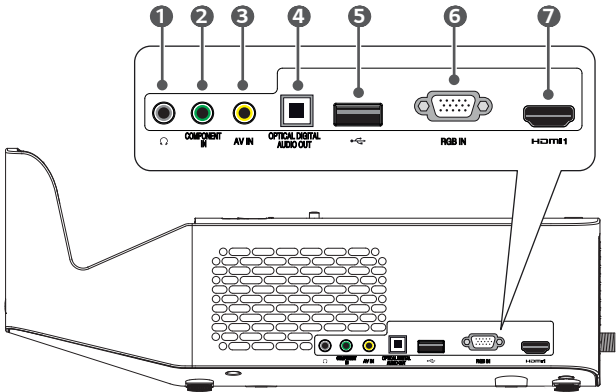

No.	Description
①	🎧 (Headphone Port)
②	COMPONENT IN Port
③	AV IN Port
④	OPTICAL DIGITAL AUDIO OUT Port
⑤	🔌 (USB port)
⑥	RGB IN Port
⑦	HDMI 1 Port

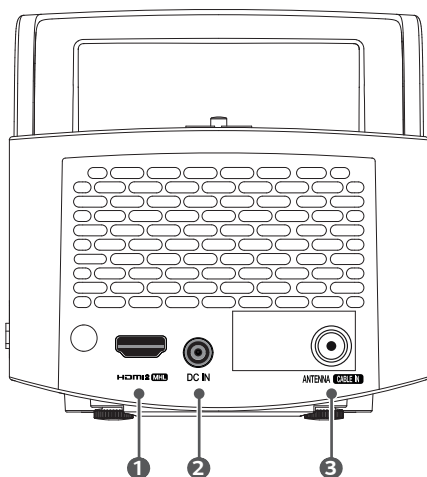
Back

No.	Description
①	HDMI2 MHL Port
②	DC IN Port
③	ANTENNA CABLE IN Port

Using the Joystick Button

You can operate the projector by pressing the button or moving the joystick left, right, up, or down.

 Basic functions

	Power On	When the projector is turned off, place your finger on the joystick button, press it once, and release it.
	Power Off	When the projector is turned on, place your finger on the joystick button, press it once for a few seconds, and release it. (However, if the Menu button is on the screen, pressing and holding the joystick button will let you exit the Menu.)
	Volume Control	Place your finger over the joystick button and move it left or right, you can adjust the volume level.
	Channels Control	Place your finger over the joystick button and move it up or down, you can scroll through the saved channels.



NOTE

- Place your finger over the joystick button and move it up, down, left, or right. Be careful not to press the joystick button. If you press the joystick button first, you may not be able to adjust the volume level and/or scroll through saved channels.


Adjusting the menu

When the projector is turned on, press the joystick button one time.

You can adjust the menu items (⏻, 📶, ✕, ⚙️) moving the joystick button left, right, up, or down. Move to the desired menu item, and then press the joystick button once to select it.

⏻	Turns the power off.
📶	Changes the input source.
✕	Clears on-screen displays and returns to projector viewing.
⚙️	Displays the Settings menu.

Projector Status Indicators

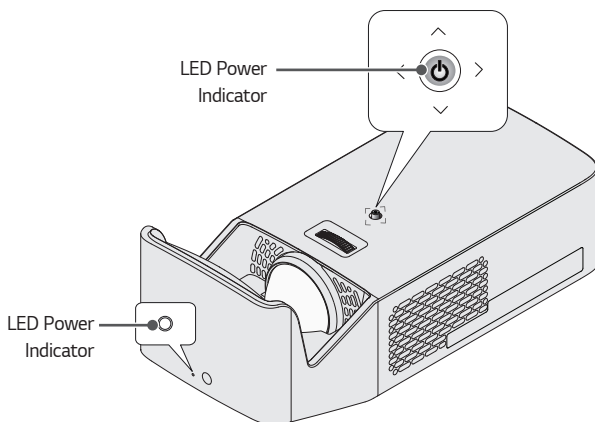


LED Power Indicator	
Red	Power standby state
Off	The projector is operating with the power on.

Installation

Installation Precautions

- Place the projector in a well-ventilated environment.
 - To prevent internal overheating, install the projector in a well-ventilated place. Do not place anything near the projector. That may block its air vents. If the air vents are blocked, the internal temperature of the projector will increase.

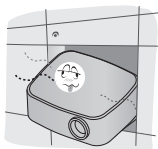


- Do not place the projector on a carpet or rug. If the projector's inlet vent is on the bottom, be careful not to block the vent and always use the projector on a solid, level surface.



- Be sure to prevent foreign objects such as paper debris from entering the projector.



- Leave an adequate open area (30 cm or more) around the projector.

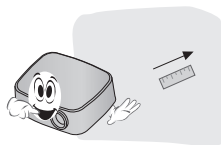


- Do not place the projector in a hot, cool, or humid environment.
- Do not place the projector in a place where it will easily attract dust.
 - This may result in fire.
- Never open any cover on the projector. There is a high risk of electric shock.
- The projector is manufactured using high-precision technology. You may, however, see tiny black dots and/or bright colored dots (red, blue or green) that continuously appear on the projector screen. This is a normal result of the manufacturing process and does not indicate a malfunction.
- The remote control may not work in an environment where a lamp equipped with electronic ballasts or a three-wavelength fluorescent lamp is installed. Replace the lamp with an international standard lamp for the remote control to work normally.
- To install to the ceiling, attach the ceiling-type bracket to the projector with M4 x 8 mm screws.

Projection Distance per Screen Size

- 1 Place the projector on a sturdy, level surface, together with the PC or audio/video source.
- 2 Place the projector an appropriate distance away from the screen. The distance between the projector and the screen determines the actual size of the image.
- 3 Position the projector so that the lens is at a right angle to the screen. If the projector is not at a right angle, the projected image will look distorted. To correct the distortion, use the Edge Adj function.
- 4 Connect the power cord of the projector and the connected device to the wall outlet.

Ratio of upward projection: 125 %

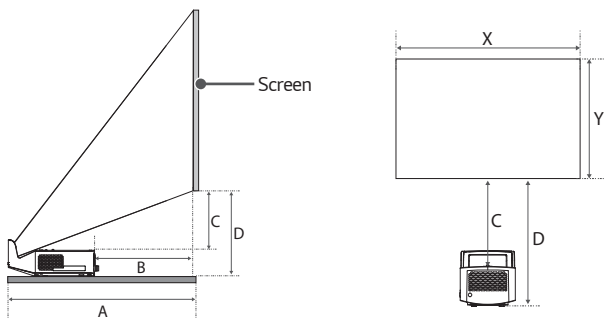

Screen Size [mm]	1524	1778	2032	2286	2540
Horizontal Size (X) x Vertical Size (Y) [mm]	1328 x 747	1550 x 872	1771 x 996	1992 x 1121	2214 x 1245
A [mm]	414	482	550	618	686
B [mm]	105	173	241	309	377
C [mm]	149	181	213	245	276
D [mm]	241	273	304	336	368

The projection distance may vary depending on the installation conditions.




NOTE

- If the projected image looks distorted or bent, check to see if the screen is installed properly.

Kensington Security System

- This projector has a Kensington Security Standard connector as an anti-theft mechanism. Connect a Kensington Security System cable as shown below.
- For more information on installation and use of the Kensington Security System, refer to the user's guide provided with the Kensington Security System.
- The Kensington Security System is an optional accessory.
- What is Kensington?



Kensington is a company that provides safety systems for laptops and other electronic devices. Website: <http://www.kensington.com>

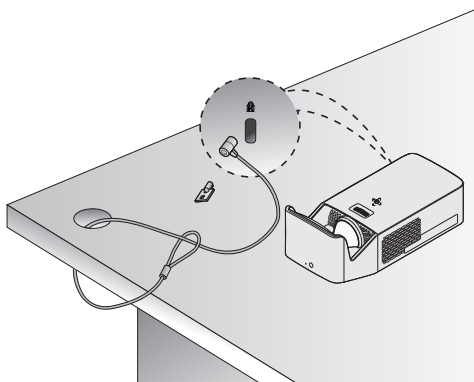

REMOTE CONTROL

Open the lid at the back of the remote control and insert the batteries as described in the $\oplus\ominus$ instructions.

  
Use new batteries and do not mix regular or rechargeable batteries. (1.5 V AAA)



CAUTION

- Do not mix new batteries with old ones.

ENGLISH

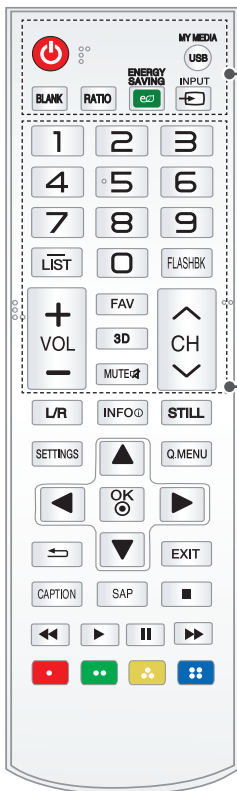

POWER

Turns the projector on or off.

MY MEDIA / USB

Accesses USB mode.

BLANK

Blanks the screen.

RATIO

Changes the aspect ratio of the screen per pressing of the button.

ENERGY SAVING e

Reduces power consumption by adjusting peak screen brightness.

INPUT

Changes the input source.

Number buttons

Enters a number.

— (dash)

Enters a channel number, such as 2-1 or 2-2.

LIST

Displays the channel list.

FLASHBK

Displays the channel you were watching previously.

VOL + -

Adjusts the volume level.

FAV

Shows favorite channels.

3D


Shows 3D images.

MUTE

Mutes the sound of the projector.

CH $\wedge \vee$

Changes the TV channel.

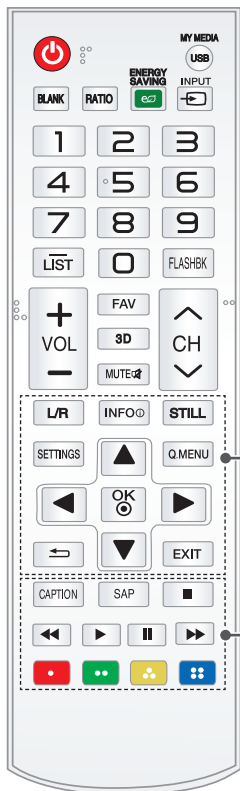**L/R**

Switches left and right in 3D mode.

INFO

Displays the information of a program or screen.

STILL

Freezes the moving image.

(Available in any mode other than USB mode.)

SETTINGS

Displays or closes the Settings menu.

Q.MENU

Allows you to change the settings easily.

Up/Down/Left/Right buttons

Sets the function or moves the cursor.

OK

Shows the current mode and saves changes to the settings.

← (BACK)

Returns to the previous screen.

EXIT

Exits the menu.

CAPTION

Activates or deactivates the subtitles.

SAP

Digital signal: Changes the audio language.

Analog signal: Changes the MTS sound.

Playback control buttons

Controls playback of **MY MEDIA**.

Color buttons

Sets detailed settings or gesture for each menu.

**NOTE**

- When using the remote control, the optimal operation range is 6 meters or less (left/right) and within a 30 degree arc of the remote control IR receiver.
- If a cable is connected to the back port, the optimal operating range is 3 meters or less (left/right) and within a 30 degree arc of the remote control IR receiver.
- For seamless operation, do not block the IR receiver.
- When you carry the remote control in the portable bag, make sure that the buttons on the remote control are not pressed by the projector, cables, documents, or any other accessories in the bag. Otherwise, it may significantly reduce the battery life.




USING THE PROJECTOR

Connecting the Antenna or Cable


To watch TV using an indoor/outdoor antenna, connect a wall terminal and the antenna port of the projector using an RF cable (75 Ω).

You can watch terrestrial or cable (analog, digital) TV. (The RF cable is sold separately.)

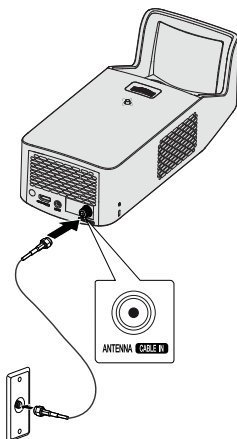

NOTE

- Make sure not to bend the copper wire of the RF cable (75 Ω). Turn the input jack to the right to fasten it.
- Ensure you use a standard coaxial cable (75 Ω , sold separately) when connecting to the projector input.
- For better image quality in locations where signal strength is low, purchase and install a signal amplifier (booster).
- A signal splitter is required if you want to use two or more projectors through one antenna.
- If you have any problems when installing the antenna, please consult a suitable retailer or the store where you purchased the antenna.

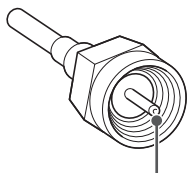


Copper wire

Watching Projector

Turning on the Projector


The menu screen display in this owner's manual is an example to help users understand how to operate the product and may look different from the actual screen.

- 1 Connect the power cord correctly.
- 2 After waiting for a moment, press the **⏻ (POWER)** button on the remote control or the joystick button.
- 3 In the Language Selection screen, select a language.
- 4 In the **Mode Setting** screen, select the setting mode you want.

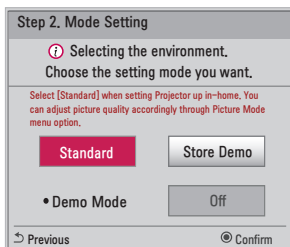


* **Store Demo** is used when displaying the product in-store. The picture mode is automatically reset after a certain period of time. You can select **Standard** to use the product at home.

- 5 In the **Time Zone** screen, select **Time Zone** region and **Daylight Saving** option.

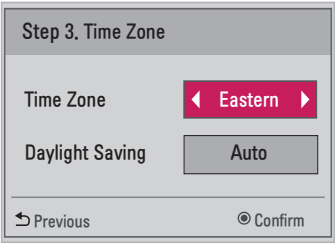


- 6 Select an input signal by using the **INPUT** button on the remote control.

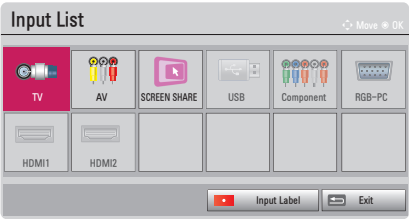

Focus of the Screen Image

When an image appears on the screen, check if it is in focus and fits the screen properly.

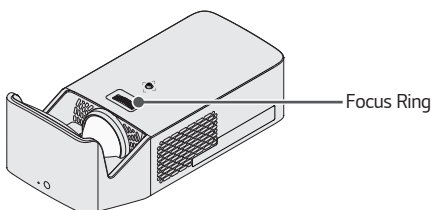

- To adjust the focus of the image, rotate the focus ring.
- Make sure the product does not move when adjusting the focus.

Watching With the Projector

- 1 When in standby mode, press the **⏻ (POWER)** button to turn the projector on.
- 2 Select the **INPUT**  and select the input signal you want.
- 3 Control the projector using the following buttons while watching projector.

Button	Description
CH 	Changes the TV channel.
LIST	Displays the channel list.
Number buttons	Enters a number.
VOL 	Adjusts the volume level.
MUTE 	Mutes all sounds.
Q.MENU	Accesses the quick menu.
FLASHBK	Displays the channel you were watching previously.

- 4 To turn the projector off, press the **⏻ (POWER)** button.

To Set Channel

Image shown may differ from your projector.

Memorizing the Available Channels

Using the Auto Tuning function

Saves a channel which is currently broadcasting. Be sure to activate Auto Tuning when you move to a new home or change the position of your projector. When you activate this function, make sure that the antenna is connected and there are channels broadcasting signals.

- 1 Press the **SETTINGS** button.
- 2 Press the ▲, ▼, ◀ or ▶ button to select **CHANNEL** and press the **OK** Ⓞ button.
- 3 Press the ▲, ▼ button to select **Auto Tuning** and press the **OK** Ⓞ button.
- 4 Select **Start** to start automatic tuning. The projector scans and saves available channels automatically.
- 5 When you are finished, press the **EXIT** button.

Memorizing or Deleting Channels Manually

- 1 Press the **SETTINGS** button.
- 2 Press the ▲, ▼, ◀ or ▶ button to select **CHANNEL** and press the **OK** Ⓞ button.
- 3 Press the ▲ or ▼ button to select **Manual Tuning** and press the **OK** Ⓞ button.
- 4 Scroll through the channel types, and then add or delete channels.
- 5 When you are finished, press the **EXIT** button.




NOTE

- If **Lock System** is turned on, a pop-up window will appear asking for password.
- You can store up to 1000 Channels. The number of channels that you can store differs depending on the broadcasting signal environment.
- **Auto Tuning** memorizes the Channels that are currently being broadcast.
- The channels are stored in the order of DTV, TV, Cable DTV, and Cable TV.

Editing Your Channel List

- 1 Press the **SETTINGS** button.
- 2 Press the ▲, ▼, ◀ or ▶ button to select **CHANNEL** and press the **OK** button.
- 3 Press the ▲ or ▼ button to select **Channel Edit** and press the **OK** button.
- 4 Edit channels using the following buttons.

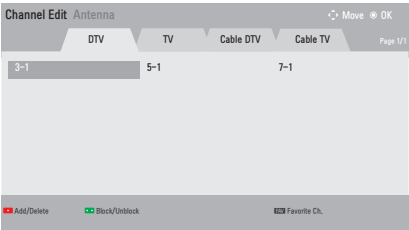

Button	Description
Red	Adds or deletes a channel.
Green	Block or unblock a channel.
FAV	Adds a favorite channel.

- 5 When you are finished, press the **EXIT** button.

Favorite Channel Setup

- 1 Press the **SETTINGS** button.
- 2 Press the ▲, ▼, ◀ or ▶ button to select **CHANNEL** and press the **OK** button.
- 3 Press the ▲ or ▼ button to select **Channel Edit** and press the **OK** button.
- 4 Move to your desired channel.
- 5 Press the **FAV** button to access the **Set as Favorite**.
- 6 Press the ▲ or ▼ buttons to scrolls through channel group.
- 7 Press the **OK** button.

Set as Favorite
Select a favorite channel group.
Multiple selection is available.

☒ Group A
☐ Group B
☐ Group C
☐ Group D

OK

Cancel

Additional Options

Adjusting Aspect Ratio

- Resize an image to view at its optimal size by pressing **RATIO** while you are using the projector.



NOTE

- Available picture size may differ depending on the input signal.
- You can also use the **Q.MENU** or **SETTINGS** button.


Menu	Description
16:9	Resizes images to the 16:9 ratio.
Just Scan	Displays video images in the original size without removing parts of the edge of the image. • If you select Just Scan, you may see image noises at the edge or edges of the screen.
Set By Program	Displays images in the same aspect ratio as the original image.
4:3	Resizes images to the previous standard 4:3.
Zoom	Resizes the image to fit the screen width. The top and bottom parts of the image may be cut off. • Press the ◀ or ▶ button to zoom in or out of the image. • Press the ▲ or ▼ button to move the image.
Cinema Zoom 1	Formats an image to the cinemascope ratio, 2.35:1. It ranges from 1 to 16. • Press the ◀ or ▶ button to zoom in or out of the image. • Press the ▲ or ▼ button to move the image. • If you enlarge or reduce an image, the image may be distorted.

Using the Edge Adj (4 Corner Keystone) Function

Edge Adj (4 Corner Keystone) adjusts the horizontal and vertical sides of the projected image if the projector is at an angle and not perpendicular to the screen. This feature ensures the shape of the projected image is not distorted.

Use this feature only when the projector cannot be set up at the optimal angle.

Edge Adj may result in a loss of image quality.

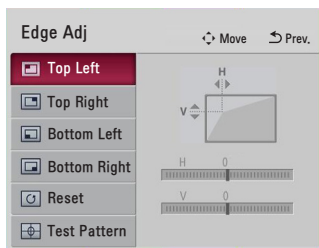

1 Select **SETTINGS** → **OPTION 2** → **Edge Adj** to adjust the picture.

2 The value range of **Edge Adj** is as follows.

- **Top Left** (H: 0 to 100, V: 0 to 100)
- **Top Right** (H: -100 to 0, V: 0 to 100)
- **Bottom Left** (H: 0 to 100, V: -100 to 0)
- **Bottom Right** (H: -100 to 0, V: -100 to 0)



NOTE


- When using **Auto Keystone(Vertical)**, the current value set for **Edge Adj** is changed to the value that has been set with **Auto Keystone(Vertical)**.
- When the input is set to **SCREEN SHARE**, **Edge Adj** feature is disabled and cannot be used.

Changing Input Device

To select an external input


Selects external input.

- Press the **INPUT**  button on the remote control to display the input selection screen.
 - Connected inputs are displayed first. However, **TV** / **AV** / **SCREEN SHARE** input is always activated.
- Select an input signal using the remote control's **INPUT**  button to connect the projector to the desired input. You can use the , ,  or  button to switch between all the input modes.

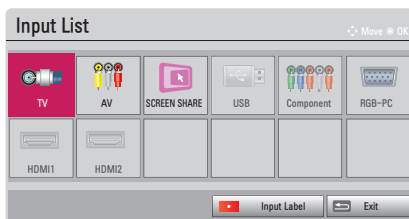

Selecting an Input Label

Displays which devices are connected to which input ports.

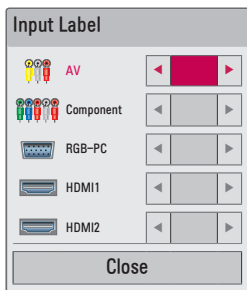

- 1 Press the **INPUT**  button on the remote control to display the input selection screen.
- 2 Press the **red** button.
- 3 Use the  or  button to scroll to one of the input sources.
- 4 Use the  or  button to select one of the input labels.

Blank Function

Using the Blank Function

This function may be effective when you need to draw attention during a meeting or training.

- 1 Press the **BLANK** button, and the screen is covered by the background color. You can change the background color by referring to *Selecting a Blank Image*.
- 2 Press any button to clear the blank function. To cover the screen temporarily, press the **BLANK** button on the remote control. Do not block the lens with any object while the projector is running. It may become overheated and deformed or even cause a fire.

Selecting a Blank Image

- 1 Press the **SETTINGS** button.
- 2 Press the ▲, ▼, ◀ or ▶ button to select **OPTION 2** and press the **OK** Ⓞ button.
- 3 Press the ▲, ▼ button to select **Blank Image** and press the **OK** Ⓞ button.
- 4 Use the ▲ or ▼ button to move to the setting or option you want and press the **OK** Ⓞ button.

Using the Quick Menu

You can customize frequently used menus.

- 1 Press the Q.MENU button.
- 2 Press the ◀ or ▶ button to select a menu and press OK ⊙.

Menu	Description
Aspect Ratio	Resizes the picture.
Caption	View subtitles when the TV station provides subtitled programming. Program subtitles work only on digital/analog broadcasts.
Picture Mode	Changes the picture mode.
Multi Audio	Sets MONO or STEREO , or a language for a bilingual broadcast (Digital signal).
SAP	Changes the MTS sound (Analog signal).
Sleep Timer	Sets the projector to be turned off at the specified time.
Clear Voice II	Makes the voice from the projector crisp and clear.
Del/Add	Can delete or add channels.
USB Device	Allows you to remove a connected USB device in a safe manner. (The menu is displayed only when the USB device is connected.)

- 3 Press the ▲ or ▼ button to scroll through the following menus.

ENTERTAINMENT

Using SCREEN SHARE

- 1 Set the external input of the projector to **SCREEN SHARE**.
- 2 Enable related SCREEN SHARE function on the device you wish to connect.
- 3 Connect the Projector from the search list on the device you wish to connect. (When you connect the projector to your laptop, input the PIN code shown on your display. The request for a PIN will be shown only at the initial connection.)
- 4 If the desired device accepts the request, SCREEN SHARE will be started.



CAUTION

- Windows 7 / 8 / 8.1 / 10 are compatible with SCREEN SHARE. However, other versions of Windows, and some other operating systems, may not be compatible with SCREEN SHARE.
- Ice Cream Sandwich, Jellybean, Kitkat, Lollipop, and Marshmallow versions of LG's Android devices are guaranteed to be compatible.
- When connecting via SCREEN SHARE, place the device close to the projector.
- The response rate and image quality may vary depending upon the user's environment.
- For more information on the device you want to connect to, refer to its owner's manual.
- Certain Windows 8.1 laptops may have difficulty in reconnecting when initializing the device information during a wireless connection. In this case, it is recommended that you remove the registered device and reconnect.
- When the input is set to **SCREEN SHARE**, these features are disabled and cannot be used: **Edge Adj**, **PJT Mode**, and **Auto Keystone(Vertical)**.


Setting up bluetooth on the projector

This option is used to output sound from the projector through Bluetooth audio devices.



NOTE


- The devices that can be connected are as follows: LG BTS1, LG HBS-700, LG HBS-730, LG HBS-800 (Models available for purchase may vary by region.)
- Products from other manufacturers may not be compatible.
- You can use the remote control to adjust the volume of the connected device.
- When connecting devices wirelessly, if the device connection fails, check that the device is connected to a power supply and also check that the Bluetooth audio device is operating properly.
- If Bluetooth is turned on, the projector will automatically connect to the last connected Bluetooth device when the projector powers on. (Be sure to check that the last connected Bluetooth device is powered on as well.)
- This projector does not support the LG TV Sound Sync feature. To use products that support the LG TV Sound Sync feature, use the general Bluetooth mode instead of the LG TV mode.
- The Bluetooth function is to connect the product to Bluetooth speakers or Bluetooth headset. You cannot connect the product to a mobile phone through the Bluetooth function.

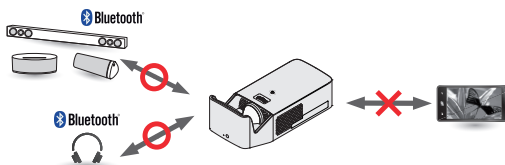


Searching for bluetooth devices and connecting

Go to **SETTINGS** → **AUDIO** → **Sound Out** → **Bluetooth** → **Search Device** to search for nearby Bluetooth audio devices and then connect any detected devices to the projector. (If the device name is longer than 20 characters, only the first 20 will be displayed.)

- 1 Set the Bluetooth device to pairing mode and then select **Search Device**.
 - Select **Stop searching** to view the devices detected so far.
 - If the device has not been detected, check that the device is powered on and in pairing mode.
 - The time it takes to search for devices may vary according to the signal strength and the number of devices.

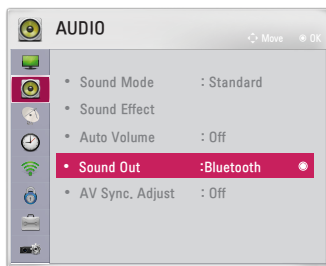


- 2 When the search is complete, you can select a Bluetooth device and connect to it.
- You can stop the connection process immediately by selecting **Stop searching**.
 - The time it takes to connect to a device may vary according to the signal strength and the number of devices.

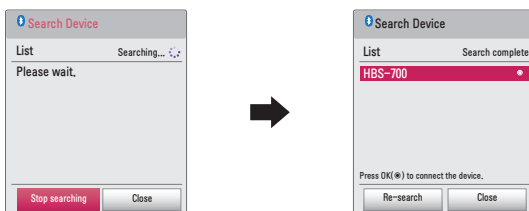

- 3 When a Bluetooth device is connected, you will hear sound from the projector through the connected device.
- The connected Bluetooth device will be added automatically to the **List of registered devices**. Once registered, Bluetooth devices can be connected simply by selecting them from the **List of registered devices** without having to search for them.
 - Connected devices can only be disconnected from **SETTINGS** → **AUDIO** → **Sound Out** → **Bluetooth** → **List of registered devices**.

Connecting, disconnecting, or deleting bluetooth devices in the list of registered devices

In SETTINGS → **AUDIO** → **Sound Out** → **Bluetooth** → **List of registered devices**, Bluetooth devices are shown in the order that they were connected, and the same devices can be reconnected simply by selecting them without having to search for them again.

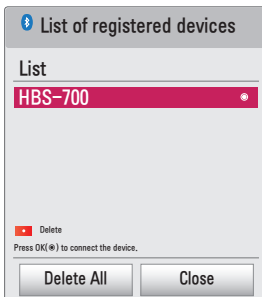

Connecting

Select a Bluetooth device from the **List of registered devices** to connect to it.

- The registered Bluetooth device will attempt to connect automatically depending on the characteristics of the device. (Refer to the manual for the Bluetooth device.)
- You can stop the connection process immediately by selecting Stop.
- The time it takes to connect to a device may vary according to the signal strength and the number of devices.

Disconnecting

Select **Disconnect** to disconnect the device.

- You can only disconnect a device from the **List of registered devices**.


Deleting

Select **Delete Marked** or **Delete All** to delete any registered devices.

- **Delete Marked:** Press the **red** button in **List of registered devices** to delete the selected device.
- **Delete All:** Select **Delete All** in **List of registered devices** to delete all of the registered devices.

Adjusting AV Sync. Adjust

When a Bluetooth device is connected, go to **SETTINGS** → **AUDIO** → **AV Sync. Adjust** to adjust the synchronization between the video and the Bluetooth headset sound.

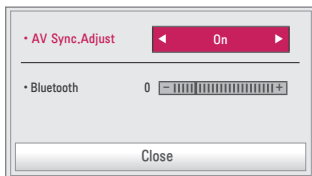


- This feature is only available when a Bluetooth device is connected.
- Audio sync may vary by manufacturer.
- When playing video from a connected USB drive, **AV Sync. Adjust** can also be adjusted using the **Set Audio.** menu.

MY MEDIA

Before Using

Connecting a USB Device

Connect a USB device (external HDD, USB memory) to the USB port of projector to enjoy the content files stored in the USB device with your projector. You cannot write or delete data in the USB device. Connect a USB flash drive as shown below.

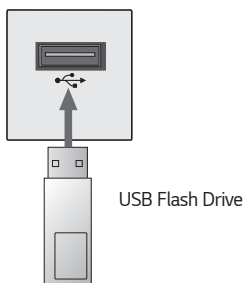

Removing a USB Device

- 1 Click the Q.MENU button.
- 2 Use the ◀ or ▶ button to move to **USB Device** and press the OK Ⓞ button.
- 3 Select a USB to remove. Wait for confirmation that the USB device has stopped before removing the USB.



NOTE

- If detached early, an error may occur on the projector or the USB storage device.
- Once a USB device has been selected for removal, it can no longer be read. Remove the USB storage device and then re-connect it.

Tips for Using a USB Device

- If the USB storage device has a built-in auto recognition program or uses its own driver, it may not work.
- Some USB storage devices may not work or may work incorrectly.
- If you use a USB extension cable, the USB device may not be recognized or may not work properly.
- Use only USB storage devices formatted with the Windows FAT32 or NTFS file system.
- For external USB HDDs, it is recommended that you use devices with a rated voltage of less than 5 V and a rated current of less than 500 mA.
- It is recommended to use a Hard Disk Drive with its own power supply. (If the power being supplied is not sufficient, the USB storage device may not be detected correctly). Note, a USB Hub is not supported.
- It is recommended that you use USB flash drives of 32 GB or less and USB HDDs of 1 TB or less.
- If a USB HDD with power-saving function does not work properly, turn the power off and on. For more information, refer to the user manual of the USB HDD.
- Data in USB storage device can be damaged so be sure to back up important files to other devices. Data maintenance is the user's responsibility and the manufacturer is not responsible for data loss.

To Use My Media

1 Press the **SETTINGS** button on the remote control.

2 Select **MY MEDIA**.

Select desired file from the list. Watch the chosen file.

Sets play related settings by checking option during disk playback.

My Media supporting file

- Maximum data transfer rate: 20 Mbps (Mega bit per second)
- External supported subtitle formats: *.smi, *.srt, *.sub (MicroDVD, SubViewer 1.0/2.0), *.ass, *.ssa, *.txt (TMPlayer), *.psb (PowerDivX)
- Internal supported subtitle formats: SRT/ASS/SSA (Supports internal subtitles generated from DivX6)

Video Supported Codec

Maximum: 1920 x 1080 @ 30p (only Motion JPEG 640 x 480 @ 30p)

Extension	Codec	
.asf, .wmv	Video	VC-1 Advanced Profile, VC-1 Simple and Main Profiles
	Audio	WMA Standard, WMA 9 Professional
.divx, .avi	Video	DivX3.11, DivX4, DivX5, DivX6, XVID, H.264/AVC
	Audio	MPEG-1 Layer I, II, MPEG-1 Layer III (MP3), Dolby Digital
.mp4, .m4v, .mov	Video	H.264/AVC, MPEG-4 Part 2
	Audio	AAC
.mkv	Video	H.264/AVC
	Audio	HE-AAC, Dolby Digital
.ts, .trp, .tp, .mts, .m2ts	Video	H.264/AVC, MPEG-2, VC-1
	Audio	MPEG-1 Layer I, II, MPEG-1 Layer III (MP3), Dolby Digital, Dolby Digital Plus, AAC
.vob	Video	MPEG-1, MPEG-2
	Audio	Dolby Digital, MPEG-1 Layer I, II, DVD-LPCM
.mpg, .mpeg	Video	MPEG-1
	Audio	MPEG-1 Layer I, II

Audio File

File type	Item	Info
MP3	Bit rate	32 kbps to 320 kbps
	Sampling rate	32 kHz to 48 kHz
AC3	Bit rate	32 kbps to 640 kbps
	Sampling rate	32 kHz, 44.1 kHz, 48 kHz
MPEG	Bit rate	32 kbps to 448 kbps
	Sampling rate	32 kHz to 48 kHz
AAC, HEAAC	Bit rate	24 kbps to 384 kbps
	Sampling rate	8 kHz to 96 kHz
CDDA	Bit rate	1.44 kbps
	Sampling rate	44.1 kHz
LPCM	Bit rate	1.41 Mbps to 9.6 Mbps
	Sampling rate	Multi-channel : 44.1 kHz, 88.2 kHz / 48 kHz, 96 kHz Stereo : 176.4 kHz, 192 kHz

Available photo file

File type	Item	Info
2D (jpeg, jpg, jpe), 3D (jps)	Support File type	SOF0: Baseline, SOF1: Extend Sequential, SOF2: Progressive
	Picture Size	Minimum: 64 x 64 Maximum: Normal Type: 15360 (W) x 8640 (H) Progressive Type: 1920 (W) x 1440 (H)
3D (mpo)	Support File type	MPO
	Picture Size	4:3 size : 3648 x 2736, 2592 x 1944, 2048 x 1536 3:2 size : 3648 x 2432
BMP	Picture Size	Minimum: 64 x 64 Maximum: 9600 (W) x 6400 (H)
PNG	Support File type	Interlace, Non-Interlace
	Picture Size	Minimum: 64 x 64 Maximum: Interlace: 1200 (W) x 800 (H) Non-Interlace: 9600 (W) x 6400 (H)

* BMP and PNG format files may be slower to display than JPEG.

Watching the Videos

In the **Movie List**, you can watch movies stored on the connected USB device. Controls playback and sets options while viewing videos.


Tips for Playing Video Files

- Some subtitles created by users may not work properly.
- The video and subtitle files should be placed in the same folder. For subtitles to display correctly, the video and subtitle files must have the same name.
- We do not support any stream that contains GMC (Global Motion Compensation) or Qpel (Quarterpel Motion Estimation).
- Only H.264/AVC profile level 4.1 and lower is supported.
- Video files that exceed 50 GB (gigabyte) are not supported for playback. The file size limit is dependent on the encoding environment.
- DTS audio codec is not supported.

Browsing Movie List

Play a video file stored in the connected device.

- 1 Connect a USB storage device.
- 2 Press the **MY MEDIA / USB** button.
- 3 Use the ◀ or ▶ button to select **Movie List** and press the **OK** button.
- 4 Use the ▲, ▼, ◀ or ▶ button to select the file you want and press the **OK** button.

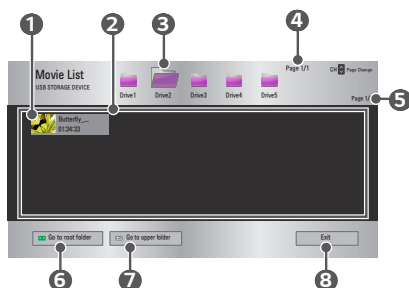

	Description	
1	Thumbnails	
	Abnormal file	
	File not supported	
2	File List	
3	Moves to the upper level folder.	
4	Current page/Total no. of folder pages	
5	Current page/Total no. of file pages	
6	Moves to the top level folder.	
7	Moves to the upper level folder.	
8	Exit Movie List.	

5 Control playback by using the following buttons.



Setting	Description
	Shows the current playing position. Use or buttons to move forward or backward.
	Stops playing and returns to Movie List.
	Returns to normal playback.
	Pauses the media player. If no button is pressed on the remote control for 10 minutes after pausing, the playback is restarted.
	Displays in slow motion.
	Whenever this button is pressed, the playback speed is changed. x2, x4, x8, x16, x32
	Reduces power consumption by adjusting peak screen brightness.
	Switches to the 3D screen.
Option	A pop-up window will appear.
Hide	Hides the playback bar. Press the OK button to make it appear.
Exit	Returns to the Movie List screen.

Options for Movie List

- 1 Press the Q.MENU button.
- 2 Use the ▲ or ▼ button to move to a desired option and press the OK button.
- 3 Use the ▲, ▼, ◀ or ▶ button to set up each item.

Set Video Play.

Setting	Description
Picture Size	Selects the size of a playback screen. • Full : Files are played in full screen mode according to the aspect ratio of video. • Original : Displays the video in the original size.
Audio Language	Allows you to select the language you want for the file with multiple audio tracks. This option is not available if the file has only one audio track.
Subtitle Language	The subtitle can be turned on or off. • Language : One of any of the available languages can be selected. • Code Page : A character set used for a subtitle can be selected. By default, the subtitle is displayed in a language configured in OPTION 1 → Language. – Sync : If a subtitle is not synchronized with its video, you can adjust its speed at 0.5 seconds unit. – Position : Moves the location of a subtitle. – Size : Changes the subtitle font size.
Repeat	Turns the repeat function On or Off. When it is set to off, the next file can be played sequentially if the file name is similar.

Set Video.

You can change video settings.
(Refer to *PICTURE Settings* on page 82.)

Set Audio.

You can change audio settings.
(Refer to *AUDIO Settings* on page 88.)

BLUETOOTH

You can change Bluetooth settings.
(Refer to *Setting up bluetooth on the projector* on page 45.)

Set 3D Video

You can set 3D video or 2D video.

3D setting


 
You can set 3D settings. (Refer to *OPTION 1 Settings on page 100.*)

Registering the DivX code

Checks DivX Reg. Code for replaying DivX protected videos. Register at <http://vod.divx.com>.

Use Reg. Code to rent or purchase movies at www.divx.com/vod.

- 1 In the Settings menu, move to **OPTION 1** and press **DivX(R) VOD**.
- 2 Press the ▲ or ▼ button to move to **Registration** and press the OK button.

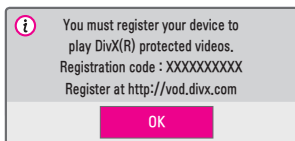

- 3 Check the DivX **Registration code**.





NOTE

- Rented/purchased DivX files cannot be played if the DivX Registration Code of a different device is used. Use only the DivX Registration Code granted to this specific device.
- Converted files not conforming to the DivX Codec Standard may not play or may produce abnormal sound.

To deregister the DivX code

Use the DivX deregistration code to deactivate the DivX DRM function.

- 1 In the Settings menu, move to **OPTION 1** and press **DivX(R) VOD**.
- 2 Use the ▲ or ▼ button to go to **Deregistration** and press the **OK** button.

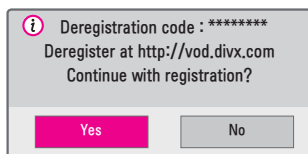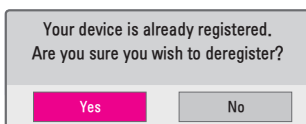

- 3 Select **Yes**.



NOTE

- What is DRM [Digital Rights Management]?
This is a technology and service that prevents the illegal use of digital contents to protect the benefits and rights of the copyright owner. Files can be played after the license is verified through an online method, etc.

Viewing the Photos

You can view photos stored on a connected device.

Supported Photo Files

PHOTO (*.JPEG)


Baseline: 64-pixel (width) x 64-pixel (height) - 15360-pixel (width) x 8640-pixel (height)

Progressive: 64-pixel (width) x 64-pixel (height) - 1920-pixel (width) x 1440-pixel (height)

- Non-supported files are displayed in the form of an icon.
- An error message is displayed for corrupted files or file formats that cannot be played.
- Corrupted files may not be displayed properly.
- It may take some time to view high-resolution images in full screen.

Browsing Photo List

- 1 Connect a USB storage device.
- 2 Press the **MY MEDIA/USB** button.
- 3 Use the ◀ or ▶ button to select **Photo List** and press the OK button.
- 4 Use the ▲, ▼, ◀ or ▶ button to select the file you want and press the OK button.

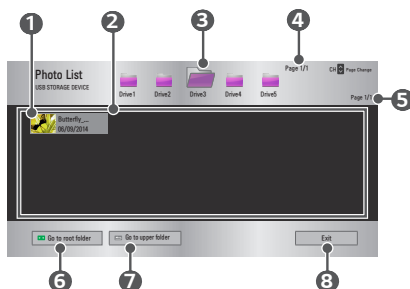

	Description	
1	Thumbnails	
	Abnormal file	
	File not supported	
2	File List	
3	Moves to the upper level folder.	
4	Current page/Total no. of folder pages	
5	Current page/Total no. of file pages	
6	Moves to the top level folder.	
7	Moves to the upper level folder.	
8	Exit	

5 Control playback by using the following buttons.



Setting	Description
	Selects the previous or next photo.
Slideshow	All photos are displayed during slide show. Set Slide Speed in the Option → Set Photo View. menu.
BGM	You can listen to music while viewing photos in full size. Set BGM in the Option → Set Photo View. menu.
	Rotates photos. - Rotates a photo 90°, 180°, 270°, or 360° clockwise. - Photos cannot be rotated if their width is greater than the height of the max. supported resolution.
	Views the photo in full mode or original mode. Press the blue button to enlarge the image.
	Reduces power consumption by adjusting peak screen brightness.
	Switches to the 3D screen.
Option	A pop-up window will appear.
Hide	Hides the menu on the full size screen. To see the menu, press the OK button on the remote control.
Exit	Exit from full screen photo view.

Options for Photo List

- 1 Press the Q.MENU button.
- 2 Use the ▲ or ▼ button to move to a desired option and press the OK button.
- 3 Use ▲, ▼, ◀ or ▶ button to set up each item.

Set Photo View.

Setting	Description
Slide Speed	Selects a slideshow speed.
BGM	Selects a music folder for the background music. • You cannot change the music folder while the background music is playing. • For background music, only the folder from the same device can be selected. — Repeat : Selects repeat play. — Random : Selects random play.

Set Video.

You can change video settings.

(Refer to PICTURE Settings on page 82.)

Set Audio.

You can change audio settings.

(Refer to AUDIO Settings on page 88.)

BLUETOOTH

You can change Bluetooth settings.

(Refer to Setting up bluetooth on the projector on page 45.)

Set 3D Video

You can set 3D image or 2D image.

3D setting

You can set 3D settings. (Refer to OPTION 1 Settings on page 100.)

Listening to Music

You can play audio files stored on the connected device.

Supported Music Files


*.MP3

Bit rate range 32 Kbps to 320 Kbps

- Sampling rate MPEG1 Layer3: 32 kHz, 44.1 kHz, 48 kHz
- Sampling rate MPEG2 Layer3: 16 kHz, 22.05 kHz, 24 kHz


Browsing Music List

- 1 Connect a USB storage device.
- 2 Press the **MY MEDIA/USB** button.
- 3 Use the ◀ or ▶ button to select **Music List** and press the **OK** button.
- 4 Use the ▲, ▼, ◀ or ▶ button to select the file you want and press the **OK** button.

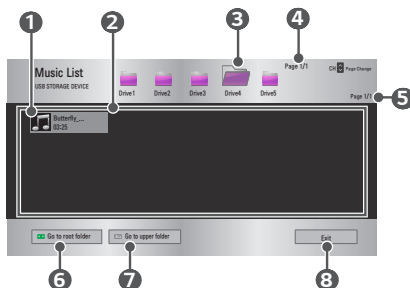

	Description	
1	Thumbnails	
	Abnormal file	
	File not supported	
2	File List	
3	Moves to the upper level folder.	
4	Current page/Total no. of folder pages	
5	Current page/Total no. of file pages	
6	Moves to the top level folder.	
7	Moves to the upper level folder.	
8	Exit	

5 Control playback by using the following buttons.

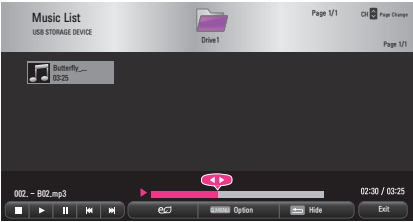

Setting	Description
	Changes the playing position.
	Stops playing.
	Returns to normal playback.
	Pauses the media player.
	Plays the previous/next file.
	Reduces power consumption by adjusting peak screen brightness.
Option	Sets up the options of Music List.
Hide	Hides the playback bar. • Press the OK button to make the playback bar appear.
Exit	Returns to the Music List screen.

Options for Music List

- 1 Press the Q.MENU button.
- 2 Use the ▲ or ▼ button to move to a desired option and press the OK button.
- 3 Use ▲, ▼, ◀ or ▶ button to set up each item.

Set Audio Play.

Setting	Description
Repeat	Selects repeat play.
Random	Selects random play.

Set Audio.

You can change audio settings.

(Refer to AUDIO Settings on page 88.)

BLUETOOTH

You can change Bluetooth settings.

(Refer to Setting up bluetooth on the projector on page 45.)

Viewing Files

You can see document files stored on a connected device.

Supported File Formats

XLS, XLSX, DOC, DOCX, PPT, PPTX, TXT, PDF, HWP

Microsoft Office 97/2000/2002/2003/2007 version


Adobe PDF 1.0/1.1/1.2/1.3/1.4 version

Hangul: 97/2000/2002/2005/2007 version

- File Viewer realigns a document, so it may look different from what is displayed on a PC.
- For documents that include images, the resolution may look lower during the realigning process.
- If the document is large or has many pages, it may take longer to load.
- Unsupported fonts may be replaced by other fonts.
- The file viewer may not open for Office documents that contain many high resolution images. In that case, reduce the image file size, save it on a USB storage device and run the file viewer again or connect your PC to the projector and open the file on your PC.

Browsing File List

- 1 Connect a USB storage device.
- 2 Press the **MY MEDIA/USB** button.
- 3 Use the ◀ or ▶ button to select **File List** and press the OK button.
- 4 Use the ▲, ▼, ◀ or ▶ button to select the file you want and press the OK button.

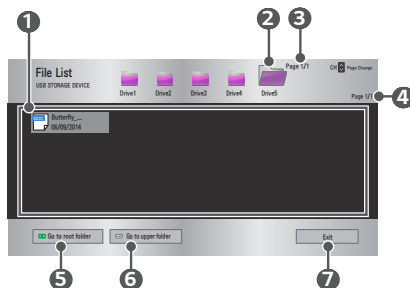


	Description
1	File List
2	Moves to the upper level folder.
3	Current page/Total no. of folder pages
4	Current page/Total no. of file pages
5	Moves to the top level folder.
6	Moves to the upper level folder.
7	Exit

5 Control playback by using the following buttons.

- Click **Go Page** then the pop-up window for selecting the number of page appears. Input the page to move to the page you want.
- Press the VOL **+**, **-** button to zoom in or zoom out.

Press the **OK** button and then use the **Up/Down/Left/Right** buttons to move to **Go Page** or **Zoom**.

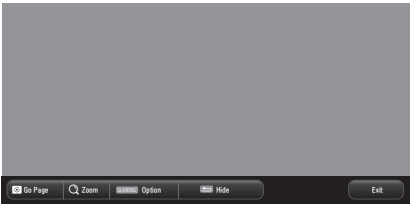

Setting	Description
Go Page	Moves to the page you want. Use the Up/Down/Left/Right buttons to select a page and press the OK button.
Zoom	Enlarges or reduces the document.
Option	Sets up the options of File Viewer.
Hide	Hides the menu. • Press the OK button to make it appear.
Exit	Returns to the File Viewer screen.

Options for File List

- 1 Press the Q.MENU button.
- 2 Use ▲, ▼, ◀ or ▶ button to set up each item.

Set FileViewer Option

Setting	Description	
Single Page Loading	On	Loads and displays pages one by one. The initial loading time is short but a content heavy page may be displayed slowly.
	Off	Loads all pages of a file to memory before it starts to display them. The initial loading time is long but you can navigate pages quickly after loading is complete. If a file is too large, it may fail to load all the pages.
Image Quality	You can set the quality of the image included in the document. The following three options are available for the image quality: High, Medium, Low. Higher the image quality, lower the display time.	
Document Align	Selects initial document align method.	

File View settings are default, so close the currently opened document to apply changes to the new document, if any.

3D FUNCTION

3D technology uses different video frames for each eye to add depth to the video.

While Watching 3D

WARNING

- If you view 3D video or images too closely for a long period of time, your eyesight may become worse.
- If you watch the projector or game screen for a long time with 3D glasses on, you may experience dizziness or eye fatigue.
- People with chronic diseases (epilepsy, cardiovascular disease, blood pressure-related diseases, etc.), pregnant women, and people with serious motion sickness should avoid watching 3D video.
- People with stereo blindness, or with stereopsis problems, should also avoid watching 3D video content. It may cause double vision or visual discomfort.
- People with strabismus, amblyopia, or astigmatism may have difficulty perceiving video depth and may be fatigued easily due to double vision or other ailments. It is recommended to rest more frequently than other viewers.
- Because 3D can be recognized as real, some viewers may get surprised or overexcited.
- Do not watch 3D images near fragile objects or any objects that can be knocked over easily.
- Take care not to injure yourself as you may subconsciously try to move away from the life-like 3D images.

- **Warning about photosensitivity seizures**

- Some users may experience a seizure or other abnormal symptoms when they are exposed to a flashing light or particular patterns from a video game. If anyone in your family has a history of epilepsy or has ever experienced any kind of seizure, please consult your doctor before viewing 3D images. If you experience one of the following symptoms while watching a 3D video, stop watching the 3D video immediately and take a rest.
- Dizziness, switched eyesight, twitching of the eye or facial muscles, involuntary movements, cramp, loss of consciousness, confusion, loss of sense of direction, or nausea. If the symptom does not disappear, please consult your doctor.
- You can reduce the risk of photosensitive seizures by taking the following preventive measures.
 - Take a rest of 5 to 15 mins. for every 1 hour of viewing.
 - If vision varies between each eye, correct the variation before beginning to watch a 3D video.
 - Ensure that the 3D video is directly in front of you, at eye level.
 - You should stop watching if you experience a headache, fatigue or dizziness.
 - Do not view 3D images for a long period of time when you are tired or ill.

 CAUTION

- Extra special care is required for children watching a 3D video.

When Watching 3D Video

- Prevent children of 5 years or younger from watching a 3D video. It may impair the development of their eyes.
- Children 10 years old or younger are still developing their eyesight and may have an excessive tendency to touch or jump at the screen. Adult guidance and supervision is recommended.
- Since the distance between the eyes is narrower for children than in adults, children tend to notice a greater difference in the images seen by each eye. Therefore, even while watching the same 3D video, children may have a greater depth perception than adults.
- Young people of 19 years old or younger may respond with sensitivity to the light stimuli of 3D content. Excessive viewing when fatigued is not recommended.
- Elderly viewers may have a reduced depth perception than younger viewers. Avoid watching video nearer than the recommended distance.
- Watch 3D images within the optimum viewing angle and distance.
- If you are outside the viewing angle or distance, you may not be able to see 3D images. You cannot view 3D images when you are lying down.
- You may see left and right images overlapped during projector initialization after it is powered on. It may take some time for optimization.
- It may take some time for the 3D image to look normal after you turn your eyes away from the screen and look back at the 3D image.
- It may flicker slightly while watching 3D images under a 3 wavelength lamp fluorescent light (50 Hz to 60 Hz) or near windows. If so, it is recommended to block the sun light with a curtain and to dim the lights.
- The 3D glasses must be DLP-LINK (DLP Ready) type.
- You may not be able to watch 3D properly if there is an obstacle between the projector and 3D glasses.
- Install the 3D projector as far as possible from other devices.
- If a future 3D broadcasting format that is not supported by this projector becomes the standard, an additional device such as a set-top box may be required.

Please check the following when using 3D glasses.


- Do not use 3D glasses as ordinary glasses, sunglasses or protective goggles.
 - If you do so, this may cause injury.
- Do not store 3D glasses in very hot or very cold conditions. If you do, this may cause them to become distorted. Do not use distorted glasses.
- Do not drop 3D glasses or allow them to come into contact with other objects.
 - This may cause product malfunction.
- The lenses of 3D glasses are easily scratched. Use a soft clean cloth when cleaning them.
- Foreign particles on the cloth may cause scratches.
- Do not scratch the surface of the 3D glasses' lenses with sharp objects or wipe them with chemicals. If the lenses get scratched, images may not look normal when viewing 3D.

Requirements for Watching 3D Images

* Optimum viewing angle: Top/Bottom/Left/Right 9°

Recommended viewing distance: 3 m to 5 m

Recommended screen size: 101 cm

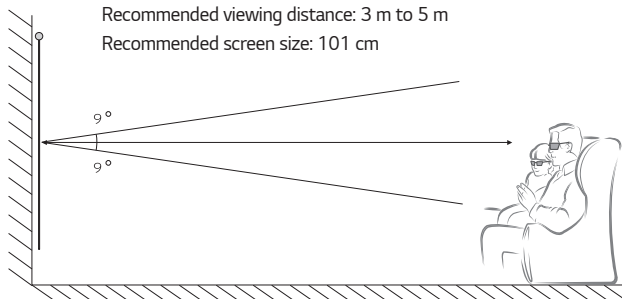

* Watching 3D videos should be done in dark room environments only.



NOTE

- The pairing with the DLP-LINK glasses is affected by the intensity of light reflected from the screen. Therefore, the pairing with DLP-LINK glasses may not work properly if the light reflected from the screen is not bright enough, such as when the surrounding area is bright, the screen is big, or the maximum energy saving mode is enabled.
- Some menus may not work while playing a 3D video.
- You can only watch a 3D video properly when the 3D video format option has been selected on the projector.

Using the DLP-LINK (DLP-Ready) Type Glasses

- 1 While watching 3D images from the projector, press buttons on the glasses.
- 2 When you press the button, the glasses flicker while synchronizing with the 3D images. (The flickering is a unique operation method of DLP-LINK type glasses. It may be different depending on the glasses type.)
- 3 If the glasses flicker or problems occur while watching 3D, first turn the lights off to make the room darker. Contact your projector seller for queries about the glasses.

To view 3D images

3D imaging is a technology that utilizes the slight difference in left/right eyes to make the images on the projector appear just like real-life 3-dimensional space.

- 1 Play a 3D-image title or tune to a 3D channel.
- 2 Press the **3D** button to activate 3D.
- 3 Turn on the 3D glasses and put them on.
- 4 While viewing 3D images, press the **3D** button on the remote control to end 3D image viewing.
- 5 Press the **L/R** button to switch the playing direction of an image. Select a screen with better 3D display quality.
 - If you press the **3D** button during viewing, it returns to 2D.

* Depending on the input signal, the available 3D type may differ.

Supported 3D Mode

ENGLISH

	Signal	Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Supported 3D Formats
HDMI	720p	1280 x 720	89.9 / 90	59.94 / 60	Frame Packing
			45	60	Side by side (half), Top and Bottom
	1080i	1920 x 1080	33.7	60	Side by side (half), Top and Bottom
	1080p	1920 x 1080	53.95 / 54	23.98 / 24	Frame Packing
			67.5	60	Side by side (half), Top and Bottom, Single Frame Sequential
			27	24	Side by side (half), Top and Bottom
			33.7	30	Side by side (half), Top and Bottom
	USB	1080p	33.75	30.00	Side by side, Top and Bottom, MPO, JPS (Photo)
RGB	1080p	1920 x 1080	67.5	60	Side by side (half), Top and Bottom
DTV	720p	1280 x 720	45.000	60	Side by side (half), Top and Bottom
	1080i	1920 x 1080	33.750	60	Side by side (half), Top and Bottom

CUSTOMIZING SETTINGS


SETTINGS

- 1 Press the **SETTINGS** button.
- 2 Use the ▲, ▼, ◀ or ▶ button to select the desired item and press the **OK** Ⓞ button.
- 3 Use the ▲, ▼, ◀ or ▶ button to set up the desired item and press the **OK** Ⓞ button.
- 4 Press the **EXIT** button when completed.

Menu	Description
PICTURE	Adjusts the image quality for optimal viewing.
AUDIO	Adjusts the sound quality and volume level.
CHANNEL	Sets up and edits a channel.
TIME	Sets the time and time-related features.
WIRELESS	Wireless-related features.
LOCK	Locks or unlocks a channels or a programs.
OPTION 1	Customizes the general settings.
OPTION 2	Customizes the settings related the projector.
INPUT	Selects the desired input source.
MY MEDIA	Accesses photo, music, movie, and document files.

PICTURE Settings

- ENGLISH
- 1 Press the **SETTINGS** button.
 - 2 Use the ▲, ▼, ◀ or ▶ button to select **PICTURE** and press the **OK** button.
 - 3 Use the ▲, ▼, ◀ or ▶ button to set up the desired item and press the **OK** button.
 - To return to the previous menu, press the ◀ button.
 - 4 Press the **EXIT** button when completed.

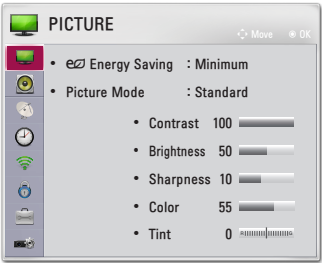

The available picture settings are described as follows.

Item	Description	
Energy Saving	Reduces power consumption by adjusting peak screen brightness.	
	Mode	
	Minimum/ Medium/ Maximum	Applies the pre-set Energy Saving mode.

Item	Description	
Picture Mode	Selects the picture mode optimized for the viewing environment or the program. You can also customize advanced options for each mode.	
	Mode	
	Vivid	Maximizes the visual effect of video. Heightens contrast, brightness and sharpness to display vivid images.
	Standard	Displays images in standard levels of contrast, brightness and sharpness.
	Cinema	Optimizes the image for a movie.
	Sport	Optimizes the image for sports by emphasizing primary colors and dynamic actions.
	Game	Optimizes the image for playing games on fast-moving screens.
Contrast	Expert1/ Expert2	Menu for adjusting picture quality that allows experts and amateurs to enjoy the best Projector viewing. – Expert mode is for picture tuning professionals to control and fine-tune using a specific image. For normal images, the effects may not be dramatic.
	Adjusts the difference between bright and dark regions of the screen.	
	Brightness	
	Adjusts the overall screen brightness.	
	Sharpness	
	Adjusts the sharpness of the borders between bright and dark. Horizontal and Vertical Sharpness are available only in Expert1/Expert2 .	
	Color	
Tint	Adjusts the intensity of all colors.	
	Adjusts the balance between red and green levels.	

Item	Description	
Advanced Control	Customizes the advanced settings.	
Picture Option	Sets optional settings.	
Picture Reset	Resets values customized by the user. Each picture mode is reset. Select the picture mode you wish to reset.	
Aspect Ratio	Resizes the picture.	
Screen (RGB-PC)	Adjusts the picture quality of RGB-PC input.	
	Option	
	Resolution	Available resolutions are 768 resolution (1024 x 768/ 1280 x 768/ 1360 x 768, 60 Hz).
	Auto Config.	Provides optimized picture quality by automatically calibrating the mismatch of horizontal width and picture shake caused by clashes between the internal settings of the projector and various PC graphic signals.
	Position	Moves the image up/down/left/right.
	Size	Changes the screen size.
	Phase	Makes the picture look clear by removing horizontal noise.
	Reset	Restores all the settings to the factory default.

Advanced Control

Item	Description
Dynamic Contrast	Adjusts contrast and color to the optimal level according to the screen's brightness.
Dynamic Color	Adjusts colors for more natural-looking colors.
Color Gamut	Selects the range of colors that can be expressed. • Standard: Displays the original colors of an input signal regardless of the display features. • Wide: Makes use of the display's rich colors.
Skin Color	Skin color spectrum can be separately set to implement the skin color as defined by the user.
Sky Color	Sky color is set separately.
Grass Color	Natural color spectrum (meadows, hills, etc.) can be separately set.
Gamma	Sets the gradation curve according to the output of the picture signal in relation to the input signal.

* Depending on input signal or other picture settings, the range of detailed items for adjustment may differ.

Expert Control

Item	Description
Dynamic Contrast	Adjusts contrast and color to the optimal level according to the screen's brightness.
Color Gamut	Selects the range of colors that can be expressed. • Standard: Displays the original colors of an input signal regardless of the display features. • Wide: Makes use of the display's rich colors.
Edge Enhancer	Shows clearer and distinctive yet natural edges of the video.
Expert Pattern	Patterns used for expert adjustment.
Color Filter	Filters a specific color spectrum in RGB colors to fine-tune color saturation and hue accurately.
Color Temperature	In Expert mode, you can customize the options of each mode. Gamma : Select 1.9, 2.2, or 2.4. a. Method : 2 Points – Pattern : Inner, Outer – Points : Low, High – Red/Green/Blue : Adjustable range -50 to +50. – Apply to all inputs : The values of the Color Temperature is applied to all the input modes. b. Method : 20 Point IRE – Pattern: Inner, Outer – IRE (Institute of Radio Engineers) is the unit indicating the size of a video signal and can be set to 0, 5, 10, 15, ... 100. You can fine-tune for each setting as shown below. – Luminance : The adjustment range is 50 to 500. – Red/Green/Blue : The adjustment range is -50 to +50. – Apply to all inputs : The values of the Color Temperature is applied to all the input modes.

Item	Description
Color Management System	Adjusts Red/Green/Blue/Cyan/Magenta/Yellow colors. Allows an expert to adjust the tint using a test pattern. Six colors (Red/Green/Blue/Cyan/Magenta/Yellow) can be selectively adjusted without affecting other colors. You may not see colors change on a normal picture even after adjustment. – Saturation Red/Green/Blue/Yellow/Cyan/Magenta, Tint Red/Green/Blue/Yellow/Cyan/Magenta, Luminance Red/Green/Blue/Yellow/Cyan/Magenta : The adjustment range is -30 to +30 each.

* Depending on input signal or other picture settings, the range of detailed items for adjustment may differ.

Picture Option

Item	Description
Noise Reduction	Reduces screen noise in the video.
MPEG Noise Reduction	Eliminates noise generated while creating digital picture signals.
Black Level	Adjusts the brightness or darkness of the screen to suit the black level of the picture input using the degree of darkness (black level) of the screen.
Real Cinema	Optimizes the screen for movie viewing.
Color Temperature	Adjusts the overall color of the screen to suit your preference. Select Warm, Cool, Medium, or Natural.

AUDIO Settings

- 1 Press the **SETTINGS** button.
- 2 Use the ▲, ▼, ◀ or ▶ button to select **AUDIO** and press the **OK** button.
- 3 Use the ▲, ▼, ◀ or ▶ button to set up the desired item and press the **OK** button.

– To return to the previous menu, press the ◀ button.
- 4 Press the **EXIT** button when completed.



The available sound settings are described as follows.

Item	Description	
Sound Mode	Sets the sound mode.	
	Mode	
	Standard	Suitable for all types of video.
	News/Music/Cinema/Sport/Game	Sets audio optimized for a specific genre.


Item	Description	
Sound Effect	The user can select various sound effects.	
	Mode	
	Clear Voice II	Makes the voice from the projector crisp and clear.
	Virtual Surround	LG's proprietary audio processing technology allows 5.1 channel-like surround sound from two speakers. When Clear Voice II is set to on, Virtual Surround cannot be selected.
	Equalizer	Adjusts the volume to a level of your choice using the Equalizer . - Audio-band (100 Hz/ 300 Hz/ 1 kHz/ 3 kHz/ 10 kHz) can be adjusted from -10 to 10. Reset : Resets voice options that the user has changed.
	Balance	Adjusts the balance of the left and right speakers.
Auto Volume	Reset	Initialize the applied effect under the Sound Effect menu.
	Automatically adjusts the volume level.	

Item	Description		
Sound Out	Sets the audio output of the projector.		
	Mode		
	Projector Speaker	Sound is output through the projector speaker.	
	External Speaker (Optical)	Sound is output through the speaker connected to the optical port. • Digital Sound Out: Sets up Digital Sound Output.	
	Bluetooth	Sound is output through the Bluetooth headset. First, set Bluetooth to on.	
		Item	
		Search Device	Search for the device to connect to.
	List of registered devices	Connected devices are saved in the List of registered devices . The saved list of registered devices can be displayed.	

Item	Description	
AV Sync. Adjust	Synchronizes video and audio directly when they do not match. If you set AV Sync. Adjust to On , you can adjust the sound output (projector speakers or SPDIF) to the screen image.	
	Mode	
	Projector Speaker	Adjusts the synchronization of the sound from the projector's internal speakers. The + and - buttons allow the viewer to synchronize the audio with the video.
	External Speaker	Adjusts how the sound is synced to external speakers, such as an external speaker connected to the digital audio output port, LG audio device, projector speaker, SPDIF, and headphone. The + and - buttons allow the viewer to synchronize the audio with the video.
	Bluetooth	Adjusts the synchronization between the video and the Bluetooth device sound. – This feature is only available when a Bluetooth device is connected. – Audio sync may vary by manufacturer. – When playing video and music from a connected USB drive, AV Sync. Adjust can also be adjusted using the Set Audio. menu.
	Bypass	Outputs broadcasting signals or the audio of an external device without audio delay. Audio may be output before video as it takes time to process video input into the projector.

CHANNEL Settings

- 1 Press the **SETTINGS** button.
- 2 Use the ▲, ▼, ◀ or ▶ button to select **CHANNEL** and press the **OK** button.
- 3 Use the ▲, ▼, ◀ or ▶ button to set up the desired item and press the **OK** button.
 - To return to the previous menu, press the ◀ button.
- 4 Press the **EXIT** button when completed.

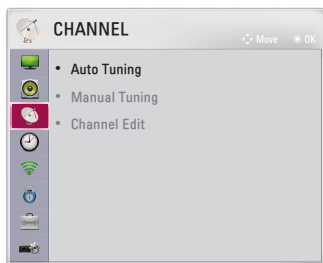


The available channel settings are described as follows.

Item	Description
Auto Tuning	Remembers a channel which is currently broadcasting. You should use this function when you move to another house or move the Projector to other place. It must be used while the antenna is connected and there are channel broadcasting signals. • Channels are not registered properly unless the antenna/cable is connected correctly. • Auto Tuning only finds programs that are currently broadcasting. • If Lock System is turned On, a pop-up window will appear asking for password.
Manual Tuning	Adjusts channels manually and saves the results. For digital broadcasting, signal strength, etc. can be checked.
Channel Edit	Edits the saved channels. Set as favorite channel, block/unblock channel, delete channel etc. of the selected channel.

TIME Settings

- 1 Press the **SETTINGS** button.
- 2 Use the ▲, ▼, ◀ or ▶ button to select **TIME** and press the **OK** button.
- 3 Use the ▲, ▼, ◀ or ▶ button to set up the desired item and press the **OK** button.
 - To return to the previous menu, press the ◀ button.
- 4 Press the **EXIT** button when completed.

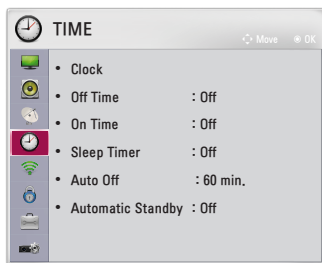

The available time settings are described as follows.

Item	Description	
Clock	Checks or changes the time while watching projector.	
	Mode	
	Auto	Synchronizes the projector clock to the digital time information sent by the TV station.
	Manual	Sets the time and date manually if the auto setup does not correspond to the current time.

Item	Description
Off Time/On Time	Sets the time to turn on or off the projector automatically. To use this feature, you should set the current time and date in advance. To use this feature, set the time correctly. If you do not want to set Off Time/On Time, select Off in Repeat.  NOTE • If you set both Off Time and On Time features to the same time, the Off time feature overrides the On time feature. • If you do not press any button within two hours after the projector is turned on by the On Time feature, the projector enters standby mode automatically.
Sleep Timer	Turns off the Projector after a preset number of minutes. To cancel the Sleep Timer, select Off.
Auto Off	If there is no input signal or button press, the projector automatically turns off after the preset time has elapsed.
Automatic Standby	Turns off the projector automatically after a set period of time if there is no button input on the projector.

WIRELESS Settings

- 1 Press the **SETTINGS** button.
- 2 Use the ▲, ▼, ◀ or ▶ button to select **WIRELESS** and press the **OK** button.
- 3 Use the ▲, ▼, ◀ or ▶ button to set up the desired item and press the **OK** button.
 - To return to the previous menu, press the ◀ button.
- 4 Press the **EXIT** button when completed.




The available wireless settings are described as follows.

Item	Description	
SCREEN SHARE	The SCREEN SHARE displays the screen of the connected device. • You can check the SCREEN SHARE's ID.	
	Mode	
	Group	This is the Group setting for each device supporting the SCREEN SHARE feature. When the wireless connection is weak or unstable, adjust the Group setting to correct the problem.
	Channel	You can change the channel used for wireless connections. • Search Channels: Select channel searching methods. – Auto: The projector searches for available channels and automatically selects the least used channel. – Manual: You can select a channel manually. • Channel: This is shown when Search Channels is set to Manual. It allows you to specify a channel number to use.

LOCK Settings

- 1 Press the **SETTINGS** button.
- 2 Use the ▲, ▼, ◀ or ▶ button to select **LOCK** and press the **OK** button.
 - To enter the **LOCK** menu, enter the preset 4-digit password. The initial password is set as **0000**.
- 3 Use the ▲, ▼, ◀ or ▶ button to set up the desired item and press the **OK** button.
 - To return to the previous menu, press the ↶ button.
- 4 Press the **EXIT** button when completed.

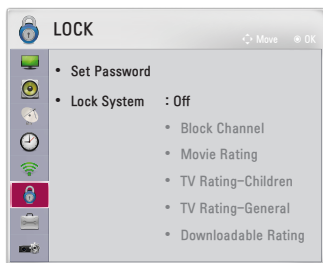

The available lock settings are described as follows.

Item	Description
Set Password	Sets or changes projector password. • The initial password is set as 0000.


Item	Description	
Lock System	Locks the selected channel or external input. First set Lock System to On .	
	Item	
	Block Channel	Blocks the programs that contain inappropriate contents for children. The programs can be selected but the screen is blank and the audio is muted. To watch a locked program, enter the password.
	Movie Rating	Blocks the movies that are only broadcasted on the TV and contain inappropriate contents, based on the Motion Picture Association of America (MPAA) rating. • G: General audiences All ages admitted • PG: Parental guidance suggested Some material may not be suitable for children • PG-13: Parents strongly cautioned Some material may be inappropriate for children under 13 • R: Restricted Under 17 requires accompanying parent or adult guardian • NC-17: No one 17 and under admitted • X: Adult only

Item	Description	
Lock System	Item	
	TV Rating-Children	Blocks the children’s TV programs that parents do not want their children to watch. To block other TV programs, you should set the TV Rating-General feature. • Age TV-Y (All children, including children from ages 2-6), TV-Y7 (Directed to older children, suitable for children age 6 and above) • Fantasy Violence TV-Y7 (Directed to older children - Fantasy violence, suitable for children age 6 and above, containing more intense or combative fantasy violence)
	TV Rating-General	Blocks the TV programs that you want based on the ratings by using the Parental Control Function (V-Chip). The V-Chip electronically reads TV program ratings and allows parents to block program that are unsuitable for children. • Age TV-G (General audience, suitable for all ages) TV-PG (Parental guidance suggested, containing material that are unsuitable for younger children) TV-14 (Parents strongly cautioned, containing material that are unsuitable for children age 14 and under) TV-MA (Mature audience only, unsuitable for children age) • Dialogue (suggestive dialogue) TV-PG or TV-14 • Language (coarse language)TV-PG, TV-14, or TV-MA • Sex (sexual situation) TV-PG, TV-14, or TV-MA • Violence TV-PG, TV-14, or TV-MA
	Downloadable Rating	This function operates only when TV has received Region5 Rating data. The name of the rating option may differ.
	Input Block	Block the input sources.

Item	Description
Key Lock	Locks control buttons on projector. • Key Lock function remains intact even in case of power outage or when the power cord is removed from the wall socket. • Key Lock function can only be set by remote control, and not by the button on the projector. • If you select On : You can turn the projector on only with the Power button if you have turned the projector off using the remote control. If you press a button on the joystick button while watching video, the message Key Lock is displayed.

OPTION 1 Settings

- 1 Press the **SETTINGS** button.
- 2 Use the ▲, ▼, ◀ or ▶ button to select **OPTION 1** and press the **OK** button.
- 3 Use the ▲, ▼, ◀ or ▶ button to set up the desired item and press the **OK** button.
 - To return to the previous menu, press the ◀ button.
- 4 Press the **EXIT** button when completed.

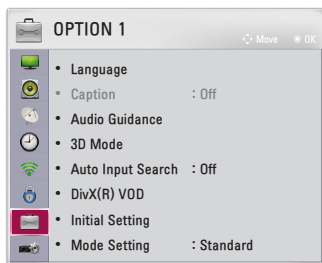

The available option 1 settings are described as follows.


Item	Description
Language	Selects a desired Menu Language.
Caption	View subtitles when the TV station provides subtitled programing. Program subtitles work only on digital/analog broadcasts. Change Caption to On and select caption setting.
Mode	CC 1-4 (Closed Captioning) / Text 1-4 Displays the audio portion of a TV program as text on the TV screen. CC 1 is the most common mode in use. Field 1 data channels: two Captions (CC 1, CC 2), two Text (Text 1, Text 2). Field 2 data channels: two Captions (CC 3, CC 4), two Text (Text 3, Text 4). Service1-6 This is only available for the digital broadcasting system.

Item	Description	
Caption	Digital Option	Set up the size and color of the subtitles on Digital Option . Please select Set by Program or Custom . Select Custom to adjust minute options such as the subtitles' size and color.
		Item
		Size Selects the word size.
		Font Selects a typeface for the text.
		Text Color Selects a color for the text.
		Text Opacity Adjusts the opacity for the text color.
		Bg Color Selects a color for the background color.
		Bg Opacity Adjusts the opacity for the background color.
		Edge Type Selects an edge type.
		Edge Color Selects a color for the edges.
Audio Guidance	When this feature is turned on, the projector will read out loud the OSD contents to help you set up the projector menu.	
	This is available only when the language is set to English.	
	Item	
	Speed	Set the reading speed.
	Volume	Set the reading volume.
	Pitch	Set the pitch of the reading voice.

Item	Description	
3D Mode	Adjusts various aspects of 3D imaging.	
	Mode	
	3D Picture Correction	Switches left/right images of 3D video.
Auto Input Search	Automatically searches for and displays the input signal type when it is received. It is available only with external inputs (RGB-PC, HDMI, AV, and Component).	
DivX(R) VOD	Sets DivX related settings.	
Initial Setting	Deletes all optional settings and returns to initial default mode. Once initialization is complete, the projector will turn off and on by itself. - When Lock System is in place, a pop-up window appears and asks for password. - Do not turn off the power during initialization.	
Mode Setting	Selects Standard or Store Demo. When in use in home, please select Standard. Store Demo mode is for store display.	

OPTION 2 Settings

- 1 Press the **SETTINGS** button.
- 2 Use the ▲, ▼, ◀ or ▶ button to select **OPTION 2** and press the **OK** button.
- 3 Use the ▲, ▼, ◀ or ▶ button to set up the desired item and press the **OK** button.
 - To return to the previous menu, press the ◀ button.
- 4 Press the **EXIT** button when completed.

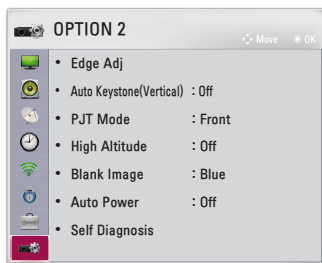

The available option 2 settings are described as follows.


Item	Description	
Edge Adj	Edge Adj adjusts the right, left, top, and bottom width of the projected image if the projected image and screen are not perpendicular to each other due to a tilted screen.	
Auto Keystone(Vertical)	Auto Keystone(Vertical) provides a rectangular screen image by automatically adjusting the Keystone number when there is a trapezoidal screen image caused by tilting of the projector.	
	• Use the Edge Adj (4 Corner Keystone) if you want a more accurate calibration of the screen than the Auto Keystone(Vertical).	
	Item	
	On	Automatically adjusts the Keystone number.
	Off	Manually adjusts the Keystone number.
PJT Mode	This function turns the projected image upside down or flips horizontal. • Select Rear when projecting from the back of the transparent screen purchased separately. • Select Front Ceiling when installing the product on the ceiling. • When PJT Mode is Rear Ceiling/ Front Ceiling, the left/right of the speaker changes automatically.	

Item	Description	
High Altitude	If the projector is used at an altitude higher than 1200 meters, turn this on. Otherwise, the projector may overheat or its protection function may be activated. If this happens, turn the projector off and then on again after waiting for several minutes.	
Blank Image	Selects a background for blank Image.	
Auto Power	Makes the projector turn on automatically when the adaptor plug is inserted.	
	Item	
	On	When the AC/DC plug is connected to the projector, it turns on automatically.
	Off	When the AC/DC plug is connected to the projector, it goes into standby mode.
Self Diagnosis	Troubleshoots functional problems that can arise while using the product.	

- When the input is set to **SCREEN SHARE**, these features are disabled and cannot be used: **Edge Adj**, **PJT Mode**, and **Auto Keystone(Vertical)**.

CONNECTING DEVICES

You can connect various external devices to the projector.

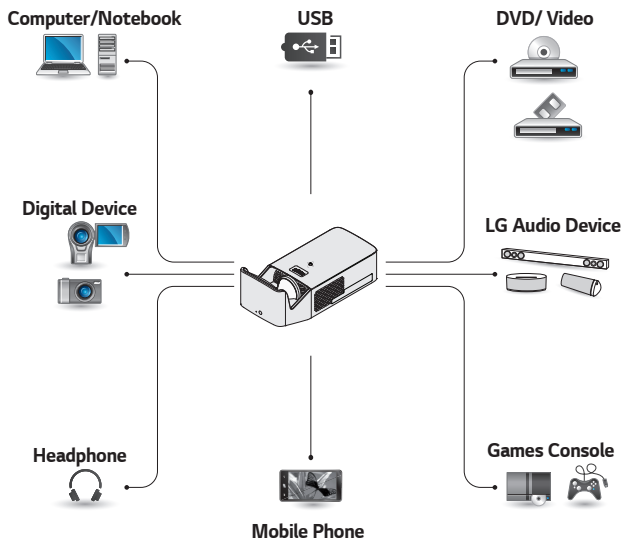

- HDMI - Page 106
- Composite (AV) -Page 107
- Component -Page 107
- RGB - Page 111
- USB Device -Page 50
- Headphone - Page 113
- Digital Amp - Page 113
- Mobile Phone (MHL) - Page 115

Connecting to HD Receiver, DVD, VCR Player, or External Devices


Connect an HD receiver, DVD, VCR player, or external devices to the projector and select an appropriate input mode.

HDMI Connection

With an HDMI cable, you can enjoy high quality picture and sound.

Using a HDMI cable, connect the **HDMI1** port of the projector to the HDMI output port of the device to connect. Both video and audio are output at the same time. You can also use the **HDMI2 MHL**.

Press the **INPUT** button on the remote control to select **HDMI**. You can connect with any HDMI input port.

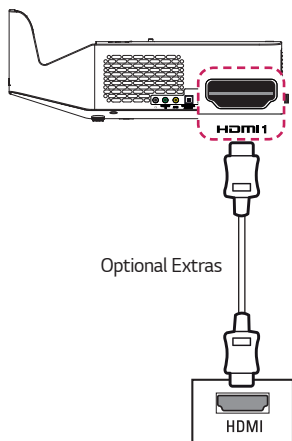


HDMI to DVI Connection

Using an HDMI to DVI cable, connect the projector's **HDMI1** port to the DVI OUT port.


To output audio, use an audio cable for connection. You can also use the **HDMI2 MHL**.

Press the **INPUT** button on the remote control to select **HDMI**. You can connect with any HDMI input port.

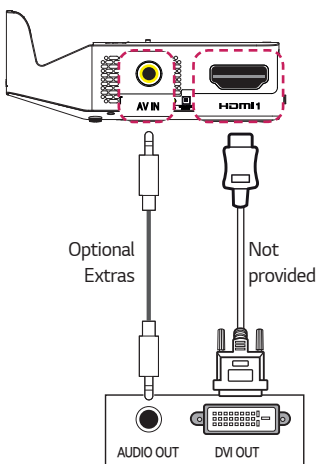


Composite (AV) connection

Connect the output ports of an external device and the **AV IN** ports of the projector using an AV cable. Press the **INPUT**  button on the remote control to select **AV**. Check whether cables of the same color are connected properly.

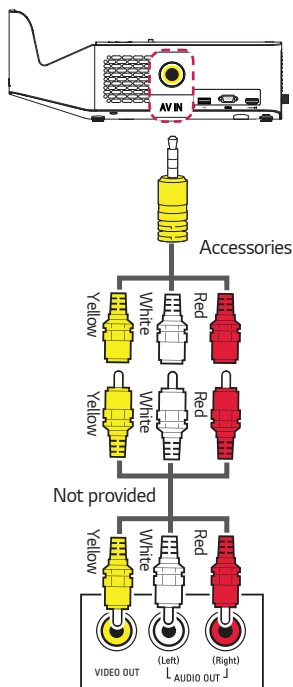


Component connection

You can enjoy a video by connecting the component port of an external device to the **COMPONENT IN** port of the projector. Press the **INPUT**  button on the remote control to select **Component**. Check whether cables of the same color are connected properly.

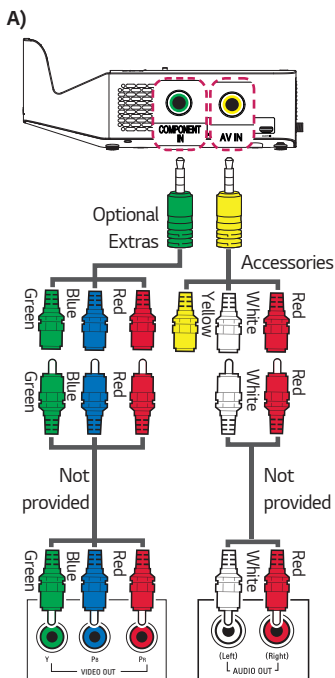

B)

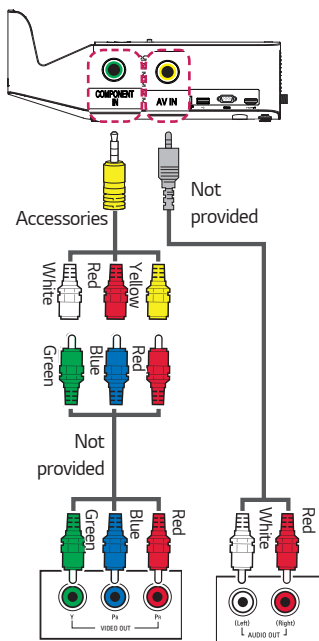


Connecting a PC

The projector supports Plug and Play. Your PC will automatically detect the projector and requires no driver installation.

HDMI Connection

Using an HDMI cable, connect the **HDMI 1** port of the projector to the HDMI output port of your PC. Both video and audio are output at the same time. You can also use the **HDMI2 MHL**.

Press the **INPUT** button on the remote control to select **HDMI**. You can connect with any HDMI input port.

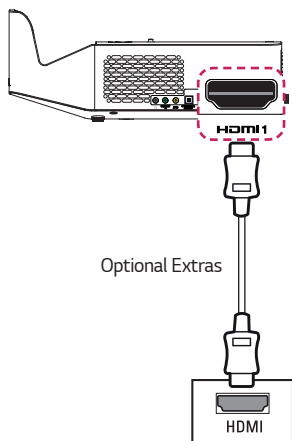


HDMI to DVI Connection

Using an HDMI to DVI cable, connect the projector's **HDMI 1** port to the DVI OUT port.

To output audio, use an audio cable for connection. You can also use the **HDMI2 MHL**.

Press the **INPUT** button on the remote control to select **HDMI**. You can connect with any HDMI input port.

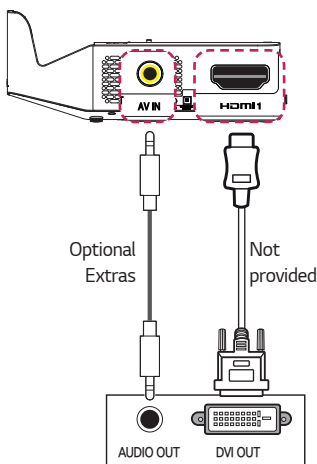

**NOTE**



- It is recommended to use an HDMI connection for the best image quality.
- Depending on the graphics card, DOS mode video may not work if a HDMI to DVI Cable is in use.
- In PC mode, there may be noise associated with the resolution, vertical pattern, contrast, or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate, or adjust the brightness and contrast on the **PICTURE** menu until the picture is clear.
- The synchronization input form for Horizontal and Vertical frequencies is separate.
- Depending on the graphics card, some resolution settings may not allow the image to be positioned on the screen properly.
- If you are using DVI out from a PC, you have to connect analog audio separately.
- When using the HDMI/DVI cable, Single link only is supported.

RGB connection

Connect the PC output and the PC video input port of the projector with the RGB cable.

For audio signal, connect the PC and the projector with an optional audio cable.

Press the **INPUT**  button on the remote control to select **RGB-PC**.

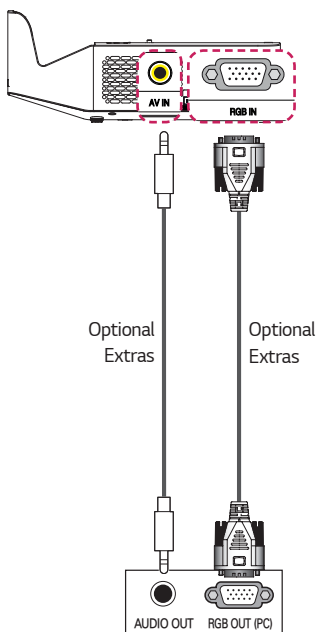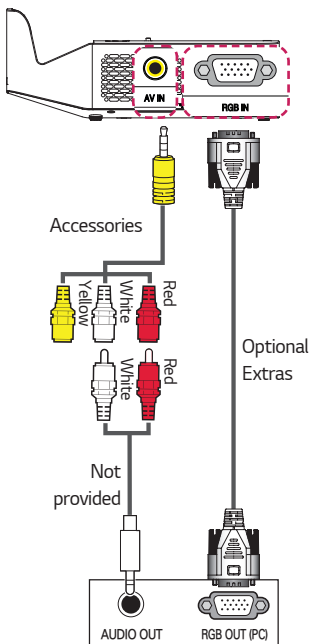

You can connect the audio cable without using a gender as shown in the illustration above.


Connecting a Laptop

You can connect the projector to a laptop to use various functions.

HDMI Connection

Using an HDMI cable, connect the **HDMI1** port of the projector to the HDMI output port of your laptop. Both video and audio are output at the same time. You can also use the **HDMI2 (MHL)**.

Press the **INPUT**  button on the remote control to select **HDMI**. You can connect with any HDMI input port.

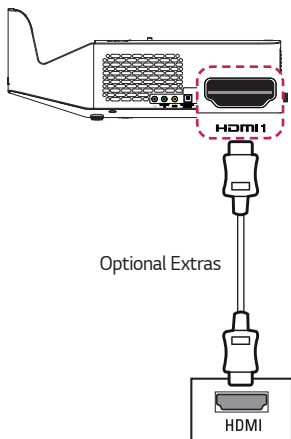


The table below shows examples of switching the output. For more information, refer to the **External Output, Connecting to an External Monitor**, or similar sections of the owner's manual of your computer.

Brand	Switching Output
NEC	[Fn]+[F3]
Panasonic	[Fn]+[F3]
Toshiba	[Fn]+[F5]
IBM	[Fn]+[F7]
Sony	[Fn]+[F7]
Fujitsu	[Fn]+[F10]
LG	[Fn]+[F7]
Samsung	[Fn]+[F4]
Macintosh	Adjust the control panel to enable mirroring after start-up.


Connecting Headphones

You can listen to the audio through a headphone.

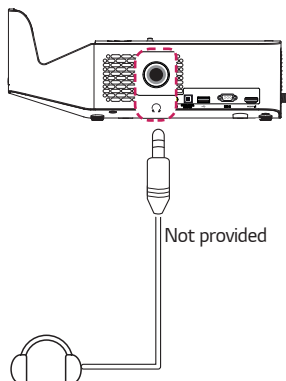

Connecting a Digital Amp

Using an optical cable, connect the digital audio input port of a digital amp to the **OPTICAL DIGITAL AUDIO OUT** port of the projector. The output of an amp with a digital converter must be set to the desired audio format. When using a HDMI cable to connect a home theater or when connecting an optical output to an external audio device, set **Sound Out** to **External Speaker (Optical)**. If a projector, home theater, or the speaker of an external audio device is operating at the same time, there will be an echo.

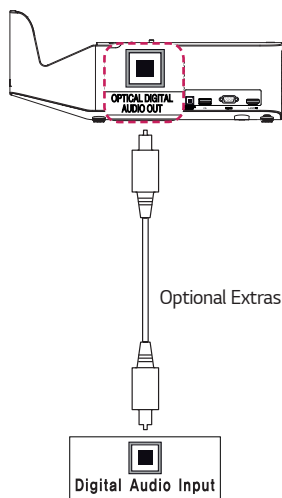

**NOTE**

- Refer to the user manual of the audio device to connect.
- When connecting this product to other devices, make sure to turn off and unplug all the devices.
- The audio output of this product has wide-ranging audio bandwidth, so the receiver volume must be adjusted properly. Speakers can be damaged by unexpected high frequencies.
- Connecting the **OPTICAL DIGITAL AUDIO OUT** port of the projector to the digital audio input port of a digital amp and the audio input port of the projector to the analog audio output port of the digital amp can cause sound oscillation due to the closed loop. Remove one of the two connections to prevent this. (This also applies to home theater devices.)

Using the Mirroring Function of a Mobile Phone

MHL Connection


The Mobile High-definition Link (MHL) is an interface that can connect a mobile phone to the projector and play video and audio from the mobile phone through the projector.

This only applies to products with a HDMI input that supports MHL.

(To find out whether your device is MHL-certified, please contact your device manufacturer.)

For MHL support, check the **HDMI2 MHL** port.

Use a dedicated cable for MHL.

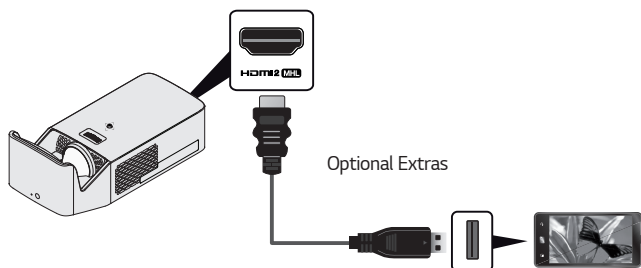

NOTE

- When you connect a mobile phone to the **HDMI2 MHL** port, you can see the mobile phone screen through a projector.
 - This only applies to mobile phones that support MHL.
 - You can use the remote control for some applications.
- Disconnect the MHL cable from the projector when:
 - The MHL function is disabled.

MAINTENANCE

Clean your Projector to keep it in optimal condition.

Cleaning

Cleaning the Lens

If there is any dust or staining on the lens surface, you must clean the lens.

Use an air spray or a cleaning cloth to clean the lens.

To remove dust or stains, use an air spray or apply a small amount of cleaning agent onto a swab or soft cloth to lightly rub the lens.

Please be aware that liquid may flow into the lens if the product is sprayed directly onto the lens.

Cleaning the Projector Case

To clean the projector case, first unplug the power cord.

To remove dust or stains, use only a dry, lint-free, nonabrasive cloth to polish the lens.

Do not use alcohol, benzene, thinners, or other chemicals, which may damage the case.

SPECIFICATIONS

MODEL	PF1000UA (PF1000UA-NA)
Resolution (Pixel)	1920 (Horizontal) × 1080 (Vertical)
Aspect ratio	16:9 (Horizontal:Vertical)
Panel size	11.938 mm
Projection distance (Screen size)	414 mm to 686 mm (1524 mm to 2540 mm)
Ratio of upward projection	125 %
Working range of the remote control	6 m
Power consumption	100 W
AC-DC Adaptor	Manufacturer : Honor Model: ADS-110CL-19-3 190110G
	19 V  5.79 A (Adaptor Input 100-240 V @ 50/60 Hz)
Audio Output	3 W + 3 W
Video Input	NTSC-M
Reception type	ATSC / NTSC-M
Reception channels	VHF 02 to 13, UHF 14 to 69, CATV 01 to 135, DTV 02 to 69, CADTV 01 to 135
External Antenna Impedance	75 Ω (VHF/ UHF)
Height	127.6 mm (without foot) / 128.8 mm (with foot)
Width	131.4 mm
Depth	309 mm (without tuner) / 318 mm (with tuner)
Weight	1.9 kg
USB Device	5 V, 0.5 A (Max.)

MODEL	PF1000UA (PF1000UA-NA)	
Environment Condition	Temperature	
	Operation	0 °C to 40 °C
	Storage	-20 °C to 60 °C
	Relative Humidity	
	Operation	0 % to 80 %
	Storage	0 % to 85 %

* Use only power supplies listed in the user instructions.

* Contents in this manual may be changed without prior notice due to upgrade of product functions.

Supported HDMI-DTV Mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
480p	31.47	60
	31.47	59.94
	31.5	60
720p	45	60
	44.96	59.94
1080i	33.75	60
	33.72	59.94
1080p	67.500	60
	67.432	59.939
	27	24
	26.97	23.976
	33.75	30
	33.71	29.97

- To provide the best picture quality, a 1920 x 1080 (1080p) resolution is recommended.

Supported RGB-PC/HDMI-PC Mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
640 x 350	31.468	70.09
720 x 400	31.469	70.08
640 x 480	31.469	59.94
800 x 600	37.879	60.31
1024 x 768	48.363	60.00
1152 x 864	54.348	60.053
1360 x 768	47.712	60.015
1280 x 1024	63.981	60.020
1920 x 1080	67.5	60

- If an invalid signal is input into the projector, it will not be displayed properly on the screen or a message such as **No Signal** or **Invalid Format** will be displayed.
- The projector supports the DDC1/2B type as the Plug and Play function (Auto-recognition of PC monitor).
- PC synchronization signal types supported: Separate type synchronization.
- 1920 x 1080 (1080p) is recommended as the best picture quality in the PC mode.

Component Port Connecting Information

Signal	Component
480i	0
480p	0
720p / 1080i	0
1080p	0 (60 Hz only)

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

SYMBOLS

	Refers to alternating current (AC).
	Refers to direct current (DC).
	Refers to class II equipment.
	Refers to stand-by.
	Refers to "ON" (power).
	Refers to dangerous voltage.

