

Package Contents

- HD Wire-Free Add-On Security Camera
- Camera Antenna*
- Rechargeable Power Pack*
- Power Pack Adapter*
- Mounting Kit*
- Quick Start Guide

* Per camera in multi-camera packs.

Installation Tips

The wire-free cameras use a Passive InfraRed (PIR) sensor to ensure video is only recorded when motion is detected. Follow the tips below for more accurate motion detection and to optimize battery life:


• **See images to the right for ideal setup.** It is

recommended to place your camera at least 6ft (2m) above the ground and angle it slightly downward toward the monitoring area, excluding any busy areas (e.g., sidewalks or roadways).

• Ensure the camera image is free of obstructions (i.e., tree branches).

• Position the camera no more than 20ft (6m) away from the area you wish to monitor.

- For best performance, position the camera so that objects of interest will move from side-to-side across the camera image, rather than moving towards or away from the camera.
- Install the camera within range of the wireless receiver (noted in the camera's specifications).
- This camera is weather resistant for outdoor use (IP65 rated). Installation in a sheltered location is recommended.
- Battery life will vary based on temperature, settings and number of events.

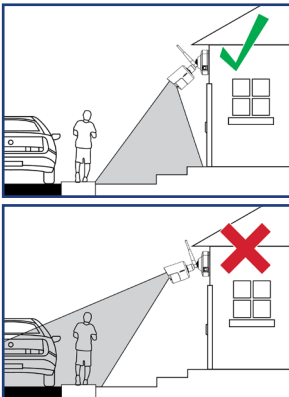


Safety Precautions

- Read this guide carefully and keep it for future reference.
- Follow all instructions for safe use of the product and handle with care.
- Use the camera within given temperature, humidity and voltage levels noted in the camera's specifications.
- Do not disassemble the camera.
- Do not point the camera directly towards the sun or a source of intense light.
- Use only the supplied regulated power supply provided with the product. Use of a non-regulated, non-conforming power supply can damage the product and void the warranty.
- Periodic cleaning may be required. Use a damp cloth only. Do not use any harsh, chemical-based cleaners.

Resources


Need Help?

Visit us online for up-to-date software and complete instruction manuals

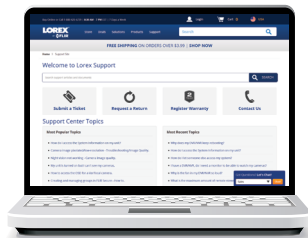

- 1 Visit lorextechnology.com
- 2 Search for the model number of your product
- 3 Click on your product in the search results
- 4 Click on the **Downloads** tab

Dimensions

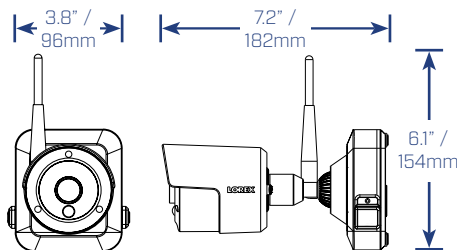

Disclaimers

- For a full list of compatible recorders, visit lorextechnology.com/compatibility
- Not intended for submersion in water. Installation in a sheltered location recommended.

Copyright © 2017 Lorex Corporation
As our products are subject to continuous improvement, Lorex reserves the right to modify product design, specifications and prices, without notice and without incurring any obligation. E&OE. All rights reserved.

LOREX®

HD Wire-Free Add-On Security Camera

Quick Start Guide

English Version 1.0



LWB3801AC1 / LWB3901AC1

www.lorextechnology.com

 
STEP 1: Initial Setup

Before you begin, you will need to prepare the power pack and wire-free camera.


NOTE: The power pack comes fully charged with no need for initial charging.

To prepare the camera:

1. Peel off the **PLEASE REMOVE** label covering the contacts on the power pack. Insert the charged power pack into the camera base. Push up until the power pack 'clicks' firmly into place.



2. Twist the adjustment ring near the camera base counterclockwise to loosen and reposition the camera as shown to the right. Connect the white antenna to the camera.

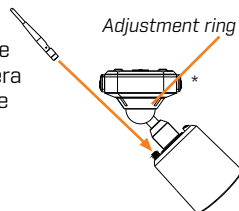

* Top view

STEP 2: Pairing the Camera


It is necessary to pair your camera to your wire-free system to stream live video on the Lorex Secure App.

IMPORTANT: To complete the pairing process using the Lorex Secure App, you must be logged in to the app with the admin account, and your DVR must be turned on.

To pair the camera through the Lorex Secure App:

1. From the home screen, tap the channel you would like to pair a camera to (open channels are marked with a + sign).


The Pairing Wizard opens.

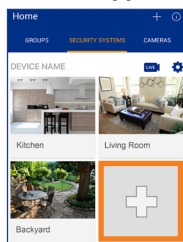

2. Tap **PAIR**. A timer for 30 seconds appears.

3. Press and hold the pair button (**P**) on the back of the camera for 3 seconds.

NOTE: A "pairing successful" message should appear on screen. If you do not see this message, repeat the steps above.

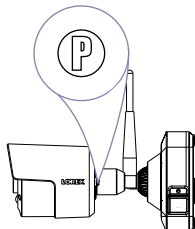

4. Enter a name for your camera and tap **Done**. The home screen opens and displays all connected cameras.

STEP 3: Installing the Camera


ATTENTION:

It is recommended to test the camera and power pack prior to selecting a permanent mounting location by inserting the power pack, pairing the camera to your wire-free system and streaming live video on the Lorex Secure App.

Follow the instructions below to secure the camera. It is recommended that you refer to the "Installation Tips" section to help you select a good mounting location.


IMPORTANT: Remove the power pack from the camera prior to installation by pushing both release buttons*, then pulling down on the power pack.

ATTENTION: Place your hand underneath the power pack when removing to prevent it from falling.

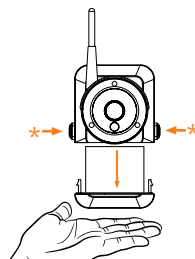


To install the camera:

1. Set the mounting bracket in the desired mounting position. Mark holes through the mounting bracket (shown as orange X's on the right).

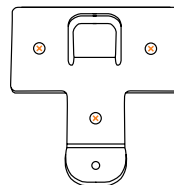

2. Drill holes where marked for the mounting screws.


3. Insert the included mounting screws (x3) into the 3 holes closest to the top of the mounting bracket. Make sure all screws are fastened tightly.

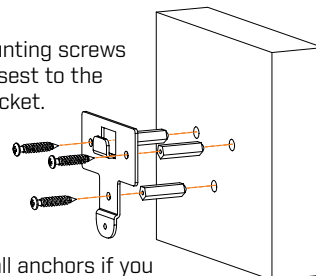

NOTES:


- Insert the included drywall anchors if you are mounting the camera onto drywall.
- The hole at the bottom of the mounting bracket will be used in step 5, once the camera is attached to the mounting plate.

4. Lower the camera base onto the mounting bracket so the tab in the mounting bracket locks into the slot in the camera base.

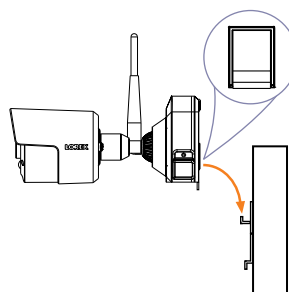


Installing the Camera (cont'd)


5. Insert the security screw through the fastener on the camera base to secure the camera to the mounting bracket. Tighten using the included Allen key.

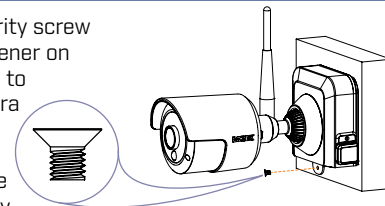

 6. Insert the included power pack into the bottom of the camera base. Push up until the power pack 'clicks' into place.




7. **OPTIONAL:** Lift up the rubber seal on the right-side release button. Insert the locking screw and tighten using the included Allen key to secure the power pack in place.

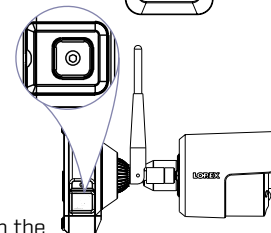

NOTE: You will need to loosen the locking screw to remove the power pack in the future.

8. Twist the adjustment ring near the camera base counterclockwise to loosen and reposition the camera. Hold the camera in the desired angle and tighten the adjustment ring completely to secure the camera in place.

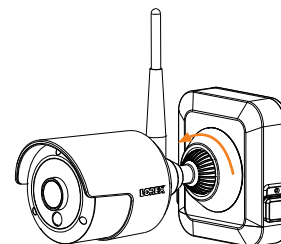

ATTENTION:

This camera includes an Auto Mechanical IR Cut Filter. When the camera changes between Day/Night viewing modes, an audible clicking noise may be heard from the camera. This clicking is normal, and indicates that the camera filter is working.

Charging the Power Pack

Use the included power adapter to charge the power pack. Connect the power adapter to the micro USB port on the power pack. The LED indicator on the power pack shows you the charging status (must be plugged in).

Power Pack	Charge Time	LED Color	Meaning
2-cell	Approx. 4 hours	Green	Fully charged
4-cell	Approx. 8 hours	Red	Currently charging

