


IMPORTANT SAFEGUARDS

WARNING: To guard against injury, basic safety precautions should be observed, including the following.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

DANGER: To avoid possible electric shock, special care should be taken in the use of aquarium equipment. For each of the following situations, do not attempt repairs yourself. Return the appliance to an authorized service facility for service or discard the appliance.

1. A. If the appliance falls into the water, DON'T reach for it. First unplug it and then retrieve it.
If electrical components of the appliance get wet, unplug the appliance immediately.
- B. If the appliance shows any sign of abnormal water leakage, immediately unplug from the power source.
- C. Carefully examine the appliance after installation. It should not be plugged in if there is water on parts not intended to be wet.
- D. Do not operate any appliance if it has a damaged cord or plug, or if it is malfunctioning or if it is dropped or damaged in any manner.
- E. To avoid the possibility of the appliance plug or receptacle getting wet, position aquarium stand and tank to one side of a wall mounted receptacle to prevent water from dripping onto the receptacle or plug. A "drip loop," shown in the figure at right, should be arranged by the user for each cord connecting an aquarium appliance to a receptacle. The "drip loop" is that part of the cord below the level of the receptacle or the connector; if an extension cord is used, to prevent water from traveling along the cord and coming in contact with the receptacle. If the plug or receptacle does get wet, DON'T unplug the cord. Disconnect the fuse or circuit breaker that supplies power to the appliance. Then unplug and examine for presence of water in the receptacle.

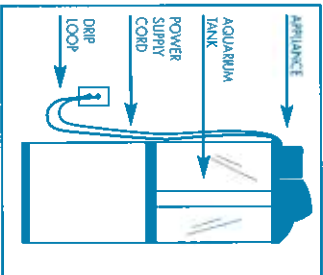

2. Close supervision is necessary when any appliance is used by or near children.
3. To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, etc.
4. Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.
5. Do not use an appliance for other than intended use. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.
6. Do not install or store the appliance where it will be exposed to the weather or to temperatures below freezing.
7. Make sure an appliance mounted on a tank is securely installed before operating it.
8. Read and observe all the important notices on the appliance.
9. If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
10. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.


CAUTION: This appliance has multiple power supply cords. Disconnect all power supply cords before moving or servicing this appliance.

SAVE THESE INSTRUCTIONS

Caution: Use **ONLY** tubular incandescent lamp rated 15 Watts max. or compact fluorescent lamp rated 11 Watts max.

Parts Diagram & Identification

Eclipse Filter Cartridge
(RITE-SIZE Z CARTRIDGE)
available at your local Marineland dealer

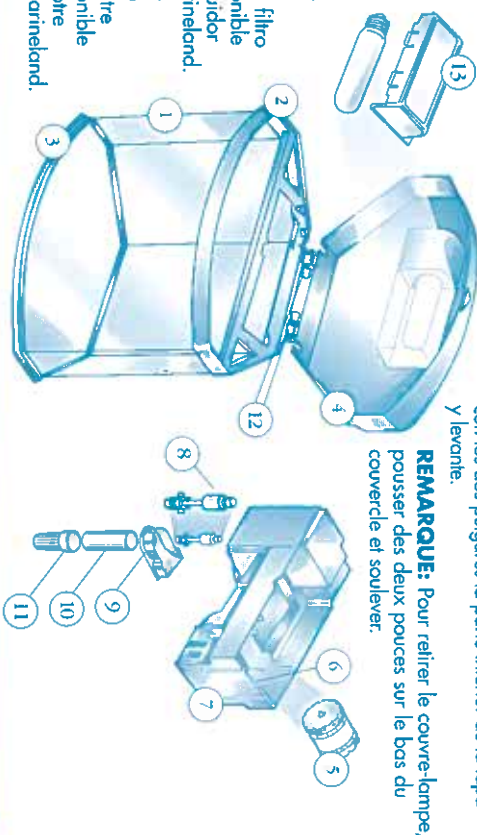

NOTE: To remove Light Cover push with two thumbs on bottom of cover and lift up.

NOTA: Para retirar la tapa de la luz, presione con los dos pulgares la parte inferior de la tapa y levante.

REMARQUE: Pour retirer le couvercle-lampe, pousser des deux pouces sur le bas du couvercle et soulever.

Replacement Parts List

KEY	ITEM DESCRIPTION	ITEM NO.
1	Eclipse CORNER 5 Aquarium	PR3600
2	Aquarium Frame	PR3601
3	Aquarium Base	PR3602
4	Aquarium Hood	PR3610
5	BIO-Wheel	PR1932B
6	BIO-Wheel Bearings (Pkg.-2)	PR1910B
7	Pump/Filtration Assembly	PR3340
8	Magnetic Impeller Assembly	PR3342
9	Impeller Housing	PR3341
10	Intake Tube	PR3343
11	Intake Strainer	PR1705
12	Hinge Pins	ML90537
13	Light Lens Cover	PR3612

Marineland Customer Service:

You can order replacement parts and find many solutions to common problems on our web site at www.marineland.com or call Marineland at (800) 322-1266.