 


Recessed Full Hood Model #	Fits Marineland/ Tetra Frame Size	Approximate Tank Size in Gallons	Replacement Clear Back Strip
20" RFFH-F	20 x 10	10, 16	91201 - Small
24" RFFH-F	24 x 12 (Use 2 for 48 x 13)	15, 20H (Use 2 for 40E, 55, 60)	91202 - Medium
30" RFFH-F	30 x 12	20L, 29, 37	91202 - Medium
36" RFFH-F	36 x 13	30	91203 - Large
48" RFFH-F	48 x 13	40E, 55, 60	91202 - Medium (2)



FLUORESCENT
RECESSED
FULL HOODS

Sizes: 20", 24", 30", 36", 48"

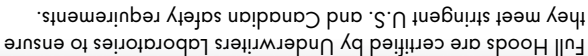

IMPORTANT SAFE GUARDS

Always unplug all devices before reaching into the aquarium water!


WARNING - TO GUARD AGAINST INJURY, BASIC SAFETY PRECAUTIONS SHOULD BE OBSERVED, INCLUDING THE FOLLOWING:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

DANGER - TO AVOID POSSIBLE ELECTRICAL SHOCK:


Special care should be taken since water is employed in the use of aquarium equipment. For each of the following situations, DO NOT ATTEMPT REPAIRS YOURSELF. Return the appliance to an authorized service facility for service, or discard the product.

1. A. If the appliance falls into water, DON'T reach for it! First, unplug it and then retrieve it. If electrical components of the appliance get wet, unplug the appliance immediately.
- B. Carefully examine the appliance after installation. It should not be plugged in if there is water on parts not intended to be wet.
- C. Unplug the appliance before installing, repositioning, cleaning or removing the appliance.
- D. Do not operate any appliance if it has a damaged cord or plug, or if it is malfunctioning, or if it is dropped or damaged in any manner.
- E. To avoid the possibility of the appliance plug or receptacle getting wet, position the aquarium stand and tank to one side of a wall mounted receptacle to prevent water from dripping onto the receptacle or plug. A "drip loop," shown in the Figure at right, should be arranged by the user for each cord connecting an aquarium appliance to the receptacle.

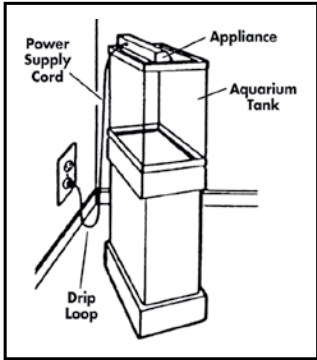

The “drip loop” is that part of the cord below the level of the receptacle or the connector if an extension cord is used, to prevent water from traveling along the cord from coming in contact with the receptacle. If the plug or receptacle does get wet, DON'T unplug the cord. Disconnect the fuse or circuit breaker that supplies power to the appliance. Then unplug and examine for presence of water in receptacle.

2. Close supervision is necessary when any appliance is used by or near children.
3. To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, etc.
4. Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.

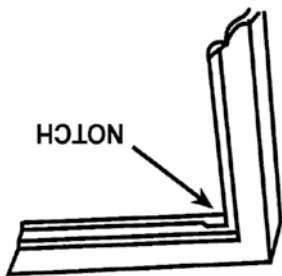

- Instructions**
- DO NOT use an appliance for other than its intended use. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.
- DO NOT install or store the appliance where it will be exposed to the weather or temperatures below freezing.
- Make sure an appliance mounted on a tank is securely installed before operating it. Read and observe all the important notices on the appliance.
- If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
- Do not use or mount this appliance in such a way that the top vents are restricted or blocked. These vents are necessary to ensure safe operating temperature.
- If appliance has a polarized plug (one blade is wider than the other), as a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

Instructions

5. DO NOT use an appliance for other than its intended use. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.
6. DO NOT install or store the appliance where it will be exposed to the weather or temperatures below freezing.
7. Make sure an appliance mounted on a tank is securely installed before operating it.
8. Read and observe all the important notices on the appliance.
9. If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
10. Do not use or mount this appliance in such a way that the top vents are restricted or blocked. These vents are necessary to ensure safe operating temperature.
11. If appliance has a polarized plug (one blade is wider than the other), as a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

FOR FRESHWATER USE ONLY

SAVE THESE INSTRUCTIONS



Project #:	2062	SU Part # / REV:	28162 A
Date/Initials:	09/26/16 tlc	Part #:	18-12547
Job Originator:	Amlin Kotei	UPC#:	none
File Name:	18-12547_MFRFH-Manual_09-16-EnFr.ai	EPA#:	none
		Printer/Vendor:	Lewisburg/Pratt

Spectrum's Graphics Department has made every effort to ensure that this artwork has been completed accurately. We strongly advise the Supplier to proof artwork carefully upon receipt. This mechanical artwork was designed according to printing specifications provided by the Supplier. In accordance with Spectrum's Graphics procedures, modifications to any part of this mechanical is prohibited without the expressed authorization of the Spectrum Graphics Department.

BLACK

Yellow Jacket

Revision #:

5

Review Level:
Yellow

07/08/16