



COMMUTE IN STYLE

READ THE MANUAL CAREFULLY BEFORE YOU RIDE

⚠️ YOUR BOARD MAY LOSE POWER AND BRAKES

This can occur due to radio interference, a malfunctioning battery, downhill overcharging of the battery, or other factors. Only ride your Meepo board at speeds and on hills where you don't have to depend on brakes and acceleration.

⚠️ BRAKING DOWNHILL WITH A FULL BATTERY WILL CAUSE THE BOARD TO SHUT DOWN

Regenerative braking may overcharge the battery. To prevent this from happening, the remote will warn you by beeping, and disable your braking power. Safely come to a stop before this happens, and ride on flat surfaces or uphill to drain the battery before attempting to ride downhill again.

⚠️ WARNING! IN EXPERT AND PRO MODE THE THROTTLE IS EXTREMELY SENSITIVE

Which means the board can accelerate aggressively, causing you to fall off. Try to start by moving slowly in these modes to ensure safety.

⚠️ HILLS AND HIGH SPEEDS CAN BE VERY DANGEROUS

Crashes in these conditions may cause serious injury. Be extra careful when pushing the limits of the board, even if you're an experienced rider.

⚠️ CARS AND OTHER VEHICLES CAN INJURE YOU

 
Always be aware of your surroundings when riding in the presence of vehicles. Ride cautiously and assume the vehicles can't see you. Remember that your board may lose power and brakes at any moment. Whenever you are riding, please be aware of the laws that govern the use of your board on public roads, bike paths, sidewalks, or other places that you may ride.

⚠️ ALWAYS WEAR A HELMET


Additional safety gear, like gloves, pads, and long sleeves, are highly recommended.

MEEPO FLOW 1


Press the power button once start the board.

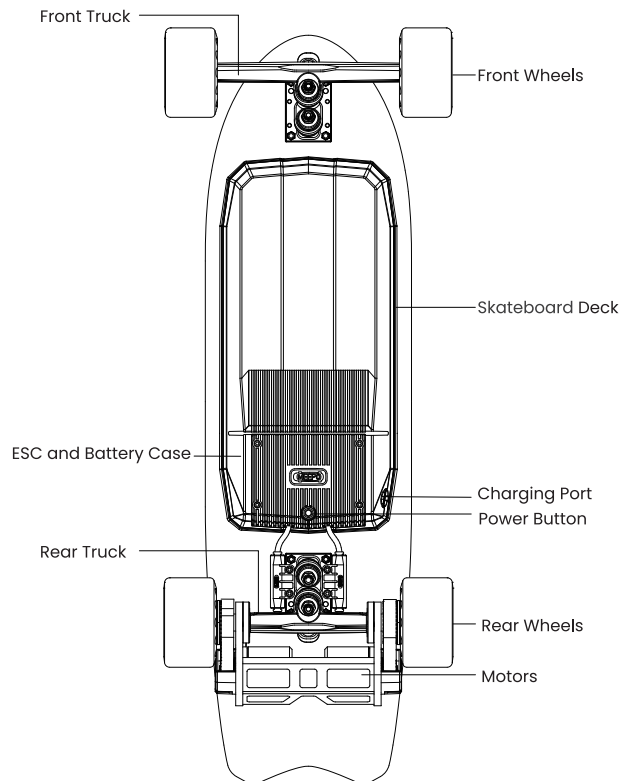


1: How to use N5s remote?

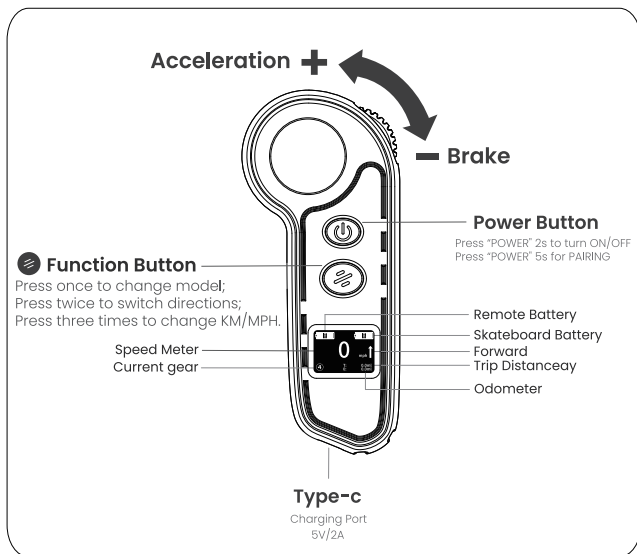 

2: How to preview the current setting?

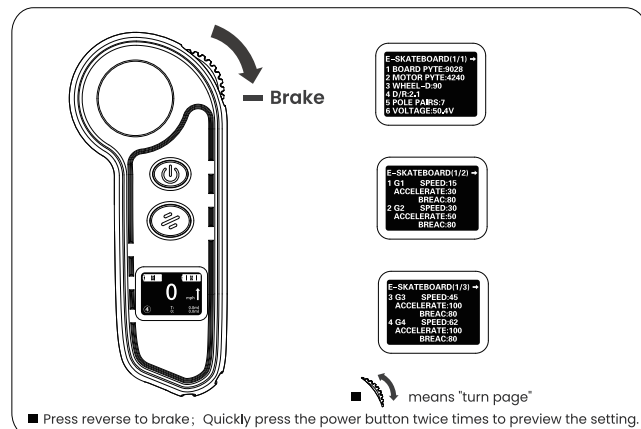 


3: How to customize parameter settings?

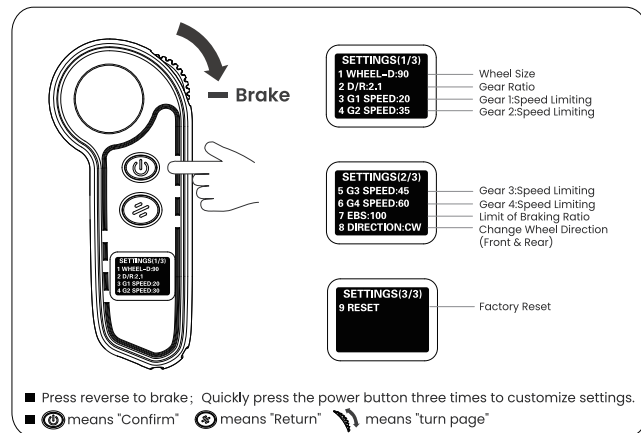 


Pairing The Remote And Board

 
3

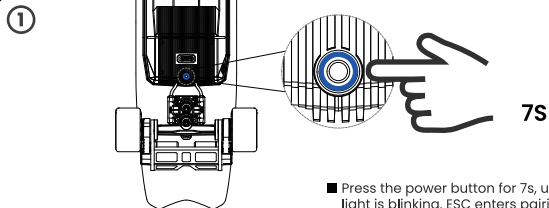

 ■ Press the power button for 7s, until the power light is blinking. ESC enters pairing mode.

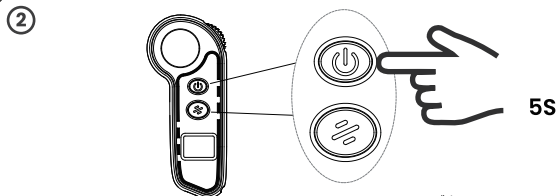

 
■ Press "Power" for 5S to enter pairing mode.

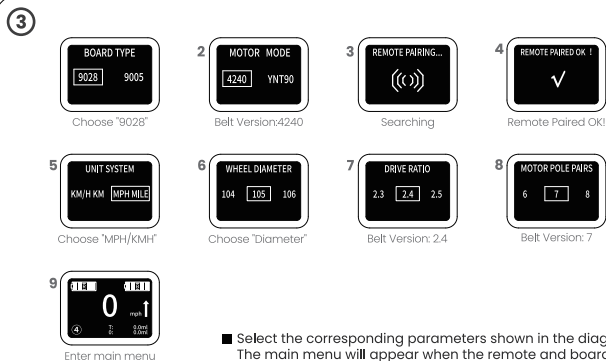

■ Select the corresponding parameters shown in the diagram. The main menu will appear when the remote and board are successfully paired.

Check the Board Battery Life on the Remote

 
4

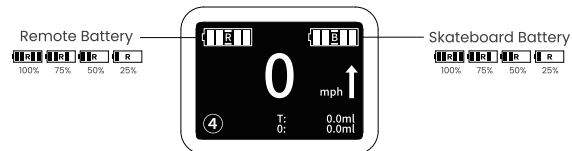

Charge the Remote

5

 
The remote takes several hours to charge. If the board and remote are charging at the same time, the remote should finish charging before the board.



Charge the Board

6

 Warning: Never leave your board unattended while charging.

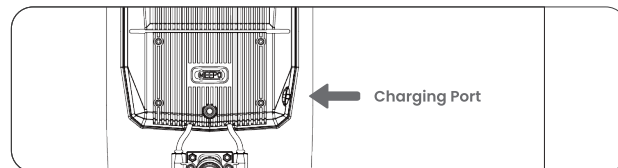

Attention: ■ Make sure the remote and skateboard are both turned off.

 
■ During pairing, roll the scroll wheel to choose parameters, press "Power" to confirm.

Riding Basics


7

ARE YOU A “REGULAR” OR “GOOFY” FOOTED RIDER?

Typically, if you kick a ball with your right foot, you are a regular footed rider. However, this is not always the case! Try both stances to see what feels best. If you don't know which to choose, one advantage of riding goofy footed is that you have a better view of the traffic.

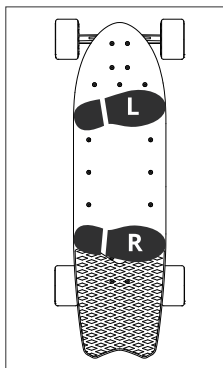

Regular

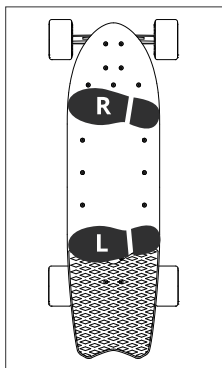 

Goofy

STANCE

Your Meepo board has a lot of power. Follow these tips to ensure a safe riding experience:

- Move the throttle wheel in small increments.
- Keep a wide stance on the board.
- Keep a low center of gravity.
- Lean forward when accelerating.
- Lean backward when braking.



Change Ride Mode

8

The board is set in beginner mode by default. Before switching modes, make sure you have mastered the beginner mode.

- 1 Limited acceleration.(7mph)
- 2 Moderate acceleration.(15mph)
- 3 High acceleration.(25mph)
- 4 Max acceleration.(29mph)

WARNING: The throttle wheel is much more sensitive in HI and PRO modes. To avoid getting thrown off from the board, follow these tips:

- Start by moving forward slowly.
- Move the throttle wheel in small increments.
- Keep a wide stance on the board.
- Keep a low center of gravity.
- Lean forward when accelerating.
- Lean backward when braking.



It usually takes the remote several hours to get fully charged. If the board and remote are charging at the same time, the remote will be charged first.

CYCLE THROUGH SPEED MODES:



Press the **function-button** once to change speed modes.

 
Get Ready to Ride

9

- Always wear a helmet.
- Find a flat, paved area with no obstacles for your first ride.
- Read and understand the entire manual.
- For more details, check out our website: www.meepoboard.com.
- Other protective equipment is highly recommended.



⚠️ AVOID THESE OBJECTS AS THEY CAN MAKE YOU LOSE CONTROL OR CRASH:

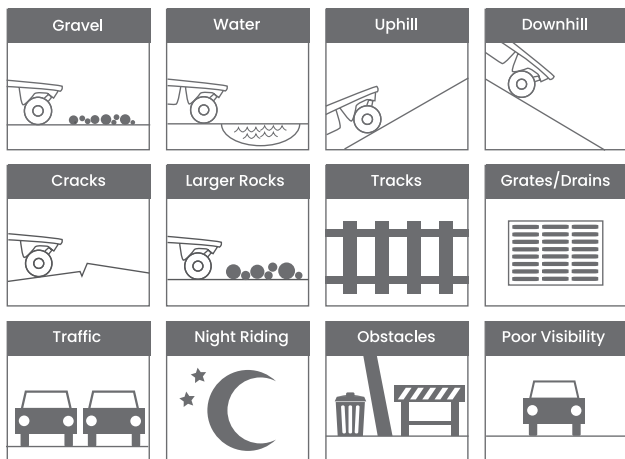

Replace the Battery Pack

10

- To insert a new battery pack, align the grooves on both ends of the connector (board & battery pack).
- Insert, connect, and adjust the two ends of the connector together. Make sure to tighten the connector to make a good seal.
- Ensure the connector lays flat within the accessory wire and the groove of the board.
- Replace and tighten the bolts with the hex wrench, and put the grip tape back on.

More Information Online

11

This manual is a quick start guide intended for someone with little experience in riding electric skateboards. If you want to learn more on how to start riding, superior riding skills, and solutions for riding problems, please visit our website: www.meepoboard.com or send us a mail to info@meepoboard.com.

GETTING STARTED

- How to stand on the board
- How to turn
- How to find a good spot to practice

ADVANCED TECHNIQUES

- How to footbrake
- How to ride uphill and downhill safely
- What to look for when riding through traffic

MAINTENANCE

- Pre-ride inspection
- Routine maintenance

⚠ WARNING! ⚠

WARNING:

This equipment has been tested and complies with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and radiates radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

WARNING:

Whenever riding a electric skateboard, make safety your top priority. Loss of control, collisions, and falls may cause serious injury to you.

WARNING:

Always wear a helmet when riding. Never ride in the rain, or on wet, slippery or uneven surfaces with steep hills, traffic, cracks, train tracks, gravel, rocks or any obstacles that could cause a loss of traction. Avoid night riding in areas with poor visibility or narrow spaces.



WARNING: AVOID WATER!

Riding in wet conditions or through puddles can damage the board's electronics and cause the board to lose power or stop suddenly. Damage to the board due to water exposure is not covered under the warranty.



WARNING: PINCH POINTS

Keep fingers, hair, and clothing away from motors, wheels, and all moving parts.



WARNING: RISK OF ELECTRIC SHOCK!

Do not open or tamper the case or battery with cleaning products, this will void the board's warranty.

Please ride responsibly and respect those around you. How you ride will determine how people view this new mode of transportation.

If this equipment does radiate harmful interference to radio or television reception, fix the problem by trying one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a different circuit from which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Prolonged exposure to sunlight may discolor or weaken the plastic cases, as they are not UV Rated.

PRODUCT SPECIFICATIONS

- Meepo FLOW Skateboard: Rated Input: DC 50.4V 4.5A
N5S Remote: Rated Input: 5Vdc, 500-1000mA Operating
Temperature: 0-40°C, 10-90% RH
- The board specifications were obtained under perfect conditions. Each customer will have different conditions that will make the eboard performance fluctuate from the data we present.

BATTERY SAFETY AND HANDLING INFORMATION

CAUTION

Risk of explosion if battery is replaced by an incorrect type.
Dispose of used batteries according to instructions.

CAUTION

Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage to the Meepo Hurricane skateboard and Meepo M5S remote or other property.

IMPORTANT SAFETY AND HANDLING INFORMATION

Do not attempt to disassemble the product without consulting Meepo. Should your unit need service, contact our Customer Service by sending an email to info@meepoboard.com.



Changes or modifications to the skateboard unapproved by Meepo may void the user's warranty.

This product is intended to be equipped only with Meepo Hurricane batteries.

Do not drop or throw the battery.

Keep the battery away from kids.

Never expose this product or the battery to any liquids.

Never throw the battery into a fire, it could cause the battery to explode.

Never bring the connector terminals in contact with another metal object, it will short-circuit the battery. Short-circuit could cause personal injury, fires or damage to the battery.

Your device contains an internal rechargeable lithium-ion battery which may present a risk of fire or chemical burn if mistreated. Do not charge or use the unit in a car or places where the temperature surpasses 40°C.



BATTERY CHARGING INFORMATION

The charger supplied with the electric skateboard should be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, the skateboard must not be charged until the charger has been repaired or replaced.

CAUTION

Unplug the charger and disconnect it from the skateboard when not in use.

The charger is designed for indoor use only. Do not expose the charger to liquid, moisture or extreme humidity. Do not charge Meepo skateboard or Meepo remote outdoors or in the rain.

WARNING

Power cord is used as a disconnection device. To fully de-energize equipment for service, disconnect the charger power cord.

Stop charging the skateboard and/or remote if charging isn't completed within the specified time.

Stop charging the skateboard and/or remote if the batteries become abnormally hot, show signs of odor, discoloration, deformation, or if abnormal conditions are detected during use, charging, or storage.

Do not charge the skateboard and/or remote if the battery enclosure becomes cracked, swollen, or shows any other signs of damage. Discontinue use immediately and promptly dispose of unit.

PRODUCT AND BATTERY DISPOSAL INFORMATION:

Your device should not be placed in municipal waste. Please check local regulations for proper disposal of electronic products.

If this unit shows any type of damage, such as bulging, swelling, or malformation, discontinue use and immediately contact Customer Service by sending a mail to info@meepoboard.com.

Dispose of used batteries in accordance with the prevailing community regulations that apply to the disposal of batteries.

Never dispose of used batteries with other ordinary solid wastes.

Batteries contain toxic substances.

WARRANTY AND MAINTENANCE

LIMITED WARRANTY

This board is covered by a 180 day manufacturer's warranty that covers defects in workmanship and material. This does not cover damage caused by abuse, misuse, negligence, accidents, or riding in water.

If the product has a manufacturing defect within 180 days of ship date, contact info@meepoboard.com

Each board was tested for at least 20 miles before shipping it out. So it is normal to spot some dirt or dust on the board, and certain mileage on the remote.

FOR ALL RETURN AND WARRANTY SHIPPING:

Please keep your shipping box. The warranty does not include damage from return shipping with lack of package material.

For any concerns regarding your board, please contact Meepo's customer service by going to www.meepoboard.com or by sending an email to: info@meepoboard.com.

MAINTENANCE AFTER WET SURFACES

If you accidentally ride in the rain or on wet surfaces, wipe off all the water on the surface of your board, especially the charging port. Do not charge your board until it is completely dry. Then, run the motors so that the wheels are spinning for 10 minutes in order to dry the inside of the motors and avoid rust.

MAINTENANCE FOR BOARD WHEN NOT BEING USED

Store your board in a dry area. If you are not going to ride your board for a long time, fully charge your board at least once a month to unrecoverable prevent irreversible battery damage.

MEEPO ELECTRIC SKATEBOARD COMPANY

Company address

Room 2015, Trend Centre, 29-31 Cheung Lee Street, Chai Wan, Hong Kong

Online Store

www.meepoboard.com

Customer Service Email Address

info@meepoboard.com



Online Store



Customer Service