


MelodySusie DR-2040 Rechargeable Nail Drill User Manual

Thank you for choosing MelodySusie! Please read this user guide carefully and keep it in an accessible location so you may refer to it later.

How to Use

- Step 1:** Choose one grinding drill bit, release the handpiece, insert the drill bit into the drill and lock it in place.
- Step 2:** Rotate the ON/OFF button to turn on the device.
- Step 3:** Rotate the speed control knob to accelerate or decelerate the rotation speed.
- Step 4:** Change the rotation direction of the grinding drill bit on the F/R button if needed.
- Step 5:** After the polishing is finished, please rotate the central barrel and take out the drill bit. The Handpiece fixture could be used to place the handpiece when not in use.

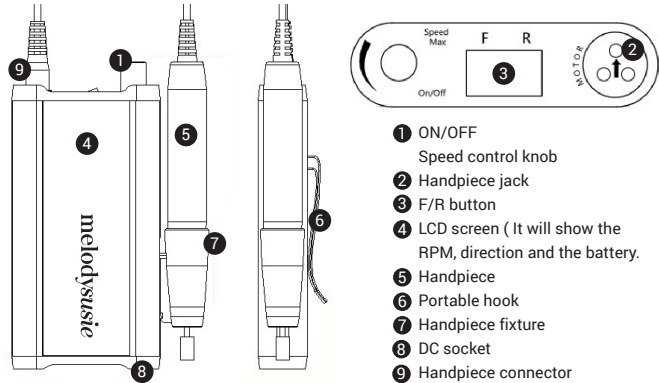

How to Replace Drill Bit

1. Turn central barrel from  to  until hearing a "click" sound to release drill bit. Put the desired bit into the handpiece.
2. Turn central barrel from  to  until hearing a "click" sound to lock drill bit in place.



*Do not move central barrel during operation.

Charging

1. Take out the adapter and connect it with the DC Socket.
2. Connect the power supply with the adapter and insert the main plug into a wall socket.
3. The display will show green when the drill is fully charged.

Problem and terms of settlement

Misoperation	Causing problems	Terms of settlement
Changing the nail drill bit when the power is on	1. Motor burns out 2. Bearing damages (Loud Noise)	Turn off the power when changing the nail drill bit
The power is on when not in use		Turn off the power when not in use
Overcharge	1. Battery lifespan shortens	Not exceed the specified charging time
Long time, Large load work	1. Motor burns out 2. Device lifespan shortens 3. Bearing damages (Loud Noise) 4. Handpiece damages	The continuous working time should not be too long when the working condition is in heavy load. When the device is overheating, it should be stopped immediately to make it return to normal temperature.
Insert into a mismatched power supply	1. Motor burns out	According to the device voltage requirements, insert the matching power supply
Put the power cord at random/ Pull the power cord/ Use the device when charging	1. Battery damages and device lifespan shortens 2. Power cord brokes 3. Poor connection 4. Easy to cause short circuit	Do not pull the power cord/Do not use the device when charging
Replace the original charger randomly	1. Device charging unsuccessfully 2. Battery damages 3. Easy to cause short circuit	Use the original specification charger
Dust into device	1. Bearing damages (Loud Noise) 2. Motor gets hot 3. Rotational speed slows down 4. The potentiometer speed regulation fails 5. Handpiece damages	Clean dust, add the dust-proof protection of the dustproof hood

Misoperation	Causing problems	Terms of settlement
Device drops to the ground or by other impacts	1. The ON/OFF button doesn't work 2. The potentiometer speed regulation fails 3. F/R button doesn't work 4. Handpiece damages	Avoid device drops or by other impacts (If the handpiece was damaged, it can be purchased separately.)
Insert the nail drill bit into the device incorrectly /Rotate the central barrel into the place incorrectly/Take the drill bit out when the central barrel is locked	1. Drill bit falls out 2. High vibration 3. Drill bit stuck 4. The Handpiece stuck and cannot be turned on 5. Handpiece damages	Insert the nail drill bit into the device correctly/If the drill bit stuck, please release the handpiece and try to take it out it hard/Rotate the central barrel correctly
Replace drill bit when handpiece is not completely stopped	1. The handpiece stuck and cannot be turned on 2. Handpiece damages	Do not replace drill bit when handpiece is not completely stopped
The size of drill bit is not suitable	Can not insert the drill bit into the device	Use standard drill bit
Water into the device/Operate in wet or moist conditions/Use a wet cloth to clean the device	1. Motor burns out 2. Device lifespan shortens	Do not operate in wet or moist conditions/Only a dry cloth is allowed for cleaning

Important Safety Information

*Please be sure to read the safety instruction as follow to avoid potential hazards that could result in personal injuries or damage to the device.

1. The Battery needs to be charged fully before first use to ensure optimal performance.
2. Make sure your outlet supplies correct power voltage to avoid damage to the device. It is forbidden to draw out the connecting wires during use, and the power switch needs to be turned off after use.
3. Please use standard nail drill bit. Don't use crooked or damaged nail drill bit to prevent the device abnormal vibration and voice.
4. Please stop to use once the unusual movement and noise happens.
5. Please do not touch any rotating part while the device is working.
6. Please charge the device in well ventilated condition with 0℃ ~ 40℃. Do not keep the device in a place which is about or more than 50℃ (in a metal box, car or other place in high temperature).
7. Please keep the handpiece dry and keep it away from the oil and grease.
8. Please do not charge the device close to flammable or explosive materials.
9. When charging the device, please do not cover it with cloth or other things. Please do not use the device when the connecting wires broke and do not touch the plug with the wet hand to prevent electric leakage and shock or fire.
10. Do not disassemble the device. Doing so could be dangerous and constitutes voiding warranty conditions. If you require any technical support, contact us at support@melodysusie.com
11. If the device is damaged, it should be repaired or replaced by MelodySusie or another authorized professional.
12. Children under 18 years of age should not use this device without parental consent and supervision.
13. If you need to remove the gel polish of natural nails, try to use the nail polish remover pads to avoid damage to the nail bed with improper operation.

The operator shall be responsible for any consequences including product damage or accidents if not strictly complies with the instructions. If you require any technical support, contact us at support@melodysusie.com
SAVE THESE INSTRUCTIONS

Specifications

Input voltage range: AC100-240V/50-60Hz 0.6A
Output voltage: 24.0V 1.0A
Email: support@melodysusie.com
Website: www.melodysusie.com

Warranty and Customer Service

MelodySusie offers a 6-month limited warranty on quality-related issues. Please register on our website to extend your warranty and to view this manual in other languages.

