



★ sureshot
slim PRO



USER MANUAL

VERSION 1.4

 
mgigolf.com

GETTING STARTED

Congratulations on your purchase of the MGI Sureshot SlimPRO. This owner's guide will help you achieve optimal performance by explaining the MGI Sureshot SlimPRO's features and operation, along with how to care for your laser. To ensure the best performance and longevity, please read these instructions before using your MGI Sureshot SlimPRO.

The MGI Sureshot SlimPRO is packed with features such as:

- i** – Intelligent Pin seeking technology. This advanced mode uses uniquely developed software that ensures the closest object is chosen eliminating objects beyond the flag.
- P** – The pulse feature provides a short vibration when the target is acquired.
- S** – Slope mode automatically adjusts the measured distance based on the incline or decline to the object using the built-in inclinometer, giving a more accurate measurement.

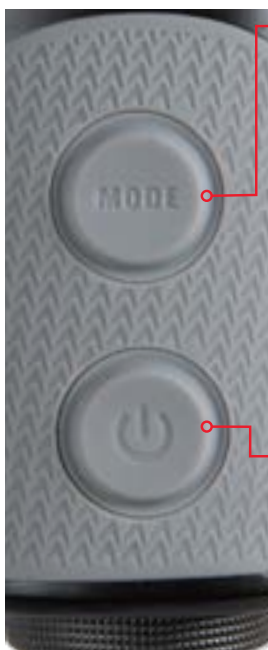

MODE BUTTON

1. Press and hold for at least 12 seconds to toggle between Metres/Yards

Quick press to cycle between:

- Default Mode
 - Scan Mode
 - Pin Loc Mode
- Double press:
- Slope Function

POWER BUTTON

1. Press once to turn on LCD display
2. Press again to measure distance



CHARGING/USB PORT



ADJUSTABLE EYEPIECE



EXTERNAL LIGHT INDICATOR

mgigolf.com

CONTENTS OF BOX

- **MGI Sureshot SlimPRO** Laser
- Protective Pouch
- Cleaning Cloth
- Carabiner
- Quick Start Guide
- USB-A to USB-C Charging Cable

To begin using your **MGI Sureshot SlimPRO**, please ensure your device is fully charged using the USB cable provided.

STARTING YOUR MGI Sureshot SlimPRO

The **MGI Sureshot SlimPRO** has two buttons: the Power button and the Mode button. To turn on your device, press the Power button for one second, the external case blue light will illuminate indicating the laser is ready to use.

BATTERY CHARGING

The MGI Sureshot SlimPRO features a built-in rechargeable lithium battery. To charge the device, plug the USB-C end of the cable supplied into the device's charging port and the USB-A into a PC, or wall adaptor.

When charging, the external indicator light will flash red. When fully charged the light will turn to a solid blue. Once fully charged, remove the MGI Sureshot SlimPRO from charge.

ADJUSTING THE FOCUS

The **MGI Sureshot SlimPRO** is designed with an adjustable eyepiece. By adjusting the focus, people with far sighted or near sighted vision can use the **MGI Sureshot SlimPRO** without glasses. Looking through the eyepiece, turn the adjustable eyepiece a quarter turn left or right until the view is focused.



mgigolf.com

 
CONNECTING SURESHOT SLIMPRO TO THE AI NAVIGATOR HALO (BLUETOOTH PAIRING)

1. On the Ai Navigator Halo screen, tap the 9 dots icon in the bottom-left corner.
2. Go to Settings.
3. Tap Sureshot.
4. Ensure Sureshot is turned on.
5. Turn on your Sureshot SlimPRO Laser Rangefinder by pressing the power button on top.
6. A pairing message will appear on the trolley screen.
7. When prompted, enter the code: **123456**.
8. The Sureshot SlimPRO will now automatically connect to the Ai Navigator Halo via Bluetooth.

Important: This Bluetooth pairing feature applies to the Ai Navigator Halo only and should not be referenced as compatible with any other MGI Product.

Connection Indicator (SlimPRO):

When the SlimPRO is successfully connected via Bluetooth, a Bluetooth symbol will be visible in the bottom-right corner of the display when looking through the lens.

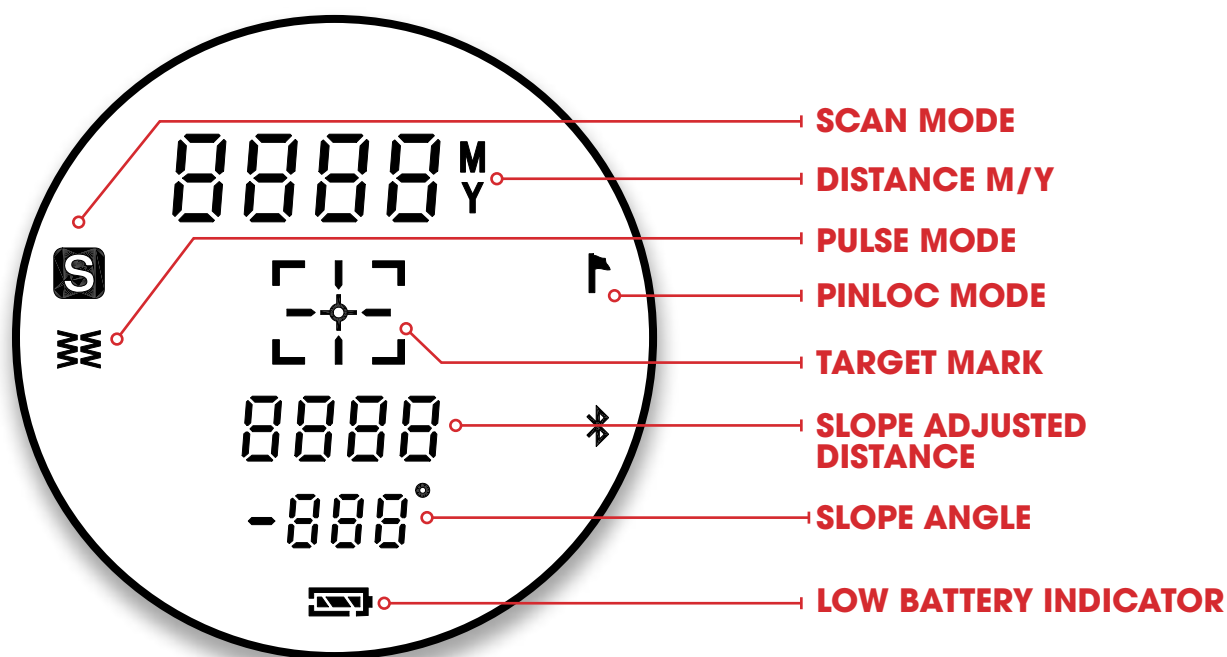


OPERATING INSTRUCTIONS


Hold the **MGI Sureshot SlimPRO** to your Ai Navigator Halo and depress the Power button once to turn on. The external case blue light will illuminate. Line the target up so it appears inside the rectangular box, then depress the Power button once. The distance from you to the target will be displayed on the screen instantly.

mgigolf.com

SLOPE MODE (EXTERNAL CASE RED LIGHT ACTIVE)

  To turn on Slope mode, double press the Mode button on the laser. The external case light will change from Blue to Red. Red = Slope active. You will now then see "----" in the field of view below the Target Mark, informing you that you are in the Slope mode. To operate, use the laser as normal. Press the red Power button to turn on the laser and press again to measure your distance. You will now see the actual distance (top centre measurement), a compensated distance to your target (bottom measurement) and the angle of incline or decline (below Slope Measurement). To turn off Slope mode, double press the Mode button on the laser again.

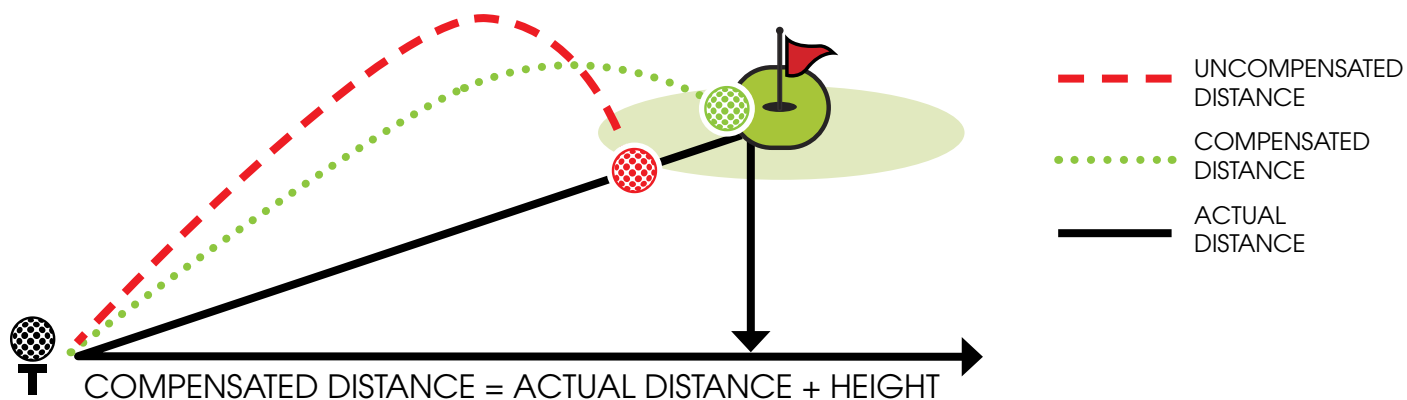

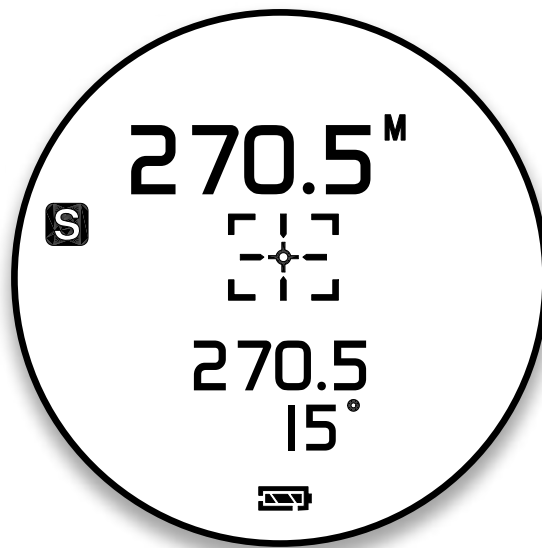

PULSE MODE ()

The pulse feature provides a short vibration when the target is acquired through the rangefinder, ensuring you have correctly measured the distance to your chosen target. Activation - While in PinLoc mode () press and hold Mode button for 5+ seconds to turn ON/OFF.

PRIORITY LOC

 
The **MGI Sureshot SlimPRO** intuitively locks onto the nearest target, which may be the smallest among multiple objects in the background giving you confidence you have the correct distance every time. Priority Loc intelligence delivers the first and closest target by scanning the area and displaying only the nearest distance. This feature automatically works by pressing the Power button once.

PINLOC MODE ()

PINLOC technology ensures even the smallest target is locked on from the longest possible distance. This is important for delivering pinpoint accuracy. This feature is automatically delivered when the Power Button is depressed quickly once.

SCAN MODE ()

The Scan feature displays a continuous update of distances to various targets across a panoramic area. To use the Scan feature, press the Power Button once, crosshairs will appear on screen. Pan across the target area. Once complete, press the Power Button again and the crosshairs will disappear and the laser will stop scanning.

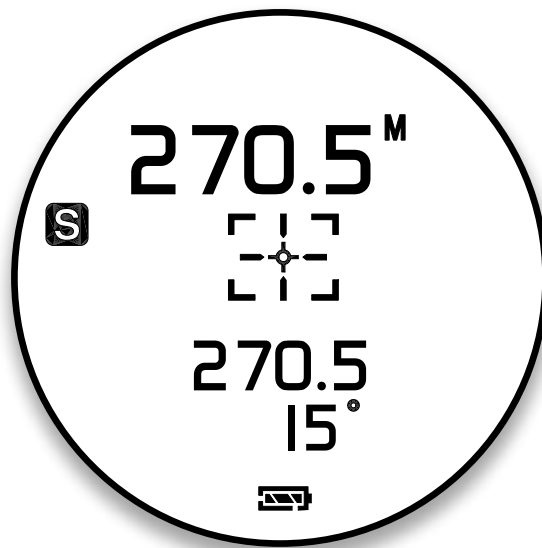

DISPLAY LOC

Each time the Power button is pressed, the distance is displayed on screen for 15 seconds, after which the screen automatically switches off.

UNIT MEASUREMENT CHANGE

The **MGI Sureshot SlimPRO** can be used to measure distances in metres or yards. Press & hold the Mode button for 10 seconds to change the unit of measurement displayed.

AUTOMATIC POWER-SAVE

The **MGI Sureshot SlimPRO** will automatically switch off after 15 seconds of inactivity.

BATTERY INDICATOR

A battery level warning will appear when the battery is running low. Please recharge the unit with the usb lead provided as soon as possible.

ACCURACY

The **MGI Sureshot SlimPRO** delivers incredible accuracy at +1 or -1 metre/yard. The range is dependent on the reflectivity of the target. The color, surface, shape and size of the target will affect reflectivity and the range. For example, red is highly reflective and will give longer range as opposed to black which is the least reflective color. A shiny surface will also provide more range than a dull one and likewise, a small target is more difficult to range than a large target. The angle to which you set your target also affects accuracy. A 90 degree angle will give you good range while a steep angle will provide limited range. Please note lighting, rain and fog can also affect accuracy levels, the less light the shorter the unit's maximum range.

mgigolf.com

REGISTERING

Visit mgigolf.com to register your Sureshot device.

WHY REGISTER YOUR LASER?

It is recommended that you register your **MGI Sureshot SlimPRO** for warranty purposes. Registering your device helps you by allowing the Sureshot customer service team to document which equipment you own and where you purchased it for warranty claims. Also, if you misplace or lose your unit and it is found, we can return it to you.

CLEANING AND MAINTENANCE

Gently blow away any dust or debris on the lenses or use the lens cloth provided. To remove dirt or fingerprints, use the lens cloth and rub in a circular motion. Use of a coarse cloth or unnecessary rubbing may scratch the lens surface and cause permanent damage. For a more thorough cleaning, photographic lens tissue and photographic-type lens cleaning fluid or isopropyl alcohol may be used. Always apply the fluid to the cloth, never directly on the lens. Your laser rangefinder comes with a hard case, lens cloth, USB cable, carabiner and Quick Start Guide. **For protection of your MGI Sureshot SlimPRO, always store in the pouch provided when not in use.**

For the most up-to-date information on operating your MGI Sureshot SlimPRO, please view the Product Manual on our website mgigolf.com/pages/mgi-user-manuals

mgigolf.com

DISCLAIMERS

CARE INSTRUCTIONS

- When battery indicator displays low battery, place the Laser on charge as soon as possible.
- Avoid directly touching the lenses.
- If the lenses become dirty, clean with the provided lens cloth or isopropyl alcohol.
- Avoid prolonged exposure of the lens in direct sunlight as this may cause damage to the optical componentry.
- Store the laser in the provided protective pouch when not in use.

WARRANTY EXCLUSIONS

- Damage to the lens caused by improper care or cleaning.
- Impact damage cause by dropping the device or any other similar event.
- This unit is water-resistant, not waterproof. Water damage will void warranty.
- Unauthorised disassembly or dismantling of the device.

NEED HELP?

Our friendly team is available via our website, telephone or email. It is recommended that you contact us first rather than returning to the place of purchase for the fastest response to your query.

mgigolf.com

MGI AUSTRALIA

Sales Email: sales@mgigolf.com

Service Email: customerservice@mgigolf.com

Live Chat: visit mgigolf.com

Telephone: +61 3 8872 6700

Local Service Centres: visit mgigolf.com to locate your local service centre.

MGI USA

Sales Email: salesusa@mgigolf.com

Service Email: serviceusa@mgigolf.com

Live Chat: visit mgigolf.com

Telephone: 1800 617 2990

MGI CANADA

Sales Email: salescanada@mgigolf.com

Service Email: servicecanada@mgigolf.com

Live Chat: visit mgigolf.com

Telephone: 1800 617 2990

MGI GLOBAL

Sales Email: globalsales@mgigolf.com

Service Email: globalservice@mgigolf.com

Live Chat: visit mgigolf.com

mgigolf.com

SPECIFICATIONS

FEATURES	SlimPRO
Slope Mode	•
Pulse Mode	•
Scan Mode	•
PIN LOC	•
Priority LOC	•
Multi Coated Lens for Optimum Clarity	•
Shock Proof	•
Water Resistant	•
Measure Range	731.52m
Measurement Speed	0.3s
Range to Flag	228.6m
Objective Lens	25mm
Magnification	7X
Field of View	6°
Exit Pupil Diametre	3.6mm
Battery Type	Rechargeable Li-ion battery 3.7v,520mAh
Working Temperature Range	-10°C - 50°C
Auto Battery Saving	After 15 seconds
Dimensions	97.5mm x 49.4mm x 36.6mm
Weight	145g
Accuracy	±1m
Display	High transmittance LCD
Special Functionality	Intelligent
Multilingual User Manual	•

mgigolf.com

WARRANTY

Limited Warranty

Sureshotgps™ Pty Ltd ("SS") warrants that product delivered in this package will be free from material defects for one (1) year following the date of purchase from SS or its authorized reseller, (2) year warranty if you register on sureshotgps.com within 30 days of purchase (Australia only). Specifications subject to change without notice. For the purpose of this warranty, "material defect" means any defect in a SS product that can be reproduced by SS and is a substantial nonconformity from the published specifications for such product. SS shall not be responsible for any loss or damage whatsoever resulting from any defect in or associated with its products which occur or are notified by the purchaser to SS or its authorized repairer more than one year from said date of purchase. This Limited Warranty does not apply to the battery, normal wear and tear or if any component of the sureshot hardware is opened or repaired by an unauthorized person or company, and does not cover repair or replacement of any sureshot hardware damaged by: MISUSE, MOISTURE OR LIQUIDS, EXPOSURE TO HEAT, ACCIDENT, ABUSE OR NEGLECT. Dropping your sureshot can permanently damage the laser, optical lenses and LCD, display which is not covered under the terms of the Limited Warranty. This Limited Warranty does not cover physical damage to the surface of the SS, including cracks or scratches on the LCD screen and Lenses. This Limited Warranty does not extend to any defects which have been caused or contributed by neglect, misuse or accident, nor in respect of product which has been altered by other than authorized SS personnel or its authorized repairers. The determination as to whether the terms of this warranty are to apply to returned products is within the sole discretion of SS or its authorized repairer. Provided any returned product is determined to be covered by this warranty, SS or its authorized repairers shall at SS's sole discretion, repair or replace, free of charge, any products or parts thereof. In no event whatsoever shall SS be liable for any incidental, special or consequential loss or damage resulting from the purchase and/or use of its products howsoever caused and howsoever claimed. Any liability on SS under this warranty in respect of any repair and /or replacement and/or any action involving any of its products shall be limited to and not exceed the purchase price of the product in question. The terms of this warranty are subject to relevant provisions of any Federal, State or Municipal law. Any dispute or action in relation to this warranty or the construction of it shall be subject to and conducted in accordance with the laws of Victoria, Australia.

Before returning any product, contact the SS Customer Support Group and obtain an RA number. Visit the sureshotgps™ website www.sureshotgps.com for support contact details. If the Customer Support Group verifies that the product is likely to be defective they will issue an RA number to place on the outer package in which the product will be shipped. SS cannot accept any product without an RA number on the package. Warranty returns must also be accompanied by a copy of the dated proof of purchase. Deliver the product along with the RA number to SS. If you ship the product you must assume the risk of damage or loss in transit. You must use the original container (or the equivalent) and pay the shipping charge. SS may replace or repair the product with either a new or reconditioned product and the returned product becomes SS's property. SS warrants the repaired or replaced product to be free from material defects for a period of the greater of (i) ninety (90) days from the return shipping date; or (ii) the period of time remaining on the original one (1) year warranty. If there is any inconsistency between this Limited Warranty and any Warranty included in the packaging of the sureshot, the provisions of this Limited Warranty shall apply.

Our goods come with guarantees that cannot be excluded under Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be of acceptable quality and the failure does not amount to a major failure. This warranty is in addition to other rights and remedies available to the consumer under law. The consumer is responsible for expenses associated with a warranty claim. To make a warranty claim, cease using the goods immediately and contact SS directly using the contact details on the back of this User Manual. Proof of purchase is mandatory.

Warranties are non-transferable. The warranty applied to a product, on purchase, is limited to the original purchaser.

mgigolf.com



mgigolf.com

MGI AUSTRALIA

Sales Email: sales@mgigolf.com

Service Email: customerservice@mgigolf.com

Live Chat: visit mgigolf.com

Telephone: +61 3 8872 6700

Local Service Centres: visit mgigolf.com to locate your local service centre.

MGI USA

Sales Email: salesusa@mgigolf.com

Service Email: serviceusa@mgigolf.com

Live Chat: visit mgigolf.com

Telephone: 1800 617 2990

MGI CANADA

Sales Email: salescanada@mgigolf.com

Service Email: servicecanada@mgigolf.com

Live Chat: visit mgigolf.com

Telephone: 1800 617 2990

MGI GLOBAL

Sales Email: globalsales@mgigolf.com

Service Email: globalservice@mgigolf.com

Live Chat: visit mgigolf.com

Follow us on



Absolute attention has been taken to ensure this User Manual is correct at time of exporting. Specifications, images and statistics may change at any time. Visit mgigolf.com for the most current model information.
04/2026 MGIG_3204