 


momcozy

BS04

Bottle Sterilizer & Dryer

User Manual

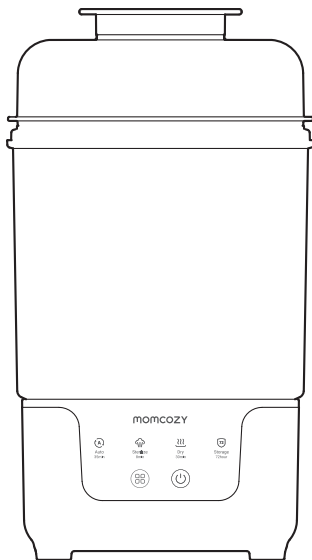

Please read the user manual carefully before using this appliance.

CONTENTS

1. Important Safeguards	02
2. Product Specifications	03
3. Product Schematic	04
4. Set Up The Bottles Chamber	07
5. Optional Usage Of The Special Upper Rack Design	07
6.Quick Start Guide	08
7. Operating Instructions	09
8. Product Storage	12
9. Set Up The Bottles Rack	12
10. Matters Needing Attention	14
11. Cleaning & Descaling	15
12. Trouble Shooting	15
13. FCC Compliance	17
14. Manufacturer	17

WHEN USING ELECTRICAL APPLIANCES, PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:

1. Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read **all** instructions **carefully** before using your sterilizer.
2. Ensure that the supply voltage marked on the appliance corresponds with your power supply.
3. If there is any visible damage to the appliance, the plug or to the supply cord, disconnect the appliance immediately and do not use it.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
5. Do not **allow** children to touch or use the appliance. The appliance becomes very hot and the steam can cause severe scalding.
6. Do not move the appliance when it is in use or contains hot liquids.
7. Do not touch the hot surfaces.
8. Do not **place** the appliance on or near hot surfaces, in a heated oven or near a gas or electric heater.
9. **Unplug** the appliance from the power supply before cleaning or storage.
10. Do not immerse the supply cord, plug or base unit in water or any other liquid.
11. This appliance does not contain any user serviceable parts inside. Do not **dismantle**.
12. This appliance is for indoor household use **only**. Do not use outdoors.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or **lack** of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
14. This appliance has a polarized plug (one blade wider than the other). To reduce risk of electric shock, this plug is intended to fit into a polarized outlet **only** one way. If the plug does not fit **fully** into the outlet, reverse the plug. If it **still** does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
15. a) Short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
b) Extension cords are available and may be used if care is exercised in their use.
c) If an extension cord is used: The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance; The longer cord should be arranged so that it will not drape over the countertop or tabletop where

it can be tripped over, snagged, or pulled on unintentionally (especially by children).

16. Children should be supervised to ensure that they do not play with the appliance.
17. Not for space heating purpose.
18. Always use on a level heat resistant surface.
19. Always keep the electric sterilizer and its plug out of reach of small children.
20. To disconnect, turn any control "Off", then remove plug from wall outlet.
21. Ensure water has been added to the base unit before the sterilization cycle is switched on.
22. Always add 120ml/4oz/4oz of distilled water before use. If you put too little or too much water into the sterilizer, the sterilization efficiency may not be reached.
23. Always unplug from the electric outlet when not in use. Allow to cool before putting on or taking off any parts.
24. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
25. The use of accessory attachments is not recommended by the appliance manufacturer as this may cause injuries.
26. This sterilizer is intended to be used in household and similar application such as
 - a. Staff kitchen areas in shops, offices and other working environments.
 - B. Farm houses.
 - C. By clients in hotels, motels and other residential type of environments.
 - D. Bed and breakfast.
27. Do not open while in use as this product contains boiling water. Beware of escaping steam from the vent holes in the lid.
28. Allow at least 30 minutes interval between operations and make sure the unit has been cooled down before pressing the start button for sequential use.
29. Steam escaping from the unit can cause burns. Always allow 5 minutes to cool down after the cycle finishes before lifting the lid.
30. Keep children away from this sterilizer at all times.
31. To provide continued protection against risk of electric shock, connect to properly grounded outlets only.
32. Caution: risk of electric shock, disconnect electric power before servicing.
33. Use only distilled water, bottled water or fresh running water to sterilize.
34. Never use any additives.

2. Product Specifications


Name	Bottle Sterilizer & Dryer	Model	BS04
Rated Voltage	120V~	Rated Frequency	60Hz
Heating Power	800W	Drying Power	210W
Product Size	227×187×409mm	Rack Size	202×162×148mm

Notice:

To avoid misuse and potential injury, please read the User Manual carefully before using this product, and strictly adhere to the instructions during use. Furthermore, please keep the product out of reach of children to prevent the product (including its accessories) from being treated as a toy.

3. Product Schematic



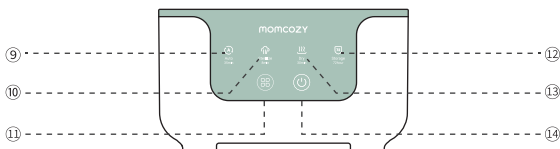

- | | | |
|----------------------|----------------------|---------------------------|
| ① Handle | ⑥ Drip Tray | ⑪ Mode Long Press: +15min |
| ② Top Lid | ⑦ Base | ⑫ Storage Mode |
| ③ Upper Rack | ⑧ Control Panel | ⑬ Drying Mode |
| ④ Bottles Chamber | ⑨ Auto Mode | ⑭ On/Off |
| ⑤ Bottles Rack Plate | ⑩ Sterilization Mode | |

Modes:

⏻ "On/Off" Button.

⌛ "Mode" Button. When the appliance is in standby mode, press this button to select the required mode. Menu as: Auto (Sterilization + Drying + 72h Storage)/Sterilization Only/Drying Only/Storage.
Long press (⌛) for 2s: Add 15min drying time. Total - 50min auto

Ⓐ "Auto" Mode. The default duration is 35 minutes, including Sterilization for 8 minutes and Drying for 27 minutes; the rated water amount is 120ml/4oz. After drying is finished, the appliance will automatically switch to 72-hour Storage

🚰 "Sterilization Only" Mode. The default sterilization duration is 8 minutes (rated water amount 120ml/4oz).

🌊 "Drying Only" Mode. The default drying duration is 30 minutes. After drying is finished, the appliance will automatically switch to 72-hour Storage mode.


🕒 "Storage" Mode. The default storage duration is 72 hours. The appliance will activate the drying process for 5 minutes every 55 minutes, which means the Storage process will be performed hourly.

Set Up And Use:

Before placing items in the sterilizer, all bottles, breast pump parts, and other parts must be empty, clean, and thoroughly rinsed.


1. Place the appliance on a flat surface and keep it out of reach of children to avoid it being knocked over or moved during use.
2. Remove the lid, baskets, and accessory rack from the sterilizer base.
3. Pour water on the base/heater surface to the max line (120ml/4oz). Never fill past the max line. Using distilled water avoids mineral scale build-up on the heating plate.
Nevertheless, bottled water or tap water can be used, but descaling will be required more frequently.
4. Place the bottle chamber on the base.
5. Place clean bottles with their opening facing downward on the bottle holes in the bottle chamber.
6. Place other clean parts in the upper tray, e.g., nipples, rings, lids, etc.
7. Place the upper tray on top of the bottle chamber, making sure that the trays fit together securely without any gaps.
9. Press the "On/Off" button to activate the product, then press the "Mode" button to select the function you desire. Once selected, the product will start working in 3 seconds, and the led of the mode will switch to constant white from flashing white.
Note: during use, the working mode cannot be changed by pressing the "Mode" button.
10. Before disinfecting and drying bottles and other items, please ensure they are cleaned thoroughly.
11. Always pour distilled water into the appliance before turning on sterilization mode or auto mode. There is no need to add water when using the "Dry Only" function.
12. Please ensure that all items that require heating are placed flat inside the main chamber. Avoid overlapping as much as possible to ensure all items are heated throughout.
13. Heated food can be very hot, so do not touch it directly to avoid being burned.
14. Before handling items that have been dried, please thoroughly wash your hands.
15. When disinfecting the sterilizer base, please ensure that the openings are facing downward to prevent water from accumulating during the sterilization process.
16. Be careful when removing the lid as hot steam may escape when the lid is opened and cause burns.
17. Only use the appliance for items that are suitable for high temperature sterilization. Before placing them inside, please ensure that the items can withstand temperatures of up to 100°C to prevent them from deforming or releasing harmful substances.

4. Set Up the Bottles Chamber

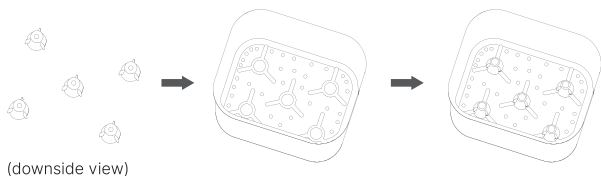


Before the very first use, please rotate and assemble five small steam racks in the bottles chamber

5. Optional Usage Of The Special Upper Rack Design

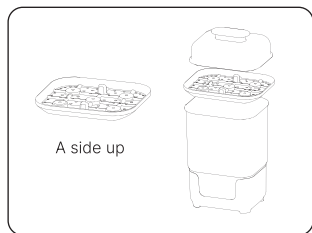


For normal bottles, place the upper tray with the A side up

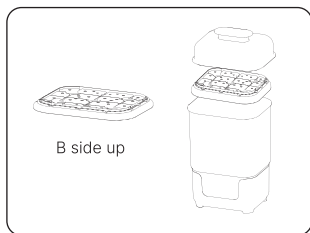


For tall bottles, place the upper tray with the B side


6. Quick Start Guide

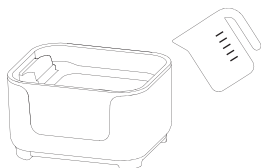


- ① Pour in the rated water amount of 120ml/4oz.

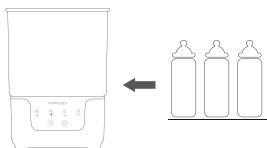

- ② Place the lower bottles chamber above the base, and place the bottles inside the lower bottles chamber with their openings facing downward.

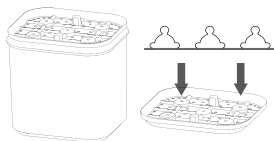

- ③ Place the upper rack above the lower bottles chamber and place the nipples or other accessories on it.
Tip: After shaking off excess water from the nipples, place them facing the steam outlet to achieve the optimal drying performance.

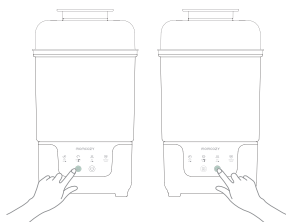

- ④ Press the "On/Off" button and "Mode" button to select Auto, waiting 3s to start the sterilization and drying processes.

7. Operating Instructions

1. “Auto” Mode

- Plug in the appliance.
- Pour the rated water amount of 120ml/4oz on the heater surface.
- Press the “On/Off” button briefly to turn on the appliance
- Press the “Mode” button  to select “AUTO” mode  with this icon flashing with a white LED.
- The appliance will start its Auto cycle in 3 seconds after the mode has been selected. When the cycle starts, the LED light will switch to a constant white LED from a flashing white LED light.
- Upon the completion of the Auto cycle, the appliance will switch to “Storage” mode automatically without beeping.

Notes:

1. The default Auto mode cycle is 35 minutes, including Sterilization for 8 minutes and Drying for 27 minutes.
2. When Auto mode is in use, the Drying duration can be increased in 15-minute increments by long pressing the “Mode” button  for 2 seconds.

Caution:

Steam and hot air escaping from the appliance can cause burns. Always allow 5 minutes to cool down after the cycle is finished before lifting the lid.

2. “Sterilization Only” Mode

- Plug in the appliance.
- Pour the rated water amount of 120ml/4oz on the heater surface.
- Press the “On/Off” button briefly to turn on the appliance.
- Press the “Mode” button  to select the  “Sterilization Only” mode. The icon will then flash with a white LED.
- The appliance will start its Sterilization cycle in 3 seconds after this mode has been selected. When the cycle starts, the icon will switch to a constant white LED from a flashing white LED.
- Upon the completion of the Sterilization cycle, the appliance will automatically turn off without any LEDs.

Notes:

The default Sterilization cycle is 8 minutes. If the rated water amount of 120ml/4oz is not added to the appliance, a shortcut may occur, in which case, the sterilization cycle will last less than 8 minutes.

Caution:

Steam escaping from the appliance can cause burns. Always allow 5 minutes to cool down after the cycle is finished before lifting the lid.

3. "Drying Only" Mode

- Plug in the appliance.
- Do not pour any water on the heater surface.
- Press the "On/Off" button briefly to turn on the appliance.
- Press the "Mode" button  to select "Drying Only" mode . The icon will then flash with a white LED.
- The appliance will start its Drying cycle in 3 seconds after this mode is selected. When the cycle starts, the icon will switch to a solid white LED from a flashing white LED.
- Upon the completion of the Drying cycle, the appliance will switch to "Storage" mode automatically without beeping.

Notes:

The default Drying cycle is 30 minutes, during which time, the Drying duration can be increased in 15-minute increments by long pressing the "Mode" button  for 2 seconds.

Caution:

Hot air escaping from the appliance can cause burns. Always allow 5 minutes to cool down after the cycle is finished before lifting the lid.

4. "Storage" Mode

- Plug in the appliance.
- There is no need to pour any water on the heater surface.
- Press the "On/Off" button briefly to turn on the appliance.
- Press the "Mode" button  to select "Storage" mode . The icon will then flash with a white LED.

- The appliance will start its Storage cycle in 3 seconds after the mode is selected. When the cycle starts, the icon will switch to a constant white LED from a flashing white LED.
- The default Storage duration is 72 hours. The appliance will activate the Drying process for 5 minutes every 55 minutes, which means the Storage process will be performed hourly.

Why are my items occasionally not completely dried “+15 min drying function”

During the Auto cycle, the Drying duration can be increased in 15-minute increments by long pressing the “Mode” button  for 2 seconds.

Tip: In lower-temperature environments, the 15-minute Drying time can be increased by long pressing the “Mode” button  to ensure optimal results.


When sterilizing 6 baby bottles and more breast pump parts, the 15-minute Drying time can be increased by long pressing the “Mode” button  for 2 seconds to ensure optimal results.

Memory function: Automatically jump to the previous working mode and time after selecting the menu button when turned on.

- If you don't need to remember the last mode and time, long press the "On/Off" button for 2 seconds after turning on to restore the factory default settings.
- During the 15 min drying process, press and hold the "Mode" button for 2s to cancel the 15 minute working mode.

8. Product Storage


The product is smartly designed with on-the-go compact storage. Please refer to the illustration below when packing and transporting it for use elsewhere.

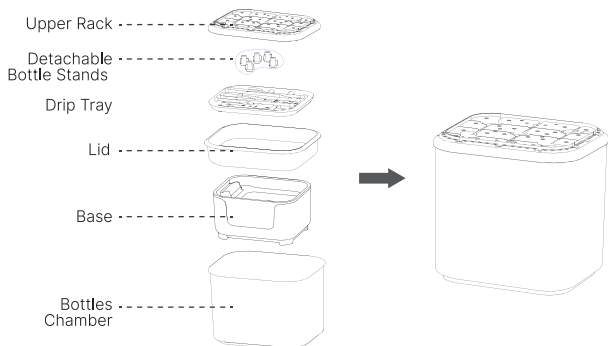


9. Set Up the Bottles Rack



1) Find the numbers on the stand rack labelled "1", "2", and "3", and ensure they align with the same numbers on the rack plate.

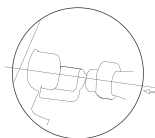


Before

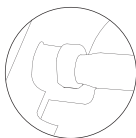


After

2) Install the stand rack by inserting one of the heads directly inside the slot.

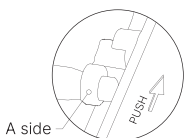


Before

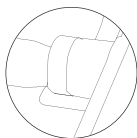

After

3) Install the other side of the stand rack by inserting "A" sideways into the slot.

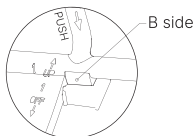


Before




After

4) Fix the buckles on the three stand racks by pushing "B" downward onto the rack plate. A "click" sound will be heard when it is fixed in place.

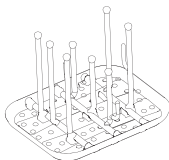

5) Place all the racks in the "UP" position. It is then suitable for use.

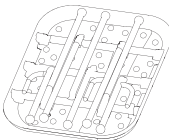

6) All racks can be placed in the "OFF" position when they are not needed.

10. Matters Needing Attention

1. Before connecting the device to power, please check if its designated voltage matches the voltage of your home country. If they do not match, please do not use this device and contact the dealer where you purchased it.
2. If the power cord is damaged, in order to prevent danger, it must be replaced by the manufacturer, the manufacturer's repair department, or similar qualified personnel.
3. Do not suspend the power cord over the edge of a table or allow it to come into contact with hot surfaces to prevent it from being damaged.
4. This device should not be placed on or near high-temperature gas or electric stoves when in use.
5. Do not use the device to dry items without water, as this may damage the heating element.
6. When operating this device, do not use it while also simultaneously using other high-power-consumption devices.
7. Do not immerse the main body of the device in water or any other liquid to prevent fires, electric shocks, or other personal safety risks.
8. If there is too little water in the device or if the water accidentally dries up during use, immediately unplug the power cord. Then, let it cool for 15 minutes before refilling it with cold water.
9. Even when the other components of the device have cooled down, the water in the main compartment may still be hot, so ensure you handle it with care.
10. When using the device, place it on a flat surface that is out of reach of children. Do not allow children to pull or knock the power cord or the device to prevent it from tipping over and causing injury or property damage.
11. The device should not be used by individuals (including children) who have physical, sensory, or mental disabilities, or lack experience or knowledge on how to use it, unless they are supervised or instructed by a person who is responsible for their safety.
12. Ensure that children do not play with this device.
13. This device should not be cleaned and maintained by children without adult supervision.
14. Avoid touching the hot parts of the device, such as the heated water compartment, heating element, or the lid, to prevent burns.
15. Do not move the device during use.
16. Unplug the device from power when it is not in use or before cleaning it. The device must be allowed to cool before it can be cleaned.
17. Prolonged heating can cause food to spoil. Heating in excess of 1 hour is not recommended.

18. During use, the device's actual heating temperature is displayed on the control panel, which is based on the set working temperature.
19. This device should not be used outdoors.
20. After reading, please save this user manual for future reference.
21. When using the device, please use a thermometer to measure if the temperature inside matches the temperature displayed on the control panel to avoid exceeding the normal temperature on the display panel in the event of a malfunction.

11. CLEANING & DESCALING

1. Always unplug the appliance and allow it to cool before cleaning.
2. Do not immerse the base, supply cord, or plug in water or other liquids.
3. Do not clean the base under tap water.
4. Do not use abrasives or solvents for cleaning. They may damage the appliance and the surface of the heating plate.
5. Never use abrasive pads to clean the plastic parts of the appliance.
6. Use a soft, damp cloth to clean the base.
7. Mineral residue, particularly in hard water areas, may deposit on the heating plate after a few sterilization cycles. To avoid scale buildup, it is recommended to descale the sterilizer every four weeks with a 1:1 mixture of water and vinegar solution.

12. Trouble shooting

Symptom	Cause	Solution
The appliance fails to start.	The power cable is not plugged in.	Verify that the plug is securely inserted into a power outlet.
	The appliance fails to turn on.	Press the On/Off button before selecting a function.
	There is insufficient water in the heating tank.	Add 120ml (4Oz) of water to the heating tank.

There is scale (deposit) on the tank heater plate.	Mineral-rich water or tap water is continuously used.	Clean the heater plate after each use. Using distilled water is recommended. Use Momcozy scale remover and follow the instructions for scale removal. Remarks: Do not use abrasives or solvents for cleaning. These substances may damage the surface of the appliance and the heating plate.
The items are not dry after the drying function ends.	Water accumulates in the recesses or indentations of the parts to be sterilized.	Ensure that the parts have been accurately placed so that water does not accumulate and can be reached by the hot air.
	The selected drying time is not long enough to adequately dry the items in the sterilizer.	Select a longer drying time. The drying duration can be increased in 15-minute increments by long pressing the "Mode" button  for 2 seconds.
	Used in low-temperature environments such as winter, wet and rainy days, and air conditioning operating under 15°C.	Select a longer drying time. The drying duration can be increased in 15-minute increments by pressing the "Mode" button  for 2 seconds.
Ten beeps and ten flashes occur when plugged in.	The appliance is designed to comply with 120V voltage. It is not available for regions with other voltage supplies.	Consult with our service center about the available regions for this product.

If the fault persists after following the troubleshooting instructions above, please contact the Customer Support Team for assistance.

13. FCC Compliance:

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

14. Manufacturer

Manufacturer: Hong Kong Lute Technology Co., Ltd.

Address: Room 02, 21/F, Hip Kwan Commercial Building, 38 Pitt Street, Yau Ma Tei, Kowloon, Hong Kong

Made in China

momcozy

Evolving for Mom and Cozy