

BOTTLE WARMER

USER MANUAL

momcozy

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	01
SPECIFICATIONS	03
PRODUCT DESCRIPTION	04
USING THE BOTTLE WARMER	05
CLEANING AND MAINTENANCE	09
DESCALING	10
DISPOSAL	11
DECLARATION OF CONFORMITY	11
FCC COMPLIANCE	12

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS APPLIANCE WHEN USING ELECTRICAL APPLIANCES, PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING :

1. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a

longer cord. Do not use an extension cord.

5. Do not touch hot surfaces. Use handles or knobs.

6. To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.

7. Close supervision is necessary when any appliance is used by or near children.

8. Children should be supervised to ensure that they do not play with the appliance.

9. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

10. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

11. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

12. Do not use outdoors.

13. Do not let cord hang over edge of table or counter, or touch hot surfaces.

14. Do not place on or near a hot gas or electric burner, or in a heated oven. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

15. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off ", then remove plug from wall outlet.

16. Do not use appliance for other than intended use.

17. Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.
18. That such servicing should be done only while the appliance is disconnected from the supply circuit.
19. Do not use outdoors. Household and indoor use only.
20. Before feeding, pour a few drops of the liquid content from the baby bottle onto the back of your hand to test the temperature.
21. Before servicing, unplug cord from wall outlet. Do not leave cord within child's reach.

SAVE THESE INSTRUCTIONS

SPECIFICATIONS

 
Model Number : MW01

Rated Voltage : 120V~ 60Hz


Wattage : 500W

PRODUCT DESCRIPTION

Product Overview

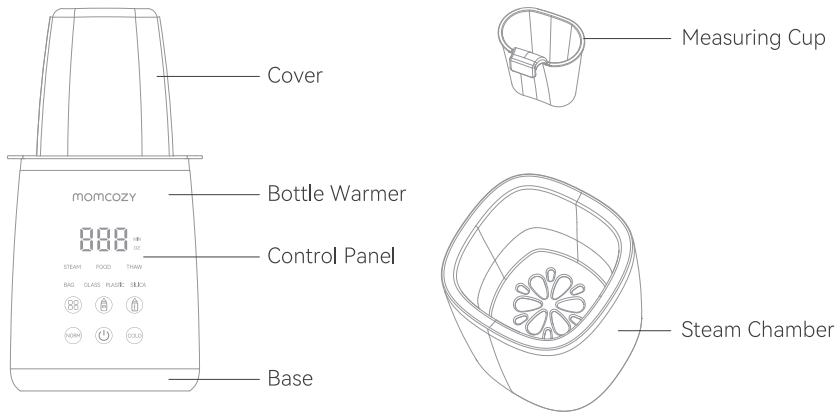

Control Panel

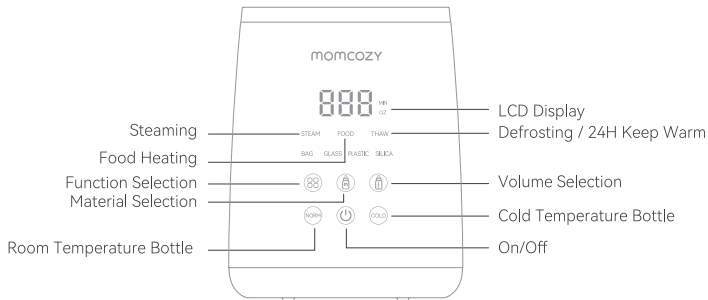 

USING THE BOTTLE WARMER

Before First Use

Disassemble, and clean all parts before you use the bottle warmer for the first time and after every use. Do not wash the body unit.

Explanation of Settings

ON/OFF : Short press  to turn on the appliance and the light is on. Long press  to turn off and the light is off.

Function Selection : Press  to choose functions, including food heating, defrosting, and steaming.

Room Temperature Bottle : Select this setting when you warm a bottle of room temperature milk (approximately 20–25°C/68–77°F).

Cold Temperature Bottle : Select this setting when you warm a refrigerated bottle of cold milk (approximately 0–10°C/32–50°F).

Food Heating : Select this setting when you want to warm a container/jar of baby food.

Defrosting/ 24H Keep Warm : Defrost a bottle/bag/container of milk/baby food to a liquid state. It allows 24h keep warm function.

Steaming : Select this setting when you sterilize a bottle/container/pacifier.

Standby Mode

Switch on the bottle warmer and you will hear a beep, then the power button turns green. Press the  to enter into standby mode. In standby mode, select desired setting and press the power button to enter into working mode.

Room Temperature Bottle

1. Place the milk bottle in the bottle warmer, one at a time.
2. Add 40ml of drinking water and put the lid on.
3. In standby mode, press the  to enter into working mode. Press  and press  and  to select the desired setting based on the bottle material and milk volume. (The default volume is 5oz.)
4. Press  to start normal warming and the countdown timer will be displayed.
5. The bottle warmer beeps 3 times after ending the normal warming. Unplug the bottle warmer when not in use.

Note:

1. Do not use the bottle warmer without adding water.
2. Fill the bottle warmer with 40ml of water. Never let water level rise above the top of the bottle or spill over the edge of the warmer.
3. Sprinkle a few drops of baby food onto your inner wrist to test the temperature.
4. Do not warm milk for an extended period of time.

Cold Temperature Bottle

1. Place the milk bottle in the bottle warmer, one bottle at a time.
2. Add 40ml of drinking water and put the lid on.
3. In standby mode, press the  to enter into working mode. Press  and press  and  to select the desired setting based on the bottle material and milk volume. (The default volume is 5oz).

4. Press  to start refrigerated bottle warming and the countdown timer will be displayed.
5. The bottle warmer beeps 3 times after ending the cold warming. Unplug the bottle warmer when not in use.

Note:

1. Do not use the bottle warmer without adding water.
2. Fill the bottle warmer with 40ml of water. Never let water level rise above the top of the bottle or spill over the edge of the warmer.
3. Unplug the device when not in use.
4. Sprinkle a few drops of milk onto your inner wrist to test the temperature.
5. Do not warm milk for an extended period of time.
6. Gently swirl the baby bottle before feeding a baby.

Defrosting/ 24H Keep Warm

1. Put a bottle/container/bag in the bottle warmer, one at a time.
2. Fill with drinking water to reach the level of the bottle/container. Make sure the water level does not exceed the top of the bottle warmer.
3. In standby mode, press the  to enter into working mode. Press  and select THAW, then press  and  to select the desired setting based on the bottle material and milk volume. (The default setting is 5oz volume and plastic material)
4. Press the  to start defrosting or 24h keep warm setting. the countdown timer will be displayed. (Tip: It's recommended to warm up milk for less than 3 hours.)
5. The bottle warmer beeps 3 times and automatically switches to keep warm mode after ending the defrosting. The keep warm mode will keep 24 hours.

6. The bottle warmer beeps 3 times and switches off automatically after warming time.

Note:

1. Do not use the bottle warmer without adding water.
2. Fill the bottle warmer with water to just above the level of the milk in the bottle. Never let water level rise above the top of the bottle or spill over the edge of the warmer.
3. Unplug the device when not in use.
4. Sprinkle a few drops of milk onto your inner wrist to test the temperature.
5. Do not warm baby food for an extended period of time.
6. Gently swirl the baby bottle before feeding a baby.

Steaming

1. Clean the milk bottle before placing it in the bottle warmer.
2. Fill with 100ml of drinking water and put the lid on.
3. In standby mode, press the  to enter into working mode. Press  and select STEAM .
4. Press  to start steaming and the default countdown timer is 8 minutes.
5. The bottle warmer beeps 3 times and switches off automatically after ending the steaming. The machine will not enter into keep warm mode.

Food Heating

1. Place the food container in the bottle warmer, one at a time.
2. Fill with drinking water to reach the level of the baby food. If you have a large volume of baby food, make sure the water level does not exceed the top of the bottle warmer.

3. In standby mode, press the  to enter into working mode. Press  and choose **FOOD**, then press  and  to select the desired setting based on the bottle material and milk volume. (The default volume is 4oz)

4. Press  to start food heating and the countdown timer will be displayed.

5. The bottle warmer beeps 3 times after ending the food heating. The bottle warmer automatically switches to keep warm mode and continues for 24 hours.

6. The bottle warmer beeps 3 times and switches off automatically after warming time.

Note:

1. Do not use the bottle warmer without adding water.

2. Fill the bottle warmer with water to just above the level of the food in the container. Never let water level rise above the top of the bottle or spill over the edge of the warmer.

3. Unplug the device when not in use.

4. Sprinkle a few drops of milk onto your inner wrist to test the temperature.

 
5. Do not warm baby food for an extended period of time.

CLEANING AND MAINTENANCE

1. After each use, unplug the bottle warmer and let it cool down. (Figure 1)

2. Empty the bottle warmer. (Figure 1)

3. Wipe the bottle warmer with a moist cloth. Do not use abrasive, anti-bacterial cleaning agents, chemical solvents or sharp tools to clean the bottle warmer. (Figure 2)

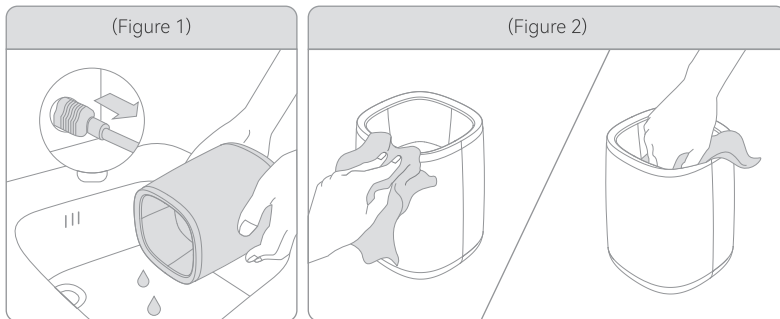

DESCALING

It is recommended to descale the bottle warmer every four weeks to ensure it works efficiently.

1. Unplug the appliance and allow it to cool before you clean it.
2. Mix 60 ml / 2 oz of white vinegar with 120 ml / 4oz of cold water. (Mixing ratio: one part white vinegar to two parts water)
3. Switch on and select the steam setting for contents under 180 ml / 6 oz, then let the appliance operate for 10 minutes.
4. Leave the solution in the bottle warmer until all scale has dissolved.
5. Empty the bottle warmer and wash it with clean water.

Empty the bottle warmer and rinse the inside thoroughly. If you still see traces of scale, repeat the descaling procedure.

Note:

1. Do not use mineral water which causes scale buildup.
2. To extend the life of your device, cool down it for 10 minutes before use.
3. Check the temperature before feeding your baby.
4. Make sure to fill the bottle warmer with clean water for each operation.
5. You can also use citric acid-based descalers.
6. Do not use other types of descalers.

DISPOSAL



The symbol indicates AC voltage



Recycling

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

DECLARATION OF CONFORMITY

EU Compliance Statement: Hong Kong Lute Technology Co., Limited.. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the LVD Directive 2014/35/EU and EMC Directive 2014/30/EU.

FCC COMPLIANCE

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.