


momcozy

BOTTLE STERILIZER & DRYER

BS02 User Manual

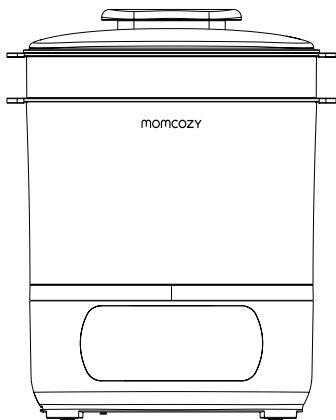

Please read the user manual carefully before using this appliance.

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS -----	02
Product Specifications -----	05
Component Description -----	06
Control Panel -----	07
Button Description -----	07
Method of Operation -----	10
Matters Needing Attention -----	15
Cleaning and Maintenance -----	17
Analysis of Common Problems -----	19
FCC COMPLIANCE -----	20

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully before using your sterilizer.
2. Ensure that the supply voltage marked on the appliance corresponds with your power supply.
3. If there is any visible damage to the appliance, the plug or to the supply cord, disconnect the appliance immediately and do not use it.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
5. Do not allow children to touch or use the appliance. The appliance becomes very hot and the steam can cause severe scalding.
6. Do not move the appliance when it is in use or contains hot liquids.
7. Do not touch the hot surfaces.
8. Do not place the appliance on or near hot surfaces, in a heated oven or near a gas or electric heater.
9. Unplug the appliance from the power supply before cleaning or storage.
10. Do not immerse the supply cord, plug or base unit in water or any other liquid.
11. This appliance does not contain any user serviceable parts inside. Do not dismantle.

12. This appliance is for indoor household use only. Do not use outdoors.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
14. This appliance has a polarized plug (one blade wider than the other). To reduce risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
15. a) Short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
b) Extension cords are available and may be used if care is exercised in their use.
c) If an extension cord is used: The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance; The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).
16. Children should be supervised to ensure that they do not play with the appliance.
17. Not for space heating purpose.
18. Always use on a level heat resistant surface.
19. Always keep the electric sterilizer and its plug out of reach of small children.

20. To disconnect, turn any control “off”, then remove plug from wall outlet.
21. Ensure water has been added to the base unit before the sterilization cycle is switched on.
22. Always add 150ml/5oz of distilled water before use. If you put too little or too much water into the sterilizer, the sterilization efficiency may not be reached.
23. Always unplug from the electric outlet when not in use. Allow to cool before putting on or taking off any parts.
24. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
25. The use of accessory attachments is not recommended by the appliance manufacturer as this may cause injuries.
26. This sterilizer is intended to be used in household and similar application such as a. staff kitchen areas in shops, offices and other working environments. b. farm houses. c. by clients in hotels, motels and other residential type of environments. d. bed and breakfast.
27. Do not open while in use as this product contains boiling water. Beware of escaping steam from the vent holes in the lid.
28. Allow at least 30 minutes interval between operations and make sure the unit has been cooled down before pressing the start button for sequential use.
29. Steam escaping from the unit can cause burns. Always allow 5 minutes to cool down after the cycle finishes before lifting the lid.
30. KEEP CHILDREN AWAY from this sterilizer at all times.
31. To provide continued protection against risk of electric shock, connect to properly grounded outlets only.

32. CAUTION: Risk of electric shock, disconnect electric power before servicing.
33. Use only distilled water, bottled water or fresh running water to sterilize.
34. Never use any additives.


Product Specifications

Name	Baby bottle sterilizer & dryer)	Model	BS02
Rated Voltage	120V~	Rated Frequency	60Hz
Drying Power	180W	Heating Power	600W
Outer Dimensions (Length*Width *Height) mm	264*168*381 mm		

Notice


To avoid misuse and potential injury, please read the User Manual carefully before using this product, and strictly adhere to instructions during use. Furthermore, please keep the product out of reach of children, to prevent the product (including its accessories) from being treated as a toy.

Component Description

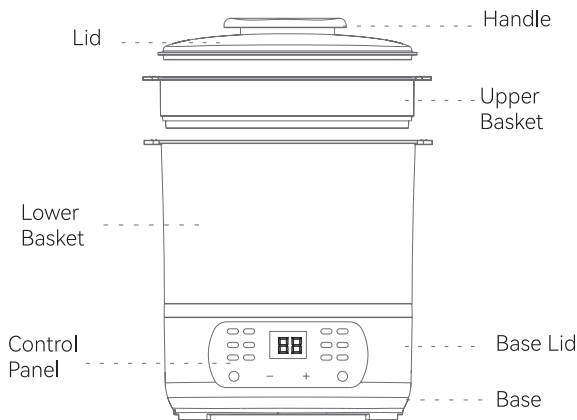

Note: Product images are for reference only. The actual appearance, color, and configuration of the product may vary. Please refer to the physical product for actual details.

Control Panel

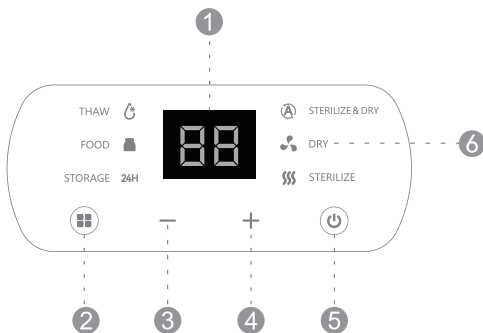

- | | |
|------------------|----------------------|
| ① Display Screen | ② Function Selection |
| ③ Decrease | ④ Increase |
| ⑤ Power Button | ⑥ Function Display |

Button Description

1.  Button: After connecting the power supply, lightly press the button once, and the display screen will turn on and show running time by default. "The screen will begin to flash, allowing you to press  to select other functions. You can also press $+$ / $-$ to adjust the operating time. If no other function operations are chosen, after 10 seconds the screen will stop flashing, and the  function will be activated by default." Without any other operations, the  function will be activated by default. Press the  key again to power off.

2.  Button: Pressing the  button lightly allows you to switch between six different modes: Auto, Dry, Sterilize, Defrost, Food, and Storage.
3.  Button: This can be used to increase the time or temperature of the six modes.
4.  Button: This can be used to decrease the time or temperature of the six modes.

Set-up and Use

Before sterilizing all items, All bottles and accessories must be EMPTY, CLEAN & FULLY RINSED BEFORE USE in this sterilizer and dryer.

1. Place the appliance on a flat surface and keep it out of reach of children, so it will not be knocked or moved during use.
2. Remove the lid, baskets, and accessory rack from the sterilizer base.
3. Pour water on the base/heater surface to the MAX line (100–150ml/3.5–5.5oz). Never fill past the MAX line. Using distilled water avoids mineral scale build-up on the heating plate. Nevertheless, you can use bottled water or tap water, but you may need to descale more frequently.
4. Place the lower basket on the base.
5. Place clean bottles with their opening facing downward on the bottle holes.
6. To ensure better sterilizing and drying, please align the bottle spout with the wider bottle holes of the lower basket (6 in total).
7. Place bottle accessories on the accessory rack (nipples, collars, caps, etc.)
8. Place the upper basket on top of the lower basket, ensuring that it fits securely without any gaps.
9. Press the On/Off button once, and the function icons will light

up. Follow the instructions to choose your desired function. If there is no selection of function after pressing the on/off button, the appliance will automatically start the "AUTO" function.

10. Before disinfecting and drying bottles and other items, please ensure you clean them thoroughly.

11. Please ensure that all food items that require heating are placed flat inside the main compartment. Avoid overlapping as much as possible to ensure all items are heated throughout.

12. Heated food can be very hot, so do not touch it directly with your hands to avoid being burned.

13. Before handling items that have been dried, please ensure that you thoroughly wash your hands.

14. When disinfecting the sterilizer base, please ensure that the openings are facing downward to prevent water from accumulating during the sterilization process.

15. Be careful when removing the lid as hot steam may escape when the lid is opened and cause burns.

16. Only use the device for items that are suitable for high-temperature sterilization. Before placing them inside, please ensure that the items can withstand temperatures of up to 100° C, to prevent them from deforming or releasing harmful substances.

Method of Operation

AUTO (STERILIZE & DRY)

Instructions:

1. Add 100–150mL / 3.5–5.5oz of purified water to the machine. Place a clean baby bottle upside down in the main compartment and the nipple upside down on the upper rack.
2. Power on the device, then press the  key. The  function light will then turn on. "The screen will begin to flash, allowing you to press  to select other functions. You can also press $+/-$ to adjust the operating time. If no other function operations are chosen, after 10 seconds the screen will stop flashing, and the  function will be activated by default." Without any further operations, the sterilization phase of  mode will begin.
3. After the sterilization process is completed, the machine will start the drying phase of  mode.
4. After  mode ends, the device will automatically switch to **24H** mode. The **24H** light will turn on, and it will start operating with a 24-hour countdown.

Note:

In  mode, press the $+/-$ button to adjust the drying time. The sterilization time depends on the amount of water added, and the drying function is automatically turned on when the water boils dry.

DRY

Instructions:

1. Place the clean bottle that needs to be dried upside down in the main compartment and the nipple upside down on the upper rack for drying.
2. Power on the device, then press the  button, followed by the  button to select  mode. "The screen will begin to flash, allowing you to press  to select other functions. You can also press $+$ / $-$ to adjust the operating time. If no other function operations are chosen, after 10 seconds the screen will stop flashing, and the  function will be activated by default." The device will then begin working if no other operations are performed. The default running time is 40 minutes.
3. After  mode is completed, the display will turn off. Wait for the baby bottle and nipple to cool down before removing them.

Note: You can adjust the duration of  mode using the $+$ and $-$ buttons. Time range: 20-60 minutes.

STERILIZE

Instructions:

1. Add 100–150mL / 3.5–5.5oz of purified water to the machine. Place a clean baby bottle upside down in the main compartment and the nipple upside down on the upper rack.
2. Power on the device, then press the  button, followed by the  button to select  mode. "The screen will begin to flash, allowing you to press  to select other functions. You can also press $+$ / $-$ to adjust the operating time. If no other function operations are chosen, after 10 seconds the screen will stop flashing, and the  function will be activated by default." The device will then begin working if no other operations are performed. The default running time is 15 minutes.
3. After  mode is completed, the display will turn off. Wait for the baby bottle and nipple to cool down before removing them.

Note: You can adjust the duration of  mode using the $+$ and $-$ buttons; The time can be set within a range of 1–15 minutes.

THAW

Instructions:

1. Add 150mL / 5.5oz of purified water into the device and place the main compartment onto the base.
2. Place the food that needs to be defrosted inside the main compartment, and then cover it with the lid.
3. Power on the device, then press the  button, followed by the  button to select  mode. "The screen will begin to flash, allowing you to press  to select other functions. You can also press + / - to adjust the operating time. If no other function operations are chosen, after 10 seconds the screen will stop flashing, and the  function will be activated by default." The device will then begin working if no other operations are performed. The default running time is 25 minutes.
4. After the food is defrosted, the screen will turn off. Then remove the lid and take the food out of the main compartment with tongs.

Note: You can adjust the duration of  mode using the + and - buttons. Time range: 20-60 minutes.

FOOD

Instructions:

1. Add 150mL / 5.5oz of purified water into the device and place the main compartment onto the base.
2. Place the food that needs to be heated inside the main compartment, and then cover it with the lid.
3. Power on the device, then press the  button, followed by the  button to select  mode "The screen will begin to flash, allowing you to press  to select other functions. You can

also press **+** / **—** to adjust the operating time. If no other function operations are chosen, after 10 seconds the screen will stop flashing, and the  function will be activated by default." The device will then begin working if no other operations are performed. The default running time is 15 minutes.

4. After the food is heated, the screen will turn off. Then remove the lid and take the food out of the main compartment with tongs.

Note: You can adjust the duration of  mode using the **+** and **—** buttons. The time can be set within a range of 10-60 minutes.

STORAGE

Instructions:

1. Place a clean baby bottle upside down in the main compartment and the nipple upside down on the upper rack.
2. Power on the device, then press the  button, followed by the  button to select the **24H** function. "The screen will begin to flash, allowing you to press  to select other functions. The device will then begin working if no other operations are performed. The screen will count down from 24 (hours). The default working time is 24 hours, which cannot be adjusted. The 24-hour timing of **24H** mode cannot be adjusted. However, you can press the  button to cease its operations.
3. After **24H** mode is completed, the display will turn off. Wait for the baby bottle and nipple to cool down before removing them.

Note: When the heating plate temperature sensor detects the temperature has exceeded the predefined limits, "E3" will appear on the display. The buttons will then be locked, and only the power button can be used. E3 will continue for 2 minutes, after which the device will automatically turn off.

Matters Needing Attention

1. Before connecting the device to power, please check if its designated voltage matches the voltage of your home country. If they do not match, please do not use this device and contact the dealer where you purchased it.
2. If the power cord is damaged, in order to prevent danger, it must be replaced by the manufacturer, the manufacturer's repair department, or similar qualified personnel.
3. Do not suspend the power cord over the edge of a table or allow it to come into contact with hot surfaces to prevent it from being damaged.
4. This device should not be placed on or near high-temperature gas or electric stoves when in use.
5. Do not use the device to dry items without water, as this may damage the heating element.
6. When operating this device, do not use it while also simultaneously using other high-power-consumption devices.
7. Do not immerse the main body of the device in water or any other liquid to prevent fires, electric shocks, or other personal safety risks.
8. If there is too little water in the device or if the water accidentally dries up during use, immediately unplug the power cord. Then, let it cool for 15 minutes before refilling it with cold water.

9. Even when the other components of the device have cooled down, the water in the main compartment may still be hot, so ensure you handle it with care.
10. When using the device, place it on a flat surface that is out of reach of children. Do not allow children to pull or knock the power cord or the device to prevent it from tipping over and causing injury or property damage.
11. The device should not be used by individuals (including children) who have physical, sensory, or mental disabilities, or lack experience or knowledge on how to use it, unless they are supervised or instructed by a person who is responsible for their safety.
12. Ensure that children do not play with this device.
13. This device should not be cleaned and maintained by children without adult supervision.
14. Avoid touching the hot parts of the device, such as the heated water compartment, heating element, or the lid, to prevent burns.
15. Do not move the device during use.
16. Unplug the device from power when it is not in use or before cleaning it. The device must be allowed to cool before it can be cleaned.
17. Prolonged heating can cause food to spoil. Heating in excess of 1 hour is not recommended.
18. During use, the device's actual heating temperature is displayed on the control panel, which is based on the set working temperature.
19. This device should not be used outdoors.
20. After reading, please save this user manual for future reference.
21. Do not overheat food by heating it over an extended period,

as it may cause the food to spoil, leading to physical discomfort after consumption.

22. When using the device, please use a thermometer to measure if the temperature inside matches the temperature displayed on the control panel to avoid exceeding the normal temperature on the display panel in the event of a malfunction.

Cleaning and Maintenance

1. Before cleaning the device, you must unplug it from the power source and allow it to cool.
2. Do not immerse the base, the supply cord or the plug in water or other liquids.
3. Do not clean base under water tap.
4. Use a soft damp cloth to clean the base and control panel.
5. Never use abrasive pads to clean the plastic parts of the machine.
6. The lid, accessory rack can be cleaned in hot soapy water.
7. Mineral residue, particularly in hard water areas, may deposit on the stainless steel heating plate after a few sterilization cycles. To avoid scale build up, wipe the surfaces with a soft moist cloth after each operation.
8. Deposits can be removed with scale removers or by leaving 60ml/2oz water and vinegar solution (50/50 water & vinegar mix) on the heating plate for approximately 30 minutes. The plate should then be wiped clean with a clean, dry cloth. Some discoloration spots may remain after cleaning with a vinegar solution, but these are harmless.
9. Do not use abrasives or solvents for cleaning; they may damage the appliance and the surface of the heating plate.
10. Do not immerse the main compartment in water when

cleaning it.

11. The inner surface, lid, upper rack, and base of this device can be washed with a cleaning agent and then rinsed with clean water. The outer surface of the device can be cleaned with a slightly damp cloth. Do not use corrosive detergents, cleaning agents with chemically abrasive powders, or hard metal wire brushes when cleaning this device, as this can damage the surface, affect its service life, and pose safety hazards.

12. Do not touch the center of the heating base with sharp objects or metal utensils, as this can cause electric shocks.

13. When the device is not in use for an extended period, please clean it thoroughly, return it to the packaging box, and store it in a well-ventilated and dry location to prevent moisture damage and ensure that it continues to function properly.

Analysis of Common Problems

Issue	Analysis	Solution
Device not working	a. Power not connected. b. Device is running without water.	a. Connect the device to power. b. Fill up the water compartment to maximum fill levels, wait for 10 minutes, then turn the device on again.
The device gives off a strange smell when in use.	This is normal when the heating base is used the first few times.	After being used several times, the smell will dissipate.
The device displays E1, E2, or E3	This indicates a loose plug connection/E1 and E2 indicate an open or short circuit in the temperature sensor.	Plug the power supply in properly/Return the device to the merchant to be repaired.
	E3 indicates that the heating compartment does not contain water. This protects the device from damage when turned on.	Restart the device, select the preferred mode, add a suitable amount of water.
Device not working	The fan is damaged.	Return the device to the merchant to be repaired.

Note: If the troubleshooting steps above do not resolve the issue, please contact our Company's service center or an authorized dealer. Disassembly or modifications of this device by non-professionals is strictly prohibited.

FCC COMPLIANCE

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

