


momcozy

MW03

BOTTLE WARMER

User Manual

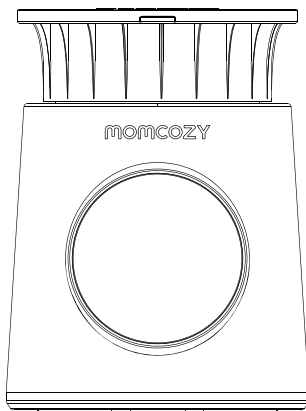

EN

Read this user manual carefully before using this device and keep this manual for future reference.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS ·····	02
PARTS LIST ·····	04
INSTRUCTIONS FOR USE ·····	05
SPECIFICATIONS ·····	05
CONTROL PANEL ·····	06
USING THE BOTTLE WARMER ·····	07
CLEANING AND MAINTENANCE ·····	08
TROUBLESHOOTING ·····	09
DECLARATION OF CONFORMITY ·····	12

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS APPLIANCE.

1. This appliance can be used persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance.
3. Cleaning and user maintenance shall not be made by children without supervision.
4. The product has a built-in lithium battery. Do not use it in environments with strong static electricity or magnetic fields, nor should it be dried in a microwave oven or a disinfection cabinet, to avoid potential safety hazards.
5. User repair or separation of the product is not permitted. Quality issues must be handled by the manufacturer, or its authorized service center, to avoid safety hazards.
6. Clean the product prior to each use.
7. Always use the product on a dry, flat surface away from water.

8. Do not place on or near a hot gas stove or electric burner, or in a heated oven. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
9. The operating temperature range for this product is from around 50 °F to 90 °F (about 10 °C to 35 °C).
10. Do not operate the bottle warmer without a bottle containing water or breast milk. The bottle warmer will shut off automatically in the absence of such to prevent dry burning.
11. Do not move the appliance when in use.
12. To protect against electrical shock, do not immerse the power cord or plugs in water or other liquids.
13. Please charge the product only with a certified power adapter (5V 2A or 3A).
14. Unplug the power supply from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
15. When not in use, do not expose the product to direct sunlight, high temperatures, or disinfectants, as doing so may affect product performance.
16. Regularly check and remove debris from the charging port to avoid dust build-up and charging problems.
17. Fully charge the appliance before its first use.

18. Unplug the product when the battery is fully charged to avoid fire hazards.

19. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capacity, or by persons lacking the requisite experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

20. Do not use the appliance for anything other than its intended use.

SAVE THESE INSTRUCTIONS

PARTS LIST

User manual * 1	Bottle warmer * 1
Lid * 1	USB Type-C charging cable * 1
Cleaning brush * 1	Connector * 5

INSTRUCTIONS FOR USE


Fully charge the appliance before its first use.

1. Open the packaging, take out the bottle warmer, and ensure all parts are included.
2. Wipe the bottle warmer with a damp cloth.
3. Allow it to sit for 12 hours to eliminate any unwanted smells related to production, packaging, storage, and transportation.
4. Fill the baby bottle with water or breast milk, fasten the baby bottle with the connector, secure the connector with the bottle warmer, and then start with your preferred temperature.

SPECIFICATIONS

Model	MW03	Battery Capacity	14.8VDC 2500mAh 37Wh
Working Power	80W	Rated Input	5Vdc, 2A
Operating Temperature	90-122 °F / 32-50 °C	USB Port	USB Type-C
Charging Time	2-4 Hours	This product supports fast charging protocols of 5V = 3A/9V = 2A. It is recommended to use an adapter compatible with fast charging protocols.	

CONTROL PANEL

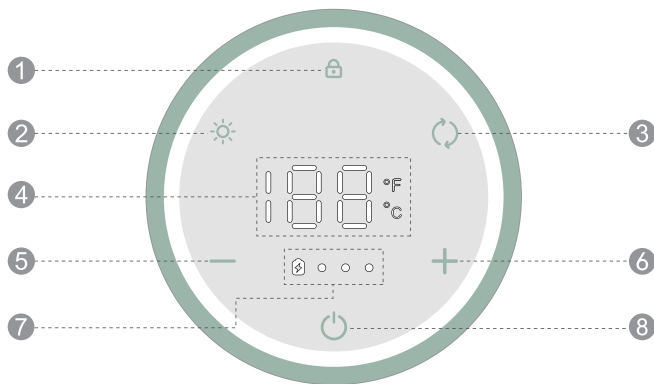

1 Milk Warming Setting /
Screen Lock

2 Light Brightness

3 °C / °F Selection

4 Temperature Display

5 Decrease Temperature

6 Increase Temperature

7 Battery Display

8 On / Off

USING THE BOTTLE WARMER

Step-by-step Instructions



1.  Select the connector that fits your baby bottle, and fasten the baby bottle with the connector.
2. Connect the baby bottle to the bottle warmer. Check whether the "▲" of the connector is aligned with the locking area on the warmer.
3. Turn the bottle warmer upside down.
4. Long press  to turn on the device.
5. Press  to select °C or °F.
6. Press " + " or " - " to adjust the temperature.
7. Press  to start the milk warming setting and lock the screen.

8. Wait until a warming cycle is completed.

Note: The appliance will shut off automatically after 15 seconds if the connected bottle with no milk or water inside.

Turning On the Bottle Warmer

Press and hold  for 2s to switch on the bottle warmer.

Turning Off the Bottle Warmer

Press  to switch off the bottle warmer.

Note: The appliance will shut off automatically after 15 seconds if the connected bottle with no milk or water inside.

Temperature Setting


With a temperature range from 90-122 °F / 32-50 °C, short press "  "or "  " to select the desired temperature.

Temperature Selection

Press  to switch between °F and °C.

CLEANING AND MAINTENANCE

1. Pour clean water or detergent into the heating chamber.
 2. Clean the machine with the brush provided.
- Caution: Do not immerse in any liquid for cleaning.

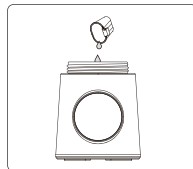

TROUBLESHOOTING

Problems	Solutions
Not working	Connect a baby bottle containing water or milk to the bottle warmer.
	Contact the manufacturer or its service center.
Milk leaks	Please check whether the connector is properly connected to the bottle and the warmer.
	Please check whether the adapter is tightly connected to the bottle and the warmer.
The warmer cannot be turned on	Take your finger off the power button, wait 20 seconds, then press and hold the power button for 2 seconds.
Heating time is too long	The Power is low. Charge the machine.
Slow charging	This product supports fast charging protocols of 5V = 3A/9V = 2A. It is recommended to use an adapter compatible with fast charging protocols.
Connector does not fit the bottle	Contact the manufacturer or its service center.



WARNING

- 1.Children should be supervised to ensure that they do not play with the appliance.
- 2.If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 3.This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.



Disposal statement

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)
(Applicable in countries with separate collection systems)

This marking on the product, accessories(including battery, power supply unit if have) or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local

government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Warranty:

We offer a two-year warranty period, Please contact the manufacturer in case of a claim under the warranty, the contact information please refer to last page of this user manual.

If you have to send the unit, enclose a copy of your receipt with clear statement of defect description.

The warranty terms are as below:

1) In case of a warranty claim, the date of purchase has to be proven by means of the sales receipt or invoice.

2) Repairs under warranty do not extend the warranty period either for the device or for the replacement parts

3) The following cases are excluded under the warranty

- All damages which are arisen due to improper treatment, e.g. nonobservance of the user instruction.
- All damages which are arisen due to repairs or tampering by the customer or unauthorized third parties.
- Damages which are arisen during transport from the manufacturer to the consumer or during transport to the service center.
- Accessories which are subject to normal wear and tear.
- Device damage due to privately disassemble devices.
- Liability for direct or indirect consequential losses caused by the unit is excluded even if the damage to the unit is accepted as a warranty claim.

DECLARATION OF CONFORMITY

EU Compliance Statement: Hong Kong Lute Technology Co., Limited. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the GPSR Directive (EU)2023/988, EMC Directive 2014/30/EU and ROHS Directive 2011/65/EU.

For the complete CE DOC, please check on this link:
<https://momcozy.com/pages/declaration-of-conformity-momcozy>

Manufacturer: Hong Kong Lute Technology Co., Limited
Address: Room 803B, 8/F, West Bund International Building,
290-296 Yuen Chau Street, Cheung Sha Wan, Kowloon, HongKong
Email: support@momcozy.com

EU Importer: Lutejiacheng Maternal and Child Products GmbH
Address: Betriebsstätte c/o Sonnenberg Services GmbH,
Sternstraße 67, 40479 Düsseldorf, Deutschland

Made in China



momcozy

Evolving for Mom and Cozy