


momcozy

High Chair DinerPal

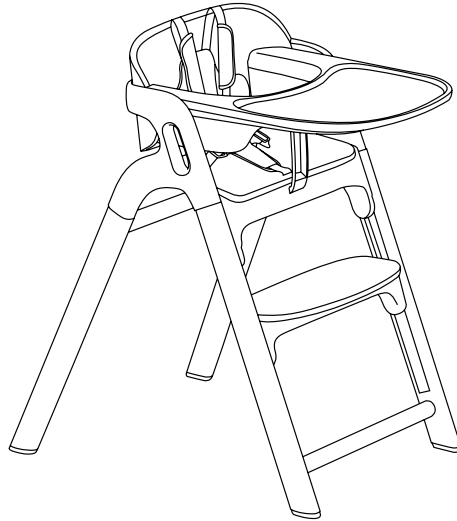

**Momcozy Hochstuhl DinerPal
Chaise haute Momcozy DinerPal
Seggiolone Momcozy DinerPal
Trona DinerPal de Momcozy**

**IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE
REFERENCE!**



**WICHTIG! AUFMERKSAM LESEN UND ZUM SPÄTEREN
NACHSCHLAGEN AUFBEWAHREN!**

**IMPORTANT ! VEULEZ LIRE CES CONSIGNES AVEC
ATTENTION ET LES CONSERVER POUR TOUTE RÉFÉRENCE
ULTÉRIEURE !**

**IMPORTANTE! LEGGERE ATTENTAMENTE E CONSERVARE
PER RIFERIMENTI FUTURI!**

**¡IMPORTANTE! ¡LEA ATENTAMENTE Y CONSERVE ESTE
FOLLETO PARA FUTURAS CONSULTAS!**

What' in the box

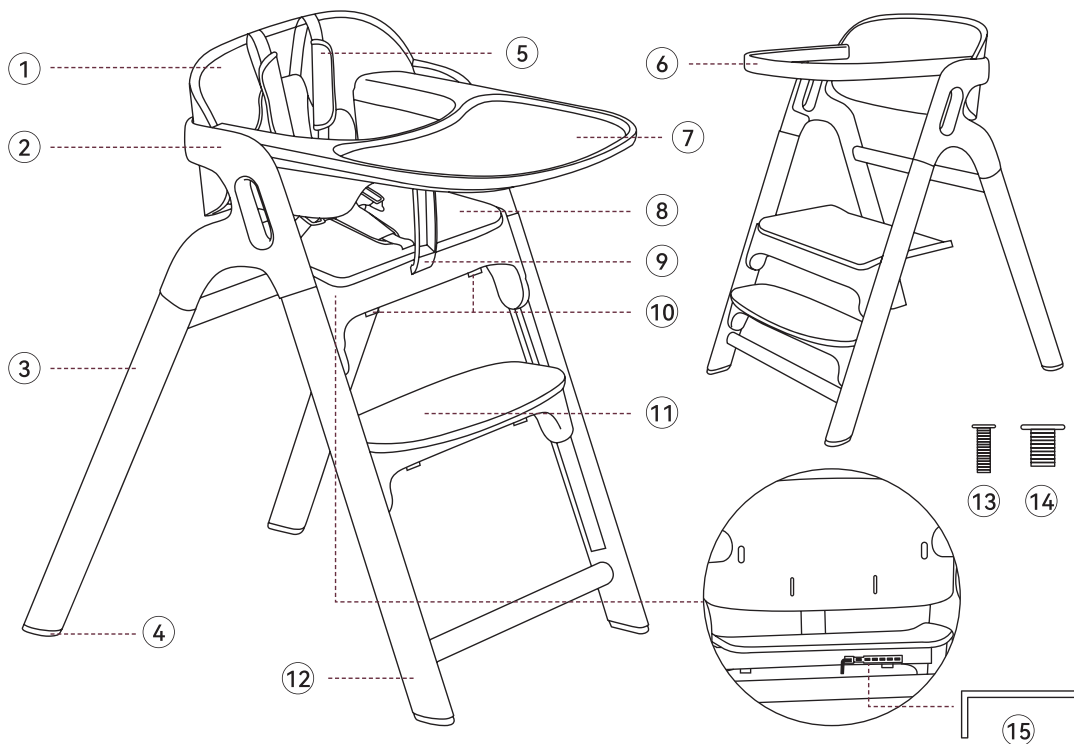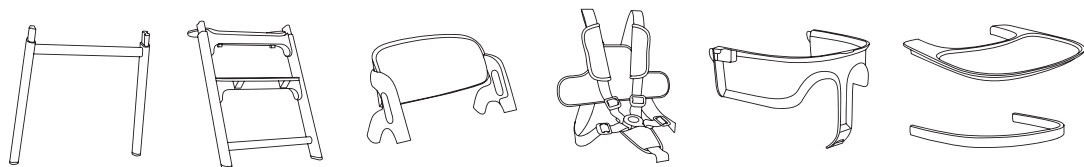

EN

1. Backrest
2. Armrest
3. Rear legs
4. Feet
5. Harness
6. Belly bar
7. Tray
8. Seat
9. Baby set
10. Adjustment buttons
11. Footrest
12. Front legs
13. Flat Head Socket Head Screws (M4 x 16mm)
14. Flat Head Socket Head Screws (M6 x 16mm)
15. Allen wrench (5/32in 4mm)

* Product depicted may not exactly the same in all regions.

DE

1. Rückenlehne
2. Armlehne
3. Hinterbeine
4. Füße
5. Gurt
6. Bauchbügel
7. Tablett
8. Sitz
9. Baby-Set
10. Einstellknöpfe
11. Fußstütze
12. Vorderbeine
13. Flachkopfschrauben mit Innensechskant (M4 x 16mm)
14. Flachkopfschrauben mit Innensechskant (M6 x 16mm)
15. Inbusschlüssel (5/32in 4mm)

* Das abgebildete Produkt ist möglicherweise nicht in allen Regionen identisch.

FR

1. Dossier
2. Accoudoir
3. Pieds arrière
4. Pieds
5. Harnais
6. Barre ventrale
7. Plateau
8. Siège
9. Ensemble bébé
10. Boutons de réglage
11. Repose-pieds
12. Pieds avant
13. Vis à tête plate avec prise hexagonale (M4 x 16mm)
14. Vis à tête plate avec prise hexagonale (M6 x 16mm)
15. Clé Allen (5/32in 4mm)

* Le produit présenté peut avoir de légères variations selon les régions.

IT

1. Schienale
2. Bracciolo
3. Gambe posteriori
4. Piedi
5. Imbracatura
6. Barra per la pancia
7. Vassoio
8. Sedile
9. Set per bambini
10. Pulsanti di regolazione
11. Poggiapiedi
12. Gambe anteriori
13. Viti a testa piatta con presa a brugola (M4 x 16mm)
14. Viti a testa piatta con presa a brugola (M6 x 16mm)
15. Chiave a brugola (5/32in 4mm)


* Das abgebildete Produkt ist möglicherweise nicht in allen Regionen identisch.

ES


1. Arnés
2. Patas traseras
3. Rear legs
4. Pies
5. Conjunto para bebés
6. Barra de seguridad
7. Asiento
8. Reposapiés
9. Bandeja
10. Botones de ajuste
11. Reposabrazos
12. Patas delanteras
13. Tornillos de cabeza plana con llave hexagonal (M4 x 16mm)
14. Tornillos de cabeza plana con llave hexagonal (M6 x 16mm)
15. Llave Allen (5/32in 4mm)

* Es posible que el producto representado no sea exactamente el mismo en todas las regiones.


5 Easy-to-Switch Seating Modes

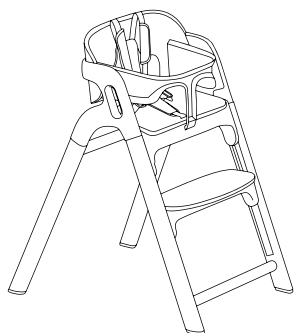

- EN Chair with Baby Set
- DE Stuhl mit Baby-Set
- IT Sedia con set per bambini
- FR Chaise avec ensemble bébé
- ES Silla con set para bebé

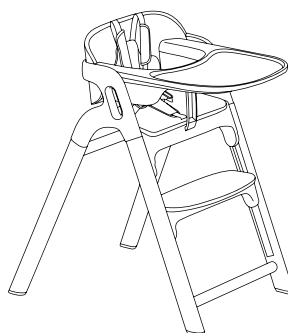


- EN Chair with Baby Set and Tray
- DE Stuhl mit Baby-Set und Tablett
- IT Sedia con set per bambini e vassoio
- FR Chaise avec ensemble bébé et plateau
- ES Silla con set para bebé y bandeja

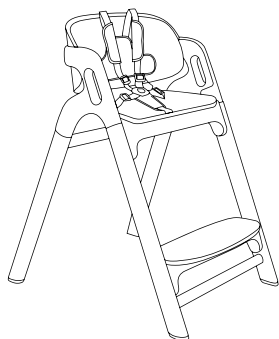

- EN Chair with Harness
- DE Stuhl mit Gurt
- IT Sedia con imbracatura
- FR Chaise avec harnais
- ES Silla con arnés




- EN Chair with Learning Tower Set
- DE Stuhl mit Lernturm-Set
- IT Sedia con set per torre di apprendimento
- FR Chaise avec ensemble tour d'apprentissage
- ES Silla con set de torre de aprendizaje

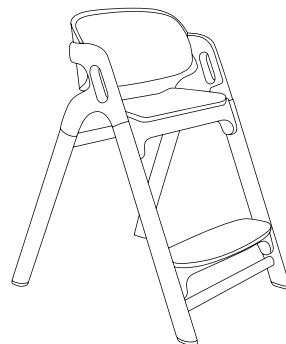


- EN Adult Chair
- DE Erwachsenstuhl
- IT Sedia per adulti
- FR Chaise adulte
- ES Silla para adultos




Set-up

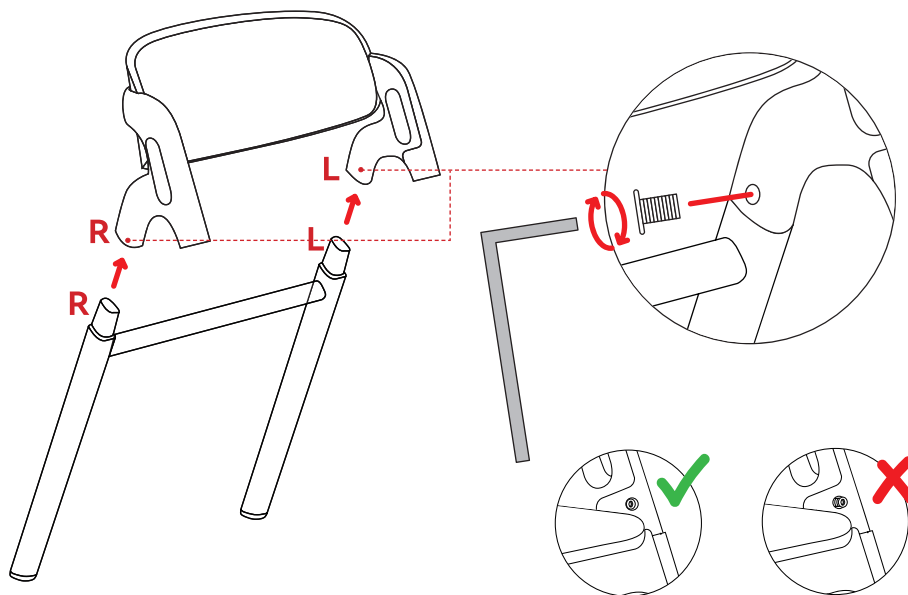

- EN Assemble the Rear legs
- DE Montage der Hinterbeine
- FR Assemblez les pieds arrière
- IT Assemblare le gambe posteriori
- ES Monte las patas traseras

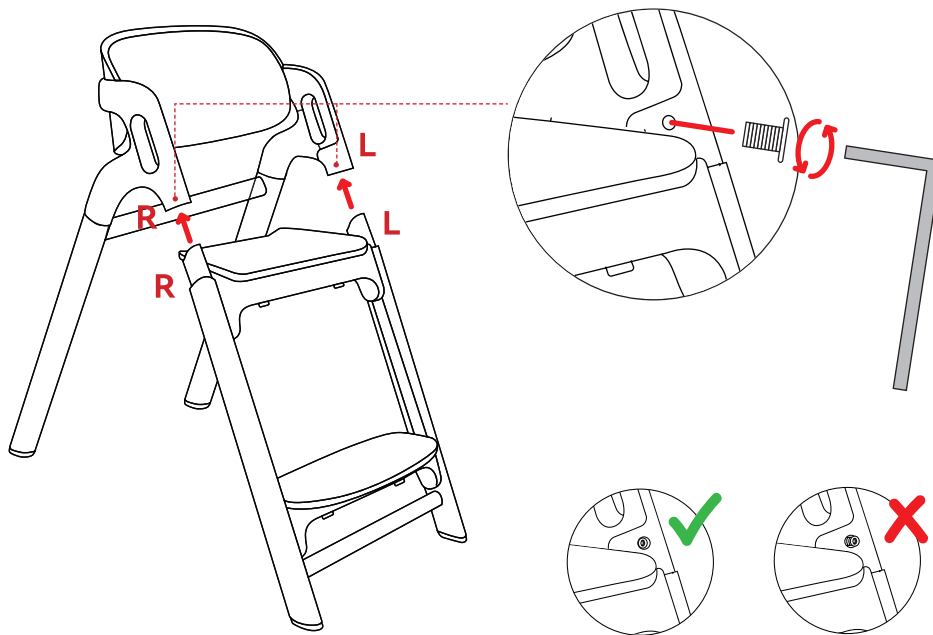

- EN Assemble the Front legs
- DE Montage der Vorderbeine
- FR Assemblez les pieds avant
- IT Assemblare le gambe anteriori
- ES Monte las patas delanteras

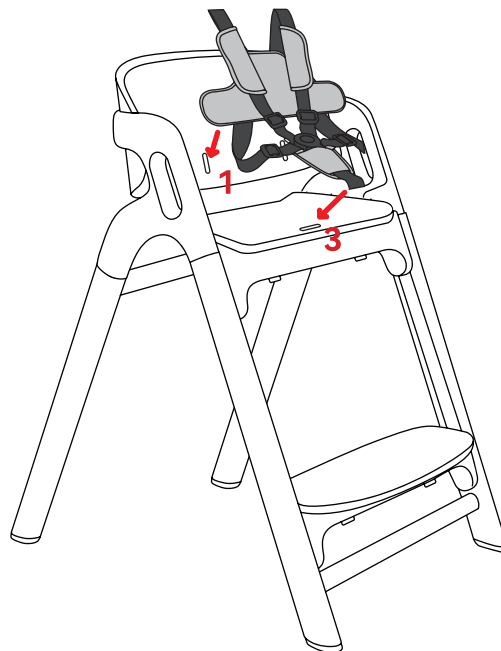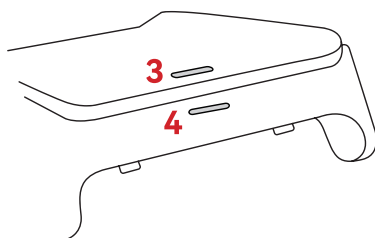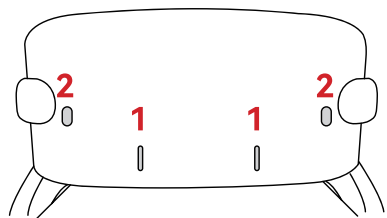



EN Attaching the Harness

DE Anbringen des Gurtes



FR Fixation du harnais

IT Fissare l'imbracatura

ES Fijación del arnés

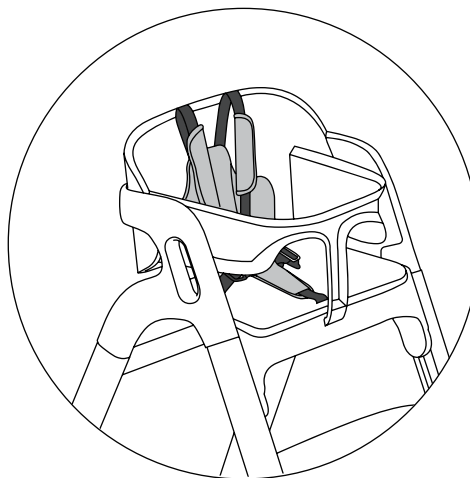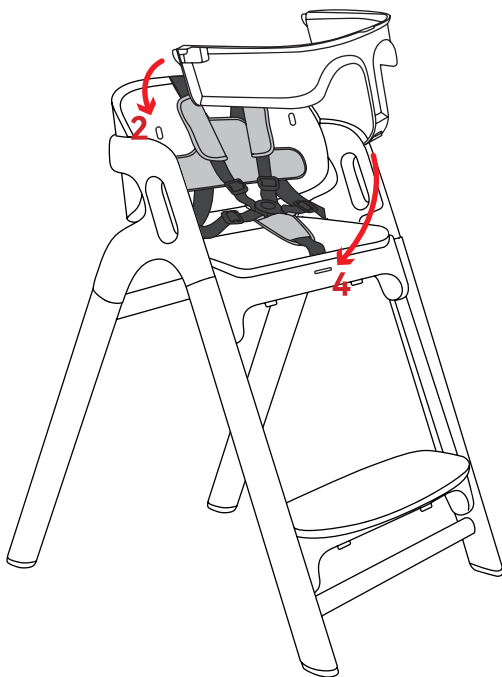

- EN** Attaching & Removing the Baby Set
- DE** Anbringen und Abnehmen des Babysets
- FR** Fixation et retrait du kit bébé
- IT** Fissaggio e rimozione del set per bambini
- ES** Acoplamiento y retirada del set para bebés

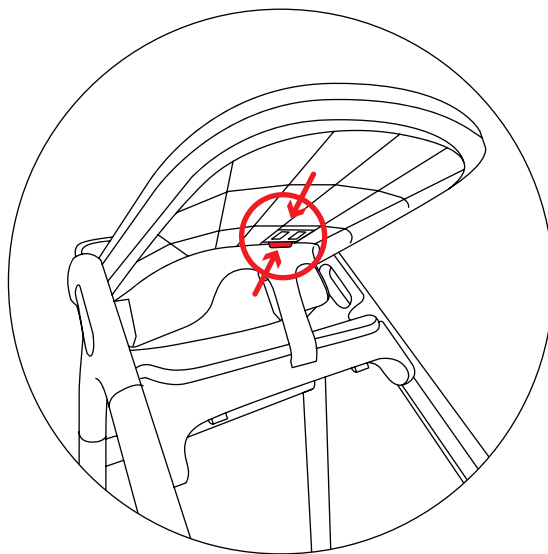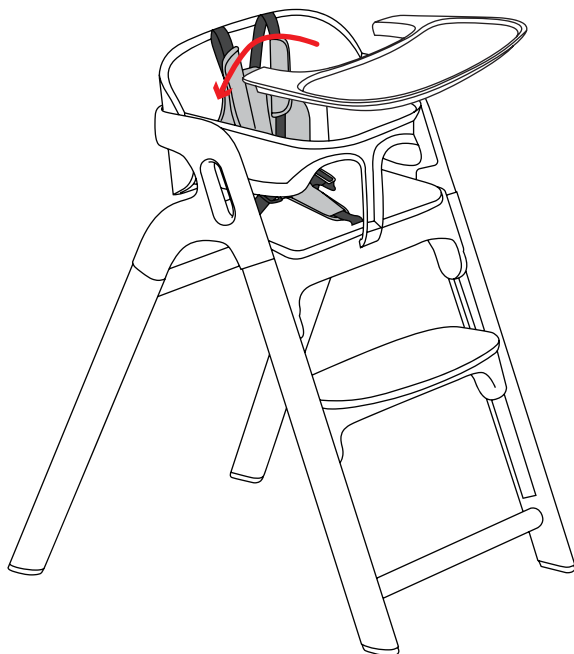




EN Attaching & Removing the Tray

DE Anbringen und Abnehmen des Tablett




FR Fixation et retrait du plateau

IT Fissaggio e rimozione del vassoio

ES Acoplamiento y retirada de la bandeja

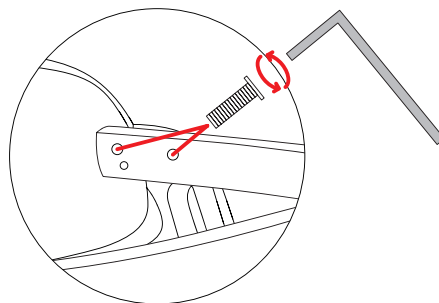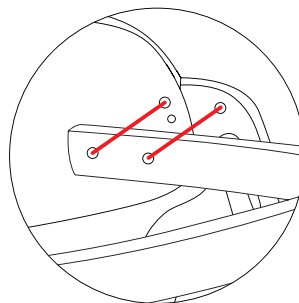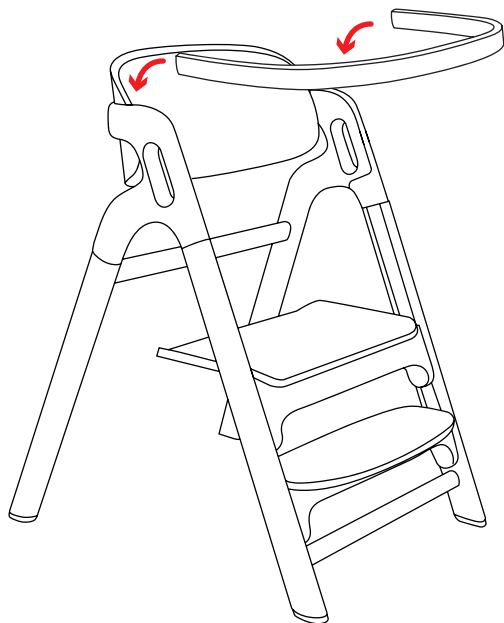

- EN** Assemble the Belly bar
- DE** Montieren Sie die Bauchstange
- FR** Montez la barre pour la pancia
- IT** Assemblate la barra abdominale
- ES** Ensamble la barra abdominal

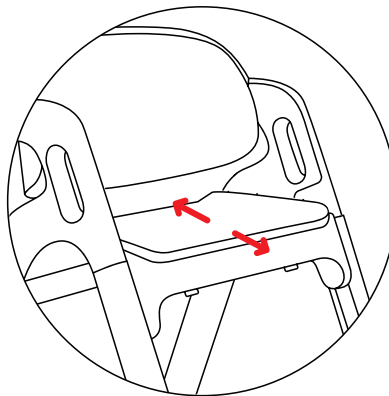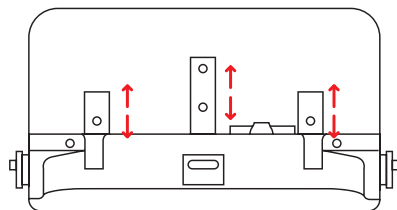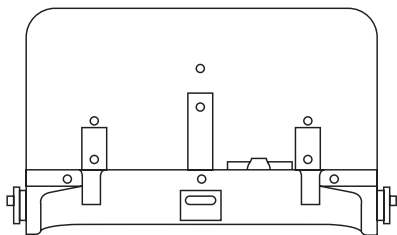


- EN Adjust the seat back and forth
- DE Stellen Sie den Sitz vor und zurück
- FR Ajustez le siège d'avant en arrière
- IT Regolare il sedile avanti e indietro
- ES Ajuste el asiento hacia adelante y hacia atrás

Seating Guide


Thank you for choosing Momcozy DinerPal. Our designs are child-oriented – safety and quality always comes first, stay comfortable knowing that you have made the best choice.

- A high chair convertible into an everyday chair, for babies and adults.
- Ergonomic support and ultimate comfort.
- Adjust the seat and footrest height in a second, with [7] settings available.
- Includes a tray with generous space for large suction bowls.
- Double as a learning tower.

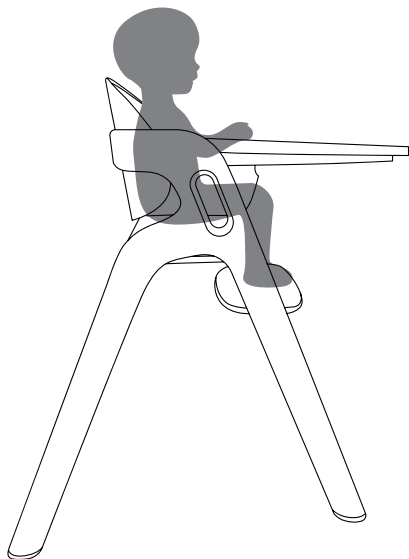

Tips:

1. Only adjust the chair when nobody is sitting on it!
2. If the feet are already touching the ground while sitting, you can hide the footrest position to create more leg space.

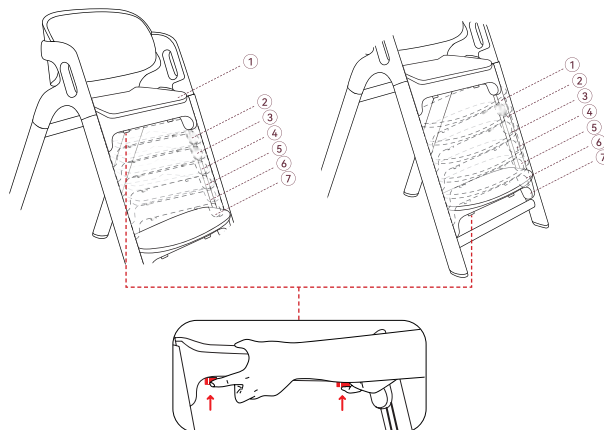

Seat positions

- ① 6 months-3 years with Momcozy DinerPal baby set
- ② - ⑦ 3+ years

Cleaning & maintenance tips

- Routinely inspect and maintain your Momcozy DinerPal.
- Keep the product clean at all times.
- Clean the hardware parts with a soft towel and lukewarm water and wipe off any remaining water with a dry cloth.
- The Momcozy DinerPal baby set and tray are dishwasher safe up to 65° C/149 F.
- Please be careful with colored food; the color of the baby set and tray may be affected by it.

IMPORTANT: Always check the fabric label before washing.

- All fabrics are machine washable at 30° C / 86 F.
- Make sure all closures are fastened.
- After washing the harness, please wipe the buckle and its clips with a cloth.

Certain types of floors may be sensitive to abrasion. It is the user's responsibility to decide whether Momcozy DinerPal is suitable for their flooring.

Limited warranty

Momcozy offers warranty on all its products. The warranty breakdown is:

If your Momcozy Dinerpal is registered within 28 days of purchase: 3 year manufacturers warranty from date of purchase.

If your Momcozy Dinerpal is registered after 28 days of purchase: 2 year manufacturers warranty from date of purchase.

All Accessories

1 year manufacturers warranty from date of purchase.

The manufacturer's warranty period for this product is started from the purchase date indicated on the sales receipt. Save the sales receipt in a safe place and make a copy of it. If you submit a claim under this manufacturer's warranty you must first contact your retailer. If your retailer is unable to repair the defect or if you have purchased the product directly from Momcozy, you can contact our Customer Support Team using our online contact form (<https://momcozy.com/pages/contact-us>) for Complaints that arise outside the manufacturer's warranty period you must also contact your retailer.

Momcozy reserves the right to amend these manufacturer's warranty provisions.

Your Momcozy Dinerpal is warranted to be free from manufacturing defects for a period of 1 years from the date of purchase under normal use and in compliance with the operating instructions.

This warranty is not transferable and extends only to the original retail purchaser and is only valid when supplied with proof of purchase from an authorized retailer. Proof of purchase must be retained for this warranty. The warranty is valid only in the original country of purchase. This warranty is subject to the conditions set forth by country in which the items were purchased. Conditions may vary. Momcozy will not ship replacement or repair parts outside the country of purchase.

Momcozy will provide replacement parts or conduct repairs as determined fitting by the company. Momcozy reserves the right to exchange item with a replacement part. Some parts may be replaced with newer model parts as the item is improved over time.

What is covered by the guarantee

- All manufacturing defects in the metal frame & plastic components
- All manufacturing defects in the wooden parts: legs, foot-and backrest and seat except for slight color and outlook differences, which may be due to the fact that wood is a natural product
- All parts of the harness
- Seams in the fabrics
- Buttons on the fabrics

This warranty does not cover:

- Defects caused by misuse or poor maintenance. (Please refer to the product instruction booklet for guidance on item use and maintenance).
- Damage caused by improper installation of Momcozy Dinerpal parts and/or accessories. (Please refer to product instruction booklet for guidance on item assembly and use).
- Incorrect installation of third-party parts that are incompatible with the product.
- Damage caused by corrosion mold or rust due to poor maintenance, service or storage. Momcozy DinerPal is meant to be used indoor.
- Damage resulting from normal wear and tear.
- Damage or degradation caused by the sun, sweat, detergents, damp storage conditions or frequent washings.
- Damage caused by use of colored food.
- Repairs or modifications carried out by a third party.
- Product purchased from an unauthorized retailer. (Approved retailers are listed on our website momcozy.com).
- Second owners and users other than the registrant.
- Damage resulting from airline shipping and handling. Carefully inspect your damage immediately file a claim with the carrier.
- Products Involved in an accident.
- Customer dissatisfaction with the product in terms of fit, weight, functionality, colour or design.

WARNINGS

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE!

PRODUCT IN GENERAL

1. The product and its components are meant to be used indoors.
2. Do not use the product unless all components are correctly fitted and adjusted.
3. All assembly fittings should always be tightened properly.
4. Be aware of the risk of open fire and other sources of strong heat in the vicinity of the product.
5. Be aware of the risk of tilting when your child can push its feet against a table or any other structure.
6. Do not use the chair if any part is broken, torn or missing.
7. Do not use accessories or replacement parts other than those approved by the manufacturer.
8. To avoid injury, keep children away when assembling or disassembling the chair.
9. DO NOT place this product near a window as it can be used as a step by the child and cause the child to fall out of the window.
10. DO NOT place this product near a window where cords from blinds or curtains could strangle a child.
11. The chair without accessories is in compliance with EN 17191; EN 12520.
12. The chair without accessories is suitable for the 3 years old child to adult.
13. Certain types of floors may be sensitive to abrasion. It is the user's responsibility to decide whether Momcozy DinerPal is suitable for their flooring.
14. Stay near and watch child during use.
15. The child should be secured in the high chair at all times by the restraint system.
16. It is recommended that the high chair be used in the upright position only by children capable of sitting upright unassisted.

FOR USE WITH BABY SET WITH TRAY

17. Never leave the child unattended.
18. Always use restraints, and adjust to fit snugly.
19. Tray is not designed to hold child in chair.
20. Do not use the chair with baby set until the child can sit up unaided.
21. The chair with baby set is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15 kg, whichever comes first. The chair with baby set is in compliance with EN14988: 2017+A2 : 2024, 16 CFR 1231 ; ASTM F404-21.
22. Fall Hazard: Children have suffered severe head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly.



WARNING

USE WITH LEARNING TOWER SET

Read instructions before assembling and using the Learning Tower Set. The safety of your child is your responsibility.

1. Never leave the child unattended.
2. Assemble and attach the product according to user instructions.
3. Do not assemble the ring while the child is standing or sitting on the chair.
4. Ensure that the seat board is fixed tightly and locked in after adjusting the height.
5. Be aware of the risk of open fire and other sources of strong heat in the vicinity of the product.
6. DO not carry the learning tower while the child is inside.
7. This product is for indoor use only.
8. Keep the Learning Tower inaccessible to children while not in use.
9. This product is not a toy. Do not let children play with this product.

www.momcozy.com

 @momcozy

 @momcozy

 @momcozy

 @momcozy

 @momcozyofficial



Prolinx Global LTD
27 Old Gloucester Street London, WC1N 3AX, UK



Prolinx GmbH
Brehmstr. 56, 40239 Duesseldorf Germany

Manufacturer: Hong Kong Lute Technology Co., Limited
Address: Room 02, 21/F, Hip Kwan Commercial Building, 38 Pitt Street, Yau Ma Tei,
Kowloon, Hongkong

US Importer:
Company: SHARE INFO INC.
Address: 3557 158th St Flushing, NY 11358 USA

Product Name: High Chair
Model Number: GC01
E-mail: support@momcozy.com
Phone: 001 (929) 410-2964
Execution standards: EN14988:2017+A2:2024; EN 17191;
EN 12520; 16 CFR 1231 ; ASTM F404-21

MADE IN CHINA

momcozy