

momcozy

INSTANT WATER WARMER **FD03**

User Manual

Please read the user manual carefully
before using this appliance.

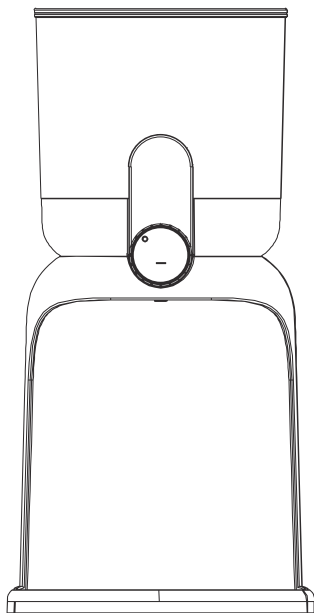 


TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	02
CONTENTS IN THE BOX	04
SPECIFICATIONS	04
PRODUCT PARTS	05
CONTROL PANEL	06
BEFORE USING THE WATER WARMER	06
USING THE WATER WARMER	07
PREPARING FOR USE	07
CLEANING AND MAINTENANCE	09
TROUBLESHOOTING	10
DISPOSAL	12
FCC COMPLIANCE	12

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS APPLIANCE WHEN USING ELECTRICAL APPLIANCES, PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING :

1. Read all instructions before using.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
5. Close supervision is necessary when any appliance is used by or near children.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven. Extreme caution must be used when moving an appliance containing hot liquids.
12. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.
15. Any servicing should be done only while the appliance is disconnected from the power supply circuit.
16. Avoid touching the hot surface of the water tank when the water is heated, as it becomes very hot.
17. Children should not touch or use this device. Always keep children away from the device and ensure close supervision if it is used near children.
18. Before servicing, unplug the cord from wall outlet. Do not leave the cord within the reach of children.
19. Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
20. Do not spill liquid on the cord or plug.
21. Do not move appliance while in use or when it contains hot liquids.
22. For your safety, please be cautious when using the water warmer. The water in the tank is hot. Do not tip or push the machine, as this could cause hot water to spill and result in burns.

SAVE THESE INSTRUCTIONS


CONTENTS IN THE BOX

Bottom of water warmer * 1	Water tank with lid* 1
User manual* 1	


SPECIFICATIONS

Product Name	Instant Water Warmer	Model Number	FD03
Rated Voltage	120V~	Rated Wattage	480W
Rated Frequency	60Hz		

 PRODUCT PARTS

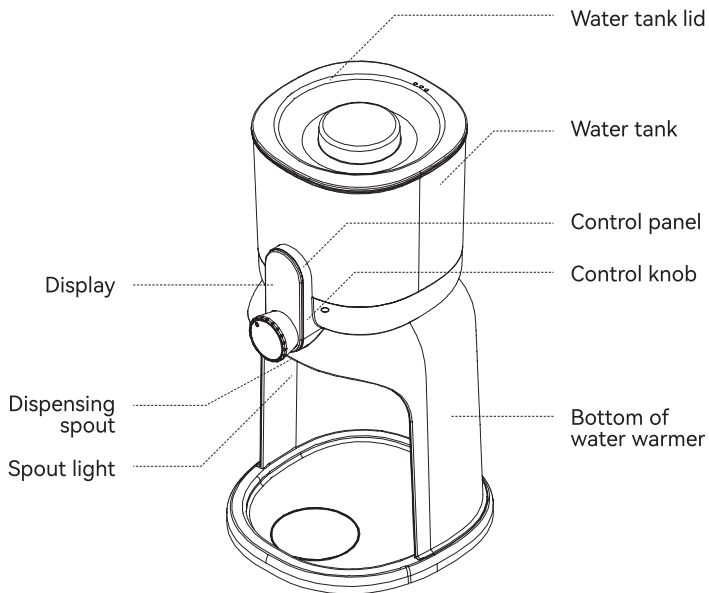

CONTROL PANEL

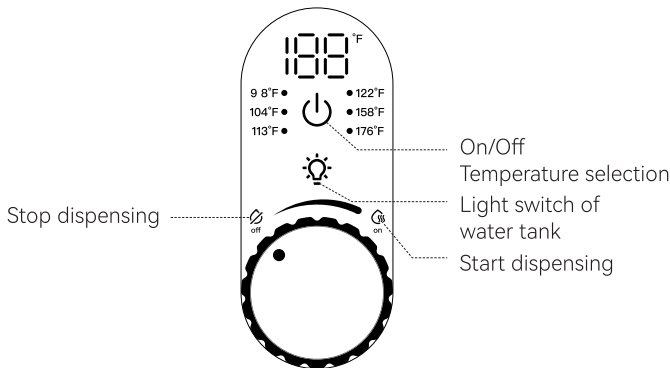 

BEFORE USING THE WATER WARMER

1. Before the first use, clean the water tank with soapy water and vinegar, or allow it to sit for 12 hours without the lid to remove any unwanted smells from production, packaging, storage, and transportation.
2. Do not use tap water directly. Please use bottled water, cooled boiled water, or distilled or purified water that suitable for preparing formula milk.
3. Do not plug in the unit without adding water to the water tank.
4. Never fill the water tank with formula.
5. Never pour boiling water into water tank.
6. Place the bottle under the dispensing spout and try to center it.

USING THE WATER WARMER

Explanation of Settings

Power button: Long press  for 2 seconds to turn the water warmer on. The digital display will display “98°F” by default.

Temperature selection: Short press  to select the desired temperature from 98°F, 104°F, 113°F, 122°F, 158°F, 176°F.

Light brightness selection: Short press  to turn off the water tank light, or select the desired brightness.

Water dispensing: Rotate the control knob to start or stop dispensing water.

PREPARING FOR USE

1. Wash the water tank and lid before the first use.

CAUTION: Do not plug in the machine without first filling the water tank with water.

2. Remove the lid and fill the water tank with water. The water level must always remain below the maximum fill line.

3. Cover the top of the water tank with the lid.

4. Before adding water to the tank, ensure the knob is turned to the water-off position to prevent leakage.

5. Do not remove the water tank when filling it. Doing so may cause overflow during movement of re-assembly. It's recommended to use a container to fill water, then pour it into the tank.

6. Always keep water level between the MIN and MAX fill lines.

7. Before adding water to the tank, ensure the knob is turned to the water-off position to  prevent leakage.

 
8. For your safety, please be cautious when using the water warmer. The water in the tank is hot. Do not tip or push the machine, as this could cause hot water to spill and result in burns.

 
Using the Warmer

- ① Fill the tank with as much water as you plan to use in a day. Always keep the water level between the MIN and MAX fill lines. Do not remove the water tank when filling it.
- ② Plug in the power cord and long-press the power button  for 2s. The machine will beep and the display will light up.
- ③ Short-press  to select the desired temperature.
- ④ When the selected temperature on the screen flashes, wait 5 seconds, then the machine will start working automatically and heat up to the set temperature.
- ⑤ When finished heating to the set temperature, rotate the knob to dispense water.

Correct way to add water:

- Please use bottled water, cooled boiled water, or distilled or purified water that are suitable for preparing formula milk.
- Never pour boiling water into the water tank.
- Do not remove the water tank when filling it. Doing so may cause overflow during the reassembly stage. It is recommended to use a container to fill water, then pour it into the tank.

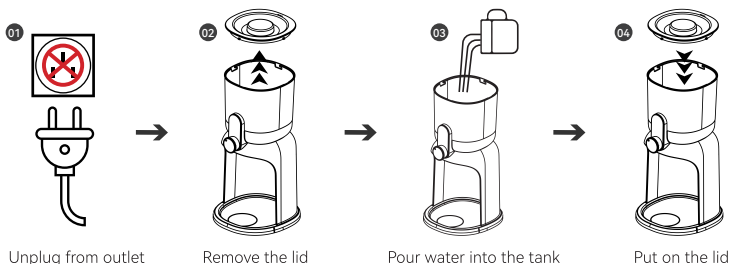

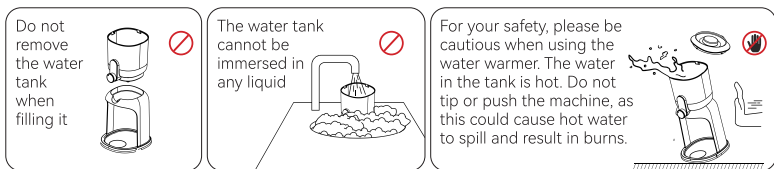

CLEANING AND MAINTENANCE

1. After use, unplug the water warmer and let it cool down.
2. Rinse and dry the water tank and lid thoroughly before each use.
3. Wipe the base with a clean damp cloth or sponge. Do not use abrasives, anti-bacterial cleaning agents, chemical solvents or sharp tools to clean the warmer.
4. When the device is not in use for a long time, pack it in a plastic bag to prevent dust and other particles from entering it.

Monthly Descaling Instructions

To prevent scale buildup in the water warmer, follow these steps.

1. Unplug the machine.
2. Empty the water tank. Pour in distilled vinegar and purified water
Caution: If using a descaler purchased yourself, please follow the listed directions to ensure that descaling is performed correctly..
3. Put a container under the spout that can hold the entire amount of liquid in the tank.
4. Turn the knob switch to the water dispensing position to dispense and empty the water tank.
5. Clean and rinse the water tank, then replace it on the machine.
6. Refill the tank with water and resume normal use.

TROUBLESHOOTING

Symptom	Cause	Solution
The device does not start.	The power cord is not plugged in.	Verify that the plug is securely inserted into the power outlet.
	The device does not switch on.	Long press the power button on the screen
	The appliance is used on a voltage outlet over 120V, 60Hz.	Unplug the cord and make sure the warmer is used under the rated voltage.
Temperature on screen higher than set temperature	A higher temperature setting was selected initially, and then the user switched to a lower setting during heating.	Ensure you select the correct temperature setting before starting If the water exceeds the desired temperature, wait for it to cool to the set temperature.
	Machine malfunction.	Contact customer service for repair or request a replacement.

Symptom	Cause	Solution
The buttons not responding	Wet fingers affect button sensitivity.	Dry your hands before operating the machine.
	Incorrect touch on the button area.	Ensure your fingers touch the correct button area.
Water Outlet Leaks	The knob is not fully turned to the water-off position.	Check if the knob is fully turned to the of position and aligned with the corresponding symbol.
	Machine malfunction.	Contact customer service for repair or request a replacement.
Unwanted smells	Smells from production. packaging, storage and transportation.	Clean the water tank with soapy water and vinegar.

If a fault persists after following the troubleshooting instructions above, please contact the Customer Support Team for assistance

DISPOSAL



At the end of the product life cycle , do not throw this product into the normal household garbage, but bring it to a collection point for the recycling of electronic equipment and battery. Waste Electrical and Electronic Equipment may have potentially harmful effects on the environment . Improper disposal may lead to the accumulation of harmful toxins in air , water and soil , which is harmful to human health . you have obligation to dispose of device correctly. Consult your municipal authority for information about disposal.

FCC COMPLIANCE

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

UK	REP	Prolinx Global LTD 27 Old Gloucester Street London, WC1N 3AX, UK
-----------	------------	---

EC	REP	Prolinx GmbH Brehmstr. 56, 40239 Duesseldorf Germany
-----------	------------	---

Manufacturer: Hong Kong Lute Technology Co., Limited
Address: Room 02, 21/F, Hip Kwan Commercial Building, 38 Pitt Street,
Yau Ma Tei, Kowloon, Hongkong
Email: support@momcozy.com

US Importer:

Company: SHARE INFO INC.
Address: 3557 158th St Flushing, NY 11358 USA