 


MOMCOZYPET

PG01

Pet Grooming Vacuum Kit USER MANUAL

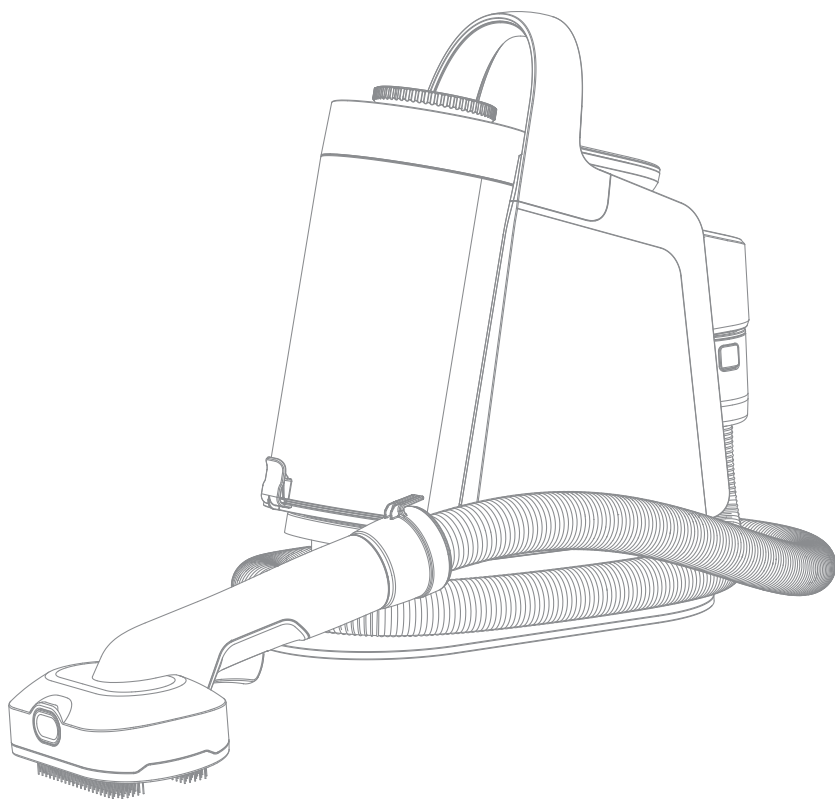

Please read the user manual carefully before using this appliance

CONTENTS

SAFETY INSTRUCTIONS	1
WARNING	4
ACCESSORIES LIST	8
INSTALLATION INSTRUCTIONS	9
MAIN UNIT INSTRUCTIONS	10
ACCESSORIES INSTRUCTIONS	10
CLEANING THE DUST CUP	11
CLEANING THE FILTER COMPONENTS	12
DEVICE STORAGE	13
SPECIFICATIONS	14
DECLARATION	14

SAFETY INSTRUCTIONS

- This product is intended for household use only and should not be used for commercial or industrial purposes. Avoid using it outdoors or in damp areas.
- Do not allow children or individuals with weak physical or mental abilities to use this product alone.
- When using the product, ensure a safe environment and supervise its use under the guidance of someone who understands its safe operation and potential risks. Children should not be allowed to use it without proper supervision.
- Exercise full caution when using the product around children and pets. Ensure that children and pets do not play with the product.
- Avoid touching the power plug and the product with wet hands. Do not attempt to suck up damp hair or liquids.
- Do not use this product if the power cord or power plug is damaged.
- In the event of product malfunction, damage, or immersion in liquid, please contact the company immediately.
- Avoid disassembling this product, as incorrect assembly may cause electric shock or fire. If repairs are needed, please contact the company.
- Refrain from vacuuming highly flammable substances (e.g., cigarette butts) and avoid using it in environments or near flammable gases.
- While using the product, do not pull the power cord, place heavy objects on top of the machine, or close doors with the wire in between.
- Do not suck up smoke, matches, hot ashes, or any other flammable, smoky, or hot items.

SAFETY INSTRUCTIONS

- **Before use, ensure that the opening is unblocked. Always unplug the plug from the socket before maintenance.**
- **Avoid using or storing this product outdoors or in humid places, such as the bathroom.**
- **Do not use air fresheners or scented products as filters, as these chemicals may cause fires.**
- **Use the product only under the specified voltage, which can be found on the bottom of the machine.**
- **Please do not operate or unplug the power cord with wet hands.**

To avoid malfunctions and electric shock, it is strictly prohibited.

- **Do not vacuum highly flammable materials (such as cigarette butts).**
To prevent fires or explosions, do not use the product in places with flammable liquids or combustible materials.
- **During the initial use, there may be an odor, but it will not cause any adverse effects on the body.**

While using the product for the first time, you may notice an odor, but it will dissipate over time. Please understand. However, if a burnt smell persists, please stop using it immediately!

- **Please regularly clean the dust cup and filter.**
Using the product when the dust cup and filter are dirty may cause product malfunctions.
- **During maintenance, always ensure that the power cord is disconnected.**
Performing maintenance while the power is on may pose a risk of electric shock or injury.

SAFETY INSTRUCTIONS

- **If the temperature of the product rises unusually, please stop using it immediately.**

If the motor overheats or if there is a blockage in the suction, please stop the operation, remove the cup, and ensure that the intake and filter are clean. Wait for 60 minutes before restarting.

- **Before use, please make sure all filters are installed.**
Using the product without filters may damage the motor.
- **If the power cord is damaged, it must be replaced by the manufacturer, its service department or a specialist from a similar department in order to avoid danger.**

WARNING

WARNING

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS
BEFORE USING (THIS APPLIANCE)**

WARNING

WARNING — To reduce the risk of fire, electric shock, or injury:

a) Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing

b) **WARNING** — To Reduce The Risk Of Electric Shock – Do not use outdoors or on wet surfaces.

c) Do not allow to be used as a toy. Close attention is necessary when used by or near children.

d) Use only as described in this manual. Use only manufacturer's recommended attachments.

e) Do not use with damaged cord or plug. If appliance is not working as it should has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

f) Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

g) Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

h) Do not handle plug or appliance with wet hands.

i) Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

j) Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

k) Turn off all controls before unplugging.

l) Use extra care when cleaning on stairs.

m) Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

n) Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

o) Do not use without dust bag and/or filters in place.

WARNING

SAVE THESE INSTRUCTIONS

Read all instructions before using

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions are required to always be followed, including the following:

Read all instructions before using (this appliance)

DANGER — To reduce the risk of electric shock:

1. Do not use while bathing or in a shower.
2. Do not place or store appliance where it is able to fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
3. Except when charging, always unplug this appliance from the electrical outlet immediately after using.
4. Unplug this appliance before cleaning.

WARNING — To reduce the risk of burns, fire, electric shock, or injury to persons:


1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
2. Use this appliance only for its intended use as describe in this manual. Do not use attachments not specified by the manufacturer.
3. Never operate this appliance when it has a damaged cord or plug, when it is not working properly, after it has been dropped or damaged, or after it has been dropped into water. Return the appliance to a service center for examination and repair.
4. Keep the cord away from heated surfaces.
5. Keep the air openings free of lint, hair, and similar objects.

WARNING


8. Do not use this appliance with a damaged or broken comb, as it has the potential to result in facial injury.
9. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to off position (e.g. "0") then remove plug from outlet.
10. The appliance is intended for trimming purposes only.
11. Household use only.
12. **WARNING:** Cutting blades may become hot after prolonged use.
13. **WARNING:** Keep the appliance dry.
14. Do not charge, place or leave the appliance where it is expected to be: 1) Subject to damage by an animal, or 2) Exposed to weather.

SAVE THESE INSTRUCTIONS


ACCESSORIES LIST

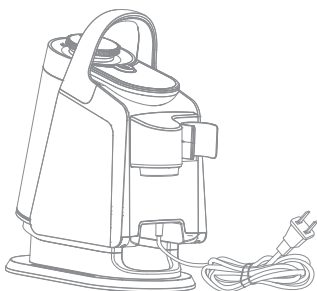

Main Unit*1

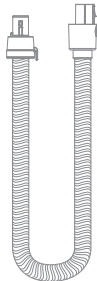

Hose*1

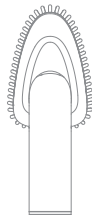


Cleaning Brush*1



Crevice Tool*1



Electric Clipper*1

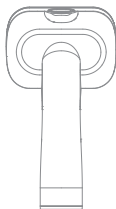

Grooming Comb
Handle*1



Electric Clipper
Charging
Cable*1



Storage bag*1



Guard Comb*2




Knotted Comb*1



Needle Comb*1



Lubricating oil*1

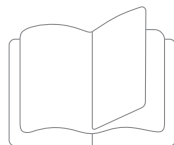


User Manual*1

Unique Identifier


If you notice anything missing from the package, please contact our purchasing channel for assistance.

Or email us at support@momcozy.com.

INSTALLATION INSTRUCTIONS

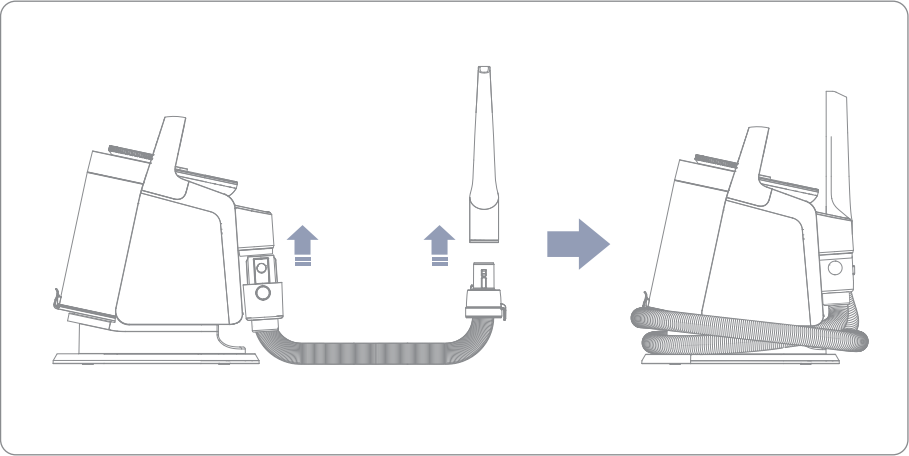


Assemble the parts gently by following the direction indicated by the arrow, and remove them in the opposite direction as indicated.

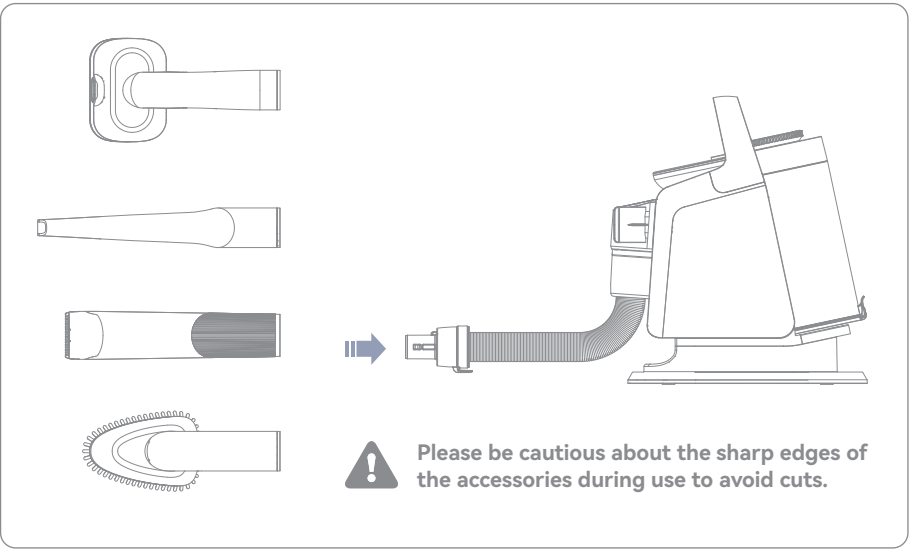


Connect the accessories to the main unit using the hose.

MAIN UNIT INSTRUCTIONS

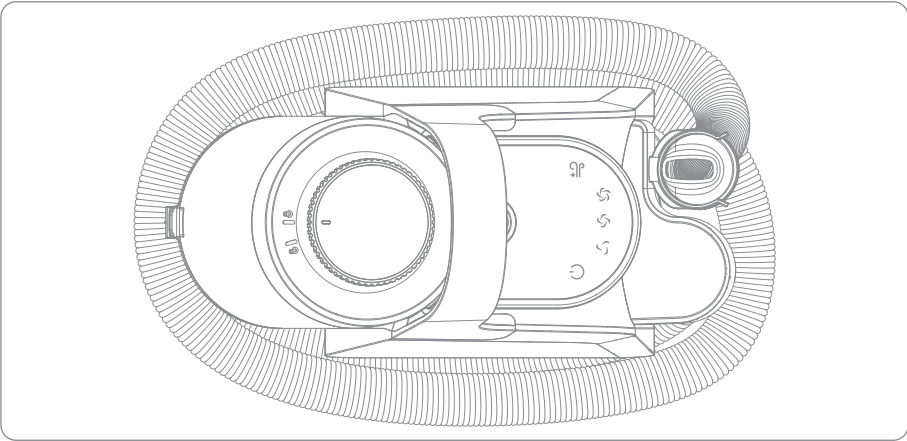

Main Unit Control Panel

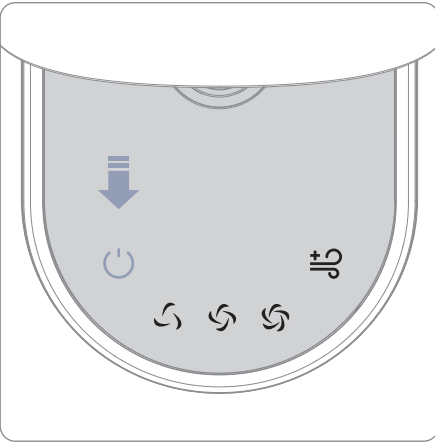

Power Switch

Press the power switch button on the main unit to turn on the power. To turn off the power, press the button again.



Mode Switch Button


For stronger suction, press the mode switch button while in silent mode to switch to strong mode. To switch back to silent mode, press the button again.

 first gear

 second gear

 third gear


ACCESSORIES INSTRUCTIONS

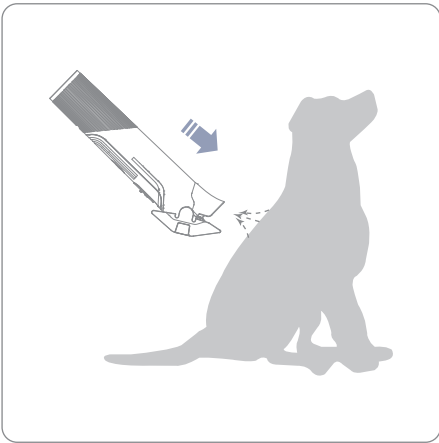

Electric Clipper

Trim and vacuum pet hair without spreading it.

Note: When using, be aware of the blade and sharp edges to avoid excessive force that could cause cuts to the skin.

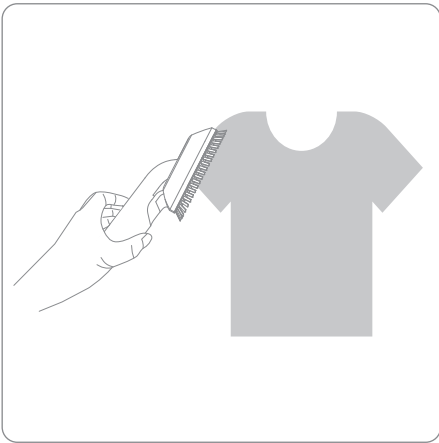


Fabric & Hair Cleaning Brush

Used to remove fallen hair from clothing and your pet's body.



Needle Comb

Effectively cleans loose and old hair and debris from your pet's body while fluffing up the coat.

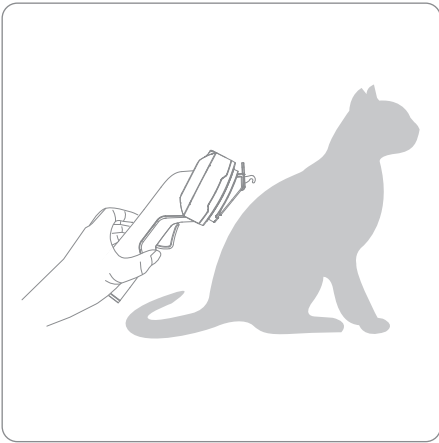


Knotted comb

Thins pet's coat for a grooming effect.


Note: Avoid applying excessive force to sensitive areas of your pet's skin to prevent cuts.

CLEANING THE DUST CUP

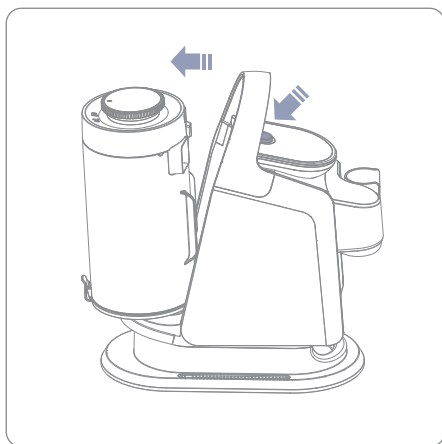


1. Remove the Dust Cup

Press the button in the direction of the arrow and pull it outwards.

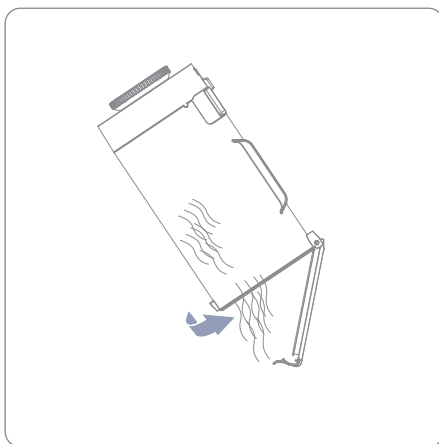


2. Open the Lid and Empty

Press the bottom lid release button of the dust cup to open it and empty the debris.

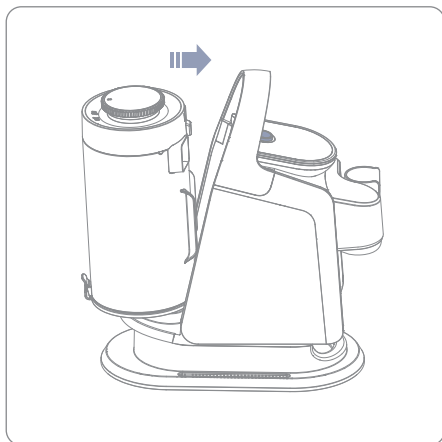

3. Reinstall the Dust Cup to the Main Unit


Place the bottom of the dust cup on the main unit's bracket rotate it in the direction of the arrow to align it with the main unit, and secure it in place.

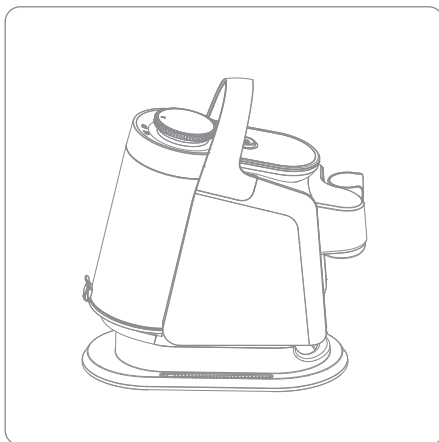

4. Cleaning is Complete

Note: Handle the dust cup with care when removing or inserting it. If the removed dust cup is cleaned after emptying the debris, make sure to let it dry completely before reinstalling it to prevent the motor from getting wet and causing electric shock or damage to the machine.


CLEANING THE FILTER COMPONENTS

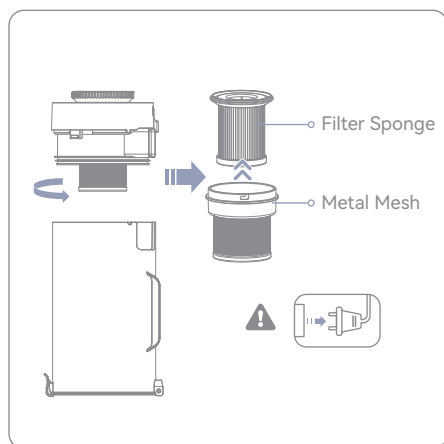

1. Remove the dust cup and take out the hypha and metal mesh.




2. Rinse them with tap water and let them air dry.

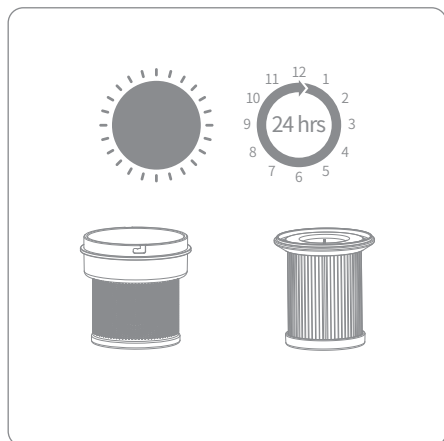

3. Drying

Place them in a well-ventilated area for at least 24 hours to ensure thorough drying.

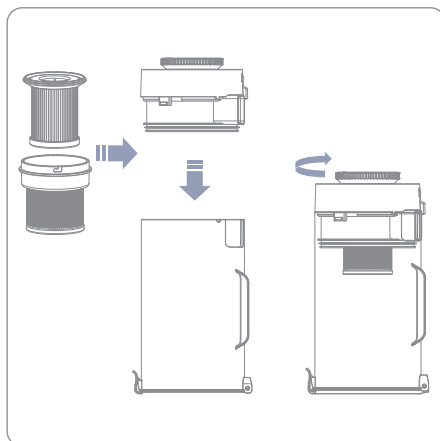


4. Installation

After they are completely dry, reinstall the hypha and metal mesh and put them back in their original positions.


Note:

- Clean the hypha and metal mesh with cold water at least once a month. The maintenance frequency may vary depending on usage and condition. Remember to disconnect the power and unplug the device from the socket before replacing or cleaning the filter components.
- Make sure to install the hypha and metal mesh after they are fully dried.
- Using them without proper drying may result in electric shock or malfunction.

DEVICESTORAGE

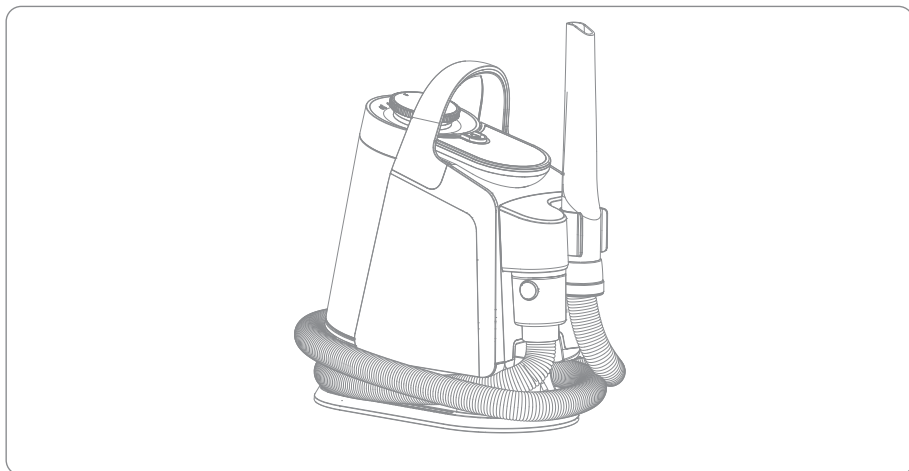

Hose Storage

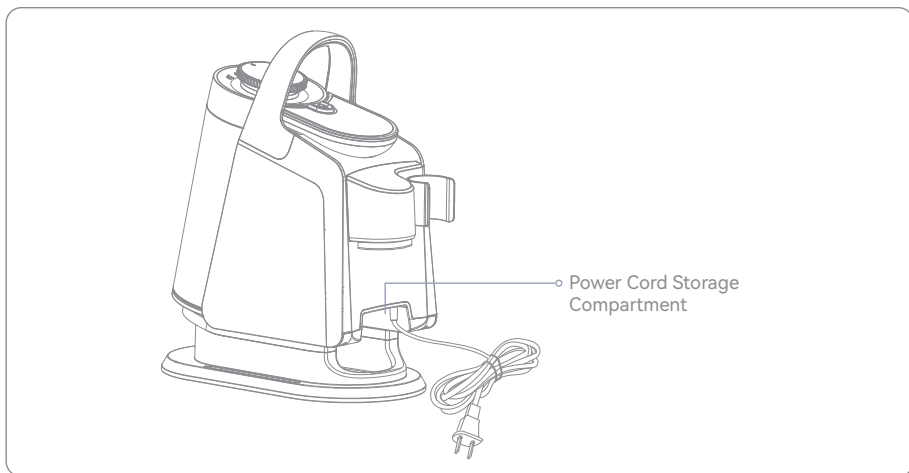

Power Cord Storage

After properly winding the power cord, place it inside the power cord storage compartment on the side of the machine.

SPECIFICATIONS

Product Name	Vacuum Cleaner		
Product Model	PG01	Materials	ABS/PP
Dust Cup Capacity	Maximum Capacity:2L	Suction Power	30W
Size Specifications	325L*165W*360D mm	Rated Power	320W
Hose length	1.7m	Rated Voltage	120V ~
Rated Frequency	60HZ	Power Support	Corded,2.5m cord length
Attachments	Electric Clipper,Cleaning Brush,Needle CombBlade Comb,Sofa Brush		
Noise	51db-62db	Weight	2.2KG
Clipper inputVoltage	5V --- 1A	Clipper Battery Capacity	1500mAh

Declaration

Supplier's Declaration of Conformity Compliance information Unique identifier

Product Description: Pet Grooming Vacuum Kit

Model Number: PG01

Trade Name: MomcozyPet

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party-U.S.Contact information

Company :SHARE INFO INC

Address: 3557 158th St Flushing,NY 11358 USA

Telephone or internet contact information: support@momcozy.com