 


momcozy

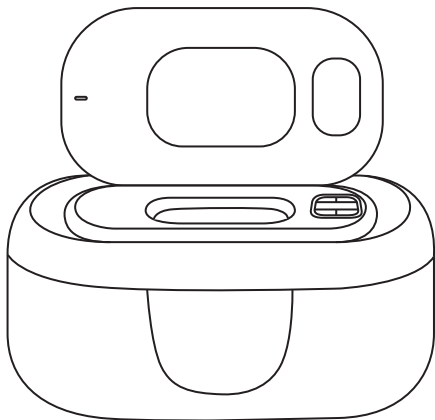

Wet Wipe Warmer

User Manual

Before using the Wet Wipe Warmer, please read this user manual carefully and keep it in a safe place for future reference.

WARNING:


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard


- 1、 If the device displays “- -” upon startup and continues to flash, it indicates that the machine is damaged and cannot function.
- 2、 If the device displays “H” upon startup, it indicates that the machine has entered the over-temperature protection mode and cannot function normally. In this case, the power supply should be unplugged, and the machine should be allowed to cool down before reconnecting the power for it to function normally.

Instructions:


1. Place the spring structure into the wet wipe compartment;

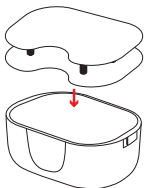


2. Cut off the lid of the wet wipes;

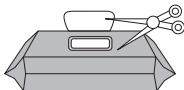

3. Place the wet wipes inside the wet wipe heating compartment, aligning the opening with the sealing ring opening of the compartment;

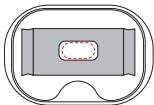


4. Close the top cover;

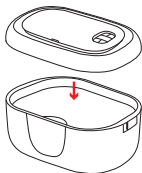

5. Secure the safety locks on both sides;



6. Plug in the power supply;

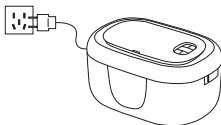

7. Press the "Power Button" to turn it on;






8. Adjust the temperature;



9. After 10 minutes, the wet wipes can be used.



Product Model	WW01
Product Dimensions	232*157*107mm
Product Weight	728g
Temperature Range	104-131 °F
Rated Voltage	120 V
Rated Power	25 W

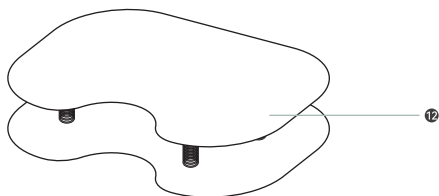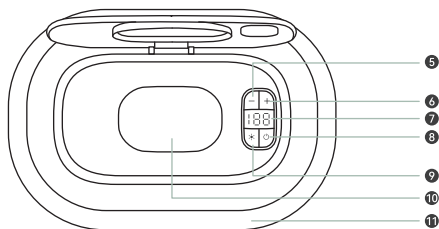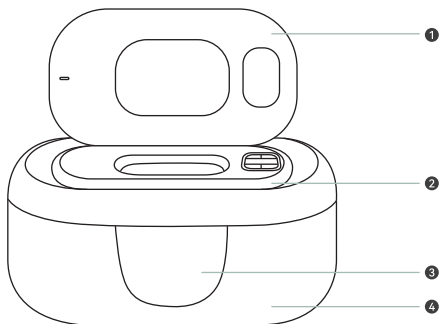

- | | |
|----------------------------------|---------------------------|
| ❶ Top Cover | ❷ Digital Display |
| ❸ Light | ❸ Power Button |
| ❹ Transparent Window | ❹ Light Button |
| ❺ Wet Wipe Compartment | ❺ Wet Wipe Warmer Opening |
| ❻ Temperature Control Button "+" | ❻ Bottom Cover |
| ❼ Temperature Control Button "-" | ❼ Spring Structure |

Care & Cleaning:

1. Care: When not using the Wet Wipe Warmer, please turn off the power to prevent the wet wipes from drying out;
2. Cleaning: Remove the wet wipes and wipe the surface of the Wet Wipe Warmer with a wet wipe.

WARNING:

1. This product is designed for baby use only, do not use it to heat anything else.
2. After placing wet wipes, ensure to engage the child safety lock to prevent children from accessing the product;
3. Avoid heating for too long, as it may cause the wet wipes to dry out;
4. Avoid touching the product with wet hands or wet cloths;
5. If the product overheats or emits a burning smell, immediately disconnect the power supply and stop using it.

FCC Compliance Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

momcozy



Warm Light



Top Heating



Transparent
Window



Energy
Saving



Quick Heating



24h Continuous
Heating



Digital
Temperature
Display



Multi-level
Temperature
Adjustment