

momcozy

BOTTLEWARMER

MW02

User Manual



Please read the user manual carefully before using this appliance.

TABLE OF CONTENTS

SPECIFICATIONS	01
IMPORTANT SAFETY INSTRUCTIONS	01
PRODUCT DESCRIPTION	04
USING THE BOTTLE WARMER	05
DESCALING	08
CLEANING AND MAINTENANCE	08
FCC COMPLIANCE	10

SPECIFICATIONS

Model Number	MW02	Product Name	Bottle Warmer
Product Size	155×149×173 mm	Rated Voltage	120V~
Rated Frequency	60Hz	Rated Power	400W
Performance Standards: UL499, CSA C22.2 NO.64			

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS APPLIANCE. PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

1. Read all instructions.
2. Check if the voltage indicated on the product label is compatible with the voltage in your home before plugging in the bottle warmer.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
4. Always use on a dry, flat surface away from water.
5. Do not hang the power cord over the edge of the table or counter, or come into contact with hot surfaces.
6. Do not place on or near a hot gas or electric burner, or in a heated oven. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
7. Ensure water has been added to the appliance before switching on the bottle warmer.
8. Do not operate the appliance without water. If you operate it without water by accident, unplug it and allow it to cool down for 15 minutes, then fill it with water.
9. Always attach the plug to the appliance first, then plug the power cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.

 
10. Do not operate the unit at the same time as other appliances with large power consumption.
11. During use, please be mindful of the steam coming out of the steam vent.
12. Always use oven gloves when handling hot parts; avoid hot steam rising from the steam vent at all times when in use.
13. The water in the appliance remains hot after other parts have cooled down, so please handle it carefully.
14. Do not touch hot surfaces. Use handles or knobs.
15. Do not move the appliance when in use.
16. To protect against electrical shock, do not immerse the power cord or plugs in water or other liquids.
17. Keep out of reach of children.
18. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
19. Unplug from the outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
21. Do not use outdoors.
22. Close supervision is necessary when any appliance is used by or near children.

23. Do not use the appliance for other than intended use.


SAVE THESE INSTRUCTIONS

PRODUCT DESCRIPTION

Product Overview

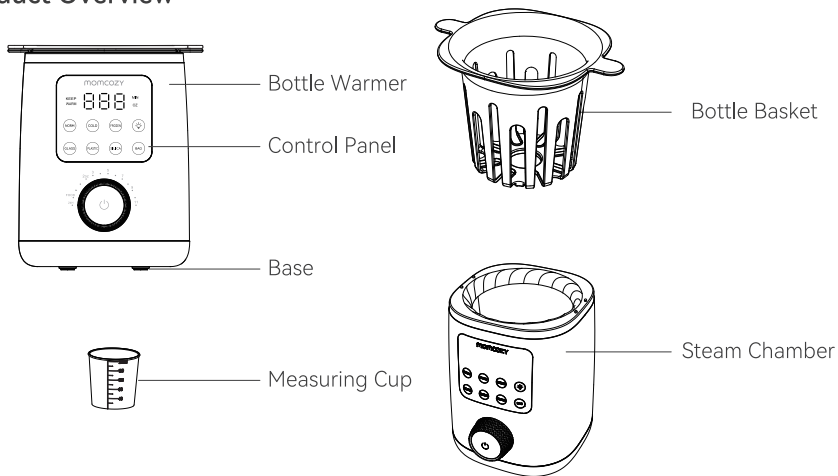

Control Panel

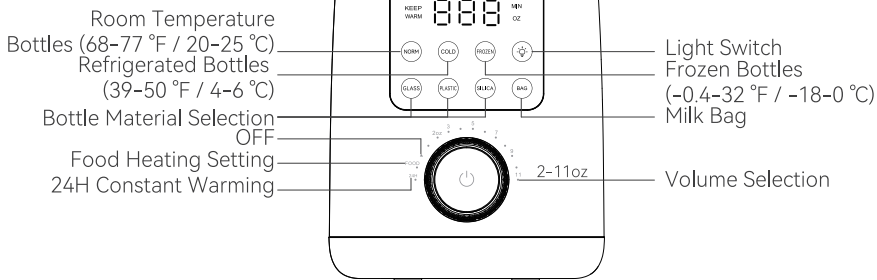 

USING THE BOTTLE WARMER

Before First Use

The first time you unpack the appliance, carefully remove and dispose of all packing materials. Disassemble and clean all parts before the first use and after every use.

Warming Guidelines

The speed of warming a bottle or food container depends on the initial temperature of the contents, the size of the bottle/food container, etc.

Reference Table				
Milk Volume	2 oz	3 oz	4-6 oz	7-11 oz
Required Water	90ml(3 oz)	90ml(3 oz)	120ml(4 oz)	160ml(5 oz)

Standby Mode

1. If the knob points to ▲ off before powering on, the display panel will flash once and turn off automatically. In this case, the knob light is off.
2. After plugging it in, rotate the knob from off to other positions and the display panel is off. Wake the display panel by pressing the power button  and the knob turns solid yellow.
3. When the knob turns solid white, the device will shut off automatically without one minute of running. Press  to wake the display panel.

Warming Room Temperature/Refrigerated Bottles

1. Place a bottle in the bottle warmer, one at a time.
2. Fill with 90-160ml of water. (refer to Warming Guidelines-Reference Table)
3. Rotate the knob and select the desired settings based on the milk volume, bottle material and bottle temperature, then press the power button  or wait for 15 seconds to start a heating cycle. The knob flashes solid yellow.
4. The bottle warmer beeps three times after a heating cycle, with a display of 60-minute countdown.
5. The appliance has a memory function, and it will start with the settings you used last time. Insert another bottle and press the power button  twice.

Note:

1. Never freeze glass containers, as glass may crack.
2. Never allow the liquid to overflow the appliance.
3. Unplug the appliance when not in use.
4. Gently swirl the bottle and sprinkle a few drops of milk onto inner wrist to test the temperature before feeding a baby.
5. Remove the bottle in time to avoid overheating milk and damaging the nutrients.

Food Heating Setting

1. Place the food container in the bottle warmer, one at a time.
2. Fill with 120ml of water in standby mode.
3. Rotate the knob to the **FOOD** position and select the desired settings based on the container material and container temperature, then press the power button  to start heating. The countdown timer will be displayed.
4. The appliance automatically keeps warm for 1 hour after finishing a heating cycle.
5. The appliance will automatically power off after keeping warm.

Note: Always check the temperature before feeding your baby. Gently mix the food and test the food temperature by putting a few drops on your inner wrist.

24H Constant Warming

1. Place the bottle in the bottle warmer, one at a time.
2. Fill with 160ml of water.

3. Switch on and rotate the knob to the **24H** position, then press the power button  to start warming. The countdown timer will be displayed.
4. The appliance will power off automatically after a 24H cycle.

 
DESCALING

It is recommended to descale the bottle warmer every four weeks to ensure it works efficiently.


1. Unplug the appliance and allow it to cool before cleaning it.
2. Mix 60ml (2 oz) of white vinegar with 120ml (4 oz) of cold water. (Mixing ratio: one part white vinegar to two parts water)
3. Switch on and select the food heating setting for contents under 180 ml (6 oz), then let the appliance operate for 10 minutes.
4. Leave the solution in the bottle warmer until all scale has dissolved.
5. Empty the bottle warmer and wash it with clean water.
6. Empty the bottle warmer and rinse the inside thoroughly. If you still see traces of scale, repeat the descaling procedure.

CLEANING AND MAINTENANCE

1. After each use, unplug the bottle warmer and let it cool down. (Figure 1)
2. Empty the bottle warmer. (Figure 1)
3. Wipe the bottle warmer with a moist cloth. Do not use abrasive, anti-bacterial cleaning agents, chemical solvents or sharp tools to clean the bottle warmer. (Figure 2)

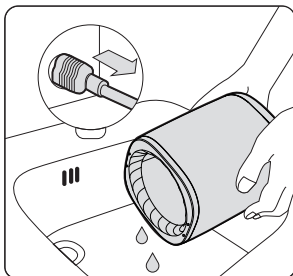

(Figure 1)

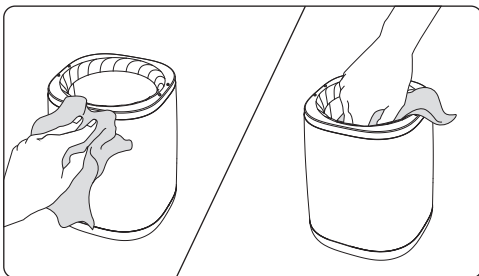 

(Figure 2)

“ ~ ”The symbol indicates AC

“  ”RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

FCC COMPLIANCE

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

