


momcozy

Portable Water and Milk Warmer

MW05

User Manual

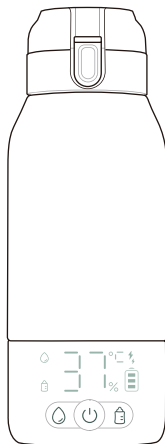

EN

Please read the user manual carefully before using this appliance.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	002
PARTS LIST	006
INSTRUCTIONS FOR USE	006
CHARGING DISPLAY EXPLANATION	007
SPECIFICATIONS	008
CONTROL PANEL	009
USING the WARMER	010
CLEANING AND MAINTENANCE	013
TROUBLESHOOTING	015
DECLARATION of CONFORMITY	018

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS APPLIANCE. OTHERWISE, DAMAGE MAY OCCUR.

1. Read all instructions.
2. Do not immerse in any liquid.
3. The product has a built-in lithium battery. Do not use it in environments with strong static electricity or magnetic fields, and do not dry in a microwave oven, a disinfection cabinet, or an oven to avoid potential safety hazards
4. This is not a toy. Please keep all parts out of the reach of children
5. User repair or separation of the product is not permitted. Quality issues must be handled by the manufacturer or authorized service center to avoid safety hazards.

6. Clean the product prior to each use.
7. Always use the product on a dry, flat surface away from moisture.
8. Do not place on or near a hot gas stove or electric burner, or in a heated oven. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
9. The operating temperature range for this product is from around 50 °F to 90 °F (about 10 °C to 35 °C).
10. Do not operate the warmer without water or breast milk in the container.
11. Do not move the appliance when in use.
12. To protect against electrical shock, do not immerse the power cord or plugs in water or other liquids.
13. Do not steam or cook the product.
14. Do not put the following items into the cup: dry ice, carbonated drinks (to avoid the danger of spraying contents due to increased internal

pressure), and acidic drinks such as plum juice and lemon juice (may degrade insulation performance).

15. Do not store dairy products, infant foods, and so on for long periods to avoid spoilage and odor.
16. Do not directly use water to clean the operating buttons and charging port. If cleaning is required, wipe with a wet towel.
17. Unplug the power supply from the outlet when not in use and before cleaning. Allow the appliance to cool down before attaching or removing parts.
18. When not in use, do not expose the product to direct sunlight, high temperatures, or disinfectants, as doing so may affect product performance.
19. Regularly check and remove debris from the charging port to avoid dust build-up and charging issues.

20. Unplug the product when the battery is fully charged to avoid the risk of fire.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capacity, or by persons lacking the requisite experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by someone who is responsible for their safety.
22. Do not use the appliance for anything other than its intended use.
23. Do not splash any liquid onto the connection.
24. Please do not touch the heat surface as it is subject to residual heat after use.
25. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

SAVE THESE INSTRUCTIONS

PARTS LIST

User manual * 1

Water and Milk Warmer *1

Lid * 1

USB Type-C charging cable *1

INSTRUCTIONS FOR USE

Fully charge the appliance before its first use.

Before the first use, clean the warming chamber with soapy water and vinegar, or allow it to sit for 12 hours without the lid to remove any unwanted smells from production, packaging, storage, and transportation.

1. Open the packaging, take out the warmer, and ensure you have all the parts.
2. Clean the warmer with a damp cloth or a bottle brush .
3. Allow it to sit for 12 hours to eliminate any unwanted smells from production, packaging, storage, and transportation.
4. The temperature of charging do not higher than 35°C/ 95°F.

CHARGING DISPLAY EXPLANATION

When the device is powered off and the charging cable is connected, the number displayed on the screen indicates the battery level percentage (%), which increases as charging progresses.

Note: This number does not represent the temperature, but the current battery status.

Only when the device is powered on will the screen display the temperature value.

EXAMPLES:



When charging while powered off, the screen shows a battery percentage (e.g., "37%") and a battery icon "🔋". The "⚡" icon appears during fast charging and remains off during standard charging.




When powered on, the currently selected temperature is indicated by the number (e.g., "37") with all icons lit. Press and hold the "⏻" button to switch between °F and °C modes.

SPECIFICATIONS

Model	MW05	Rated Input	5V≐3A, 9V≐2A, 12V≐2.5A, 15V≐2A, 20V≐1.5A
Operating Temperature	90-122 ° F / 32-50 ° C	Battery Capacity	14.4V≐ 3100mAh 44.64Wh
Charging Time	2 - 4 Hours	USB charging cable	USB Type-C
Battery type	Rechargeable Li-ion Battery pack		

CONTROL PANEL

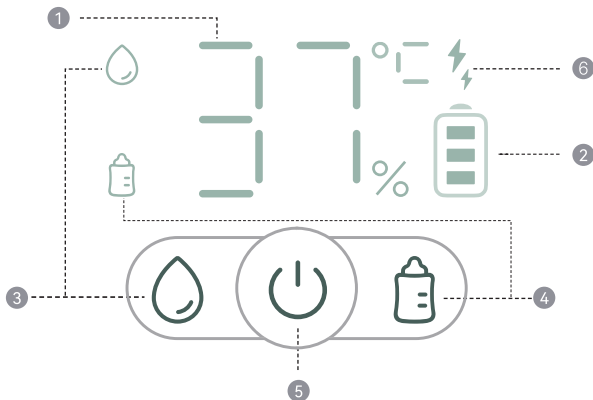

- 1 Temperature Display
- 3 Warm water mode and temperature selection
- 5 On / Off

- 2 Battery Display
- 4 Warm breast milk mode and temperature selection
- 6 fast-charging icon

USING the WARMER

Warming Breast Milk and Water

1. Press  to turn on the device.
 - The battery percentage display will turn off after 3 seconds
 - Press any key to interrupt the battery display and switch to the corresponding function
2. Press and hold the  button for 3 seconds to switch between °C and °F
3. Press  or  to select warming mode and choose the desired temperature.
 -  to gently warm breast milk.
 -  to quickly heat water.
4. The selected temperature on the screen will flash. Wait for 5 seconds, and then the machine will start working automatically and heat the contents to the set temperature.
5. The warmer will beep 3 times when warming is complete, and the number on the display will stop changing.
6. Keeping the warmer on will drain the battery. Once warming is complete, turn off the device immediately to save power and preserve battery life.

- Regarding the milk warming mode, to preserve the nutrients in the breast milk and ensure the baby's safety, it is advised that the maximum set temperature not exceed 98° F (37° C).
- Since stored breast milk and formula milk contain nutrients that can settle, please shake the milk thoroughly before heating. This prevents nutrients from settling at the bottom. If there is significant settling, shake the milk warmer during the warming process as well.
- After heating breast milk or formula, rinse the heating chamber immediately with clean water or soapy water to prevent milk residue from spoiling and causing odors.

Turning On the Warmer

Press  to turn on the bottle warmer.

Turning Off the Bottle Warmer

Press  to turn off the bottle warmer.

Temperature Setting

With a temperature range from 90–122 ° F / 32–50 ° C, short press

 or  to select warming mode and choose the desired temperature.

Locking the Lid of Bottle Warmer

Press the lid lock button down to secure the lid and prevent water leakage.



Push the lid lock button up to unlock and open the lid.



CLEANING AND MAINTENANCE



1. After each use, be sure to disassemble the lid and separate all components (including plastic parts and the silicone sealing ring). Clean them thoroughly and allow them to dry completely to prevent mold or odors caused by residual moisture.
2. Close and seal the silicone cover on the charging port before cleaning.
3. Keep the charging port dry at all times to avoid moisture damage.
4. After warming breast milk or formula milk, immediately rinse the heating chamber and lid with clean water or soapy water, or the residue from breast milk or formula can spoil and cause odor.
5. Remove the silicone ring from the bottom of the lid before cleaning
6. After cleaning, separate the lid, silicone ring, and the warmer, then place the warmer upside down on a drying rack to let the water drain and dry the inside. Make sure all parts are completely dry before reassembling to avoid mold.
7. If nutrients in breast milk and formula milk settles and sticks to the bottom during heating, clean the warmer with a brush and soapy water.
8. Do not immerse the milk warmer in water or put it in a dishwasher.
9. Avoid direct contact with water when cleaning the operating buttons

and charging port.

10. Use a wet towel to gently wipe these areas to ensure they stay clean without risking damage.

How to Clean the Lid :

1. After each use, be sure to disassemble the lid and separate **all** components (including plastic parts and the silicone sealing ring). Clean them thoroughly and **allow** them to dry **completely** to prevent mold or odors caused by residual moisture.
2. After cleaning, separate the lid, silicone ring, and the warmer, then **place** the warmer upside down on a drying rack to let the water drain and dry the inside. Make sure **all** parts are **completely** dry before reassembling to avoid mold.

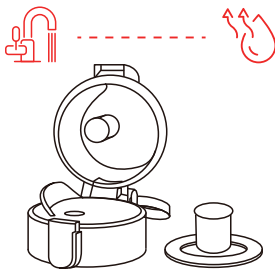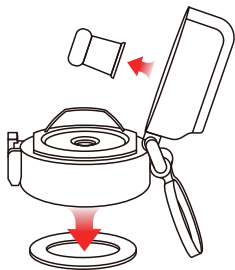

Caution:

If mold has developed, contact customer service for a replacement lid.

TROUBLESHOOTING

Problems	Reasons	Solutions
The battery life only lasts a short time.	· Unplugging before the battery is fully charged. · Leaving the warmer on after heating, which uses battery power to keep warm. · Heating too early, requiring a great deal of battery power to keep warm.	· Fully charge the battery before unplugging. · Turn off the warmer immediately after heating to save battery power. · Only turn it on when you need to heat something again.
The warmer charges slowly.	The battery is a high-capacity variety, so using a low-power (10W) charger might require more than 6 hours to fully charge.	Use a charger ($\geq 30W$) to fully charge the warmer in 2-4 hours.
The warmer produces unwanted smells during the first use.	Unwanted smells from production, packaging, storage, and transportation.	· The heating chamber is made of food-grade stainless steel and has passed food safety tests. · Before the first use, clean the warmer thoroughly with soapy water and vinegar. Then, it will be safe to use.

The warmer develops an odor after several uses.	Residue from breast milk or formula can spoil and cause an odor.	· After heating, immediately rinse the heating chamber and lid with clean water or soapy water. · Separate the lid and the bottle, then place the warmer upside down on a drying rack to let the water drain and dry the inside. · Make sure the heating chamber and lid are completely dry before reassembling.
The silicone ring on the lid or the bottom of the lid are moldy.	The heating chamber and lid are still damp when assembled, creating a moist, sealed environment that leads to mold growth.	· Remove the silicone ring from the bottom of the lid before cleaning. · After cleaning, separate the lid and the bottle, then place the warmer upside down on a drying rack to let the water drain and dry the inside. · Make sure all parts are completely dry before reassembling. · If mold has developed, contact customer service for a replacement lid.

Sediment or burnt residue forms at the bottom of the bottle after heating.	Nutrients in breast milk and formula may settle and stick to the bottom during heating.	• Shake the breast milk or formula well before and during heating to prevent sediment. • Clean the warmer with a brush and soapy water. Add 4 oz (120 ml) of water, heat to 122°F (50°C), then add about 50 grams of baking soda. Soak for three minutes, then rinse with clean water.
The lid is damaged.	The lid is damaged and no longer seals properly.	Contact customer service to replace or purchase a new lid.
The warmer cannot be used immediately after being plugged in when the battery runs out.	The warmer needs to charge for a certain amount of time before it can heat properly.	After the battery is dead, charge the warmer for 30 minutes before turning it on. Then, it can charge while heating.

**If a fault persists after following the troubleshooting instructions above, please contact the Customer Support Team for assistance.
Email:support@momcozy.com**

DISPOSAL



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

■ This marking on the product, accessories (including battery, power supply unit if have) or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

DECLARATION OF CONFORMITY

EU Compliance Statement: Hong Kong Lute Technology Co., Limited.. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the LVD Directive 2014/35/EU and EMC Directive 2014/30/EU and RoHS Directive 2011/65/EU.

For the complete CE DOC, please check on this link:

<https://momcozy.com/pages/declaration-of-conformity-momcozy>

Warranty:

We offer a two-year warranty period (If the corresponding country has a longer warranty period requirement, it should be based on the local regulations.) , Please contact the manufacturer in case of a claim under the warranty,the contact information please refer to last page of this user manual.

If you have to send the unit,enclose a copy of your receipt with clear statement of defect description.

The warranty terms are as below:

- 1) In case of a warranty claim,the date of purchase has to be proven by means of the sales receipt or invoice.
- 2) Repairs carried out during the warranty period can extend the warranty period of the equipment or replacement parts by one year.
- 3) The following cases are excluded under the warranty
 - All damages which are arisen due to improper treatment, e.g. nonobservance of the user instruction.
 - All damages which are arisen due to repairs or tampering by the customer or unauthorized third parties.
 - Damages which are arisen during transport from the manufacturer to the consumer or during transport to the service center.
 - Accessories which are subject to normal wear and tear.
 - Device damage due to privately disassemble devices.
 - Liability for direct or indirect consequential losses caused by the unit is excluded even if the damage to the unit is accepted as a warranty claim.

MANUFACTURER INFORMATION

Manufacturer: Hong Kong Lute Technology Co., Limited

Address: Room 803B, 8/F, West Bund International Building, 290-296 Yuen Chau Street, Cheung Sha Wan, Kowloon, HongKong

EU Importer:

Company: Lutejiacheng Maternal and Child Products GmbH

Address:

Betriebsstätte c/o Sonnenberg Services GmbH, Sternstraße 67, 40479 Düsseldorf, Deutschland

Email: support@momcozy.com

MADE IN CHINA

