


munchkin®

Snack Wheel™

5 Compartment Container

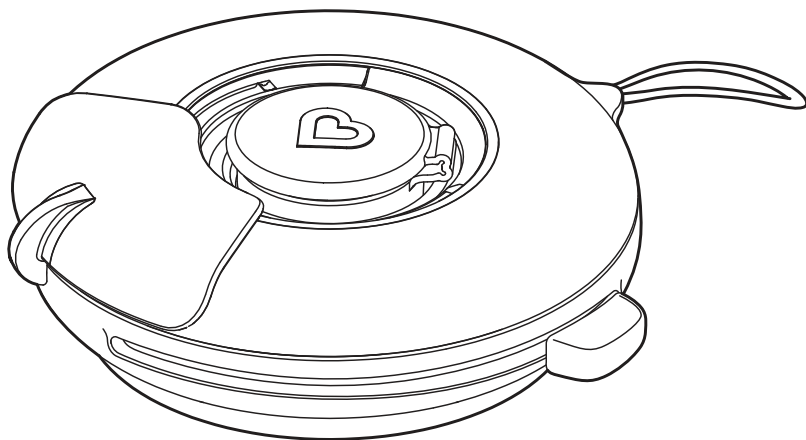

KEEP FOR FUTURE REFERENCE

Please read the instructions carefully before using this product.

Table of Contents





 IMPORTANT SAFEGUARDS	
Important Safeguards.....	3
 INCLUDED PARTS	
Included Parts.....	4
 HOW TO USE	
How to Use.....	5
 HOW TO DISASSEMBLE TO CLEAN	
How to Disassemble to Clean.....	8
 CUSTOMER SERVICE	
Contact Us	9

IMPORTANT SAFEGUARDS

WARNING:

Ensure food is cut appropriately to reduce risk of choking. Wash before use. Do not microwave, boil or steam sterilize. Inspect before giving to child. Discard and replace at first sign of weakness or damage. Always check temperature before feeding. Do not let child walk or run while carrying the product. Do not let child play with, bite, or chew on the parts. This is not a toy. Do not leave child unattended. Parent must assemble before giving to child. Discard all packaging components before giving to child.



INCLUDED PARTS

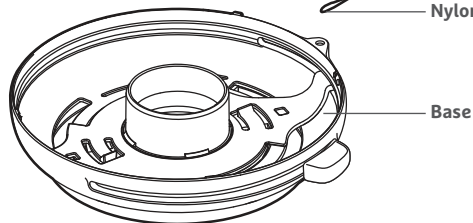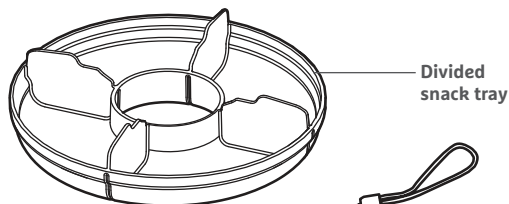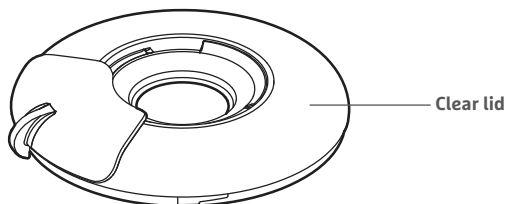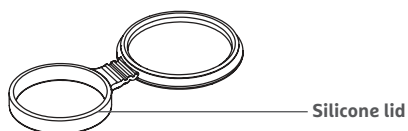



HOW TO USE

1. Push the center food container up from the bottom and open the silicone lid to fill it with food.

NOTE: Great for wet food.

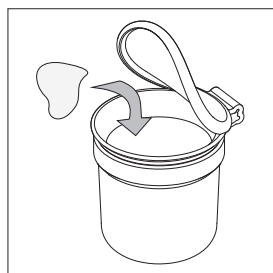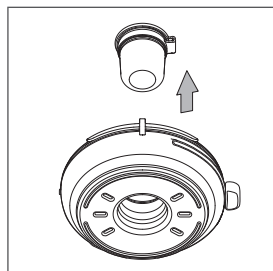


2. Twist the top clear lid counterclockwise to open.

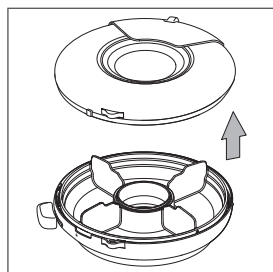
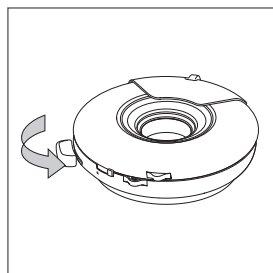


3. Load snack into the divided plates.


NOTE: For dry snacks only.

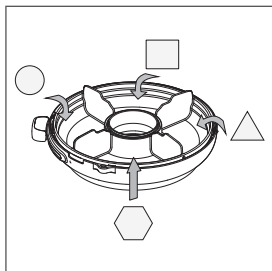

4. Twist the clear lid clockwise to close and lock it back in place.

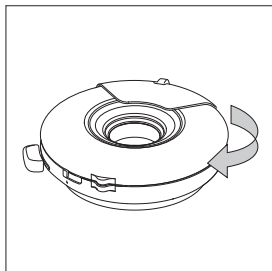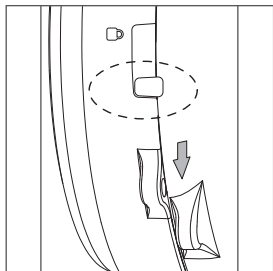


5. Snap center food container back into place.

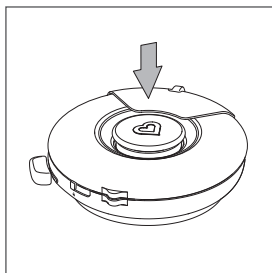


6. Pull the lever all the way clockwise to switch to the next snack.

NOTE: Lever springs back to original position.

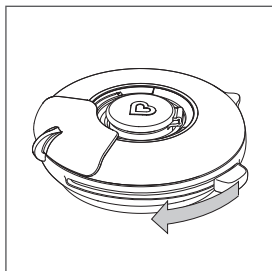

7. When ready to consume, rotate door clockwise to access the snack.

NOTE: There are door stops on the base.

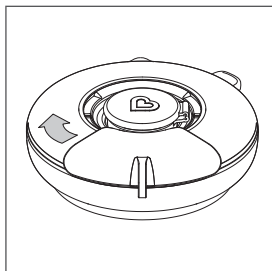





HOW TO DISASSEMBLE TO CLEAN

1. Push the center food container upwards, silicone lid can separate from container.


NOTE: The silicone lid comes entirely off the middle insert for easy cleaning.

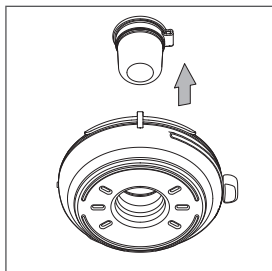

2. Twist the clear lid counterclockwise to open. (See step 2 on page 5)

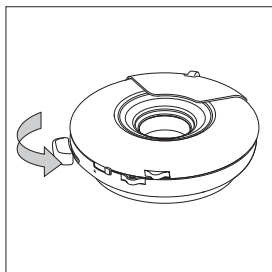


WARNING: DO NOT DISASSEMBLE LEVER FROM BASE.

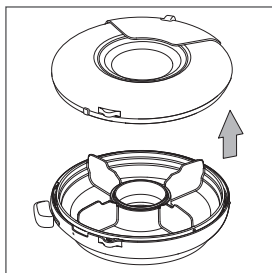

3. Take out the divided snack tray.

WARNING: ALLOW PARTS TO DRY COMPLETELY BEFORE REASSEMBLING. AVOID SOAKING IN WATER OR CLEANING SOLUTIONS FOR LONG PERIODS OF TIME.

NOTE: Use Munchkin Details™ 4 Brush Set for a deeper clean.

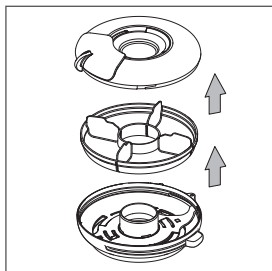

CONTACT US

If you have any questions or wish to provide comments about this product, feel free to contact our Customer Satisfaction team at **1-800-344-BABY** (2229) (M-TH 8:00am- 5:00pm PST, F 8:00am-1:00pm PST) or visit our website at **www.munchkin.com**.



munchkin.
it's the little things.

munchkin.com
800.344.2229

