

NETGEAR®

Installation Guide
Connect with Innovation™

N300 Wireless Gigabit ADSL2+ Modem Router DGN3500

 
Package Contents



Resource CD




Modem router




Filter



 
Splitter
(varies by country)




Filter/splitter

 


Telephone cable

 

Ethernet cable

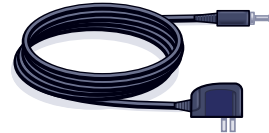 

Power adapter

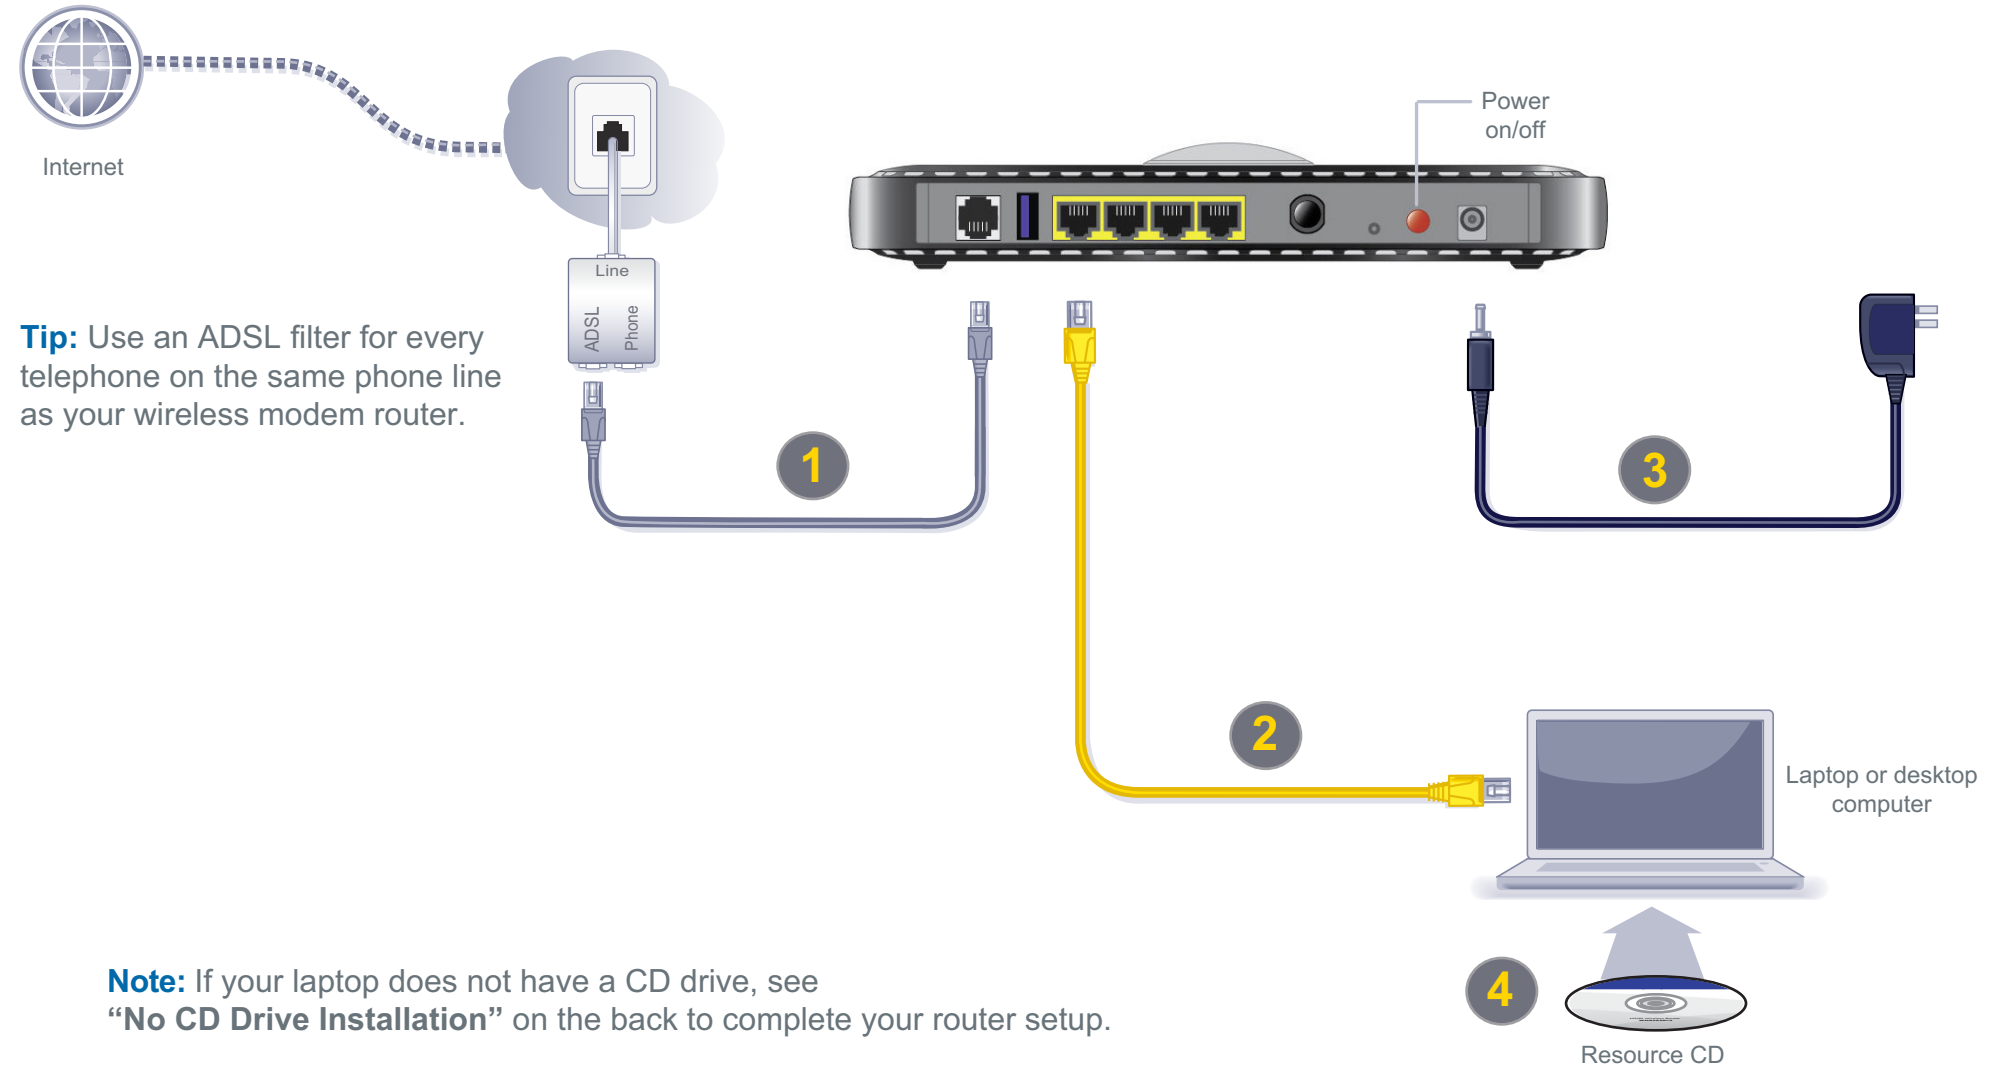 


Manual Installation (PC with No CD Drive)

1. Follow Steps 1-3 to connect the DGN3500 to your computer.
2. Check that the power LED is green, and if not, turn on the modem router and wait for the power LED light to turn green.

Set up Internet Connectivity

 1. Type <http://www.routerlogin.net> in the web browser address bar and click **Enter**.
2. Type **admin** for the user name and **password** for the password. Click **OK**.
3. Select **Setup Wizard** in the top left corner, and make sure **Yes** is selected under **Auto-Detect Connection Type**. Click **Next** to complete the Setup Wizard.
4. Select **Basic Settings** to see your settings.

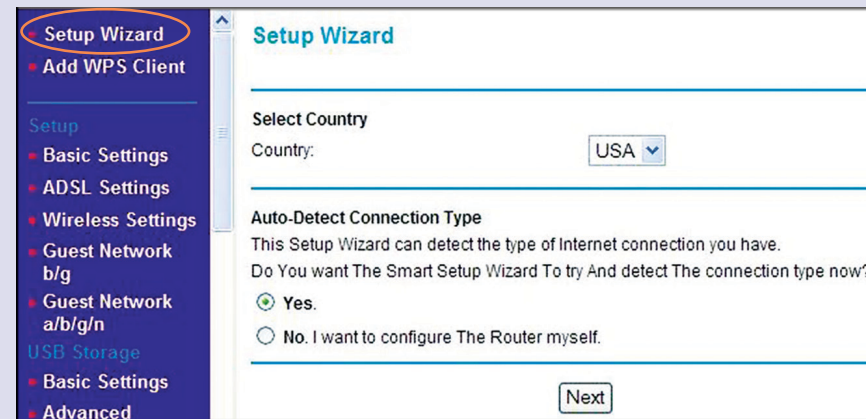

Note: If your ISP requires that you enter a user name or password, you are prompted to enter this information. If you do not have this information, contact your ISP.

ISP user name: _____

ISP password: _____

 
Set up Wireless Security

This product is preconfigured with a preset unique WiFi Network Name (SSID), security type, and password that are located on the label on the bottom of the unit. The default SSID and password are uniquely generated for every device to protect and maximize your wireless security.

NETGEAR recommends that you not change the WiFi Network Name (SSID), security type, or password. If you do change these settings during the installation process, the information on the bottom of the unit will no longer apply.

Unique
WiFi Network
Name (SSID)

Unique
Network Key
(password)

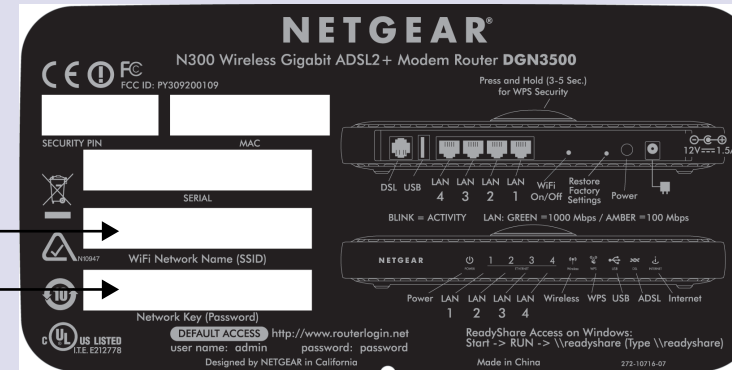

If you changed the default wireless settings, record them here:

Enter your wireless information here:

Wireless Network Name (SSID) _____

Network Key (Password) _____

To retrieve your password, type <http://www.routerlogin.net> and log in with the user name **admin** and your password (default is **password**).
Select **Wireless Settings** to retrieve your password.

Connect Wireless Devices to Your Router

Choose either the manual or WiFi Protected Setup (WPS) method to add wireless devices and other equipment to your wireless network.

Manual Method

1. Open the software that manages your wireless connections on the wireless device (iPhone®, laptop computer, gaming device) that you want to connect to your router. This software scans for all wireless networks in your area.
2. Look for your network and select it. If you did not change the name of your network during the setup process, look for the default WiFi Network Name (SSID) and select it. The default WiFi Network Name (SSID) is located on the product label on the bottom of the router.
3. Enter the passphrase and click **Connect**. The default passphrase is located on the product label on the bottom of the router.
4. Repeat steps 1-3 to add other wireless devices.

WPS Method

If your wireless device supports WPS (Push 'N' Connect), follow these steps:

1. Press the WPS button on the router. It looks similar to .
2. Within 2 minutes, press the WPS button on your wireless device, or follow the WPS instructions that came with your wireless device. The device is now connected to your router.
3. Repeat steps 1-2 to add other wireless devices.

For complete DoC visit the NETGEAR EU Declarations of Conformity website at:
http://kb.netgear.com/app/answers/detail/a_id/11621/



201-11938-03



May 2011



This symbol was placed in accordance with the European Union Directive 2002/96 on the Waste Electrical and Electronic Equipment (the WEEE Directive). If disposed of within the European Union, this product should be treated and recycled in accordance with the laws of your jurisdiction implementing the WEEE Directive.

©2010 by NETGEAR, Inc. All rights reserved. NETGEAR and the NETGEAR logo are registered trademarks of NETGEAR, Inc. in the United States and/or other countries. Other brand and product names are trademarks or registered trademarks of their respective holders. Information is subject to change without notice.