

# Nikon

## Getting Started



Get Ready 3

Shoot 8

View 10

 
 
Have More Fun 13

COOLPIX S32 En


Thank you for purchasing the Nikon COOLPIX S32 digital camera.  
Read this manual carefully before using your camera and follow all instructions.



## Parts of the Camera

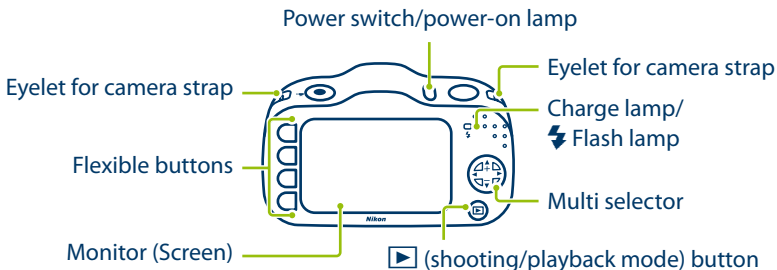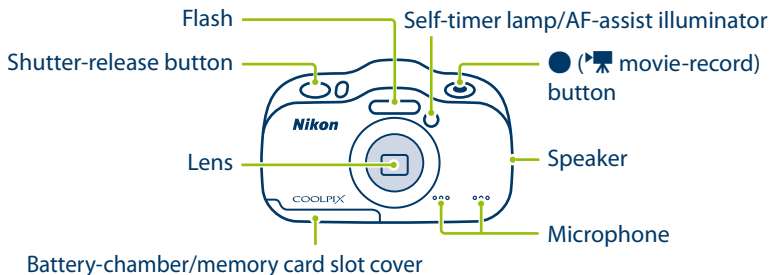


## Using the Monitor

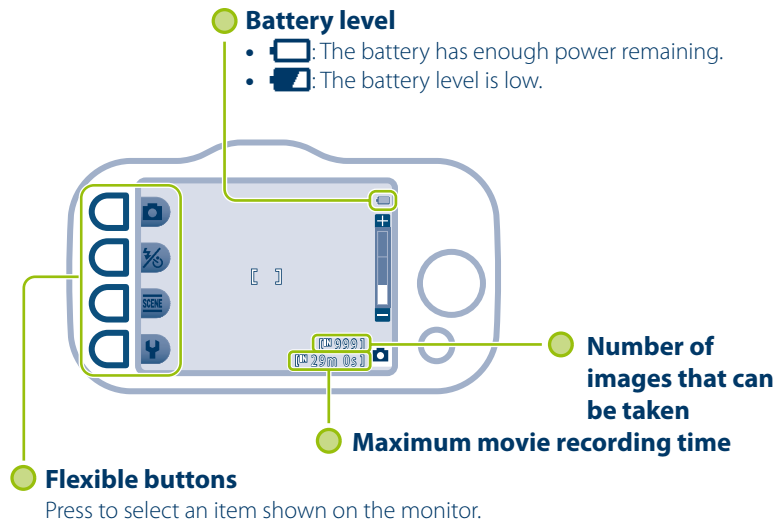 



### ✓ If "Battery exhausted." Is Displayed

The battery is exhausted. Replace it with the battery that has ample power remaining.
 
## Attaching the Camera Strap

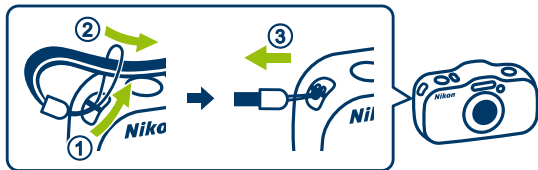

  - Guide one hand through the camera strap and hold the camera steady with both hands.
- When taking images, be careful not to cover the flash or lens with your fingers.

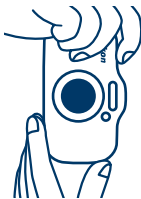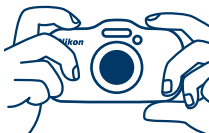

### ✓ After Attaching the Strap

Do not swing the camera by the strap.

The camera could strike objects or people causing injury and damage to the camera.

## Inserting the Battery and Memory Card

 
Open the cover, and insert the battery and memory card.



- Look at the stickers and insert the battery and memory card the right way.

## Charging the Battery

- 1 Connect the camera to the Charging AC Adapter and to the electrical outlet.

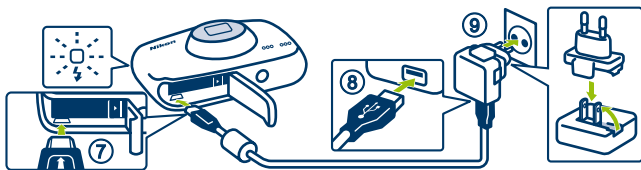

If a plug adapter is included with your camera, attach the plug adapter to the plug on the Charging AC Adapter. Push the plug adapter firmly until it is securely held in place. Once the two are connected, attempting to forcibly remove the plug adapter could damage the product.

- The battery starts charging, and the charge lamp flashes.
- When the battery is fully charged, the charge lamp turns off.
- Disconnect the Charging AC Adapter from the electrical outlet and then disconnect the cable.

## 2 Close the cover.



- Make sure that there is no debris, etc. inside.
- Lay the cover completely flat in the direction indicated by the arrow ⑩, and fully slide it in ⑪.
- Read and follow the waterproofing-related messages if they are displayed when you turn on the camera.

 
## ✓ Notes About Charging and Replacing the Battery

- Only an adult should charge and replace the battery.
- Refer to the information in “For Your Safety” and “Caring for the Product” in the *User’s Manual*.
- Make sure the camera and your hands are not wet.
- Turn off the camera and then turn the camera upside-down, being careful not to let the battery and memory card fall out.
- Make sure that there is no debris, etc. inside the battery-chamber/memory card slot cover.
- Make sure that the battery-chamber/memory card slot cover is firmly closed.



## Taking Images


- 1 Press the power switch to turn on the camera.

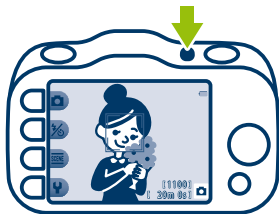

- 2 Hold the camera steady and aim the camera so that you can see your subject in the monitor.



 
- 3 Press the shutter-release button slightly (halfway).
  - The camera focuses.

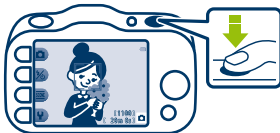




#### 4 Press the shutter-release button the rest of the way down.

 - The camera takes an image.
- Record movies → page 13
- Take images underwater → page 14

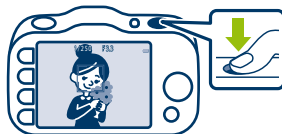

### Using the Zoom

 - ▲: Makes your subject bigger.
- ▼: Captures a wider view.

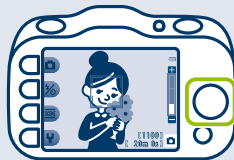

### Using the Self-timer

If you want to be in the picture, use the self-timer. The camera takes an image about 10 seconds after you press the shutter-release button.

Press the flexible buttons in the order of  $\frac{1}{2}$  →  → **10s** to set the self-timer.

 
### Turning the Camera Off

When you are finished taking images, press the power switch again.




## Viewing Your Images

- 1 Press the  (shooting/playback mode) button.
  -  is displayed in the lower-right of the monitor.
  - The last image you took is displayed.

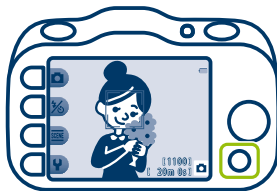

 - 2 Use the multi selector to look through your images.

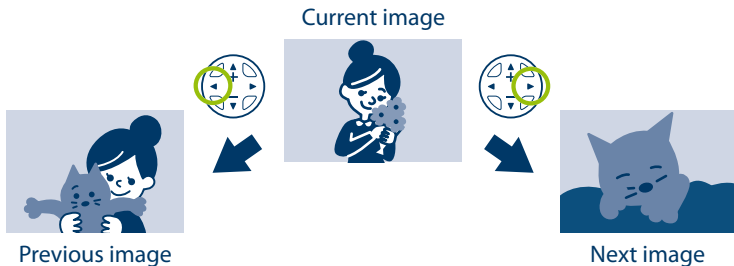

- If you press the  (shooting/playback mode) button again,  is displayed in the lower-right of the monitor and the camera returns to the shooting screen.

## Deleting Images

 
 
 
- 1 When  is displayed in the lower-right of the monitor, look through your images and find an image you want to delete.

- Looking through your images → page 10 step 2

- 2 Press .


- 3 Press  **Erase this picture only.**

- Press  if you want to stop with deleting the image.

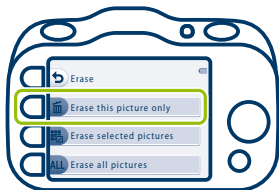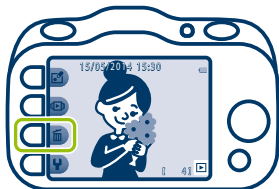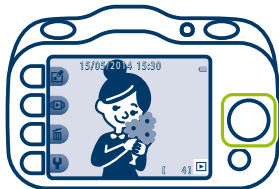


#### 4 Press **○ Yes**.

 - If you delete an image, you cannot recover it.
- Press **✕ No** if you want to stop with deleting the image.

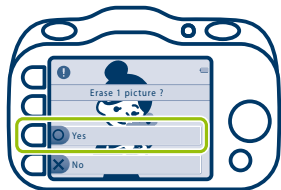

### Deleting Several Images at Once

 - 1 Select **■ Erase selected pictures** in step 3.
- 2 Press the multi selector ◀ or ▶ to select the image to be deleted and press **✓**.
  - Press **RESET** to remove **✓**.
- 3 Add **✓** to all the images you want to delete and press **OK**.
  - Follow the instructions displayed in the monitor.

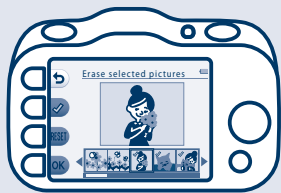

### Deleting All Your Images

- 1 Select **ALL Erase all pictures** in step 3.
- 2 Press **○ Yes** in step 4.



## Recording Movies

- 1 While  is displayed in the lower-right of the monitor, aim the camera so that you can see your subject in the monitor.

- Make sure you do not cover the microphone.



- 2 Press the  (movie-record) button.

- The camera starts recording a movie.



- As your subject moves, move the camera and make sure you can see your subject in the monitor.



- 3 Press the  (movie-record) button again.

 
- The camera stops recording the movie.

## Taking Images Underwater


### Before Using the Camera Underwater

- 1 Make sure there is no debris caught in the battery-chamber/memory card slot cover.  
If there is debris, blow it off with a blower\*.
- 2 Make sure that the battery-chamber/memory card slot cover is firmly closed.
- 3 Do not open the battery-chamber/memory card slot cover underwater.

- 1** While  is displayed in the lower-right of the monitor, press **SCENE**.

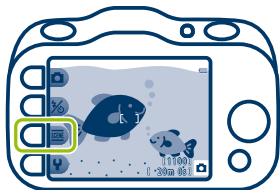

 - 2** Press **SCENE** **Choose a style.**

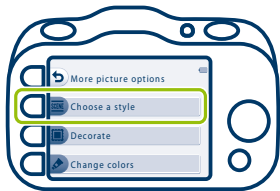

\* A tool that uses air to remove dust and debris.

- 3** Press ◀ or ▶, select  and press **OK**.
- The waterproofing-related message is displayed. Confirm the message and press ▶ to display the next message. Press **OK** to start shooting.



- 4** Press the shutter-release button.




## Cleaning the Camera After Using It Underwater

 - Keep the battery-chamber/memory card slot cover closed and wash off the camera with fresh water.
- Wipe off any water droplets with a soft, dry cloth and allow the camera to dry in the shade in a well-ventilated area.
  - Place the camera on a dry cloth to dry it.
  - Do not use a hair dryer or other appliance to dry the camera.
- After you make sure it is dry, open the battery-chamber/memory card slot cover, use a soft, dry cloth to remove any water inside, and remove any sand inside using the blower.

## Making Photo Albums

- 1 When  is displayed in the lower-right of the monitor, press .

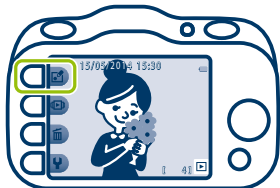

- 2 Press  **Picture play**.




- 3 Press ◀ or ▶ to select  and press OK.






#### 4 Select images for a photo album.

 - Press the multi selector ◀ or ▶ to select the images you want to add to a photo album and press ✓. Press **OK** when you are finished choosing your images.
- Press **RESET** to remove ✓.

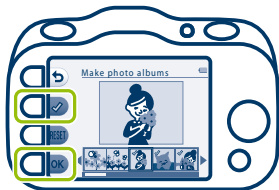


#### 5 Select a design for your photo album.

 - Press the multi selector ◀ or ▶ to select a design and press **OK** to confirm your selection.

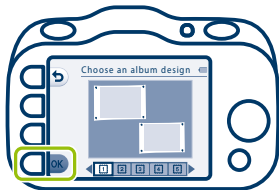


- The photo album is displayed.
- You can view your albums later the same way that you can view your images.

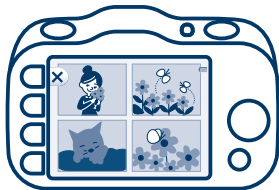 


## Adding Voice Messages to Your Images

 **1** When  is displayed in the lower-right of the monitor, find the image you want to add a message to and press .

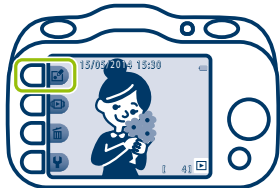


**2** Press  **Exchange messages.**

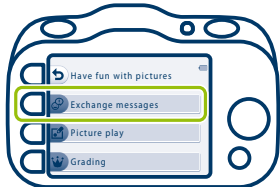 


**3** Press  **Record.**



 - 4** Press **Leave a message.**
- After you record a message, you can select **Leave a reply**.

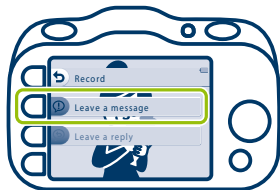


 - 5** Record a message.
- : Press to start recording, and press again to stop recording. You can record for up to about 20 seconds.
  - : Play back a message.
  - OK**: Save your message.

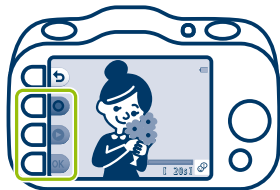

## Play Recordings

 
- Select **Play recordings** in step 3 if you want to play back your message.
- Adjust the volume by pressing the multi selector or .
- Press to stop playback.
- A reply can be recorded.

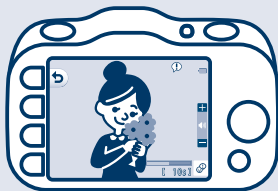

## • • Other Things You Can Do With Your Camera • •



 **Shoot at intervals**

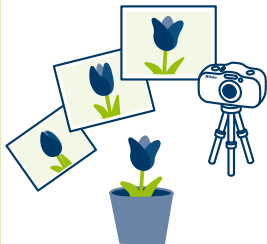

**Decorate**



**Change sounds**



### Use when shooting



Shoot close-ups



Photograph food



Use the smile timer

### Use after shooting



Add starbursts



Grade images



Watch slide shows