 




Quick Start Guide

Confirming the Package Contents	3
First Steps	6
Shooting and Playback	15
Using ViewNX 2	20
Other Functions	26
For Your Safety	32

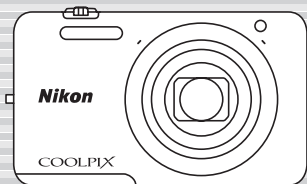

En

COOLPIX S6600

Thank you for purchasing the Nikon COOLPIX S6600 digital camera. This guide introduces the procedures necessary for first time use of this camera.
To ensure proper use, please read and thoroughly understand the information in “For Your Safety” (pages 32–35) before using the camera.



Downloading the “Reference Manual”

Refer to the COOLPIX S6600 *Reference Manual* (PDF format) for more detailed information. The *Reference Manual* can be downloaded from the Nikon website, and it can be viewed using Adobe Reader, or Acrobat Reader 5.0 or later.

Downloading and viewing the “*Reference Manual*”.

- 1 Start the computer and access the URL below.
<http://nikonimglib.com/manual/>
- 2 Select a language and the product name, and download the *Reference Manual*.
- 3 Double-click the downloaded icon.

Nikon User Support

Visit the site below to register your camera and keep up-to-date with the latest product information. You will find answers to frequently asked questions (FAQs) and can contact us for technical assistance.

<http://www.europe-nikon.com/support>

An Important Notice about Accessories

Nikon COOLPIX digital cameras are designed to meet the highest standards and are equipped with complex electronic circuitry. Only Nikon accessories, including chargers, batteries, Charging AC Adapters, and AC adapters are certified by Nikon specifically for use with your Nikon COOLPIX digital camera. These accessories have been engineered and tested to operate within the requirements of the electronic circuitry of our cameras.

Confirming the Package Contents

In the event that any items are missing, please contact the store where you purchased the camera.



COOLPIX S6600
Digital Camera



 
Camera Strap



Rechargeable Li-ion
Battery EN-EL19
(with battery case)



Charging AC Adapter
EH-70P*



USB Cable UC-E6



ViewNX 2 CD

- *Quick Start Guide* (this guide)
- *Warranty*

 
* A plug adapter is included if the camera was purchased in a country or region that requires a plug adapter. The shape of the plug adapter varies with the country or region of purchase (📖).

NOTE: A Secure Digital (SD) memory card, hereafter referred to as a “memory card,” is not provided.



This icon indicates that more information is available elsewhere in this guide.

Parts of the Camera

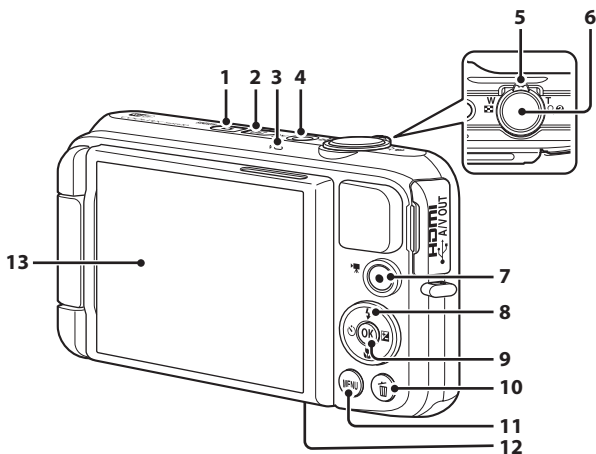


- 1 (shooting mode) button
- 2 (playback) button
- 3 Charge lamp/flash lamp
- 4 Power switch/power-on lamp
- 5 Zoom control
- 6 Shutter-release button
- 7 movie-record button

- 8 Multi selector
- 9 (apply selection) button
- 10 (delete) button
- 11 **MENU** button
- 12 Battery-chamber/memory card slot cover
- 13 Monitor

Opening and Adjusting the Angle of the Monitor

 The direction and angle of the monitor on this camera can be adjusted. This is useful when shooting with the camera in a high or low position. In addition, using this feature with **Gesture control** makes it easy to take self-portrait images.

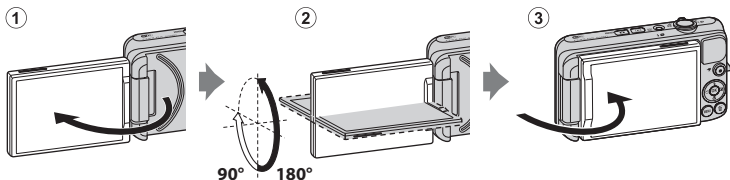

For normal shooting, fold the monitor against the back of the camera, facing rearward (③).

To protect the monitor from scratches and dirt while you are carrying or not using the camera, close the monitor so that it is facing inward against the back of the camera.

 


✓ Notes About the Monitor

When moving the monitor, do not apply excessive force and make sure to turn it slowly within the adjustable range.

First Steps


Step 1 Attach the Camera Strap

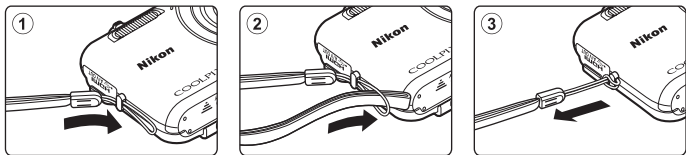

Step 2 Insert the Battery and Memory Card

If a memory card is inserted, images will be saved on the memory card when you take images. If a memory card is not inserted, images will be saved in the camera's internal memory.

 2.1 Open the battery-chamber/memory card slot cover.

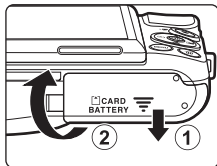

2.2 Insert the battery.

 
- Push the orange battery latch in the direction indicated by the arrow (①), and fully insert the battery (②).
- The battery locks into place when inserted correctly.



Be Careful to Insert the Battery in Correct Direction

Inserting the battery upside down or backwards could damage the camera.

Battery latch

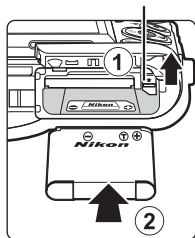

2.3 Insert the memory card.

 
- Slide the memory card in until it clicks into place.




Be Careful to Insert the Memory Card in Correct Direction

Inserting the memory card upside down or backwards could damage the camera and the memory card.

Memory card slot

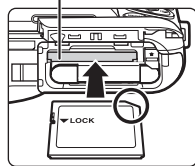

 2.4 Close the battery-chamber/memory card slot cover.

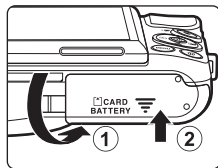


Removing the Battery and Memory Card

Turn the camera off and make sure that the power-on lamp and the monitor have turned off, and then open the battery-chamber/memory card slot cover.

- The camera, battery, and memory card may be hot immediately after using the camera.


Removing the Battery

 - Move the battery latch in the direction indicated by the arrow (1) to eject the battery (2).

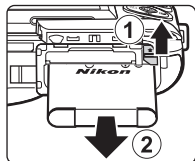

Removing the Memory Card

 - Gently push the memory card into the camera (1) to partially eject the card (2).

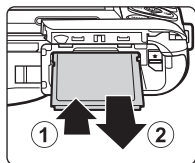



Step 3 **Charge the Battery**

Use the included Charging AC Adapter and USB cable to charge the battery while it is in the camera.

3.1 Prepare the included Charging AC Adapter.


If a plug adapter* is included with your camera, attach the plug adapter to the plug on the Charging AC Adapter. Push the plug adapter firmly until it is securely held in place. Once the two are connected, attempting to forcibly remove the plug adapter could damage the product.

  - * The shape of the plug adapter varies according to the country or region in which the camera was purchased. The Charging AC Adapter comes with the plug adapter attached in Argentina and Korea.



3.2 Make sure the battery is installed in the camera, and then connect the camera to the Charging AC Adapter in order of ① to ③.

 - Keep the camera turned off.
- Make sure that the plugs are properly oriented. Do not insert or remove the plugs at an angle when connecting or disconnecting them.

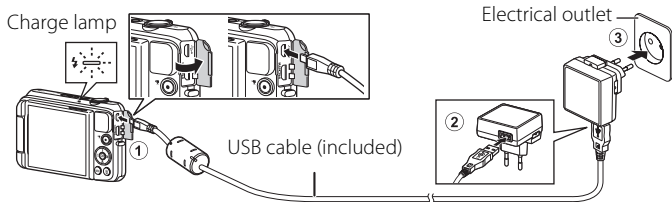


- The charge lamp slowly flashes green to indicate that the battery is charging.
- Shooting is not possible while the camera is connected to the Charging AC Adapter.
- About 3 hours are required to charge a fully exhausted battery.

3.3 Disconnect the Charging AC Adapter from the electrical outlet and then disconnect the USB cable.

Step 4 Turn On the Camera

Press the power switch.

 - The monitor turns on.

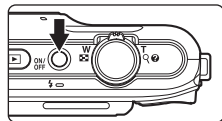

The Auto Off Function

- The time that elapses before the camera enters standby mode is about one minute. The time can be changed using the **Auto off** setting in the setup menu (📖29).
- While the camera is in standby mode, the monitor turns back on if you perform any of the following operations or open the monitor:
 - Press the power switch, shutter-release button,  (shooting mode) button,  (playback) button, or  (movie-record) button

 
Step 5 *Select a Language and Set the Camera Clock*

When the camera is turned on for the first time, the language-selection screen and the date and time setting screen for the camera clock are displayed.

Use the multi selector to make the settings.


- If you exit without setting the date and time, ⌚ will flash when the shooting screen is displayed.

5.1

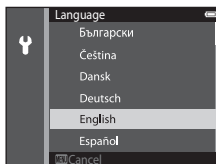


Use the multi selector ▲▼ to select the desired language and press the OK button.

 5.2

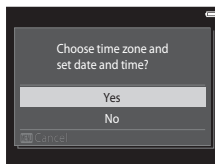

Select **Yes** and press the OK button.

 5.3

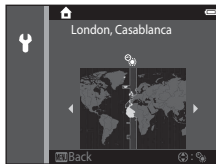


Select your home time zone and press the OK button.

Daylight Saving Time

If daylight saving time is in effect, press ▲ to enable the daylight saving time function.


- When the daylight saving time function is enabled, ⌚ is displayed above the map.
- Press ▼ to disable the daylight saving time function.

 5.4

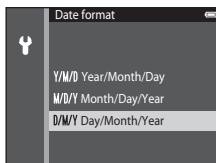

Select the date format and press the **OK** button.

 
5.5

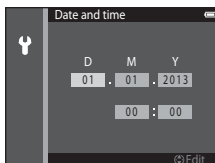

Edit the date and time.

- Select a field: Press **◀▶** (changes between **D**, **M**, **Y**, hour, and minute).
- Edit the date and time: Press **▲▼**.
- Confirm the setting: Select the minute field and press the **OK** button.

 5.6

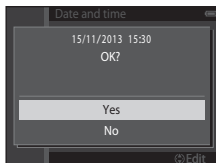

Select **Yes** and press the **OK** button.

- When settings are finished, the lens extends and the camera switches to shooting mode.



Imprinting the Date and Time on Images While Taking Images

After setting the date and time, enable the **Print date** option in the  (setup) menu (📖29). Display the  (setup) menu using the following procedure and change the settings. Press the **MENU** button → press the multi selector  → use   to select the  (setup) menu icon and press the  button → use   to select an item and press the  button.



Changing the Language Setting and the Date and Time Setting

Just as described under “Imprinting the Date and Time on Images While Taking Images” above, display the  (setup) menu (📖29) and set **Language** or **Time zone and date**.

The next step explains basic shooting operations using  (auto) mode.


Shooting and Playback

Step 1 Check the Battery Level and the Number of Exposures Remaining

Battery level indicator

Display	Description
	The battery level is high.
	The battery level is low.
 Battery exhausted.	The camera cannot take images. Recharge the battery.

 Number of exposures remaining

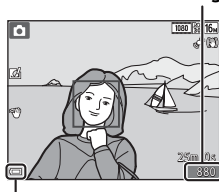

Battery level indicator

 
Number of Exposures Remaining

 is displayed when no memory card is inserted in the camera, and images are saved in the internal memory.

Step 2 *Hold the Camera and Frame a Picture*

2.1 Hold the camera steady in both hands.

- Keep fingers and other objects away from the lens, flash, etc.

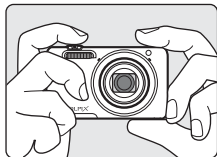

2.2 Frame the picture.

 


Using the Zoom

Move the zoom control.

- To zoom in closer to the subject, move the zoom control toward **T** (telephoto).
- To zoom out and view a larger area, move the zoom control toward **W** (wide-angle).

When you turn the camera on, the zoom moves to the maximum wide-angle position.

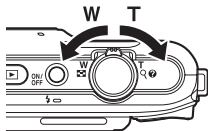

Step 3 **Focus and Shoot**

3.1 Press the shutter-release button halfway, i.e., press the button lightly until you feel a slight resistance.

 
 
- When the subject is in focus, the focus area glows green (multiple focus areas can grow green).

When human faces are detected:

- The camera focuses on one of them.

When no human faces are detected:

- If the main subject is detected, the camera focuses on it.
- If no main subject is detected, the camera automatically selects one or more of the nine focus areas containing the subject closest to the camera.
- When the camera is unable to focus, the focus area flashes red. Modify the composition and press the shutter-release button halfway again.

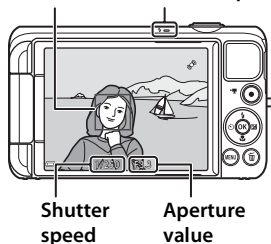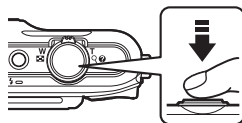

Flash lamp

The flash lamp indicates flash status when the shutter-release button is pressed halfway.

	On	The flash fires when an image is taken.
	Flashing	The flash is charging.*
	Off	The flash does not fire when an image is taken.

* If the battery level is low, the monitor turns off while the flash is charging.

3.2 Without lifting your finger, press the shutter-release button the rest of the way down to take the picture.


- The shutter is released and the image is saved.
- If you press the shutter-release button with too much force, the camera may shake, causing images to be blurred. Press the button gently.



Step 4 *Play Back Images*

Press the  (playback) button. The camera enters playback mode.

- The last image captured is displayed in full-frame playback mode.

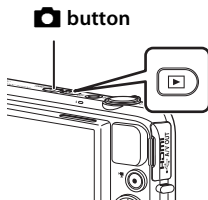 

- Use the multi selector  to display previous or next images.
- To return to shooting mode, press the  (shooting mode) button or shutter-release button.

Display the previous image



Display the next image



Deleting Unwanted Images

To delete the image currently displayed in the monitor, press the  (delete) button.

When the deletion screen is displayed, use the multi-selector  to select **Current image** and press the .

When the confirmation dialog is displayed, select **Yes** and press the  button to delete the image that is displayed.

  - After pressing the  button, use  to select **Erase selected images** and select multiple images to be deleted. Select **All images** to delete all images.
- **Deleted images cannot be recovered.** To cancel without deleting, select **No** in the confirmation dialog and press the .

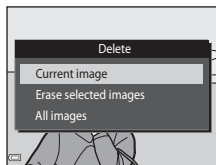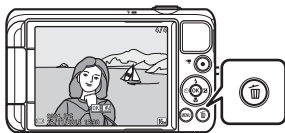

Using ViewNX 2

ViewNX 2 is an all-in-one software package which enables you to transfer, view, edit and share images. Install ViewNX 2 using the included ViewNX 2 CD-ROM.

Your Imaging Toolbox

ViewNX 2™



Step 1 Installing ViewNX 2

- An Internet connection is required.

Compatible Operating Systems

Windows

Windows 8, Windows 7, Windows Vista, Windows XP

Macintosh

Mac OS X 10.6, 10.7, 10.8

Refer to the Nikon website for details on system requirements, including the latest information on operating system compatibility.

1.1 Start the computer and insert the ViewNX 2 CD-ROM into the CD-ROM drive.

- Windows: If instructions for operating the CD-ROM are displayed in the window, follow the instructions to proceed to the installation window.
- Mac OS: When the **ViewNX 2** window is displayed, double-click the **Welcome** icon.

1.2 Select a language in the language selection dialog to open the installation window.

- If the desired language is not available, click **Region Selection** to choose a different region and then choose the desired language (the **Region Selection** button is not available in the European release).
- Click **Next** to display the installation window.



1.3 Start the installer.

- We recommend clicking **Installation Guide** in the installation window to check the installation help information and system requirements before installing ViewNX 2.
- Click **Typical Installation (Recommended)** in the installation window.

1.4 Download the software.

- When the **Software Download** screen is displayed, click **I agree - Begin download**.
- Follow the on-screen instructions to install the software.

1.5 Exit the installer when the installation completion screen is displayed.

- Windows: Click **Yes**.
- Mac OS: Click **OK**.

The following software is installed:

- ViewNX 2 (consisting of the three modules below)
 - Nikon Transfer 2: For transferring images to the computer
 - ViewNX 2: For viewing, editing, and printing transferred images
 - Nikon Movie Editor: For basic editing of transferred movies
- Panorama Maker (for creating a single panorama image of a landscape, etc. from a series of images that each capture a separate portion of the subject)

1.6 Remove the ViewNX 2 CD-ROM from the CD-ROM drive.

 
Step 2 *Transferring Images to the Computer*

2.1 Choose how images will be copied to the computer.

Choose one of the following methods:

- **Direct USB connection:** Turn the camera off and ensure that the memory card is inserted in the camera. Connect the camera to the computer using the USB cable. The camera automatically turns on.

To transfer images that are saved in the camera's internal memory, remove the memory card from the camera before connecting it to the computer.

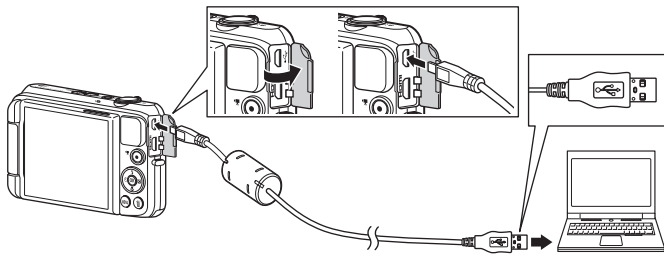

- **SD card slot:** If your computer is equipped with an SD card slot, the card can be inserted directly in the slot.
- **SD card reader:** Connect a card reader (available separately from third-party suppliers) to the computer and insert the memory card.

If a message is displayed prompting you to choose a program, select Nikon Transfer 2.

- **When using Windows 7**

If the dialog shown at right is displayed, follow the steps below to select Nikon Transfer 2.

1 Under **Import pictures and videos**, click

Change program. A program selection dialog will be displayed; select **Import File using Nikon Transfer 2** and click **OK**.

2 Double-click **Import File**.



 
If the memory card contains a large number of images, it may take a while for Nikon Transfer 2 to start. Wait until Nikon Transfer 2 starts.

✓ Connecting the USB Cable

The connection may not be recognized if the camera is connected to the computer via a USB hub.

2.2 Transfer images to the computer.

- Confirm that the name of the connected camera or removable disk is displayed as the "Source" on the "Options" title bar of Nikon Transfer 2 (①).
- Click **Start Transfer** (②).

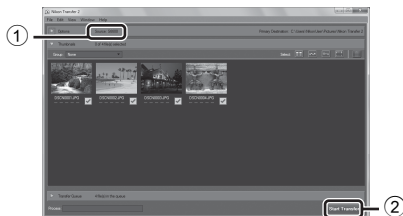

- At default settings, all the images on the memory card will be copied to the computer.


2.3 Terminate the connection.

- If the camera is connected to the computer, turn the camera off and disconnect the USB cable. If you are using a card reader or card slot, choose the appropriate option in the computer operating system to eject the removable disk corresponding to the memory card and then remove the card from the card reader or card slot.

Step 3 *Viewing Images*

Start ViewNX 2.

- Images are displayed in ViewNX 2 when transfer is complete.
- Consult online help for more information on using ViewNX 2.

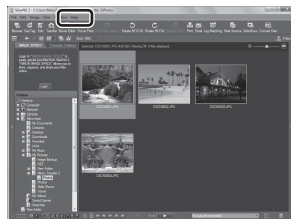 

Starting ViewNX 2 Manually

- **Windows:** Double-click the **ViewNX 2** shortcut on the desktop.
- **Mac OS:** Click the **ViewNX 2** icon in the Dock.

Other Functions

Flash Mode, Self-Timer, Macro Mode, and Exposure Compensation

Use the multi selector in shooting mode to apply the following settings.

 
Flash Mode

The flash modes available are **AUTO** (auto), (auto with red-eye reduction), (off), (fill flash), and **SLOW** (slow sync) modes.




Exposure Compensation

Overall image brightness or darkness can be adjusted by setting exposure compensation before taking images.




Macro Mode

 Use for close-ups. The camera can focus at a closer distance when the zoom is at a position where and the zoom indicator glow green.



Self-Timer


 
The camera is equipped with two- and ten-second timers.



Selecting a Shooting Mode

Press the  button in shooting mode to display the shooting mode selection menu.

  Select a shooting mode with the multi selector, and press the  button to switch to that mode.

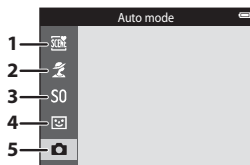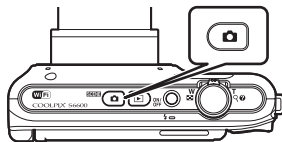


1.  Scene auto selector
2.  Scene mode*
3. **S0** Special effects mode*
4.  Smart portrait mode
5.  Auto mode ( 16)

* The icon displayed differs depending on which scene or effect was selected last.

Selecting a Playback Mode

 Press the  button in playback mode to display the playback mode selection menu. Select a playback mode with the multi selector, and press the  button to change to that mode.

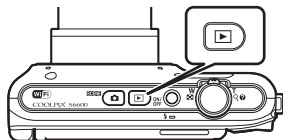

1.  Playback mode (all images) (📖18)
2.  Favorite pictures mode
3.  Auto sort mode
4.  List by date mode

Recording Movies

 
You can record movies by simply pressing the  (movie-record) button. Press the  (movie-record) button to start movie recording. Press the  (movie-record) button again to stop movie recording.



Using Camera Menus


A variety of shooting and playback settings can be adjusted from the camera menu.

Press the **MENU** button to display the menu for the current mode and use the multi selector to select an item (📖12).

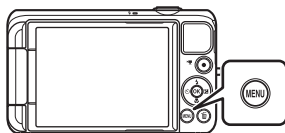


Select a menu icon on the left to switch to the menu of the selected icon.

 
Press the **MENU** button again to exit the menu.

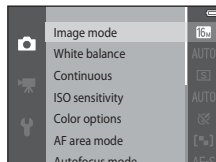


Switching Between Menu Icons

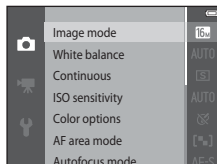 

 Press the multi selector ◀ to highlight a menu icon.

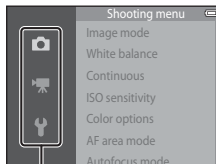

 
Use the multi selector ▲▼ to select another menu icon, and press either the **OK** button or ▶.

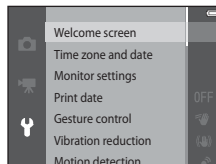

The selected menu is displayed.

Playback Mode

 The following options are available in full-frame playback mode.

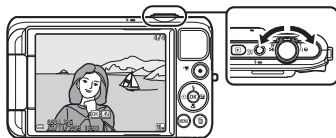

To	Use	Description
Select images		Use the multi selector ▲▼◀▶ to display previous or next images.
View thumbnails/ enable calendar display	W	Displays thumbnail playback mode. Move the zoom control toward W in the 16-image thumbnail playback to apply the calendar display (except in list by date mode).
Zoom during playback	T	Magnifies the image displayed in the monitor. Press the OK button to return to full-frame playback mode.
Play back movies		Plays back the movie currently displayed.
Apply effects to images		Press the OK button when OK: [effects icon] is displayed on a still image to select one of the displayed effects.
Delete image		Allows you to delete images. When using favorite pictures mode, auto sort mode, or list by date mode, images with the same album, category, or shooting date can be deleted.
Display menus	MENU	Displays the menu for the selected mode.

To	Use	Description
Switch to another playback mode		Displays the playback mode selection menu, allowing you to switch to favorite pictures mode, auto sort mode, or list by date mode.
Switch to shooting mode		Press the  button, shutter-release button, or  (movie-record) button to switch to shooting mode.
		
		

For Your Safety

To prevent damage to your Nikon product or injury to yourself or to others, read the following safety precautions in their entirety before using this equipment. Keep these safety instructions where all those who use the product will read them.

The consequences that could result from failure to observe the precautions listed in this section are indicated by the following symbol:



This icon marks warnings, information that should be read before using this Nikon product, to prevent possible injury.

WARNINGS

Turn off in the event of malfunction

Should you notice smoke or an unusual smell coming from the camera or Charging AC Adapter, unplug the Charging AC Adapter and remove the battery immediately, taking care to avoid burns. Continued operation could result in injury. After removing or disconnecting the power source, take the equipment to a Nikon-authorized service representative for inspection.

Do not disassemble

Touching the internal parts of the camera or Charging AC Adapter could result in injury. Repairs should be performed only by qualified

technicians. Should the camera or Charging AC Adapter break open as the result of a fall or other accident, take the product to a Nikon-authorized service representative for inspection, after unplugging the product and/or removing the battery.

Do not use the camera or Charging AC Adapter in the presence of flammable gas

Do not use electronic equipment in the presence of flammable gas, as this could result in explosion or fire.

Handle the camera strap with care

Never place the strap around the neck of an infant or child.

Keep out of reach of children

Particular care should be taken to prevent infants from putting the battery or other small parts into their mouths.

Do not remain in contact with the camera, battery charger, or AC adapter for extended periods while the devices are on or in use

Parts of the devices become hot. Leaving the devices in direct contact with the skin for extended periods may result in low-temperature burns.

Do not leave the product where it will be exposed to extremely high temperatures, such as in an enclosed automobile or in direct sunlight

Failure to observe this precaution could cause damage or fire.

Observe caution when handling the battery

The battery may leak, overheat, or explode if improperly handled. Observe the following precautions when handling the battery for use in this product:

- Before replacing the battery, turn the product off. If you are using the Charging AC Adapter/ AC adapter, be sure it is unplugged.
- Use only a Rechargeable Li-ion Battery EN-EL19 (included). Charge the battery by using a camera that supports battery charging or by using a Battery Charger MH-66 (available separately). To charge the battery with the camera, use either Charging AC Adapter EH-70P (included) or the **Charge by computer** function.
- When inserting the battery, do not attempt to insert it upside down or backwards.
- Do not short or disassemble the battery or attempt to remove or break the battery insulation or casing.
- Do not expose the battery to flame or to excessive heat.
- Do not immerse in or expose to water.

- Put the battery in the battery case before transporting it. Do not transport or store with metal objects such as necklaces or hairpins.
- The battery is prone to leakage when fully discharged. To avoid damage to the product, be sure to remove the battery when no charge remains.
- Discontinue use immediately should you notice any change in the battery, such as discoloration or deformation.
- If liquid from the damaged battery comes in contact with clothing or skin, rinse immediately with plenty of water.

Observe the following precautions when handling the Charging AC Adapter

- Keep dry. Failure to observe this precaution could result in fire or electric shock.
- Dust on or near the metal parts of the plug should be removed with a dry cloth. Continued use could result in fire.
- Do not handle the plug or go near the Charging AC Adapter during lightning storms. Failure to observe this precaution could result in electric shock.

- Do not damage, modify, forcibly tug or bend the USB cable, place it under heavy objects, or expose it to heat or flames. Should the insulation be damaged and the wires become exposed, take it to a Nikon-authorized service representative for inspection. Failure to observe these precautions could result in fire or electric shock.
- Do not handle the plug or Charging AC Adapter with wet hands. Failure to observe this precaution could result in electric shock.
- Do not use with travel converters or adapters designed to convert from one voltage to another or with DC-to-AC inverters. Failure to observe this precaution could damage the product or cause overheating or fire.

Use appropriate cables

When connecting cables to the input and output jacks, use only the cables provided or sold by Nikon for the purpose, to maintain compliance with product regulations.

Handle moving parts with care

Be careful that your fingers or other objects are not pinched by the lens cover or other moving parts.

CD-ROMs

The CD-ROMs included with this device should not be played back on audio CD equipment. Playing CD-ROMs on an audio CD player could cause hearing loss or damage the equipment.

Using the flash close to your subject's eyes could cause temporary visual impairment.

The flash should be no less than 1 meter (3 ft 4 in.) from the subject.

Particular care should be observed when photographing infants.

Do not operate the flash with the flash window touching a person or object

Failure to observe this precaution could result in burns or fire.

Avoid contact with liquid crystal

Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent liquid crystal from the monitor touching the skin or entering the eyes or mouth.

Turn the power off when using inside an airplane or the hospital

Turn the power off while inside the airplane during take off or landing. Do not use wireless network functions while in the air. Follow the instructions of the hospital when using while in a hospital. The electromagnetic waves emitted by this camera may disrupt the electronic systems of the airplane or the instruments of the hospital. If you are using an Eye-Fi card, remove it from the camera before boarding an aircraft or entering a hospital.

Notices

Notices for customers in Europe

CAUTIONS

**RISK OF EXPLOSION IF BATTERY IS
REPLACED BY AN INCORRECT TYPE.**

**DISPOSE OF USED BATTERIES
ACCORDING TO THE INSTRUCTIONS.**

This symbol indicates that electrical and electronic equipment is to be collected separately.

The following apply only to users in European countries:

- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- Separate collection and recycling helps conserve natural resources and prevent negative consequences for human

health and the environment that might result from incorrect disposal.

- For more information, contact the retailer or the local authorities in charge of waste management.

This symbol on the battery indicates that the battery is to be collected separately.

The following apply only to users in European countries:

- All batteries, whether marked with this symbol or not, are designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.



Caring for the Camera

To ensure continued enjoyment of this Nikon product, observe the precautions described below in addition to the warnings in "For Your Safety" (☞32-35) when using or storing the device.

✔ Do Not Drop

The product may malfunction if subjected to strong shock or vibration.

✔ Handle the Lens and All Moving Parts with Care

Do not apply force to the lens, lens cover, monitor, memory card slot, or battery chamber. These parts are easily damaged. Applying force to the lens cover could result in camera malfunction or damage to the lens. Should the monitor break, care should be taken to avoid injury caused by broken glass and to prevent the liquid crystal from the display touching the skin or entering the eyes or mouth.

✔ Keep Dry

The device will be damaged if immersed in water or subjected to high humidity.

✔ Avoid Sudden Changes in Temperature

Sudden changes in temperature, such as when entering or leaving a heated building on a cold day, can cause condensation to form inside the device. To prevent condensation, place the device in a carrying case or a plastic bag before exposing it to sudden changes in temperature.

✔ Keep away from Strong Magnetic Fields

Do not use or store this device in the vicinity of equipment that generates strong electromagnetic radiation or magnetic fields. Strong static charge or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, damage data saved on the memory card, or affect the product's internal circuitry.

✓ **Do Not Point the Lens at Strong Light Sources for Extended Periods**

Avoid pointing the lens at the sun or other strong light sources for extended periods when using or storing the camera. Intense light may cause deterioration of the image sensor, producing a white blur effect in photographs.

✓ **Turn the Product off Before Removing or Disconnecting the Power Source**

Do not remove the battery while the product is on, or while images are being saved or deleted. Forcibly cutting power in these circumstances could result in loss of data or in damage to product memory or internal circuitry.

✓ **Notes About the Monitor**

- Monitors and electronic viewfinders are constructed with extremely high precision; at least 99.99% of pixels are effective, with no more than 0.01% being missing or defective. Hence while these displays may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is not a malfunction and has no effect on images recorded with the device.
- Images in the monitor may be difficult to see under bright lighting.
- The monitor is lit by an LED backlight. Should the monitor begin to dim or flicker, contact your Nikon-authorized service representative.

✓ **About the Manuals**

Nikon will not be held liable for any damages resulting from the use of this product.

Before Taking Important Pictures

Before taking pictures on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

Disposing of Data Storage Devices

Please note that deleting images or formatting data storage devices such as memory cards or built-in camera memory does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, erase all data using commercial deletion software, or format the device and then completely refill it with images containing no private information (for example, pictures of empty sky). Be sure to also replace any pictures selected for the **Select an image** option in the **Welcome screen** setting. Care should be taken to avoid injury or damage to property when physically destroying data storage devices.

Wi-Fi (Wireless LAN Network)

This product is controlled by the United States Export Administration Regulations, and you are required to obtain permission from the United States government if you export or re-export this product to any country to which the United States embargoes goods. The following countries were subject to embargo: Cuba, Iran, North Korea, Sudan, and Syria. Since the target countries are subject to change, please contact the United States Department of Commerce for the latest information.

Restrictions on Wireless Devices

The wireless transceiver included in this product conforms to wireless regulations in the country of sale and is not for use in other countries (products purchased in the EU or EFTA can be used anywhere within the EU and EFTA). Nikon does not accept liability for use in other countries. Users who are unsure as to the original country of sale should consult with their local Nikon service center or Nikon-authorized service representative. This restriction applies to wireless operation only and not to any other use of the product.

Declaration of Conformity (Europe)

Hereby, Nikon Corporation, declares that COOLPIX S6600 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity may be consulted at http://imaging.nikon.com/support/pdf/DoC_S6600.pdf.

Precautions when Using Radio Transmissions

- Always keep in mind that radio transmission or reception of data is subject to interception by third parties. Note that Nikon is not responsible for data or information leaks that may occur during data transfer.
- The operating frequency band of this equipment is used by industrial, scientific, consumer and medical equipment including microwave ovens, premises radio stations for identifying mobile units used in the manufacturing lines of plants (radio stations requiring no license), and amateur radio stations (hereinafter referred to as “another station”). 1. Before using this equipment, confirm that another station is not being operated nearby. 2. In the event of this equipment causing harmful radio wave interference with another station, promptly change the operating frequency or stop radio wave emission by turning off the power, etc. 3. If you have further questions, contact a Nikon service center or Nikon authorized service representative.

Personal Information Management and Disclaimer

- User information registered and configured on the product, including wireless LAN connection settings and other personal information, is susceptible to alteration and loss resulting from operational error, static electricity, accident, malfunction, repair or other handling. Always keep separate copies of important information. Nikon is not responsible for any direct or indirect damages or lost profits resulting from alteration or loss of content that is not attributable to Nikon.
- Before discarding this product or transferring it to another owner, perform **Reset all** in the setup menu (📖29) to delete all user information registered and configured with the product, including wireless LAN connection settings and other personal information.

AVC Patent Portfolio License

This product is licensed under the AVC Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC standard ("AVC video") and/or (ii) decode AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, L.L.C.

See <http://www.mpegla.com>.

Trademark Information

- Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries. The iFrame logo and the iFrame symbol are trademarks of Apple Inc.
- Adobe and Acrobat are registered trademarks of Adobe Systems Inc.

- SDXC, SDHC and SD Logos are trademarks of SD-3C, LLC.



- PictBridge is a trademark.
- HDMI, HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.



- Wi-Fi and the Wi-Fi logo are trademarks or registered trademarks of the Wi-Fi Alliance.
- Android and Google Play are trademarks or registered trademarks of Google, Inc.
- All other trade names mentioned in this manual or the other documentation provided with your Nikon product are trademarks or registered trademarks of their respective holders.

FreeType License (FreeType2)

- Portions of this software are copyright © 2013 The FreeType Project (<http://www.freetype.org>). All rights reserved.

MIT License (HarfBuzz)

- Portions of this software are copyright © 2013 The HarfBuzz Project (<http://www.freedesktop.org/wiki/Software/HarfBuzz>). All rights reserved.



A series of ten horizontal dashed lines spanning the width of the page, intended for handwriting practice.

Warranty Terms - Nikon Europe Service Warranty

Dear Nikon Customer,

We thank you for your purchasing this Nikon product. Should your Nikon product require warranty service, please contact the dealer from whom it was purchased or a member of our authorized service network within the sales territory of Nikon Europe BV (Europe/ Africa and Russia).

In order to avoid any unnecessary inconvenience, we advise you to read the user manuals carefully before contacting the dealer or our authorized service network.

Your Nikon equipment is guaranteed against any manufacturing defects for one full year from the date of original purchase. If during this period of guarantee the product proves defective due to improper material or workmanship, our authorized service network within the sales territory of Nikon Europe BV will, without charge for labor and parts, repair the product in the terms and conditions set as below. Nikon reserves the right (at its sole discretion) to replace or repair the product.

1. This warranty is only provided upon presentation of the completed warranty card and original invoice or purchase receipt indicating the date of purchase, product type and dealer's name, together with the product. Nikon reserves the right to refuse free-of-charge warranty service if the above documents cannot be presented or if the information contained in it is incomplete or illegible.
2. This warranty will not cover:
 - necessary maintenance and repair or replacement of parts due to normal wear and tear.

- modifications to upgrade the product from its normal purpose as described in user manuals, without the prior written consent of Nikon.
 - transport costs and all risks of transport relating directly or indirectly to the warranty of the products.
 - any damage resulting from modifications or adjustments which may be made to the product, without the prior written consent of Nikon, in order to comply with local or national technical standards in force in any other country than the ones for which the product was originally designed and/or manufactured.
3. The warranty will not be applicable in the case of:
- damage caused by misuse including but not limited to failure to use the product for its normal purpose or according to the user instructions on the proper use and maintenance, and to installation or use of the product inconsistent with the safety standards in force in the country where it is used.
 - damage caused by accidents including but not limited to lightning, water, fire, misuse or neglect.
 - defacing, illegibility or removal of the model or serial number on the product.
 - damage resulting from repairs or adjustments which have been conducted by unauthorized service organizations or persons.
 - defects in any system into which the product is incorporated or with which it is used.
4. This service warranty does not affect the consumer's statutory rights under applicable national laws in force, nor the consumer's right against the dealer arising from their sales/purchase contract.

Notice: An overview of all authorized Nikon Service Stations can be found online by following this Link (URL = <http://www.europe-nikon.com/service/>).



Highlight Feature of the COOLPIX S6600

Gesture control - Easily Take Self-portraits



The direction and angle of the monitor on this camera can be adjusted.
You can easily take self-portrait images in combination with **Gesture control**.

- When you open the monitor and face it forward in the same direction as the camera lens, you can take images without pressing the shutter-release button, simply by moving your hand toward an icon displayed on the monitor.



Move your hand toward .



Countdown starts.



An image is taken.

- The shooting functions listed below are available.
 - : Start recording a movie
 - : Take a still image
 - : Zoom out (wide-angle)
 - : Zoom in (telephoto)

NIKON CORPORATION

© 2013 Nikon Corporation



YP3G01(11)
6MN26311-01