

Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.



PROFESSIONAL
BLENDER

QUICK START GUIDE


BEFORE FIRST USE

IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

- 1 Remove all packaging materials from the unit. Exercise care when unpacking blade assembly, as the blades are sharp.
- 2 The Stacked Blade Assembly is **NOT** locked in place in the container. Handle the Stacked Blade Assembly by grasping the top of the shaft.
- 3 Wash container, lid, and blade assembly in warm, soapy, water using a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling blade assembly, as the blades are sharp.
- 4 Thoroughly rinse and air-dry all parts.
- 5 Wipe control panel with a soft cloth. Allow it to dry completely before using.

NOTE: All attachments are BPA free and dishwasher safe. It is recommended that the container, lid, and blade assembly be placed on the top rack of the dishwasher. Exercise care when handling blade assembly.

FEATURES

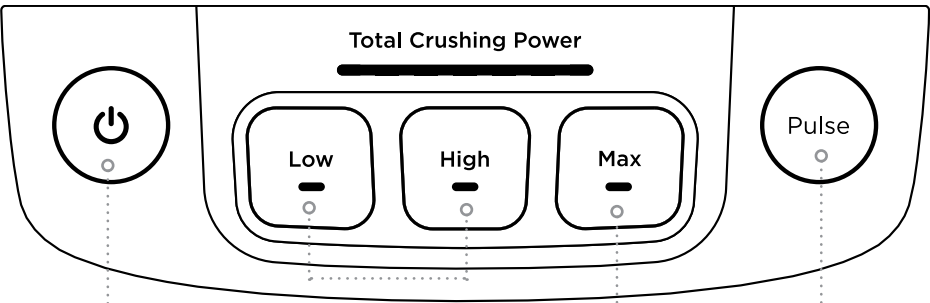

Power

Use the Power button to turn the unit on or off

LOW | HIGH

When selected, both of these speeds run continuously for 60 seconds. Press the currently active button again to stop the program sooner. These programs do not work in conjunction with the Max program.

MAX

Turn ice, juices, and fruit into expertly blended frozen drinks.

PULSE

Offers greater control of pulsing and blending. Operates only when PULSE is pressed. Use short presses for short pulses and long presses for long pulses.

TOTAL CRUSHING® PITCHER

PARTS



MOTOR BASE



TOTAL CRUSHING PITCHER




PITCHER LID



STACKED BLADE ASSEMBLY


ASSEMBLY

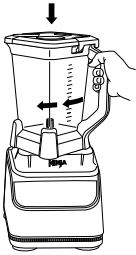

1. Place the Total Crushing Pitcher on base and turn clockwise to lock in place.




2. Holding Stacked Blade Assembly by the top of the shaft, insert it into pitcher.

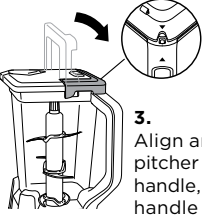


3. Align arrows on pitcher lid and handle, then lower handle to lock in place.


BLEND & ENJOY

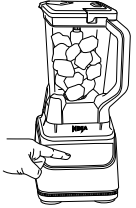

 
1. Select any of the illuminated programs to begin.



2. When blending is complete, turn pitcher counterclockwise and lift to remove.

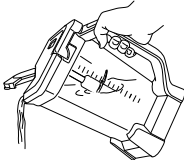

3a. To pour out thinner mixtures, ensure lid is locked in place, then open pour spout.

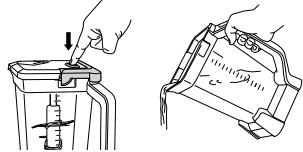

3b. For thicker mixtures, press RELEASE button and lift handle to remove lid, then carefully lift out blade assembly before pouring.

NOTE: The pitcher lid handle will not fold down unless it is attached to the pitcher.

Once the Total Crushing Pitcher is locked onto base, press the Power button  to turn the unit on. The compatible program buttons will illuminate.

WARNING: Stacked Blade Assembly is sharp and not locked in place. Make sure lid is locked onto pitcher before pouring contents. If pouring without lid, carefully remove blade assembly first. Failure to do so will result in a risk of laceration. Refer to the Ninja Owner's Guide for additional information.



**For questions or to register your product,
visit us online at ninjakitchen.com**



@ninjakitchen

© 2025 SharkNinja Operating LLC.

NINJA and TOTAL CRUSHING are registered trademarks of SharkNinja Operating LLC.

NINJA ULTRACRUSH is trademark of SharkNinja Operating LLC.

BP201_QSG_MP_Mv2