



Watermelon
Bubblegum

Find your perfect color at ninjakitchen.com
*Colors may vary by retailer

**ANY
COLOR.*
ANY
AESTHETIC.**



Blue
Raspberry



ON-THE-GO LID
AND CAP



100% LEAKPROOF
FLIP CAP



EASY SIP
CHUG SPOUT



3 AUTO-iQ®
ONE-TOUCH INTELLIGENCE



@ninjakitchen

© 2025 SharkNinja Operating LLC.

AUTO-iQ and NINJA are registered trademarks of SharkNinja Operating LLC.
CRUSHBLADE and NINJA BLENDBOSS are trademarks of SharkNinja Operating LLC.

DB301Series_QSG_MP_Mv11

Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.

NINJA Blend BOSS™

TUMBLER BLENDER

**QUICK
START
GUIDE**

AUTO-iQ® uses timed blending
and pauses for the perfect output.

For best results, allow programs
to run until complete.



Blend

Best for lighter protein shakes
and fresh fruit/vegetable juices
RUN TIME: 60 SECONDS



Smoothie

Best for smoothies with
frozen fruit, vegetables, ice,
and leafy greens
RUN TIME: 55 SECONDS



Ice Crush

Best for resort-style frozen
drinks and cocktails
RUN TIME: 50 SECONDS



PROGRESS BAR

Lights illuminate
as program runs.

Lights shut off
automatically when
program is complete.



For helpful tips and tricks
on how to use your Ninja
Blendboss,™ scan the QR code.

ASSEMBLY



1. Fill cup with desired contents, referencing the **MAX FILL** line. When adding liquid, reference **MIN FILL** line. Screw on the blade assembly until you have a tight seal.



2. Flip cup upside down and align the dot on the blade holder to the dot on the motor base. Rotate cup clockwise until it clicks into place.



3. Select any program to begin blending immediately.



4. When blending is complete, remove the cup from base. Then, remove the blade assembly from cup.

NOTE: When making thicker recipes like smoothies or protein shakes, pull the sleeve back to make sure all ingredients are fully blended before taking on the go.



5. Take it to go!

Place the lid on the travel tumbler, and turn clockwise to seal. Lid is designed to not leak, drip or spill when locked.



NOTE:

- The lid threads on for both left- and right-handed use. Hold the cup in your preferred hand, face the lid toward you, and twist clockwise to secure.
- **DO NOT** microwave, freeze, or place hot beverages in the travel tumbler.

CUP CLEANING

Stuck-on ingredients in the travel tumbler?

1. Rinse the cup and blade assembly under **WARM WATER** after processing.
2. Fill the cup halfway with warm water and add **1-2 SMALL DROPS** of dish soap.
3. Screw on the blade assembly and press **BLEND**.
4. Once complete, empty contents and rinse under warm water.



Dishwasher

Cup, lid, and CrushBlade™ Assembly are all top-rack dishwasher safe.



Hand-Washing

Wash cup, lid, and CrushBlade™ Assembly in warm, soapy water. Clean CrushBlade™ Assembly within one hour of use for best results. When cleaning use a soft bristle brush or non-abrasive sponge. Gently scrub all surfaces, including crevices, slots, and interlock where buildup may occur.



WARNING: Handle the CrushBlade™ Assembly with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.

For questions or to register your product,
visit us online at ninjakitchen.com