

THANK YOU
for purchasing the Ninja Luxe™ Café



REGISTER YOUR PURCHASE

- registryourninja.com
- 1-866-347-5139
- Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

TECHNICAL SPECIFICATIONS

Voltage: 120V~, 60Hz
Power: 1650W
Water Reservoir
Capacity: 47 oz.

The standby power consumption is 0.5W.
The appliance enters Standby mode automatically after 20 minutes of inactivity.

TIP: You can find the model and serial numbers on the QR code label located on the back of the machine by the power cord.

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

These instructions are designed to help you get a complete understanding of your new Ninja Luxe Café. If you have any questions, please call a dedicated Ninja Luxe Cafe specialist at 1-866-347-5139.

SharkNinja Operating LLC
US: Needham, MA 02494
1-877-646-5288
ninjakitchen.com

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA LUXE is a trademark of SharkNinja Operating LLC.

This product may be covered by one or more U.S. patents. See sharkninja.com/patents for more information.

© 2026 SharkNinja Operating LLC

ES301_IB_MP_Mv10_260313



NINJA LUXE CAFÉ



ES301 | Owner's Guide

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

	Read all instructions before using your Ninja Luxe Café.
	Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.
	Avoid contact with hot surface. Always use hand protection to avoid burns.
	For indoor and household use only. This appliance is not intended for commercial or professional use.

⚠ WARNING
To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use machine for other than intended use.

General Precautions

- To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance in a safe way.
- Keep the machine and its cord out of reach of children. **DO NOT** allow the machine to be played with or be used by children. Close supervision is necessary when used near children.
- Children shall not play with the appliance.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- To protect against fire, electric shock, and injury to persons, **DO NOT** immerse cord, plugs, or body of epsresso machine in water or other liquid.
- NEVER** carry the machine by the power cord or pull it to disconnect from electrical socket; instead grasp the plug and pull to disconnect.
- DO NOT** operate any machine with a damaged cord or plug, or after the espresso machine malfunctions or has been dropped or damaged in any manner. Contact SharkNinja Operating LLC for service.
- For household and countertop use only. **DO NOT** let the power cord hang over the edge or touch hot surfaces such as a stove.
- NEVER** use an electrical socket below a counter.
- To avoid risk of fire, electrical shock, or damage to the machine, **DO NOT** use machine in machine garage or under a wall cabinet.
- Unplug from outlet when the machine is not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- NEVER** leave machine unattended while in use.
- Machine is not intended to be operated by means of an external timer or separate remote-control system.
- DO NOT** place on top of any other machine.
- The machine shall not be placed in a cabinet when in use.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, injury to persons or damage to the machine.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ CAREFULLY BEFORE USE • FOR HOUSEHOLD USE ONLY

⚠ WARNING

To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions. Do not use machine for other than intended use.

Operating Notice

- Power the machine off and unplug from the wall outlet.
- The use of an accessory not recommended by the manufacturer may create an overflow condition and scalding hazard, or result in fire, electric shock, or personal injury.
- **ALWAYS** use machine on a clean, dry, level surface.
- **DO NOT** place on or near a hot gas or electric burner or in a heated oven.
- **DO NOT** use this machine for anything other than its intended use.
- **DO NOT** use outdoors.
- **DO NOT** touch hot surfaces. Use handles or knobs. Avoid contacting moving parts.
- **ALWAYS** place a cup or vessel appropriate for output volume selection beneath the portafilter when brewing.
- **DO NOT** run the machine without water.
- **DO NOT** overfill the water reservoir. Fill water only to the maximum fill line.
- Keep lid on water reservoir when brewing.
- Keep bean hopper lid on when grinding to prevent access to moving parts.
- **DO NOT** remove portafilter when brewing as machine is under pressure. Removal while brewing can lead to scalding or injury.
- **DO NOT** reach in or touch steam wand or frother jug when in operation. Hot steam and hot liquids will cause burns and scalds.

Care & Maintenance

- To prevent illness from bacterial growth in the machine, follow all cleaning instructions in the Cleaning & Maintenance section of this Owner's Guide.
- For best results, ensure you are using a clean machine.
- If the product is not operating properly, visit ninjakitchen.com or contact SharkNinja Operating LLC for examination, repair, or adjustment.
- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and supervised.
- When portafilter is in use, ensure it is tightened in the group head to prevent spillover of hot liquid.
- **DO NOT** pick up the machine by the grinding cradle. This apparatus is not meant to hold weight of product.


Cord Statement

- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- **DO NOT** use extension cords with this product.

READ AND SAVE THESE INSTRUCTIONS


PARTS

- A Bean Hopper
- B Water Reservoir
- C Assisted Tamper & Funnel Storage
- D Manual Valve
- E Control Panel
- F Steam Wand
- G Group Head
- H Milk Jug
- I Adjustable Cup Tray
- J Grinding Cradle
- K Drip tray
- L Integrated Conical Burr Grinder
- M Grind Dial

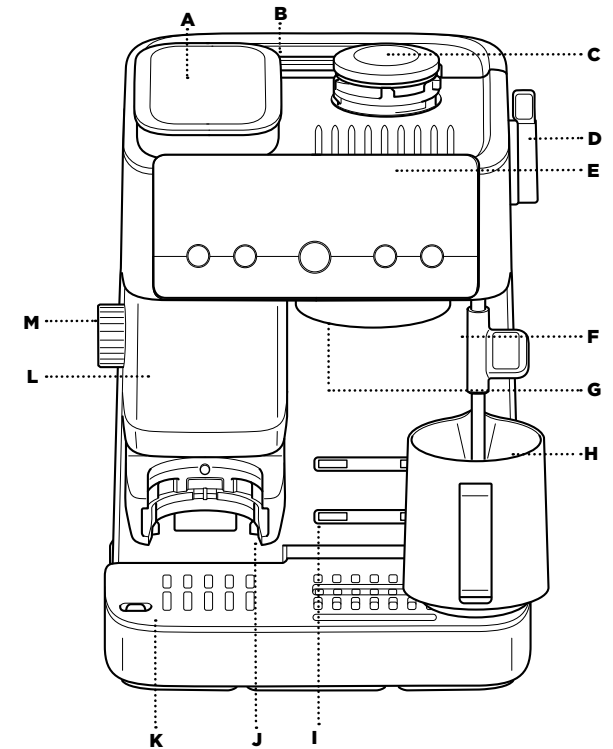


DRIP TRAY COMPONENTS

- K Drip tray
- K1 Empty Indicator
- K2 Main Grate

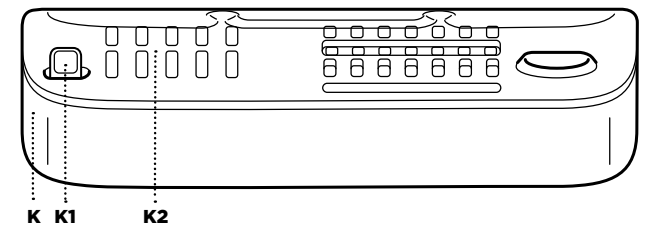


ACCESSORIES

- 1 Double Basket
- 2 Luxe Basket (not available on all models)
- 3 Portafilter
- 4 Cleaning Disc
- 5 Cleaning Brush
- 6 Funnel
- 7 Assisted Tamper
- 8 Cleaning Tablets
- 9 Water Hardness Test Strip

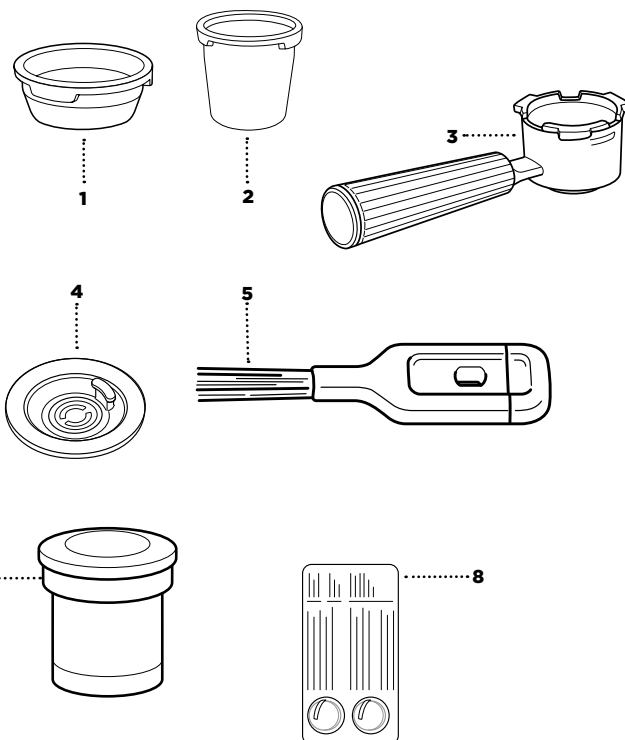


ACCESSORIES NEST FOR EASY STORAGE

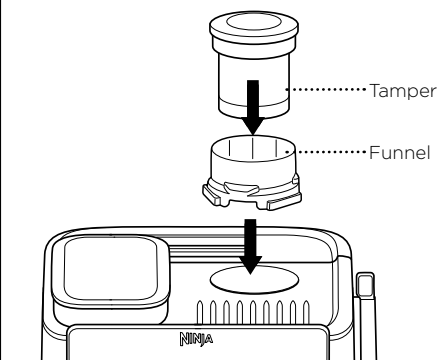

*Luxe basket not compatible with all models.

USING THE CONTROL PANEL*

- | | |
|--------------------------------|--|
| A POWER Button | G DESCALE Button |
| B GRIND/CONFIRM Button | H Center Dial/START BREW Button |
| C Progress Bar | I CLEAN Button |
| D SIZE Selection Button | J TEMPERATURE/STRENGTH Button |
| E PRE-HEAT Button | |
| F PURGE Indicator | |

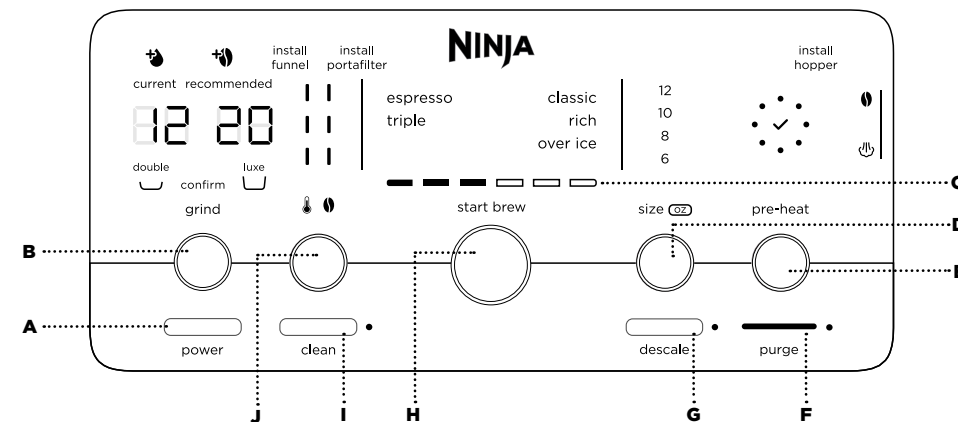

*Functions may vary by model.

INTELLIGENT NOTIFICATIONS

The machine will display an intelligent notification if an action is needed:

- | | |
|-----------------------|-------------|
| • ADD BEANS | • ADD WATER |
| • INSTALL PORTAFILTER | • PURGE |
| • INSTALL FUNNEL | • DESCALE* |
| • INSTALL HOPPER | • CLEAN* |

*The CLEAN and DESCALE buttons will illuminate to let you know you need to run the respective cycle.

GETTING STARTED: BEFORE YOUR FIRST BREW

REMOVE ACCESSORIES & PARTS FROM PACKAGING

- To start, remove all accessories and parts from packaging. Ensure that all accessories and parts are removed from the packaging before discarding packaging.
- When removing the machine from packaging, be sure to remove all tape from machine. Tape will be on all sides of the machine.


CLEAN ACCESSORIES BEFORE USE

- After removing all accessories and parts from the packaging, thoroughly clean all parts by hand-washing and dry thoroughly.

WATER HARDNESS TEST

All water has minerals that can cause buildup in the machine over time. These minerals are referred to as water hardness, and will impact how often you will need to descale the machine. Doing this test will ensure the machine recommends a descale at the right time.


- Remove test strip from pack.

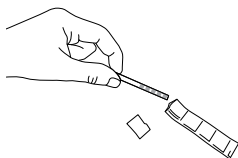

- Completely submerge the water test strip in the water you plan on using with the machine for 5-10 seconds.




- Pull test strip out and lightly shake it.

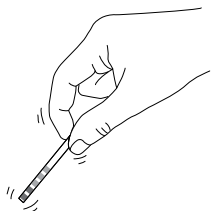


- Place test strip on a dry, flat surface and wait 1 minute for test strip to display results.

- After 1 minute, you will see 0-5 purple squares appear. This will indicate the water hardness level of the water (0 purple squares=level 0, 5 purple squares=level 5, etc.).

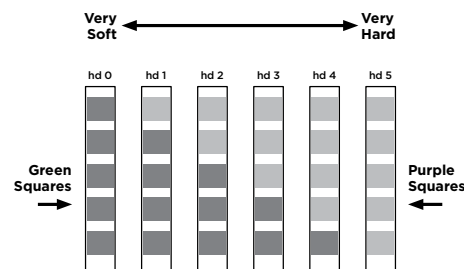

- After identifying the water hardness level, plug in the machine.
- Look at the left side of the control panel. It will display hd 5.
- Rotate the center dial to program the water hardness level by matching the number of purple squares on the test strip to the number displayed. (e.g., if the result is level 1, change the setting to hd 1).

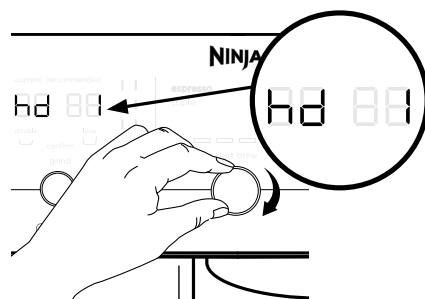


- Press center dial to confirm your setting.

NOTE: If you need to change the hardness level, purchase another test strip at ninjakitchen.com/accessories. For more instructions on how to reset the water hardness, refer to the Additional Settings section.

FILL THE WATER RESERVOIR

- Before you begin, make sure the water reservoir is full of room-temperature or cold water. Be sure to fill up to but not exceeding the maximum fill line.

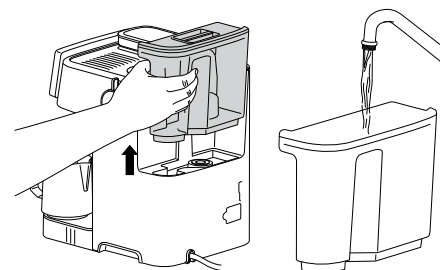


If at any point before a brew there's not enough water in the reservoir to brew your selected drink, the machine will indicate that you must ADD WATER. If you get an ADD WATER notification while brewing, add water to the reservoir and press **START BREW** to resume.

FILL THE BEAN HOPPER

When adding beans to the hopper, be sure the machine is unplugged.


- Remove the lid of the hopper.

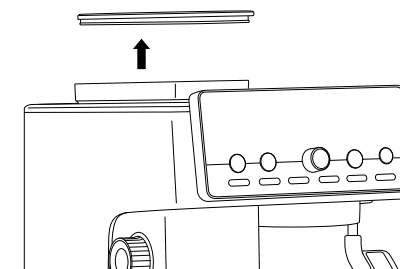

- Fill hopper with whole beans. **DO NOT** add pre-ground beans to bean hopper.



- Ensure the handle in the hopper is in the locked position when installed on the hopper, then place lid securely back on the hopper.

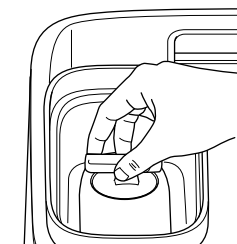


NOTE: DO NOT put any water in the grinder. If water does get in the grinder, please call us at 1-866-347-5139 immediately.

GETTING STARTED: BEFORE YOUR FIRST BREW CONT.


WATER FLUSH

Before you make your first drink, you must flush the machine. This is to condition the machine to prepare for brewing.


- 1 With the double basket installed, place portafilter in group head by aligning orange dot on portafilter with orange dot on group head.

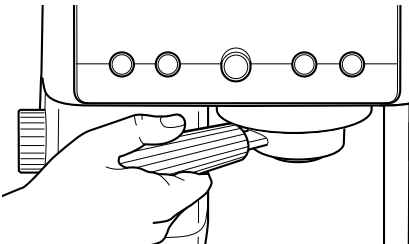


- 2 Fasten portafilter into group head until orange dot on portafilter aligns with lock arrow on group head.

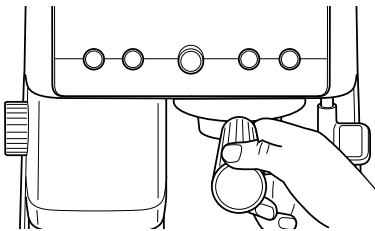


- 3 Turn the center dial to select CLASSIC.

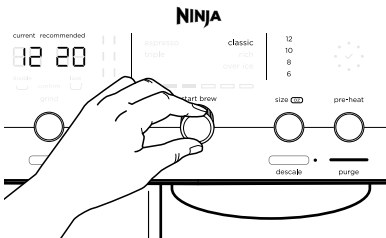

- 4 Press the **SIZE** button to adjust drink size to the largest available size (either 8 oz. or 12 oz. depending on the model). Ensure you have at least 14 oz. of water in the reservoir.

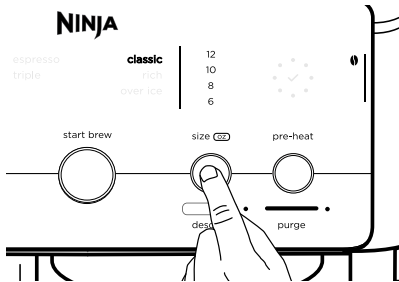

- 5 Place 14 oz. or greater cup underneath the portafilter.

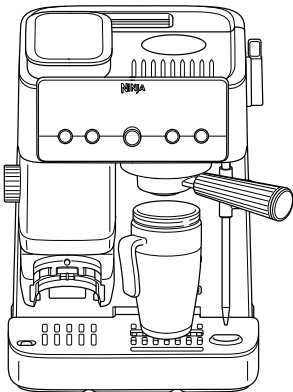

- 6 Press **START BREW**. The machine will beep to signal the brew has started. The progress bar will illuminate to indicate the status of the brew. When finished, the machine will beep again.

- 7 Dispose the water you brewed and wash the cup.

BREWING ESPRESSO, DRIP COFFEE, AND COLD DRINKS

ESPRESSO/COFFEE BASKETS

- 1 The Starter Kit contains the baskets. There are two baskets (double, and luxe baskets may vary per model).



Double

Espresso, coffee-based drinks on some models




Luxe*

Triple, coffee-based drinks

*Luxe basket not compatible with all models.


- 2 Choose a basket based on what drink you would like, then insert into the portafilter. Ensure that the large tab on the basket aligns with the large tab on the portafilter, and then press firmly into place.

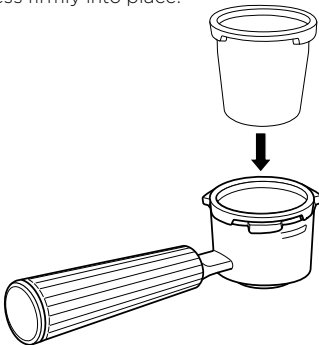


NOTE: Double basket comes pre-installed in portafilter.

PORTAFILTER INSTALLATION

- 1 Place funnel on portafilter, aligning the notches on the funnel with the notches on the portafilter. Push down until funnel locks into place in the portafilter. The funnel prevents grounds from overflowing during grinding and allows for a cleaner tamping process.

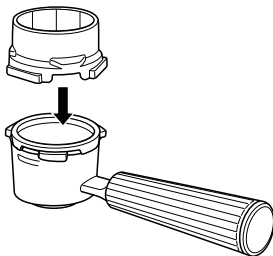

- 2 With the funnel on top of the portafilter, insert into the grinding cradle. Make sure it is level and fits securely. Once portafilter is installed in grinding cradle, it will be weighed. To ensure accurate weight, let go of portafilter.

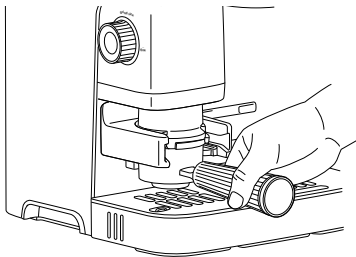

- 3. Once the portafilter is properly installed, press **CONFIRM** to confirm the basket (not required on all models).
- 4 The machine will display an animation. This is to indicate the machine is taring the portafilter to ensure it is dispensing the right amount of grounds. Then the control panel will illuminate the selectable brew options based on the basket that is installed.

grind size



NOTE: If you do not see this animation, remove the portafilter from the grinding cradle, power the machine off and on, and reinstall the portafilter in the grinding cradle, ensuring it is level and pushed all the way in.

- 5 Turn the center dial to your desired brew.

BREWING ESPRESSO, DRIP COFFEE, AND COLD DRINKS CONT.

APPROXIMATE BREW VOLUMES

COFFEE VOLUMES		
SIZES	Classic Rich	Over Ice (Must Fill with Ice Before Brewing)
	6 oz.	6 oz.
	8 oz.	8 oz.
	10 oz.	10 oz.
	12 oz.	12 oz.

Outputs may vary by +/- 10%

ESPRESSO VOLUMES		
	Grounds Dose	Output Volume
Double Espresso	18 g	1.5 oz.
Triple Espresso	26 g	2.3 oz.

Outputs may vary by +/- 10%


NOTE: These are the preset espresso outputs. To adjust output, please refer to the Additional Settings section.

NOTE: Adjusting espresso brew strength will affect your brew volume. **Strength 1 will have a larger output than the default.** For more information, see Adjusting Brew Temp and Strength.


*Drink options may vary by model

USING THE GRINDER

- Once a brew is highlighted, Barista Assist Technology™ will recommend a grind size based on the beans and previous brew output. If you wish to follow the recommended size, use the grind dial on the side of the machine to change the **CURRENT** grind size to match the **RECOMMENDED** grind size.

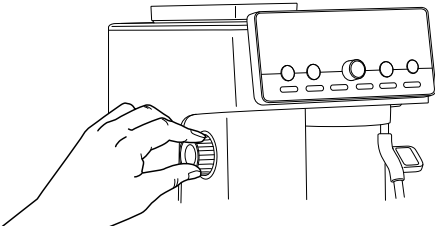

- Once you have selected your desired grind setting, press **GRIND** to begin grinding. The machine will beep to indicate that grinding has started. When finished, the machine will beep again signifying grinding is complete.

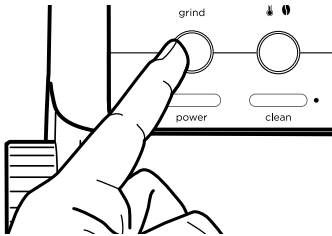

NOTE: Once a grind is complete, the machine will be set to the brew style and size that was selected for that grind. To change style and size, pour grounds out of portafilter, power the machine off and on, and select your desired brew.

UNDERSTANDING THE GRIND SETTINGS

What do the grind settings mean?

- The numbers on the left side of the control panel represent how coarse or fine the grind will be, with 60 being the coarsest and 1 being the finest. Coarser settings will work better for coffee drinks, and finer settings will work better for espresso drinks.
- Matching the recommended setting: this will bring the best flavors out of your chosen beans. The machine will adjust based on what beans you're using to ensure you are not over extracting or under extracting.

DIALING IN THE GRINDER FOR PROPER EXTRACTION


For espresso brews only

You may notice the recommended grind setting change. This is Barista Assist Technology adjusting the recommended grind setting to help you get proper espresso extraction. When using new beans for the first time or adding more beans, it may take 2-3 brews to reach the optimal grind setting. Over time, you may notice the recommended grind setting change to account for aging beans. This is normal. Ensure the current grind size matches the recommended grind size for proper espresso extraction.

NOTE: When changing from very coarse to very fine (or vice versa), you may hear the grinder turn on. This is to help prevent jamming in the grinder. This will only happen when the portafilter is installed in the grinding cradle.


TAMPING

Be sure to tamp on all espresso drinks, 6 oz. and 8 oz. coffee drinks made in the double basket*, as well as 10 oz. and 12 oz. coffee drinks made in the luxe basket*; this is to ensure no grounds spill over the edge of the portafilter. For 6 oz. to 8 oz. coffee drinks made in the Luxe basket, lightly shake the portafilter to level coffee grounds and then proceed to brewing.

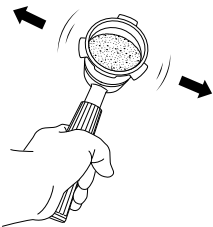

*Drink options may vary by model


- When grinding is complete remove the portafilter from the grinding cradle. Keep the funnel attached to the portafilter.
- Place the portafilter on a solid, level surface, then place the assisted tamper inside the funnel. Ensure there is protection between the portafilter and surface. Press tamper all the way down until it meets the funnel.

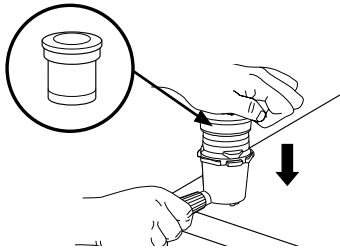

NOTE: If tamping on top of a wooden or delicate material countertop, put towel down for protection.

NOTE: When brewing a triple shot, tamp the grounds normally with the funnel on the portafilter. After that, remove the funnel and tamp down the grounds one more time.


- Now that tamping is complete, remove both the tamper and funnel from the portafilter and store nested together on the top of the unit.

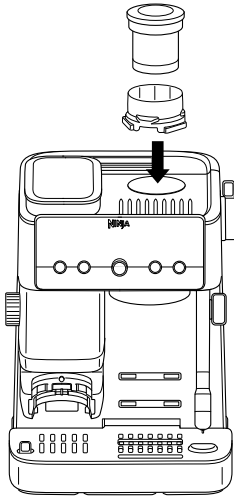

BREWING ESPRESSO, DRIP COFFEE, AND COLD DRINKS CONT.

BREWING

- 1 Place portafilter in group head by aligning orange dot on portafilter with orange dot on group head.
- 2 Fasten portafilter into group head until orange dot on portafilter aligns with lock arrow on group head.

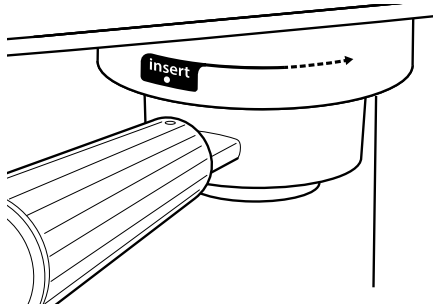

NOTE: DO NOT brew without the drip tray inserted.


- 3 The brew style and size that was ground will still be selected on the control panel. Place a cup under the portafilter and press **START BREW**.
- 4 The machine will beep to indicate that the brew has started. The progress bar will illuminate indicating the status of the brew. When finished, the machine will beep again signifying the brew is complete.

NOTE: If you are using a smaller cup, use the adjustable cup tray to lift your cup closer to the group head to reduce splatter.

NOTE: For triple espresso shots, there may be some water on the puck after brewing. This is normal.


PROPER EXTRACTION

- Drink will pour out at a slow, consistent rate.
- You will see a caramel-colored liquid pouring out. That is the crema.
- There will be a layer of crema on top of your drink. Feel free to tilt your cup to see if the layer of crema is still completely visible. If you can still only see that caramel color, you have a properly extracted espresso shot.

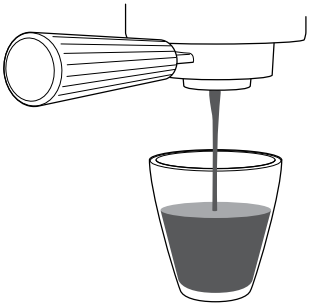

AFTER YOUR BREW

When brew is complete, carefully remove portafilter from group head. Dispose of grounds by knocking the surface of the basket over a container or knock box (sold separately).

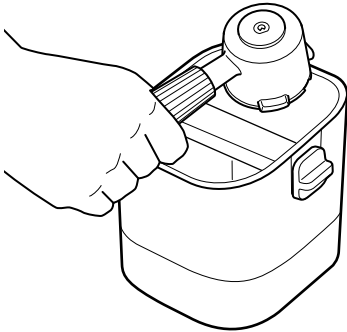

ESPRESSO EXTRACTION			
	UNDER EXTRACTION	OPTIMUM EXTRACTION	OVER EXTRACTION
Grind	Too course	Optimum	Too fine
Tamp	Too light, use firmer tamp force	10-15kgs: a gentle lean using body weight	Tamp force cannot exceed 15kgs
Shot Time	Under 20 sec	28-38 sec	Over 38 sec
Color	Coffee: Pale brown Crema: Light brown	Coffee: Rich caramel Crema: Golden caramel	Coffee: Dark brown Crema: Dark brown
Taste	Sour, acidic, watery	Rich, sweet, vibrant	Bitter, dry, burnt. Reduce Brew Temp
Volume	High volume, watered down	Double Espresso: 1.5 oz. (45ml) Triple: 2.3 oz. (65 ml)	Little to low volume

ADJUSTING YOUR BREW TEMP AND STRENGTH


ADJUSTING BREW TEMPERATURE

There are several methods and practices to help get your preferred temperature.

TEMP/STRENGTH Button

Before brewing, you can adjust the temperature using the TEMP/STRENGTH button. If TEMP is not already illuminated, press and hold the **TEMP/STRENGTH** button for 3 seconds.

Temperature Adjustments

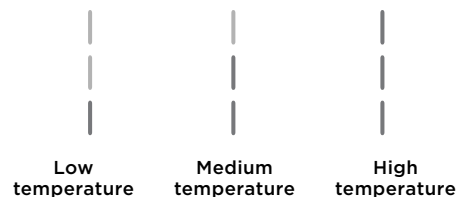

The temperature of the drink will affect the extraction of the espresso and the flavor of your drink. For best results and proper extraction, we recommend a low or medium temperature for darker roasts, and a medium or high temperature for light roasts.

Choosing the Right Cup

Ensure the cup you are using is appropriate for the size of your drink. For a hotter drink, use a cup that is a similar size to your drink. The thickness of the material your cup is made of will also affect the temperature of your drink. For a hotter drink, use a cup made of thinner material.


Pre-Heating Before You Brew

Running hot water through the group head and portafilter will help pre-heat them, as well as the machine for future brews. To further increase the temperature of your drink, run a water-only double shot of espresso through the portafilter into the cup you would like to brew your drink in. The temperature of your cup will impact the temperature of your drink. Discard the water, then dry the cup and portafilter. Then, proceed to brewing. See Water Flush for instructions.

ADJUSTING BREW STRENGTH


If you find your brew is tasting too weak or too strong for your liking, you can use the strength adjustment button.

To adjust brew strength, use the TEMP/STRENGTH button. If STRENGTH is not already illuminated, press and hold the **TEMP/STRENGTH** button for 3 seconds. The strength adjustment will work differently depending on if you are brewing espresso or coffee.

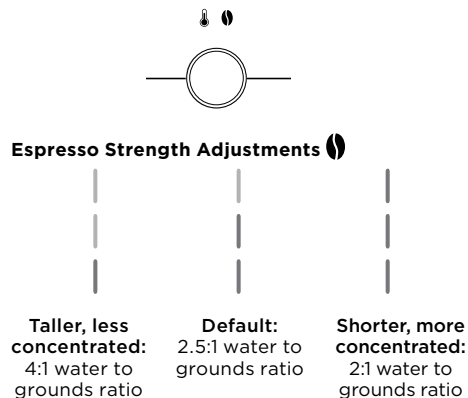

NOTE: Adjusting your espresso brew strength will affect your brew volume output. Strength 1 will have a larger output than the default setting. **Use a larger cup than normal.**

Coffee Strength Adjustments

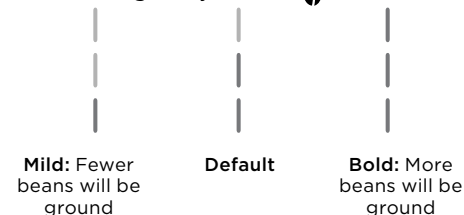

Coffee Flavor Adjustments

Barista Assist will recommend a grind size depending on brew style and size. Because not all beans are roasted the same, with the grind dial you have the opportunity to adjust the flavor profile.

Taste Is Too Bitter or Burnt: Increase Grind Size or Decrease Temperature


Taste Is Too Sour: Decrease Grind Size or Increase Temperature

It is recommended to clean out the grinder before switching beans. Please see instructions on how to clean the grinder in the Cleaning the Conical Burr Grinder page of the Periodic Maintenance section.


SWITCHING OUT BEANS

SWITCHING OUT BEANS

- 1 Unlock bean hopper by rotating handle counterclockwise.

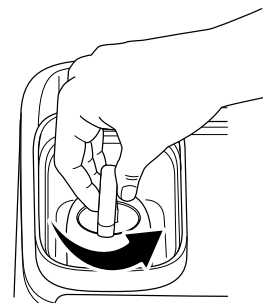

- 2 Remove the bean hopper and pour out any leftover beans.
- 3 Place the hopper back on the machine.
- 4 Lock bean hopper back in by rotating handle clockwise.

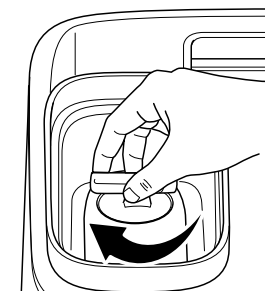


- 5 Place the portafilter with the funnel attached in the grinding cradle.
- 6 Press **CONFIRM**, then press and hold the **GRIND** button to clear any leftover beans.
- 7 Add new beans into the bean hopper.

NOTE: For best practice, if changing bean or roast type, reset Barista Assist Technology using the instructions in the "Additional Settings" menu, prior to dialing in the new beans.

MANUAL FROTHING


BEFORE YOU FROTH

- 1 Fill the milk jug with the desired amount of milk, but do not exceed the max fill line.
- 2 Prepare a damp cloth to wipe the steam wand immediately after frothing.
- 3 Preheat the machine by pressing the **PRE-HEAT** button. The check mark will illuminate when ready.
- 4 Place the wand tip in the milk jug between 2 and 4 o'clock, about a finger's width away from the jug wall, and about an inch deep below the surface of the milk.

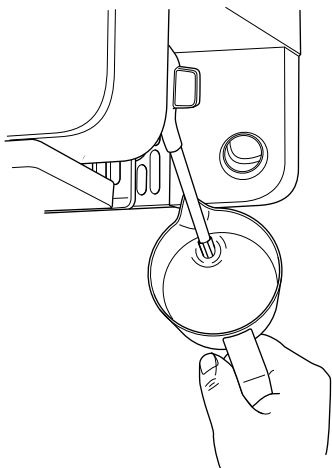


FROTHING

- 5 **Turn on Steam:** Once pre-heated, place the steam wand in the milk jug (refer to BEFORE YOU FROTH step 4 for proper positioning). Turn the manual valve on the right side of the machine to the **STEAM** ☞ position to release steam.

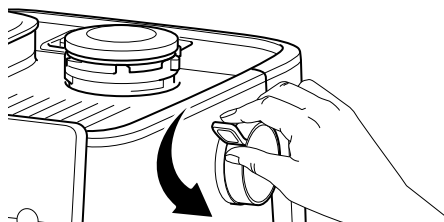


CAUTION: Hot steam and hot liquids will cause burns and scalds.


- 6 **Form the Vortex:** Hold the jug steady. Allow the milk to begin spinning to form a vortex. If the milk doesn't spin, tilt your wrist slightly (like turning a doorknob) while keeping the wand tip below the milk surface.

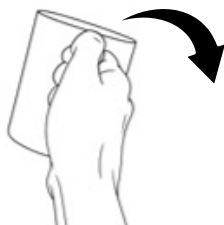

- 7 **Introduce Bubbles:** Lower the jug slightly until the wand tip is near the surface and you hear a gentle paper-tearing sound. Froth for:
 - 5-7 seconds for thin froth
 - 8-12 seconds for thick froth

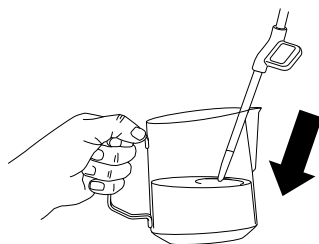

- 8 **Add Heat and Texture:** Lower the wand an inch deeper into the milk by lifting the jug. Continue heating until the jug becomes too hot to touch with the palm of your hand.

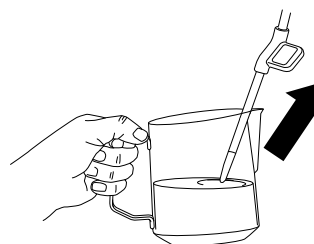


- 9 **Turn Off Steam:** Turn the manual valve back to **BREW** ☞ position to turn off steam before removing the wand.

NOTE: DO NOT froth milk directly into the espresso or coffee; always froth in the milk jug and pour the froth into the espresso or coffee base afterward.

NOTE: DO NOT froth without drip tray inserted.

AFTER FROTHING

- 1 Use the damp cloth to wipe down the steam wand.

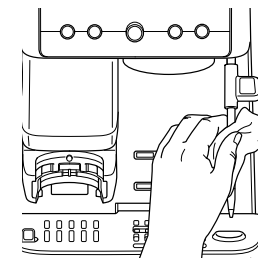

- 2 Return the wand to its down position and turn the manual valve to **STEAM** ☞ to purge the inside of the wand for 10 seconds before returning to **BREW** ☞ mode.

NOTE: When out of water, the machine will not purge. Be sure to turn the valve back to **STEAM** ☞ when adding more water to run a full purge.

- 3 Tap the bottom of the jug on the counter and swirl to remove large bubbles. Pour the milk over your espresso or coffee and enjoy.

FROTHING BEST PRACTICES

- Froth Quality: Ideal froth has a glossy, paint-like texture suitable for latte art.
- Use cold, fresh milk with higher fat content for best results.
- For plant-based options, choose barista-specific milks designed for texturing.
- If Froth is Too Thin: You may have under-aerated the milk. Add 2-3 more seconds in Step 7.
- If Froth is Too Thick: Move to Step 8 sooner and aerate for less time.
- If Milk is Too Cold: Heat until the jug is too hot for the palm of your hand.
- If Milk is Too Hot: Stop frothing slightly earlier to prevent scorching.



SCAN HERE for frothing how-to video.

PERIODIC MAINTENANCE

IMMEDIATELY AFTER BREW CLEANING

- When brew is complete, carefully remove portafilter from group head. Dispose of grounds by knocking the surface of the basket over a container or knock box (sold separately).
- For best results, be sure to clean out the portafilter and basket between each use.
- Remove basket from portafilter. Hand-wash both items with soapy water to remove all coffee oils. Be sure basket is dry before brewing again.
- After you froth, wipe the wand with a damp cloth before pushing it back into its down position.
- Push the steam wand into its down position and turn the manual valve to **STEAM**  to flush out the wand after frothing.
- Empty the drip tray when the orange empty indicator rises enough to become visible.
- Periodically hand-wash the drip tray and air-dry thoroughly.
- Periodically clean the base of the machine with a damp cloth.

CLEANING THE ACCESSORIES


Dishwasher-Safe Parts:

Funnel, cleaning disc, and all drip tray components.


NOTE: DO NOT submerge non-dishwasher-safe parts or accessories in water.

EMPTYING THE DRIP TRAY


As you brew, the drip tray will fill up. When the orange empty indicator rises enough to be visible, it's time to empty the drip tray.

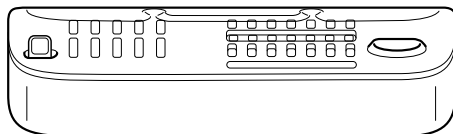

- 1 Remove the drip tray from the machine by pulling tray away.

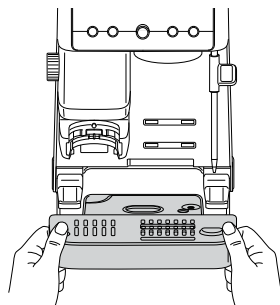

- 2 Carefully move the drip tray to the sink and pour water out through the pour spout.

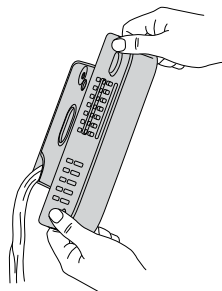

- 3 Insert drip tray back into the machine.

NOTE: Empty indicator is removable.


REMOVING THE SHOWER SCREEN AND REPLACING THE RUBBER GASKET

If you notice your brew quality diminish over time, remove the shower screen and clean it thoroughly.

If you experience leaking around the portafilter during a brew when the handle is fully tight, you may need to replace the gasket.


Be sure that the machine is turned off and unplugged before proceeding.

- 1 Using a Phillips-head screwdriver, remove central screw on shower screen, then remove shower screen.

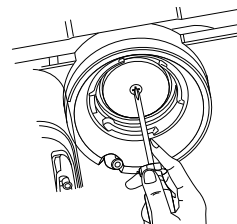

- 2 Once removed, clean the shower screen with soap and water.

- 3 Remove rubber gasket from group head with flathead screwdriver. Inspect gasket for any wear or tearing, and replace with a new gasket if needed (available for purchase on ninjakitchen.com/accessories).

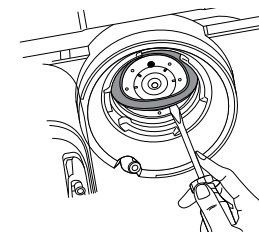

- 4 Insert shower screen back into group head and secure in position with screw.


PERIODIC MAINTENANCE CONT.

CLEANING THE CONICAL BURR GRINDER


To prevent clogging and ensure the highest quality output, it is recommended to clean your conical burr grinder weekly at a minimum for daily use. For dark roast, decaf and other oily bean types, it is recommended to clean the grinder more often. For less than daily use, clean your grinder monthly at minimum or anytime you swap out or refill the beans.

Be sure that the machine is turned off and unplugged before proceeding.


- 1 Remove all beans from the bean hopper. See Switching Out Beans for reference.
- 2 Ensure the bean hopper is installed and locked. Clear out any leftover beans on top of the grinder by performing a "purge", following these instructions. First, set the grind size to 60 and insert the portafilter into the grinding cradle. Press **CONFIRM** (not required on all models), then press and hold **GRIND**. Once grinding begins, continue holding the button for about 10 seconds or until there is a noticeable change in noise. This will grind away and remove any material left in the grinder. If there is still residue left on the burr, sweep it off with the included cleaning brush and perform another purge if necessary.
- 3 Turn off and unplug the machine. Remove bean hopper by lifting handle and turning to counterclockwise.

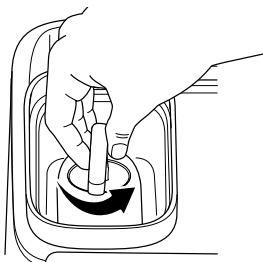


- 4 Remove upper burr by rotating counterclockwise, aligning the orange arrow on the burr grinder with the orange arrow labeled ALIGN on the machine. Once aligned, lift upper burr out.

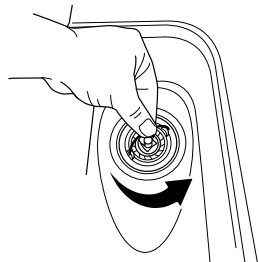


- 5 Clean removed burr grinder with brush.

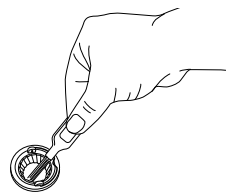

- 6 Then, clean burr grinder attached to machine with cleaning brush.

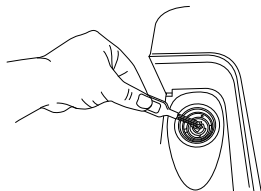

- 7 Be sure to clean the inside of the grinding cradle as well.

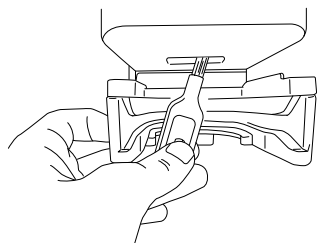


NOTE: DO NOT allow burrs to come into contact with water.

NOTE: When cleaning the burr grinder attached to the machine, only use the cleaning brush.


CLEANING THE STEAM WAND

Over time, material can build up in the steam wand. Over time, material can build up in the steam wand.


- 1 Remove the cap on the bottom of the cleaning brush to access the needle.
- 2 Use the needle to remove any material from the steam wand tip.

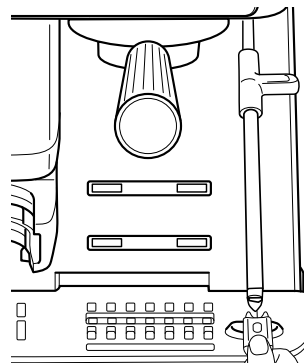

- 3 For a deeper clean, use the wrench in the middle of the cleaning brush to remove the steam wand tip.

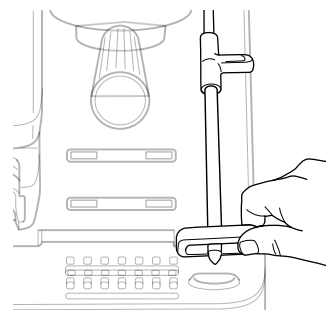

- 4 Use the needle to remove any material from inside the steam wand and steam wand tip.

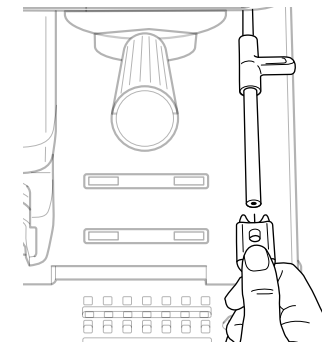

- 5 After cleaning, run a purge to clear out any excess material.

DESCALING AND CLEAN CYCLE


DESCALING

Time to complete: approximately 90 minutes


When the DESCALE light illuminates, you must run a descale cycle. If a descale isn't performed after the light turns on, drink quality will diminish and the machine may clog and stop working.

Descaling breaks down and removes limescale and mineral buildup inside the machine. Doing this will help maintain peak performance if routinely performed with a descale solution whenever the DESCALE light turns on.

- 1 Ensure the drip tray is completely emptied, as some of the water brewed from the descale cycle will be deposited into the drip tray. **Not emptying the drip tray may cause overflow.**

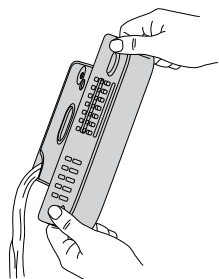

- 2 Dissolve the provided Ninja descale powder in a separate container with 37 fl. oz. of water. Pour solution mixture into water reservoir.

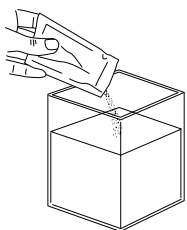

OR

Fill the water reservoir with 16 oz. of white vinegar, then fill the reservoir to the descale line with water.

- 3 Insert the double basket into the portafilter.
- 4 Fasten the portafilter into the group head.

- 5 Place milk jug on the drip tray with the steam wand inside.
- 6 Turn the manual valve to the **STEAM** position, then press the **DESCALE** button.
- 7 Press the **CENTER DIAL** to start the descale cycle.
- 8 The first part of the descale cycle will flush solution through the steam wand for approximately 30 minutes*. The machine will beep when this portion is complete.
- 9 Once the first part of the cycle is complete, remove the milk jug and empty the contents. Hand-wash with warm, soapy water to remove any residual solution.
- 10 Turn the manual valve to the **BREW** position.
- 11 Place an empty cup (at least 14 oz.) under the portafilter.
- 12 Press the **CENTER DIAL** to continue the second part of the cycle. The machine will flush solution through the portafilter for approximately 60 minutes*. The machine will count down the remaining time on the control panel.
- 13 The machine will beep indicating when the descale cycle is complete.
- 14 After the cycle is complete, remove the portafilter and drip tray with caution, as there will be water in each.
- 15 Empty the contents of each and hand-wash with warm, soapy water to remove any solution that could affect the flavor of your coffee.
- 16 Fill the reservoir with fresh water up to, but not exceeding, the max fill line.
- 17 Install the drip tray back on the machine and install the portafilter in the group head. **DO NOT** install the milk jug.
- 18 Flush the group head by running a **CLASSIC** brew in the largest size available (either 8 oz or 12 oz depending on your machine).
- 19 Then, with the milk jug uninstalled, flush the steam wand by turning the manual valve to and allowing steam to pass through the wand.

NOTE: After running a descale, immediately wipe down any splatter to prevent surface staining.

*Times may vary.


RUNNING A CLEAN CYCLE

Time to complete: approximately 6 minutes


A clean cycle flushes out residual oils or grounds that are built up in and around the group head. The **CLEAN** light will automatically illuminate to indicate when a clean cycle is required. You may also run a clean cycle if you notice a change in brew quality. The clean cycle requires the cleaning disc (included with the machine and storable in the accessory storage) and a cleaning tablet (also included and available for purchase on ninjakitchen.com/ accessories).

Follow these steps to run a clean cycle:

- 1 Ensure the drip tray is completely empty as the water brewed from the clean cycle will be deposited into the drip tray. **Not emptying the drip tray may cause overflow.**

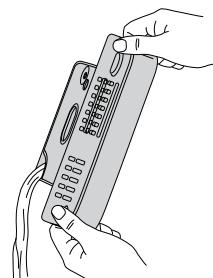


- 2 Fill the water reservoir up to but not exceeding the max fill line.

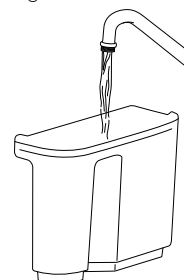


- 3 Insert the double basket in the portafilter.

NOTE: Empty indicator is removable.

- 4 Place the cleaning disc on top of the double basket, with the handle facing up.

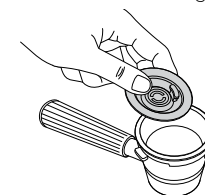

- 5 Place 1 cleaning tablet in the center of the cleaning disc.

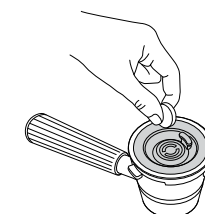

- 6 Fasten the portafilter in the group head.
- 7 Press the **CLEAN** button, then press the center dial to start the clean cycle.
- 8 The machine will start the process of backflushing the shower screen and group head and depositing the water and sediment from the clean cycle into the drip tray.
- 9 The clean cycle will take approximately 6 minutes to complete. The machine will beep when the clean cycle is complete.
- 10 After the clean cycle is complete, remove both the portafilter and drip tray with caution, as there may be water in both. Hand-wash with warm soapy water.

BEST BREWING PRACTICES

- For best results, use freshly roasted coffee beans.
- When purchasing coffee beans, it's best to buy a bag with a "Roasted On" date rather than a "Best Before" date to ensure quality and freshness.
- We recommend you use any coffee beans within 20 days of the "Roasted On" date.
- When changing to a different bean, fully remove previous beans before proceeding. See the Switching Out Beans section for more information.
- Always match the current to the recommended grind setting.
- To increase the brew temperature, run a water flush before making your drink.
- Keep your machine clean by using the brush to wipe off any debris.
- Use filtered water.
- Dial in the grinder whenever switching out beans.
- Keep machine on a stable surface.
- Empty drip tray frequently.
- After you grind and before you start brewing, the machine will start to heat up. Place your mug on the heated cup tray to warm it up.

BEST FROTHING PRACTICES

- For best results with plant-based milk, use the barista or full-fat version.
- For dairy milk, we recommend using whole milk.
- Milks that are UHT-treated (Ultra High Temperature) may have varying results.
- Coconut milk can be heated up but will not make stable froth.
- For best results use cold milk or milk out of the refrigerator.
- For best results make sure the milk jug is at room-temperature before frothing.
- Wipe steam wand with a damp cloth immediately after use to prevent milk from sticking.
- Before turning off the machine, push the steam wand back into the down position and turn the manual valve to STEAM  for 10 seconds to allow it to purge.
- For best foams and latte art, tap and swirl the milk jug prior to pouring milk.

ADDITIONAL SETTINGS

The additional settings menu offers additional options to customize your machine and is accessible and holding the **DESCALE** button for 3 seconds.

Item Number	TOPIC	OPTIONS
_h01	Beeps: Turns all beeps on or off	ON: Leave beeps on (default) OFF: Turns beeps off
_h02	Eco Mode: Saves power by turning boiler off after brewing.	ON: Turns Eco Mode on OFF: Leaves Eco Mode off (default)
_h03	Recommended Grind Size: Turns recommended grind setting display on or off	ON: Leaves display on (default) OFF: Turns display off
_h04	Barista Assist Technology™ Reset: Resets recommended grind setting to default setting	NO: Keeps your current settings (default) YES: Resets your settings
_h05	Factory Settings Reset: Reset all variables on the machine to default settings	NO: Keeps your current settings YES: Resets your settings
_h06	Froth Temperature: Adjusts the steam temperature while frothing	LO: Low M: Medium HI: High
_h07	Hard Water: Brings the hard water test menu up to reset your water hardness	hd 0: strip has 0 purple boxes hd 1: strip has 1 purple boxes hd 2: strip has 2 purple boxes hd 3: strip has 3 purple boxes hd 4: strip has 4 purple boxes hd 5: strip has 5 purple boxes

- 1 Navigate through these topics by turning the center dial. Press **START BREW** to select your desired topic.
- 2 Once you select into a topic, turn the center dial to get to your desired option and press **START BREW** to make your selection.
- 3 After a selection is made, you will hear a beep and return to the menu screen. Please note that the machine will not beep if beeps are turned off.
- 4 You can exit the menu by pressing the **DESCALE** button again.

TROUBLESHOOTING GUIDE

Why is there no water coming out of the portafilter?

Several factors could affect the volume of water dispensing from the portafilter:

- Not enough water in the reservoir: Ensure the water reservoir is adequately filled. When using the luxe basket, 12 oz. of water is required. When using the double basket, fill to the min. line.
- The water reservoir is not seated firmly: Check that the water reservoir is firmly seated in its place on the back of the machine.
- The machine is warming up/reaching the operating temperature: Please allow a short time for the machine to warm up before it dispenses.
- The grind size is too fine: Let the brew time out and follow the recommended grind setting on your next brew.
- The machine needs to be descaled: Follow the instructions under the Cleaning & Maintenance section.

Why is the espresso stream small/flowing slowly?

There could be several reasons behind this:

- The grind size is too fine: Let the brew time out and follow the recommended grind setting on your next brew.
- Basket cleanliness: Before grinding, ensure the basket is free of any clogs or debris that could impede the flow.
- The machine needs to be descaled: Follow the instructions under the Cleaning & Maintenance section.

Why is the espresso stream flowing very fast?

- The grind size is too coarse: Let the brew time out and follow the recommended grind setting on your next brew.
- Coffee is tamped too lightly: When tamping, make sure to place the portafilter on a level surface. Place the assisted tamper inside the funnel and push down on it until you feel the tamper contact the funnel.

Why does the espresso run around the edge of the portafilter?

- Portafilter is not inserted into the group head correctly: Place portafilter into group head by aligning orange dot on portafilter with orange dot on group head. Fasten portafilter into group head until orange dot on portafilter aligns with lock arrow on group head.
- There are coffee grounds around the basket rim: Clean unwanted grounds from the edge of the basket and portafilter to ensure portafilter sits properly in group head.
- The group head seal needs to be replaced: Call Customer Service at 1-877-646-5288.

Frothing does not start.

- Machine has not reached operating temperature: Please allow a short time for the machine to warm up before frothing begins.
- Not enough water in the reservoir: Ensure the water reservoir is filled up to the min. line.
- The water reservoir is not seated firmly: Check that the water reservoir is firmly seated in its place on the back of the machine.

Coffee is not hot enough.

- Preheat the portafilter: Rinse the portafilter under hot water before grinding. Please make sure that the basket is completely dry before grinding.
- Preheat the cup: Rinse the cup under hot water before brewing to increase the temperature of the brew.
- Adjust water temperature: See the Adjusting Brew Temperature section.
- The machine needs to be descaled: Follow the instructions under the Cleaning & Maintenance section.

My drink is too bitter/acidic.

- Match grind setting: Use the grind dial on the side of the machine to match the Current grind setting to the Recommended grind setting on the control panel before grinding.
- Change ratio: To increase/decrease the grounds-to-water ratio, please refer to the Additional Settings section.
- Change the brew temperature: For dark-roast beans, we recommend using the low or medium temperature setting. For medium- or light-roast beans, we recommend using the medium or high temperature setting.

TROUBLESHOOTING GUIDE CONT.

Why am I not getting any crema?

- Coffee is tamped too lightly: When tamping, make sure to place the portafilter on a level surface. Place the assisted tamper inside the funnel and push down on the tamper until you feel it contact the funnel.
- The grind size is too coarse: Let the brew time out and follow the recommended grind setting on your next brew.
- Coffee beans are not fresh: Bean freshness will impact the crema quality. When purchasing coffee beans, it's best to buy a bag with a "Roasted On" date rather than a "Best Before" date to ensure quality and freshness. We recommend you use coffee beans within 20 days of the "Roasted On" date.
- Basket may be clogged/holes are blocked: Ensure you are cleaning the baskets frequently. Make sure none of the holes in the bottom of the basket are clogged with grounds.

Why does the drip tray fill quickly?

- To ensure the machine maintains the ideal pressure for espresso, during a brew, some water will bypass into the drip tray. This is normal.
- The machine will automatically purge water from the steam wand into the drip tray after each froth. This is to clean the inside of the steam wand.
- The drip tray is designed to hold the water bypass from the creation of up to 6 cappuccinos.

Why does the machine make a pulsing/thumping sound while brewing?

- Not enough water in the reservoir: Ensure the water reservoir is filled up to the min. line.
- The water reservoir is not seated firmly: Check that the water reservoir is firmly seated in its place on the back of the machine.
- If the reservoir has water filled over the min. line and is seated firmly, some water pump noise is considered normal.
- You may also hear this noise while frothing. This is normal.

Machine is leaking.

- The machine will automatically purge water from the steam wand into the drip tray after each froth. This is to clean the inside of the steam wand.
- Drip tray is full: Check the empty indicator to see if you need to empty the drip tray. Follow the instructions under the Cleaning & Maintenance section.
- The water reservoir is not seated firmly: Check that the water reservoir is firmly seated in its place on the back of the machine.
- Group head seal needs to be replaced: Call Customer Service at 1-877-646-5288.

Machine has no power.

- Ensure the machine is plugged into a working outlet.
- After plugging the machine in, press the **POWER** button.
- To save power, the machine will automatically shut off after 20 minutes.

There are no coffee grounds coming from the grinder.

- Check if you have beans in the bean hopper.
- Press **GRIND** to begin grinding.
- If there are beans in the bean hopper and you are getting an ADD BEANS notification, unplug the machine and gently push the beans down toward the burrs.
- Ensure the bean hopper is securely and properly inserted.
- Ensure the portafilter with the funnel assembled is properly installed into the grinding cradle. Remove and reinsert to ensure it is installed correctly.
- Using the cleaning brush, clear out any material sitting inside the grinding cradle.

Grinder is making a loud noise.

- If the grinder is making a loud noise, it could be due to unintended debris. Use only whole beans in the grinder and avoid putting cold or frozen beans in.

Portafilter will not insert into group head.

- Portafilter is not properly aligned: Place the portafilter into the group head by aligning the orange dot on the portafilter with the orange dot on the group head. Fasten the portafilter into the group head until the orange dot on the portafilter aligns with the lock arrow on the group head.
- Coffee is tamped too lightly: When tamping, place the portafilter on a level surface. Place the assisted tamper inside the funnel and push down on the tamper until you feel it contact the funnel.

Unable to lock bean hopper in position.

- This may be caused by the grinder being blocked by beans or moisture clogging the grinder. Try clearing any beans blocking the grinder and ensure the grinder is dry and free from moisture.

I matched the grind setting, but the output was not good.

- Refer to Dialing in Your Grinder for Proper Extraction section.

Bean hopper will not fit back onto the machine.

- Ensure beans on top of the grinder are not blocking the hopper from seating properly. If beans are blocking the hopper, you may need to clear them before reseating the hopper on the machine.

Milk froth is not hot enough.

- Steam wand is clogged.
 - Remove tip of wand with the wrench on the brush.
 - Use needle on the bottom of cleaning brush to clean inside of wand.

Milk froth is too thin or thick.

- Milk type: Different milks have different fat contents. The higher the fat content of the milk, the thicker the froth will be.
- For additional froth information, refer to the Best Frothing Practices section.

My drink is smaller/larger than expected.

- If you're brewing an espresso drink, you can change the grounds-to-water ratio. Please refer to the Adjusting Your Brew Temp and Strength section.
- Finer grind settings for espresso may result in smaller outputs if Barista Assist Technology is not followed.
- If you're brewing a coffee drink, select the desired size using the SIZE button before grinding.
- Basket may be clogged/holes are blocked: Ensure you are cleaning the baskets frequently. Make sure none of the holes in the bottom of the basket are clogged with grounds.
- The machine needs to be descaled: Follow the instructions under the Cleaning & Maintenance section.

My grinder is not working properly.

- The grinder becomes jammed when the machine is unable to grind due to grind size being too fine for hard textured beans such as light roasts.
- To clear out a jam, first remove and empty out the bean hopper. Reinstall the bean hopper, lock it and set the grind size to 60. With the portafilter in the grinding cradle, press and hold **GRIND**. This should grind away and remove any material in the grinder that is causing the jam. If this fails to resolve the jam, please contact customer service.

My grinder is not producing enough grounds.

- When the grinder is not dosing enough grounds, this could indicate a clog. A clog is when the grinder has a buildup of residue or grounds. Often occurring from the frequent use of oily or softer beans, such as dark roasts. This will be indicated by a low output of coffee grounds and the add beans indicator lit while there are beans in the hopper. If you see the add beans indicator lit up while beans are in the hopper, you can confirm a clog by removing the bean hopper, seeing both whole beans and bean particles on the burr grinder.
- To clear the clog, first, turn off and unplug the machine. Remove and empty out the bean hopper. With the cleaning brush, carefully brush out the inside of the grind shoot, using either the bristles or the backside of the brush to loosen the clog. The grounds residue should loosen and grinding should operate normally once the bean hopper is reinstalled and the machine is plugged back in. If not, please contact customer service. To prevent further clogging, ensure the grinder is set to the recommended grind size.

NOTE: If you press the **GRIND** button and the grinder does not start and you do not hear any noise from the machine. Turn off your machine and allow for the machine to fully cool for 10 minutes before attempting to initiate another grind.

NOTE: Avoid using flavored beans. Added oils and sugars on the beans can increase residue build up in the grinder, increasing the recommended frequency of cleaning.

TROUBLESHOOTING GUIDE CONT.

ALL ERROR MESSAGES (ADD WATER, ADD BEANS, ETC.)

ADD WATER notification.

- Ensure there is water in the reservoir. If the reservoir is empty, add fresh water to the reservoir and then press **START BREW** to resume the brew.
- If the reservoir is filled with water, remove and reseal the reservoir and then press **START BREW** to resume the brew.

ADD BEANS notification.

- Check if there are enough beans in the bean hopper to make your drink.
- If there are beans in the bean hopper, and you are getting an ADD BEANS notification, unplug the machine and gently push the beans down toward the burrs.

INSTALL PORTAFILTER notification.

- Make sure the portafilter is sitting flat on the grinding cradle.
- Make sure portafilter is pushed all the way back in grinding cradle.
- Use the cleaning brush to ensure grinding cradle is clear of any grounds.
- Unplug the machine and plug it back in.

INSTALL FUNNEL notification.

- Ensure funnel is properly installed on portafilter by aligning the notches on the funnel with the notches on the portafilter.
- When inserting portafilter into grinding cradle, ensure funnel is attached to portafilter.
- Unplug the machine and plug it back in.

INSTALL HOPPER notification.

- Lock bean hopper in by rotating handle clockwise.
- If issue continues, please unlock the hopper by turning the handle counterclockwise. Lift the bean hopper off the base and reseal it firmly onto the base. You may need clear beans from the top of the grinder before reinstalling the bean hopper in order to seat it properly. Lock the bean hopper by turning the handle clockwise.

DESCALE notification.

- It is time to descale the machine. Refer to Descaling in the Cleaning & Maintenance section.

CLEAN notification.

- It is time to run a clean cycle. Refer to Running a Clean Cycle in the Cleaning & Maintenance section.

Er.

- If the control panel displays “Er” and then a number (ex. “Er 03”), contact Customer Service at 1-877-646-5288.

PRODUCT REGISTRATION

Please visit registeryourninja.com or call 1-877-646-5288 to register your new Ninja® product within ten (10) days of purchase. You will be asked to provide the store name, date of purchase, and model number along with your name and address.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

REPLACEMENT PARTS

To order additional parts and accessories, visit ninjaaccessories.com or contact Customer Service at **1-877-646-5288**.

For any additional support, contact a dedicated Ninja Luxe Cafe specialist at **1-866-347-5139**.

Shark NINJA

NINJA ONE (1) YEAR LIMITED WARRANTY

NJA_1_YR_IB_LMTD_WRTY_ES_US_ENG

SharkNinja's mission is focused on positively impacting people's lives every day in every home around the world. We stand by our products and offer exclusive warranties to our customers. Visit our product detail page for information on the warranty offered.

Ninja 1-Year Limited Warranty

The One (1) Year Limited Warranty applies to purchases made from authorized retailers of SharkNinja Operating LLC. Warranty coverage applies to the original owner and to the original product only and is not transferable.

SharkNinja warrants that the unit shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in SharkNinja's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date.
2. SharkNinja may, in its sole discretion, (i) repair the original unit and/or non-wearable parts with new or refurbished parts or units or (ii) replace the original unit with a new or refurbished unit. Refurbished products or parts will be comparable in performance and function to an original unit or part.
California Residents Only: The One (1) Year Limited Warranty period begins on the original date of delivery or pickup.
3. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the original unit's warranty, whichever is later. SharkNinja reserves the right to replace the original unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as funnel, water reservoir, water reservoir lid, bean hopper, bean hopper lid, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at support.ninjakitchen.com.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by SharkNinja. These defects include damages caused in the process of shipping, altering, or repairing the SharkNinja product (or any of its parts) when the repair is performed by a repair person not authorized by SharkNinja.
6. Products purchased, used or operated outside of North America.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit support.ninjakitchen.com for product care and maintenance self-help. Our Customer Service Specialists are also available at **1-877-646-5288** to assist with product support and warranty service options, including the possibility of upgrading to our VIP warranty service options for select product categories. So we may better assist you, please register your product online at registeryourninja.com and have the product on hand when you call.

SharkNinja will cover the cost for the customer to send in the unit to us for repair or replacement. A fee of \$20.95 (subject to change) will be charged when SharkNinja ships the repaired or replacement unit.

How to initiate a warranty claim

You must call **1-877-646-5288** to initiate a warranty claim. You will need the receipt as proof of purchase. We also ask that you register your product online at registeryourninja.com and have the product on hand when you call, so we may better assist you. A Customer Service Specialist will provide you with return and packing instruction information.

How state law applies

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.