

POUR & SLUSH

SLUSHASSIST

NO-PREP SLUSHES

SIMPLY FILL & SELECT

Add 3-14 cups (24-112 oz) to the unit, then select SLUSHASSIST™

PRESET	PREPARED DRINK		DIRECTIONS
SLUSHASSIST 2-7 SERVINGS: UNDER 25 MINUTES 8-14 SERVINGS: UNDER 60 MINUTES	NON-ALCOHOLIC BEVERAGES: Soda*, Fruit Punch, Sports Drinks, Energy Drinks, Sweetened Iced Tea, Kombucha, Lemonade/Limeade, Cranberry Juice, Orange Juice, Mango Juice, Watermelon Juice, Tropical Juice, Apple Juice, Apple Cider, Bottled Pre-made Smoothies, Pineapple Juice, Grape Juice, Cherry Juice	ALCOHOLIC BEVERAGES: Hard Seltzer, Sour Beer, Hard Tea, Hard Cider, Hard Kombucha, Hard Lemonade, Wine (White, Red, Rosé) PRE-MIXED: Margaritas, Paloma, Moscow Mule	Select SLUSHASSIST . In SLUSHASSIST , the unit will sense ingredients and in 10-15 minutes set the determined texture for your beverage. If desired, adjust texture after it is set using temperature dial.
		NOTE: Pre-mixed can slush up to 20% ABV	

*Refer to the Diet/Low-Sugar Tip on page 15 of the Inspiration Guide for instructions on using diet and low-sugar beverages.

! TROUBLESHOOTING TIPS

RECIPE NOT SLUSHING? If your recipe has not reached the desired texture after 60 minutes, turn the temperature dial clockwise once to get to a colder temperature. Wait 10-15 minutes to test the recipe. If the texture still isn't what you desire, increase temperature by one level again. Repeat until desired texture is achieved.

SLUSH NOT DISPENSING? For the best dispensing experience, fill the unit to the max fill line and ensure the unit is running. For a smoother dispense experience, turn the temperature dial counterclockwise once to get to a warmer temperature. More sippable frozen drinks will dispense smoother.

Refer to the Inspiration Guide for the Create Your Own Milkshakes chart.

USING THE RINSE CYCLE

This cycle agitates, without cooling, to rinse the unit. After using the Rinse cycle, wash all parts by hand or in a dishwasher to fully clean the unit after each use.

1. Dispense any remaining frozen drink.

2. Stop the current preset. Press the **RINSE** button.

3. Add warm water up to the vessel's **MAX FILL** line (112 oz).

4. Slowly dispense the water from the unit immediately after filling. The harder the handle is pulled, the faster the water dispenses.

5. Repeat as needed.

6. Stop Rinse cycle by pressing the **RINSE** button again.

7. Press the power button to turn off the unit.

Refer to the Inspiration Guide for more details on cleaning parts after using the Rinse cycle.

RINSE DISPENSE

FULLY OPENED DISPENSE

RINSE DISPENSE:

Gently pull the dispense handle for a steady stream of liquid. The harder the pull, the more liquid will dispense.

NINJA

SLUSHiMAX

SMART FROZEN DRINK MAKER

Images may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

© 2025 SharkNinja Operating LLC.
NINJA SLUSHI and SLUSHASSIST are trademarks of SharkNinja Operating LLC.
FS605Series_QSG_MP_Mv15

Please refer to the Owner's Guide for more detailed instructions.

NINJA

SLUSHiMAX

SMART FROZEN DRINK MAKER

KEEPS DRINKS FROZEN FOR UP TO 12 HOURS WITH NO DILUTION*

QUICK START GUIDE

For helpful tips & tricks on how to use your Ninja SLUSHi™, scan the QR code.

*For recipes excluding dairy.

NOTE: Colors, components, and functions may vary by model.

NOTE: Colors, components, and functions may vary by model.

BAIL HANDLE

EVAPORATOR
attached to motor base.

AUGER

EASY-FILL PORT & COVER

RINSE DISPENSE

FULLY OPEN DISPENSE

COMFORT HANDLE

POUR SPOUT
with removable shroud.

VESSEL*

CONDENSATION CATCH

CONTROL PANEL

DING BACK FEET
easier moving countertop.

2-PART DRIP TRAY
slides onto the knob on left side of unit for easy storage.

MOTOR BASE GRIP POINTS
on front, back, and both sides of unit for easy carrying.

*24-oz minimum liquid capacity
112-oz maximum liquid capacity

1. Plug in the unit.
2. Add liquid(s) through the easy-fill port.
3. Press the power button to turn on.
4. Select **SLUSHASSIST™*** or a preset to start. (With **SLUSHASSIST**, the unit will sense ingredients and in 10-15 minutes set the temperature for your beverage.)
5. If desired, change texture using temperature dial for thicker or thinner texture. If using **SLUSHASSIST**, adjust dial after **"SENSING"** has completed.
6. Unit will beep, LEDs will remain solid, and **"ENJOY"** will appear on the display once frozen drink reaches temperature.
7. Dispense and enjoy.

NOTE:

- Keep unit upright for 2 hours before use.
- Unit will continue running to keep your frozen drink at the ideal temperature.

SLUSHASSIST™ PROGRAM

SLUSHASSIST 

- Unique program that senses combinations of ingredients, auto-adjusts settings, and delivers the optimal slush output every time. Perfect for measurement-free, at-home creations.
- When **SLUSHASSIST** is selected, the associated LEDs illuminate blue. The top right control panel screen reads “**SENSING**,” and the temperature control LEDs rotate clockwise for 10–15 minutes while the optimal temperature is being calculated.
- When “**SENSING**” has finished and the slush texture point is determined, the dial will display the set temperature, and slushing will continue. Adjust temperature settings after “**SENSING**” stage is complete, if desired.

PRESETS

5 presets deliver pre-programmed temperatures. If you know the desired temperature of your slush, use the presets to jump right to the temperature and adjust as needed for desired texture.

TEMPERATURE-CONTROL SETTING

- The temperature control dial displays temperatures from cold (left) to coldest (right). After selecting a preset program, the target temperature on the dial will remain solid and the range of LEDs on the dial will pulse. When each temperature is reached, the LEDs become solid. Your slush is complete when all LEDs in the range are solid and “**ENJOY**” displays on the top right control panel.
- Adjust the temperature using the dial for your perfect frozen drink texture.
- **For thinner**, more sippable frozen drinks, adjust the temperature by turning the dial counterclockwise.
- **For thicker**, colder frozen drinks, adjust the temperature by turning the dial clockwise.

RINSE: This cycle agitates, without cooling, to rinse the unit.



Unit will continue to run when error occurs for 15 minutes until error is resolved.

“ADD SUGAR” LED will illuminate on the top right screen of control panel if a drink does not meet minimum sugar requirement (4.5%). **To fix**, add 2 tablespoons simple syrup, flavored syrup, allulose syrup (for diet/low sugar drinks), honey, agave nectar, maple syrup, or grenadine per 8 oz liquid. Or if using granulated sugar, coconut sugar, or date sugar, dispense 8 oz liquid into separate container and mix to dissolve before returning liquid to vessel. If at **MAX FILL**, dispense an extra 8 oz liquid to account for the addition and set aside. **PRESS PROGRAM AGAIN TO CLEAR THE ERROR AND CONTINUE SLUSHING.**

Unit will continue to run when error occurs for 15 minutes until error is resolved.

“ADD WATER” LED will illuminate on the top right screen of the control panel if a drink exceeds the maximum alcohol and sugar amounts (20%). **To fix**, add 3 tablespoons water per 8 oz to the vessel (2 ²/₃ cups per 112 oz). If at **MAX FILL**, dispense an extra 8 oz liquid to account for the addition and set aside. **PRESS PROGRAM AGAIN CLEAR THE ERROR AND CONTINUE SLUSHING.**

NOTE:

- Swap pineapple juice for any juice.
- For easier cleaning, **DO NOT** turn off preset until all frozen drink has been dispensed.

*24-oz minimum liquid capacity.
112-oz maximum liquid capacity.