


ORECK XL

SIMPLY AMAZING®

USER'S GUIDE ELECTRIC FABRIC SHAVER MODEL XJ-350

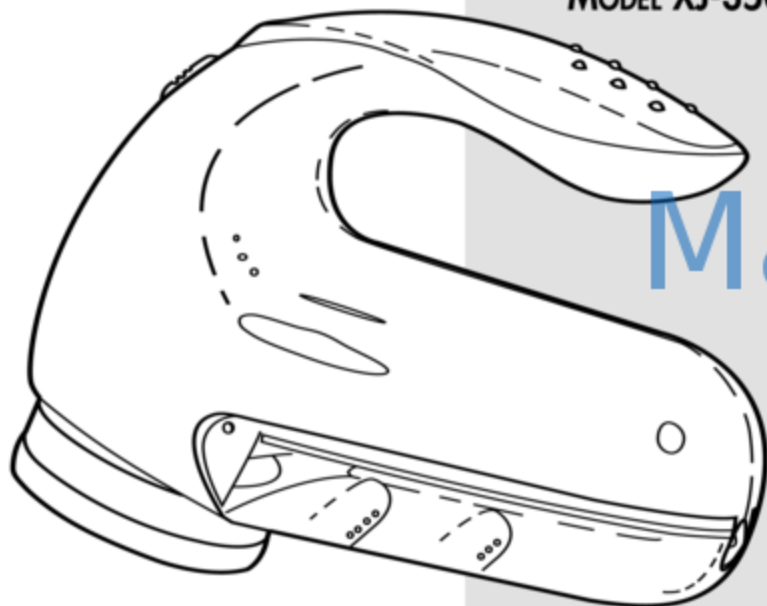

USA: 1-800-989-3535
CANADA: 1-888-676-7325
WWW.ORECK.COM
VISIT ONE OF OUR OVER
450 STORE LOCATIONS

**REGISTER YOUR PRODUCT
ON THE WEB:
WWW.ORECK.COM**

•IMPORTANT• SAVE THIS BOOKLET!

Includes:
Important Safety Instructions
Warranty
Operating Instructions

Operating Instructions

Using the Fabric Shaver

- Plug A/C power adapter into adapter input (Item 5) or use fabric shaver with batteries (see battery use below).
- Turn fabric shaver on by using the one touch sliding On/Off switch (Item 1).

Place fabric you wish to renew on flat surface. Holding the device by its handle, gently move it over the fabric. Pull the fabric as straight as possible to increase the efficiency of the device and the results of the fabric repair.

Useful Tips:

- Tuck in exposed threads before shaving wool sweaters or any other types of fabric to prevent damage.
- Test the fabric shaver on a hidden or inconspicuous area before using it on the entire fabric surface.
- Do not press the device too hard against the fabric as it may cause damage.
- It is recommended to put a small amount of lubricating oil on the inner side of the metal screen cover to allow best possible operation of the unit. Make sure lubricating oil is not present on shaver before using to avoid fabric staining.
- After each use, or when storage box is half full, pull out the storage box (Item 3) and dispose of the fabric shavings inside.
- When efficiency of the device becomes low, open the screen cover (Item 4) by unscrewing it counter-clockwise. Carefully take out the cutting blade, then clean the blade and inner compartment with the soft brush included.
- The device is equipped with a safety switch that will disable operation when the screen cover is loose or opened.
- Do not use this device to shave easily damaged fabric like Angolan Fabric. Intricate designs or patterns may be damaged during shaving process.

BATTERY USE

To insert batteries for battery use, grab both sides of the storage box at the bottom of the unit and slide out. Open the cover of the battery compartment upward. Using four (4) "C" size batteries, install according to positive "+" and negative "-" signs on battery cover, and then place cover back and snap shut. Slide the storage box back into place.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE
USING THIS PRODUCT**

WARNING

**To reduce the risk of fire,
electric shock, or injury:**

- Do not use outdoors or on wet surfaces.
- Do not expose to rain, store indoors.
- Do not allow to be used as a toy. Close attention is necessary when used by children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- This device is equipped with a sharp cutting blade. To prevent bodily injury, do not use the device to shave hair or skin.
- Do not incinerate or mutilate batteries as they will explode at high temperatures.
- Do not let the unit run while in any one stationary position for any period of time. Keep the unit moving while in operation.
- Do not allow water or other liquid to enter the inner part of the device.

Additional Safeguards

- Always disconnect cord from electrical outlet before servicing the fabric shaver.
- Remove batteries from compartments if the device is not being used for a prolonged period of time. This will prevent possible damage caused by leaking batteries.
- If the adapter or the interconnection cord is damaged, it must be scrapped.

Lubrication

- It is recommended to put a small amount of lubricating oil on the inner side of the metal screen to allow optimal operation of blades.

SAVE THESE INSTRUCTIONS

Household Use Only

Warranty

Oreck Corp. warrants that all new products are free from defects in material and workmanship under normal, non-commercial use and service. Oreck will remedy any such defects if they appear within one (1) year from date of purchase. This warranty gives you specific legal rights, and you may have other rights which vary state to state.

**Register your product on the web:
WWW.ORECK.COM**

Repair or Replacement

Your ORECK Fabric Shaver is a product of precise engineering. If you require additional information or have problems with your Oreck product, you may call ORECK CUSTOMER SERVICE at:

US: 1-800-989-3535

Canada: 1-888-676-7325


Please specify the product and model number.

Save your sales or purchase slip. Should your Oreck product require warranty service in the U.S.A., present this slip to the Authorized Service Center as your proof of purchase date or, in Canada, call customer service.

<https://mans.io/item>

Assembly

1. ON/OFF switch
2. Handle
3. Storage box
4. Screen Cover
5. A/C adapter input

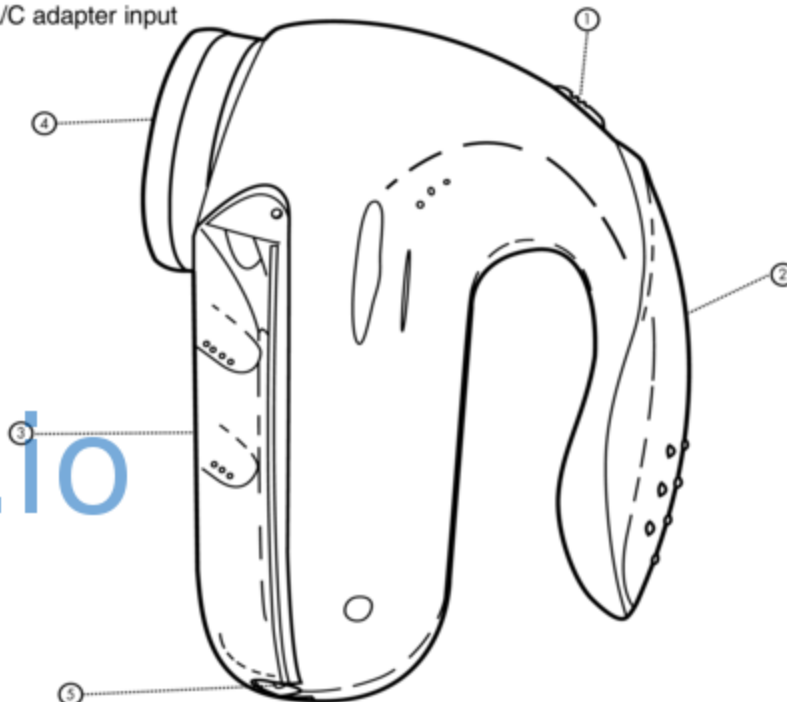

Accessories

Your fabric shaver comes with the following accessories:

- One (1) blade cleaning brush
- One (1) A/C power adapter

<https://mans.io/>