

 
OUTLAND LIVING®

ASTRA LED LANTERN

OUTDOOR LIVING PERFECTED®

**Thank you for
choosing our
LED lantern!**

*Please read this manual
carefully to ensure
optimal use, safety, and
maintenance of your
LED lantern.*

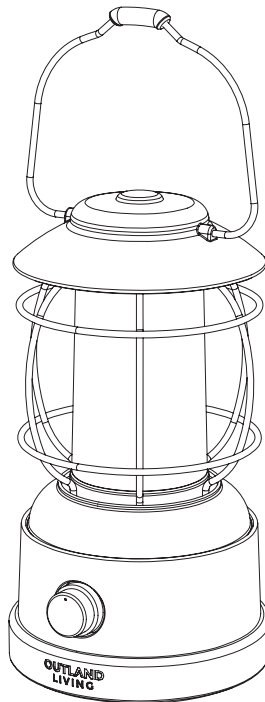

Dimensions (Approx.):

HEIGHT: 22.7 cm / 8.94 in
WIDTH: 12.6 cm / 4.96 in
DEPTH: 12.8 cm / 5.04 in

® is a registered trademark of FMI Brands Inc. The OUTLAND flame is a registered trademark of FMI Brands Inc.



FMI BRANDS INC.


101 - 3570 194 Street, Surrey, BC, Canada V3Z 1A5

Toll Free: 1-888-514-1663 | Email: info@outlandliving.com

Hours of Operation 8:30AM - 4:00PM (Pacific Time)

D.181.000.V0

PRODUCT FEATURES

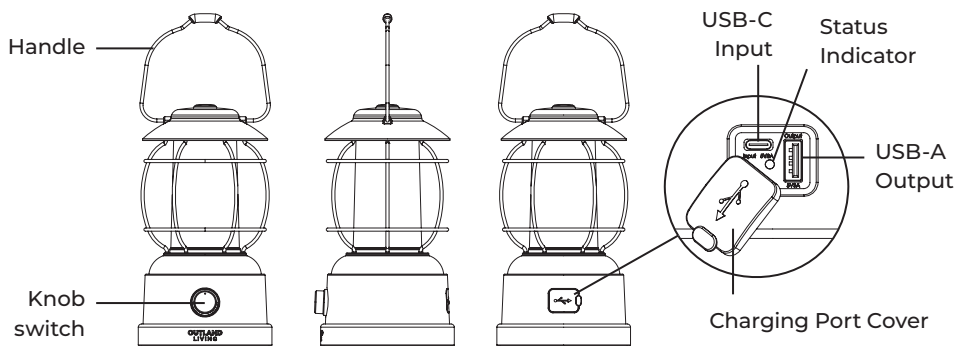

PRODUCT SPECIFICATIONS

Rated Power: 8W

Color Temperature: 3000/6500K

Luminous Flux: 3000K 15-350lm,
6500K: 20-450lm

Working Temperature: Charging 0°C-45°C
Discharging -10°C-50°C

Storage Temperature: -20°C-60°C

Working Humidity: ≤95%

IP Rating: IPX4

Battery Type: Lithium-ion

Battery Capacity: 5200mAh

Battery Voltage: 3.7V

USB Input/Output: 5V/3A

Operating Time: 6h (High) – 200h (Low)

USER INSTRUCTIONS

Fully charge the lantern before first use.


TO CHARGE THE LANTERN:

STEP 1

Open the Charging Port Cover.

STEP 2

Connect the Lantern's Input Port (USB-C) to any DC 5V USB power source using the supplied USB-A to USB-C cable.

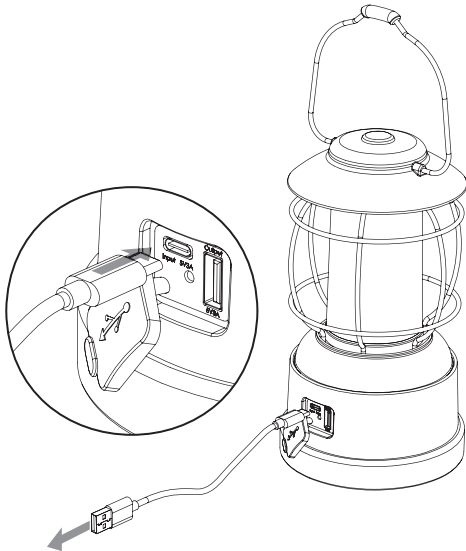

DC 5V USB Power Source

STEP 3

The Status Indicator will blink when the Lantern is charging.

STEP 4

The Status Indicator will be solid green when the Lantern is fully charged.

STEP 5

Disconnect the Lantern once it is fully charged.

STEP 6

Close the Charging Port Cover whenever the USB ports are not in use to prevent water/moisture damage.



CAUTION:

Never plug the same cable into the INPUT and OUTPUT ports at the same time.

USER INSTRUCTIONS (continued)


TO CHARGE A DEVICE:

STEP 1

Open the Charging Port Cover.

STEP 2

Connect your USB-powered device to the Output Port (USB-A) with a suitable USB cable. The provided USB-A to USB-C cable can be used if your device has a USB-C charging port.

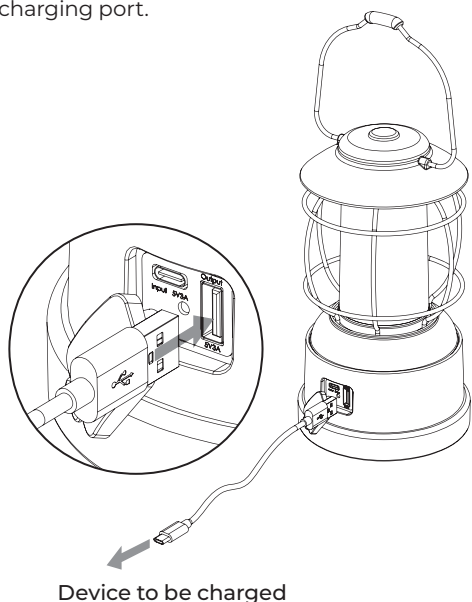

STEP 3

The Status Indicator will stay lit when a device is being charged.

STEP 4

The Status Indicator will turn off once charging is completed or stopped.

STEP 5


Close the Charging Port Cover whenever the USB ports are not in use to prevent water/moisture damage.

NOTE: Power output for external devices is disabled when the LED Lantern is being charged.

OPERATING THE LED LANTERN:

STEP 1


Press and hold the Knob Switch for 1 second to turn the lantern on.

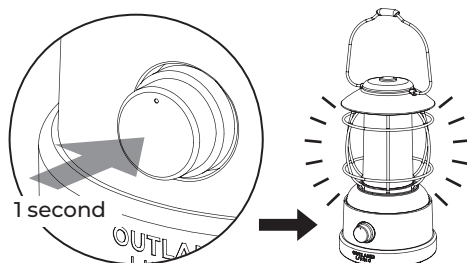

USER INSTRUCTIONS (continued)


STEP 2

Rotate the Knob Switch clockwise to increase brightness and counterclockwise to decrease brightness.

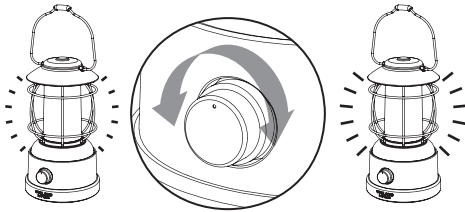


STEP 3

Press the Knob Switch while the lantern is on to toggle between warm light mode and cool light mode.

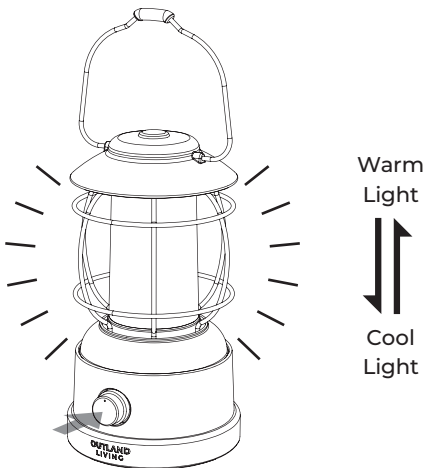

STEP 4

Press and hold the Knob Switch for 1 second to turn the lantern off.

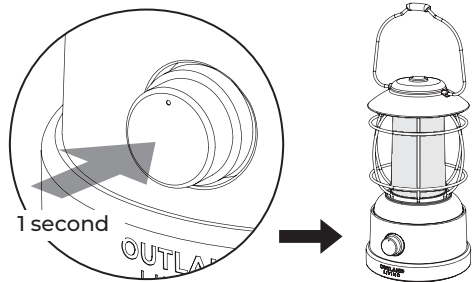

! WARNING:

- Do not let appliance sit in pooling water. The lantern is designed for protection from splashing water and light rain only.
- Do not submerge the LED Lantern in water.
- Do not leave the LED Lantern in outdoor areas when any of the USB ports are being used, especially in heavy rain.
- Do not operate above working temperature.
- Adult supervision required under age 12.
- CAUTION Do not stare directly into the light as it could cause damage to the eyes
- It is not recommended to use the lantern in direct rain.

USER INSTRUCTIONS (continued)

STOWING:

1. Fold down the folding handle.
2. Disconnect any cables from the LED Lantern.
3. Make sure the Charging Port Cover is securely installed.

TIPS: Clean and air dry the lantern thoroughly before storing to prevent moisture build-up inside the product.

STORAGE:

- Store indoors in a clean, dry, ventilated area away from moisture and extreme temperatures.
- Do not store near flammable or combustible materials, heat sources, or open flame.

TIPS: It is normal for lithium-ion batteries to slowly self-discharge when not in use. Charge the LED Lantern at least once every 2-3 months to keep the internal batteries from deep discharge and to make sure they are at their optimum operating condition.

WARNING:

DO NOT PLACE THE LED LANTERN CLOSE TO ANY FLAME OR EXTREME HEAT SOURCE.

MAINTENANCE

CLEANING:

- Use a dry or damp cloth to clean the exterior of the LED Lantern. Avoid harsh chemicals that may damage the materials. Do not use bleach or bleach-based cleaners.

DRYING:

- Air dry the LED Lantern thoroughly before storing.
- Avoid prolonged exposure to direct sunlight, which may cause fading or deterioration of materials.

PERIODIC CHARGING

- Periodically charge the LED Lantern to prevent deep discharge of the internal batteries.

WARNING:

Dispose / do not use the LED Lantern if the outer shell is compromised or if internal batteries are damaged.

WARNING:

Send broken LED Lantern to dedicated recycling facilities in your area for proper recycling.

TROUBLESHOOTING

LIGHT NOT ILLUMINATING?

- **Check battery charge** – ensure the battery is charged by plugging it in to the INPUT port. Note, flashing green means it is charging.

LIGHT SHUTS OFF AFTER A SHORT TIME?

- **Check battery charge** – ensure the battery is charged by plugging it in to the INPUT port. Note, flashing green means it is charging. The lantern is designed to automatically shut off power when the battery level falls below a certain level to maintain battery health.

SAFETY WARNING NOTES

- Do not place the lantern in or near any fire or heating device. Risk of fire or explosion. Always keep at a safe distance from any heat sources.
- Do not disassemble, puncture, crush, or expose the internal battery. Risk of leakage, fire, or explosion.
- Do not attempt to repair or modify this appliance in any way. Unauthorized repairs and modifications can result in injury, fire, or electrical shock.
- Do not let lantern sit in pooling water or submerge any part of the appliance.

- Do not operate outside of working temperature. Exposing the lantern to extreme temperatures may cause the battery to overheat, reduce battery life, or cause malfunction.
- This is not a toy, adult supervision required at all times when using this appliance.
- Do not use the appliance if any damage is found.



WARNING:

Do not dispose of the appliance or battery in the trash, take it to an authorized recycling centre for proper disposal.



WARNING:

Do not charge the lantern in wet conditions – always ensure the port is dry before using. Do not leave the lantern unattended while charging.



CAUTION:

Do not stare directly into the lights as it could cause damage to the eyes.



CAUTION:

Take care to protect the lantern while transporting. Ensure it is not damaged and that the knob cannot be unintentionally activated.

OUTLAND LIVING®

COMPLIANCE NOTES

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC Compliance: CAN ICES-*(B) / NMB-*(B)



1 YEAR LIMITED WARRANTY **Customers in Canada and USA**

All components are warranted by the manufacturer for a period of 1 year after date of purchase by the original owner against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear and weathering, assembly and/or maintenance OR use in a commercial application. At FMI Brands' sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Any returns sent back to FMI Brands must be sent via prepaid freight and in the original retail packaging.

Please register your OUTLAND Living product for proof of purchase and warranty at
<https://outlandliving.com/register-products>

For more warranty information and details please contact FMI Brands Inc. at
info@outlandliving.com

FOR REPLACEMENT PARTS AND ACCESSORIES PLEASE VISIT WWW.OUTLANDLIVING.COM

The owner's manual is available as a free download from www.outlandliving.com. Should you have any questions or comments regarding this appliance, please do not hesitate to contact FMI Brands Inc. at (888) 514-1663 or E-Mail to info@outlandliving.com

www.outlandliving.com