

OUTLAND LIVING[®]

CAMPING CHAIR

OUTDOOR LIVING PERFECTED[®]

**Thank you for choosing our
camping chair!**

*Please read this manual carefully to
ensure optimal use, safety, and
maintenance of your chair.*



FMI BRANDS INC.

101 - 3570 194 Street, Surrey, BC, Canada V3Z 1A5

Toll Free: 1-888-514-1663 | Email: info@outlandliving.com

Hours of Operation 8:30AM - 4:00PM (Pacific Time)

D.163.000.V0

PRODUCT FEATURES



USER INSTRUCTIONS

DEPLOYING

STEP 1

Remove the chair from the carry bag.



STEP 2

Put the chair in the upright position and slowly spread the backrest and seat support apart until the chair is completely unfolded.



STEP 3

Gently push down the armrests to make sure the chair is fully deployed.



STEP 4

Check that all self-leveling feet are correctly deployed.



DEPLOYING (continued)

STEP 5

Deploy the flip-down bottle/can holder.



TIPS: Choose a stable, flat, and even surface for optimal chair stability and comfort. Avoid deploying the chair on sloped surface.

Using the wine glass holders

- Avoid using wine glasses that are made of fragile material (glass, crystal, etc.).
- Only fill the wine glass to maximum 1/3 of its total volume.
- Take extra caution when there is a wine glass in the holder. It may tip if you accidentally bump into the wine glass base while sitting in the chair.
- The wine glass holders are designed for holding stemmed drinkware only. To prevent potential injury, do not place fingers in the wine glass holder opening.

STEP 6

Enjoy your camping chair!



WARNING:

Do not exceed the maximum weight capacity of the chair (125kg / 275 lbs).

STOWING

STEP 1

Remove any items in the wine glass holders, bottle/can holder, and all pockets.



STEP 2

Tuck the fabric part of the bottle/can holder inside the plastic ring then fold up the bottle/can holder.



STOWING (continued)


STEP 3

Pull the seat support towards the backrest until the chair is completely folded.



PINCH POINT

DO NOT HOLD ANY PARTS OF THE FRAME THAT ARE CLOSE TO THE JOINTS TO PREVENT PINCHING AND POTENTIAL INJURY WHEN FOLDING.

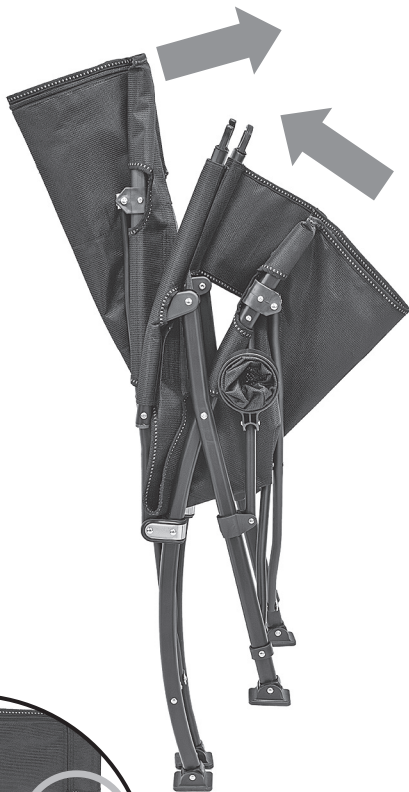

STEP 4

Put the chair inside the carry bag.

TIPS: Clean and air dry the chair thoroughly before folding and storing to prevent mold or mildew growth.



STORAGE

Store your chair in a clean, dry, ventilated area away from moisture and extreme temperatures.

MAINTENANCE

CLEANING

- Use a plastic nylon bristle brush and lightly scrub with mild soap and water for stubborn stains. Avoid harsh chemicals that may damage the fabric or frame. Do not use bleach or bleach-based cleansers.

DRYING

- Air dry the chair thoroughly before folding and storing to prevent mold or mildew growth.
- Avoid prolonged exposure to direct sunlight, which may cause fading or deterioration of materials.

FRAME INSPECTION

- Periodically inspect the chair frame and joints for signs of wear, rust, or damage.

OUTLAND LIVING®

CAMPING CHAIR



WARNING:

Dispose / do not use the chair if there is any damage to the chair frame and joints.



WARNING:

Do not repurpose or use for any other function to avoid potential hazards or damage.
This is NOT a toy.

1 YEAR LIMITED WARRANTY Customers in Canada and USA

All components are warranted by the manufacturer for a period of 1 year after date of purchase by the original owner against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear and weathering, assembly and/or maintenance OR use in a commercial application. At FMI Brands' sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Any returns sent back to FMI Brands must be sent via prepaid freight and in the original retail packaging.

Please register your OUTLAND Living product for proof of purchase and warranty at
<https://outlandliving.com/register-products>

For more warranty information and details please contact FMI Brands Inc. at
info@outlandliving.com

**FOR REPLACEMENT PARTS AND ACCESSORIES PLEASE VISIT
WWW.OUTLANDLIVING.COM**

The owner's manual is available as a free download from www.outlandliving.com.
Should you have any questions or comments regarding this appliance,
please do not hesitate to contact FMI Brands Inc. at (888) 514-1663 or
E-Mail to info@outlandliving.com

® is a registered trademark of FMI Brands Inc. The OUTLAND flame is a registered trademark of FMI Brands Inc.

www.outlandliving.com