

PART NUMBER
ACC-545


OUTLAND LIVING®

FIRE TABLE GLASS WIND BREAK

OUTDOOR LIVING PERFECTED®

COMPATIBLE WITH OUTLAND LIVING FIRE TABLE MODELS:

TICK	SERIES NAME	MODEL NUMBERS	SERIES NUMBERS
☐	OUTLAND FIRE TABLE	FMPPC2E-445	445

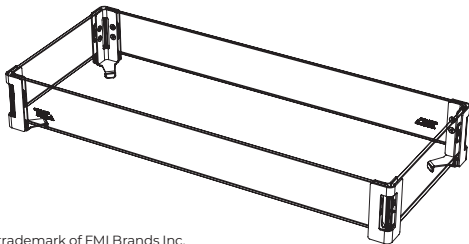

® is a registered trademark of FMI Brands Inc.
The OUTLAND flame is a registered trademark of FMI Brands Inc.



D.545.000.V0





FMI BRANDS INC.

101 - 3570 194 Street, Surrey, BC, Canada V3Z 1A5
Toll Free: 1-888-514-1663 | Email: info@outlandliving.com
Hours of Operation 8:30AM - 4:00PM (Pacific Time)

  SUPPLIED PARTS & HARDWARE LIST

PART NUMBER	DESCRIPTION	PART
1	GLASS WALL WITH LOGO (x2)	
2	GLASS WALL WITH NO LOGO (x2)	
3	EXTERIOR BRACKET WITH FOUR NYLON SPACERS (x4)	
4	INTERIOR BRACKET (x4)	

  SUPPLIED PARTS & HARDWARE LIST

PART NUMBER	DESCRIPTION	PART
5	MOUNTING BRACKET 1 (x2)	
6	MOUNTING BRACKET 2 (x2)	
7	M5 SCREW (x16)	

REQUIRED TOOLS (Not Supplied):


Philips (cross) screwdriver (PH3)

ASSEMBLY INSTRUCTIONS

STEP 1


ENSURE THE ORIENTATION OF THE GLASS PANELS WITH LOGO (Part 1) IS CORRECT.

NOTE: THE BRACKETS CAN ONLY BE INSTALLED ONE WAY. THE LONG END SHOULD BE DIRECTED UPWARDS.

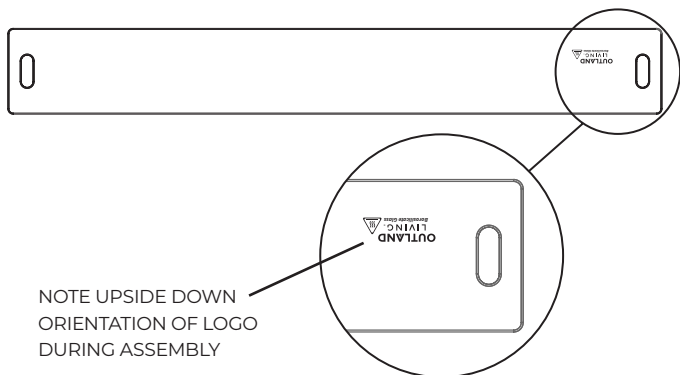

STEP 2: ASSEMBLE THE GLASS WIND BREAK


There are 4 sets of Glass Panel Connecting Brackets to install.

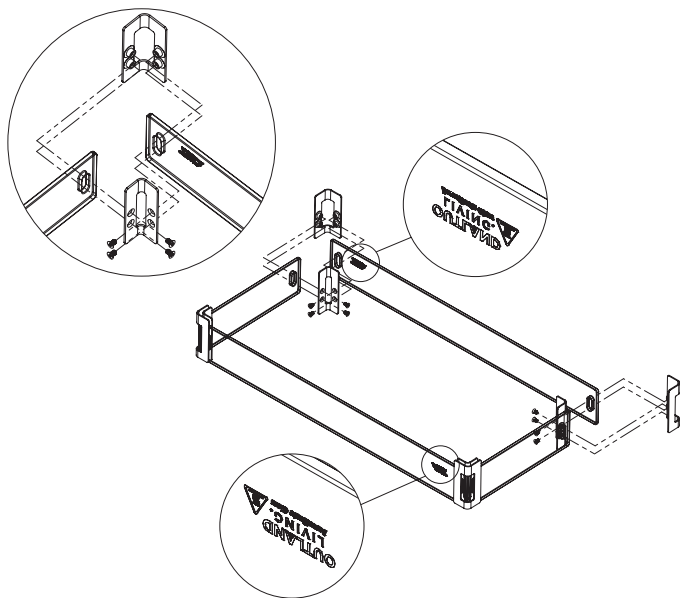

- 2.1 - Assemble the glass wind break on a flat and even surface.
- 2.2 - Insert Exterior Bracket (Part 3) studs through the vertical slots on the Glass Panels (Part 1 & 2).

STEP 2: ASSEMBLE THE GLASS WIND BREAK


Note: Nylon spacers come pre-installed on the Exterior Bracket (Part 3) studs. If any of the Nylon spacers fell off, install them back onto the studs before proceeding to STEP 2.3

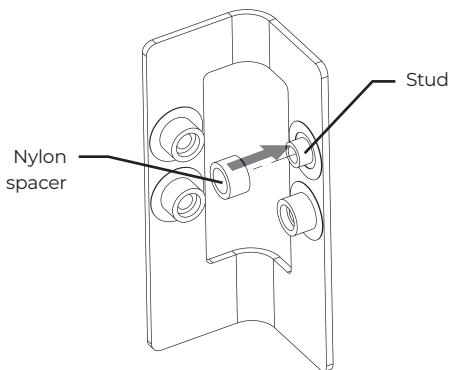

2.3 - ****LOOSELY**** Assemble Interior Brackets (Part 4) to the Exterior Brackets (Part 3) using M5x10 Flat Head Screws (Part 6) - do not tighten screws.


STEP 3: INSTALL THE MOUNTING BRACKETS

3.1 - Rotate the glass wind break assembly so that one of the long glass panels is directly facing you.

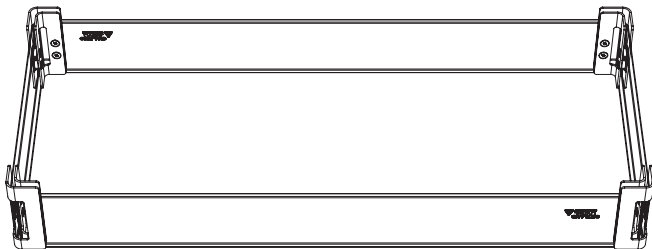


STEP 3: INSTALL THE MOUNTING BRACKETS

3.2 - Install Mounting Bracket 1 at the lower left corner and Mounting Bracket 2 at the lower right corner as shown in the diagram. Align and insert the L-shape part of the mounting brackets into the gap between the Interior Bracket (Part 4) and Exterior Bracket (Part 3).

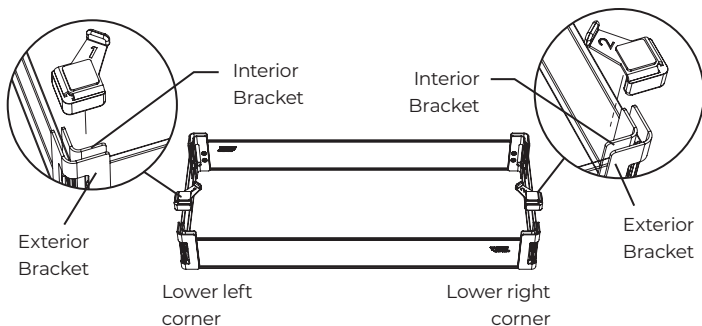

STEP 3: INSTALL THE MOUNTING BRACKETS

3.3 - Rotate the glass wind break assembly 180° and repeat STEP 3.2.

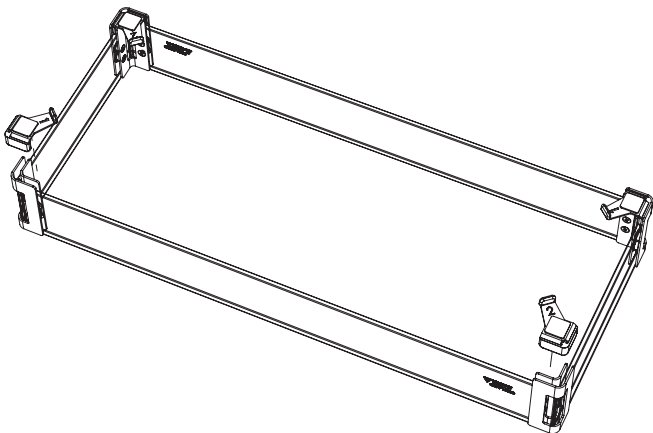


Once all 4 brackets are inserted tighten the screws. Ensure the glass panels are straight and squarely aligned.

YOUR GLASS WIND BREAK IS NOW ASSEMBLED.


**STEP 4: INSTALL GLASS WIND BREAK ON
FIRE TABLE**

- 4.1 - Turn the glass wind break right side up so that the hook of the mounting bracket is pointing downward.
- 4.2 - Align the hooks of the Mounting Brackets with the corners of the glass tabletop cutout.

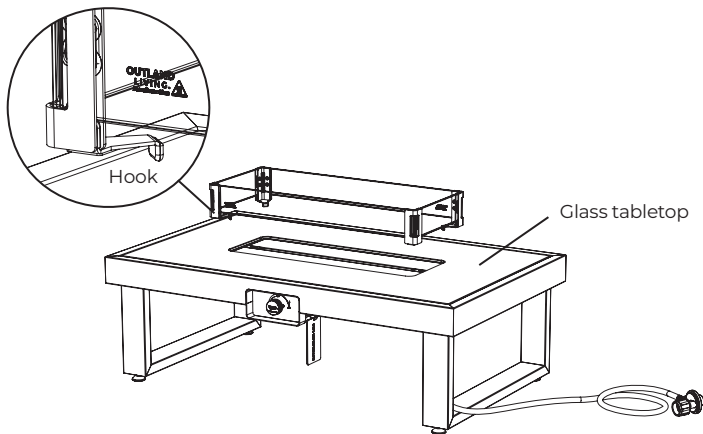


STEP 4: INSTALL GLASS WIND BREAK ON FIRE TABLE


4.3 - Slowly lower the glass wind break until it sits on the glass tabletop.

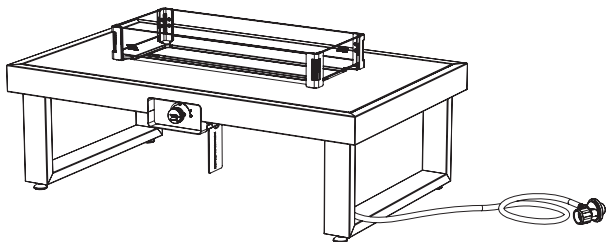

NOTE: The glass wind break works with or without the ACC-546 Flame Enhancer.

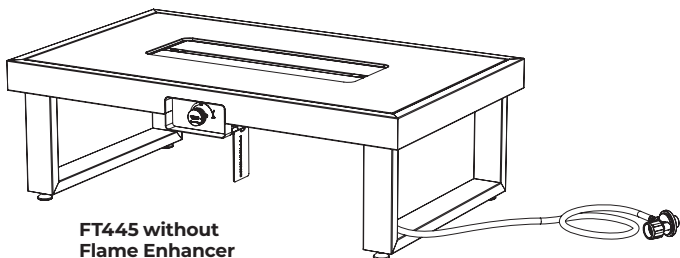

ACC-546
Flame Enhancer

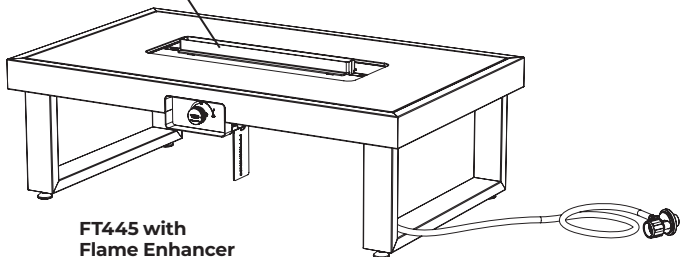

MAINTENANCE

Simply use warm soap water to wipe down your Glass Lid to keep it clean.

Do not use abrasive cleaners.



DANGER:

Glass Wind Break will become extremely hot during operation! **DO NOT TOUCH GLASS WIND BREAK while fire table is in operation!**



**WARNING:**

This is NOT a toy.

Do not place ANY cover on the Glass Wind Break while the fire table is in operation.

Do not rest anything on or over the Glass Wind Break while the fire table is in operation.

The fire table is a decorative gas appliance only. NEVER cook food on the fire table. Do not use the Glass Wind Break, or any other type of accessory, as a means to cook or keep food warm on the fire table,

Wait at least 30 minutes after turning off the fire table to allow it to cool down before touching Glass Wind Break or putting ANY cover over the fire table.

Please ensure that all adults and children which use or are near a unit in use are aware of the hazard of high-surface temperatures present on the unit during use and should use caution and stay away to avoid burns or clothing ignition.

Children should be supervised at all times when using this unit without exception.



**FIRE TABLE!
GLASS WIND BREAK!
WARNING! HOT SURFACE!**



**GLASS.
FRAGILE!**



**HANDLE
WITH CARE**

 **STOP:**

Do not return this product to the store.

If you need help or parts, call the OUTLAND Hotline: **1-888-514-1663**

Get help for:

- Missing/damaged parts • Assembly • Troubleshooting
- Warranty Assistance • Product Information

1 YEAR LIMITED WARRANTY - Customers in Canada and USA

All components are warranted by the manufacturer for a period of 1 year after date of purchase by the original owner against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear and weathering, assembly and/or maintenance OR use in a commercial application. At FMI Brands' sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Any returns sent back to FMI Brands must be sent via prepaid freight and in the original retail packaging.

Please register your OUTLAND Living product for proof of purchase and warranty at <https://outlandliving.com/register-products/>

For more warranty information and details please contact
FMI Brands Inc. at info@outlandliving.com

FOR REPLACEMENT PARTS AND ACCESSORIES PLEASE VISIT
WWW.OUTLANDLIVING.COM

Should you have any questions or comments regarding this appliance, please do not
hesitate to contact FMI Brands Inc. at **(888) 514-1663**
or E-Mail to info@outlandliving.com.