

PART NUMBER
ACC-550


OUTLAND LIVING®

FIRE TABLE GLASS LID AND MOUNTING BRACKET KIT

OUTDOOR LIVING PERFECTED®

COMPATIBLE WITH OUTLAND LIVING FIRE TABLE MODELS:

TICK	SERIES NAME	MODEL NUMBERS	SERIES NUMBERS
☐	OUTLAND FIRE TABLE	FMPPC2E-445	445

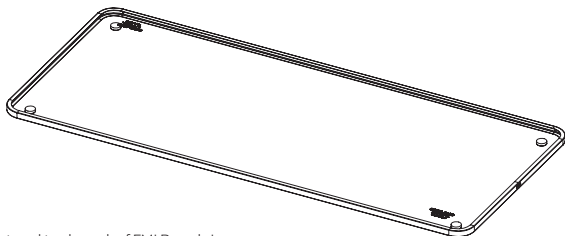

® is a registered trademark of FMI Brands Inc.
The OUTLAND flame is a registered trademark of FMI Brands Inc.



D.550.000.V0




FMI BRANDS INC.

101 – 3570 194 Street, Surrey, BC, Canada V3Z 1A5
Toll Free: 1-888-514-1663 | Email: info@outlandliving.com
Hours of Operation 8:30AM - 4:00PM (Pacific Time)

SUPPLIED PARTS & HARDWARE LIST

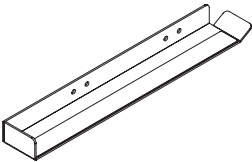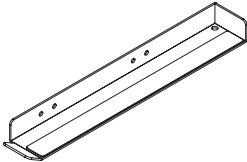PART NUMBER	DESCRIPTION	PART
1	HORIZONTAL BRACKET 1	
2	HORIZONTAL BRACKET 2	
3	VERTICAL BRACKET 1 (x2)	
4	VERTICAL BRACKET 2 (x2)	

SUPPLIED PARTS & HARDWARE LIST

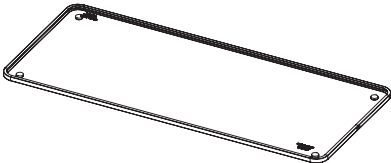PART NUMBER	DESCRIPTION	PART
5	M5 x 16 SCREW (x4)	
6	M5 x 10 SCREW (x8)	
7	GLASS LID (x1)	


REQUIRED TOOLS (Not Supplied):

Philips (cross) screwdriver (PH2)



ATTENTION:

The ACC-550 Glass Lid only works with the FT445 Fire Table when the ACC-545 Glass Wind Break is installed.

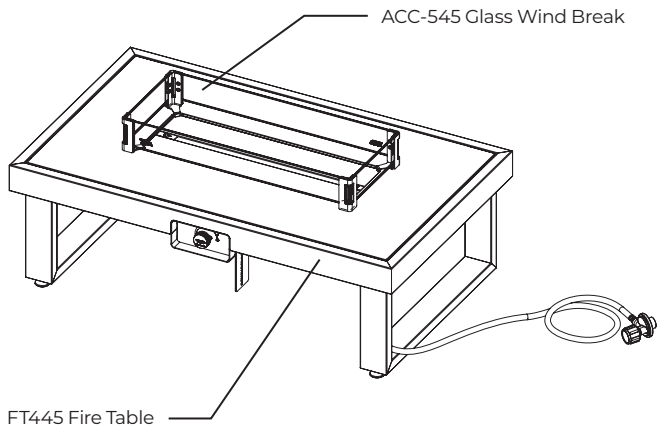

ASSEMBLY INSTRUCTIONS




WARNING:

Make sure the fire table is off and has cooled down for at least 10 minutes before performing this installation. Never attempt this installation with the table in operation, or while it is still hot.


STEP 1.1

If the ACC-545 Glass Wind Break is installed, remove it and place it on a flat, non-marking surface.

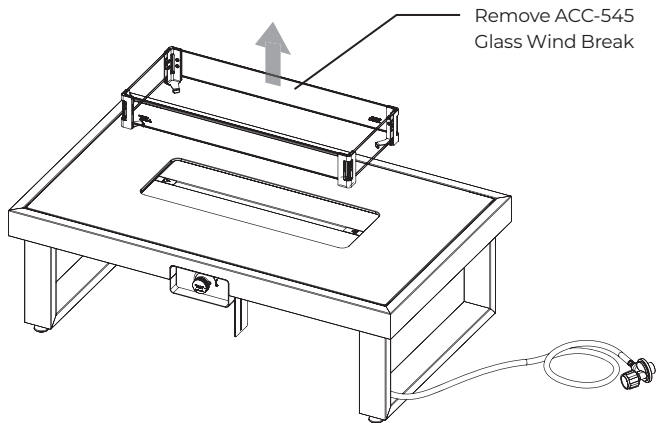


STEP 1.2

Remove the tempered glass tabletop panel and lay it flat on a piece of cardboard.

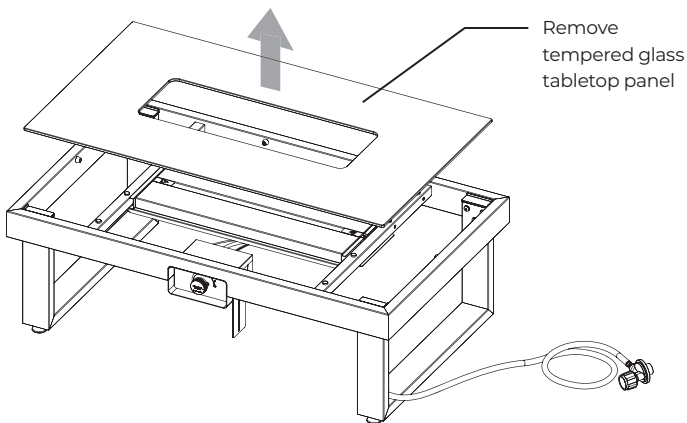


STEP 2.1

Arrange the mounting bracket components (Part 1, 2, 3, 4) as shown in the illustration. Note the orientation of each component.

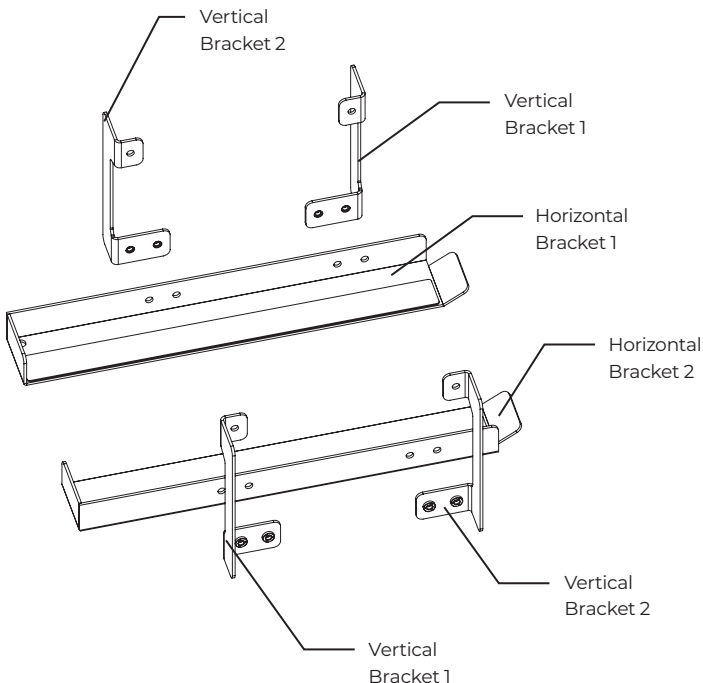


STEP 2.2

Attach the Vertical Bracket 1 (Part 3) and Vertical Bracket 2 (Part 4) to the Horizontal Bracket 1 (Part 1) and Horizontal Bracket 2 (Part 2) using (8) M5 x 10 Screws (Part 8). Note that the mounting tabs of the Vertical Brackets (Part 3, 4) should be pointing inward.

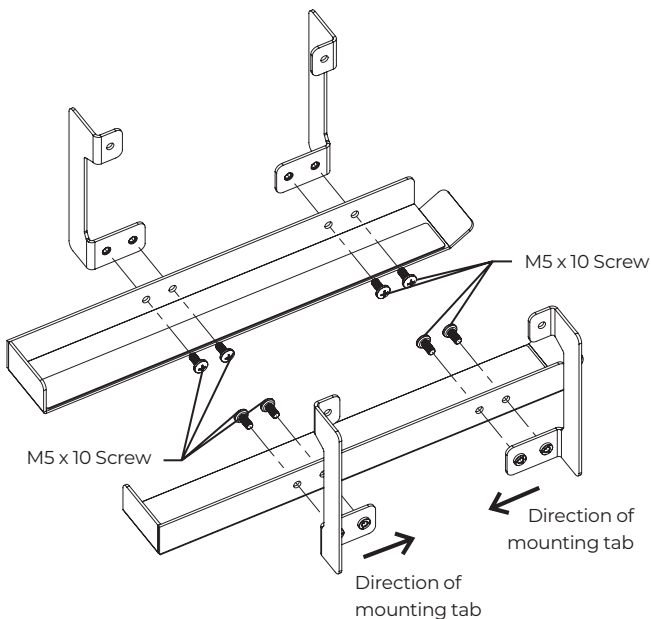


STEP 3.1

Locate the mounting holes on the table frame cross bars for the mounting brackets on each side.

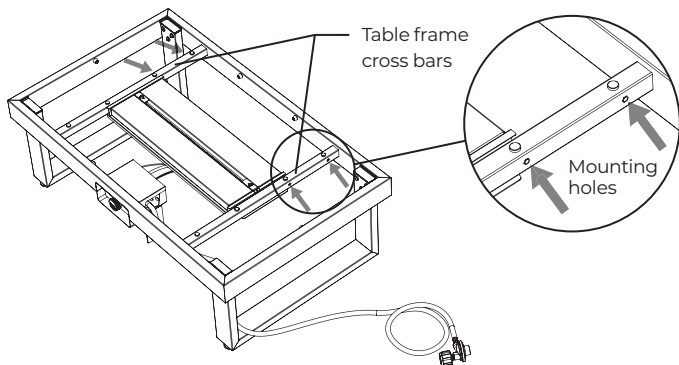


STEP 3.2

Install the mounting brackets to the Fire Table using (2) M5 x 16 Screws (Part 7) on each side. Note the direction of the angled retaining feature on the Horizontal Brackets should be pointing away from the gas knob.

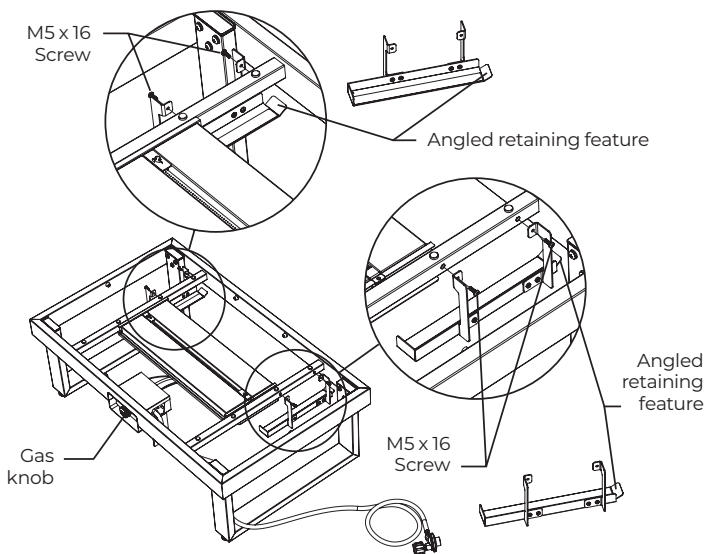


STEP 4.1

Reinstall the tempered glass tabletop panel.

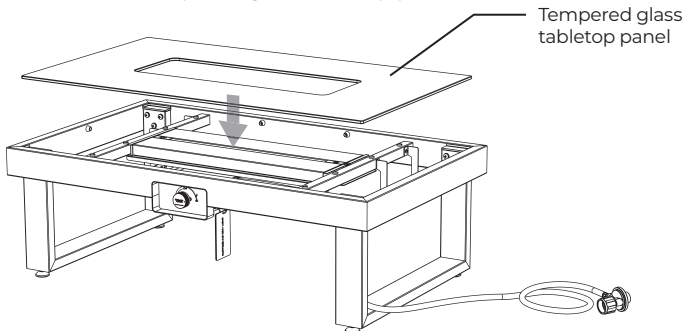


STEP 4.2

Reinstall the ACC-545 Glass Wind Break.

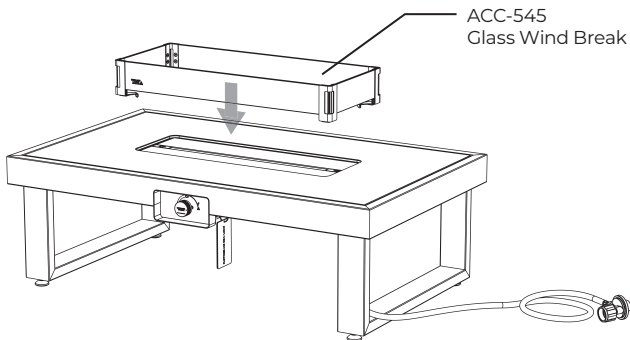


STEP 5

Place glass lid (Part 7) on the mounting brackets from the back side (opposite to the gas knob) of the Fire Table. Make sure the glass lid is inserted all the way.

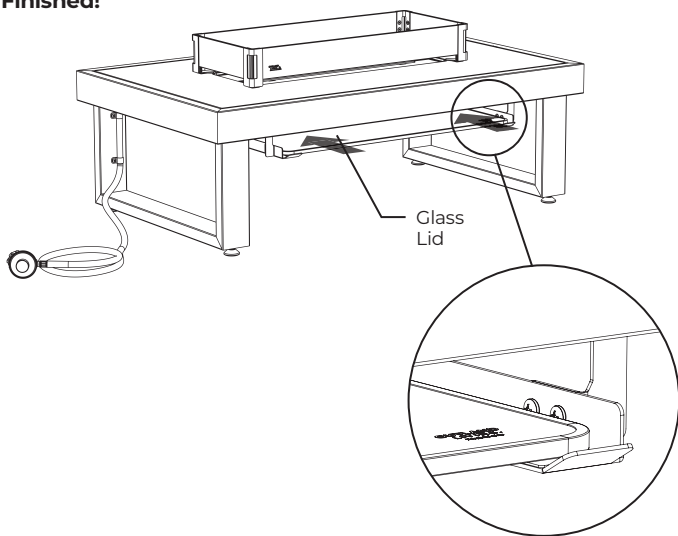Finished!

DEPLOYMENT

Place glass lid on top of the ACC-545 Glass Wind Break.

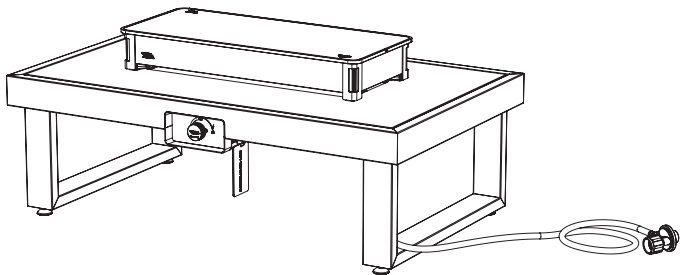

DANGER:

Only place glass lid on top of Fire Table when the Fire Table is not in use. See Warnings section below for further detail.

REMOVAL

To remove the glass lid: Lift front edge slightly to clear the small retaining features and pull glass lid out.



CAUTION:

Do not drop lid during handling.

MAINTENANCE

Simply use warm soap water to wipe down your Glass Lid to keep it clean.

Do not use abrasive cleaners.



WARNING:

This is NOT a toy.

Do not place the glass lid, or have ANY cover, on the fire table while the fire table is in operation!

The fire table is a decorative gas appliance only. NEVER cook food on the fire table. Do not use the Glass Wind Break, or any other type of accessory, as a means to cook or keep food warm on the fire table.

Wait at least 30 minutes after turning off the fire table to allow it to cool down before placing Glass Lid, or ANY other cover, over the fire table.

Please ensure that all adults and children which use or are near a unit in use are aware of the hazard of high-surface temperatures present on the unit during use and should use caution and stay away to avoid burns or clothing ignition.

Children should be supervised at all times when using this unit without exception.



**FIRE TABLE!
GLASS WIND BREAK!
WARNING! HOT SURFACE!**



**GLASS.
FRAGILE!**



**HANDLE
WITH CARE**

 **STOP:**

Do not return this product to the store.

If you need help or parts, call the OUTLAND Hotline: **1-888-514-1663**

Get help for:

- Missing/damaged parts • Assembly • Troubleshooting
- Warranty Assistance • Product Information

1 YEAR LIMITED WARRANTY - Customers in Canada and USA

All components are warranted by the manufacturer for a period of 1 year after date of purchase by the original owner against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear and weathering, assembly and/or maintenance OR use in a commercial application. At FMI Brands' sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Any returns sent back to FMI Brands must be sent via prepaid freight and in the original retail packaging.

Please register your OUTLAND Living product for proof of purchase and warranty at <https://outlandliving.com/register-products/>

For more warranty information and details please contact
FMI Brands Inc. at info@outlandliving.com

FOR REPLACEMENT PARTS AND ACCESSORIES PLEASE VISIT
WWW.OUTLANDLIVING.COM

Should you have any questions or comments regarding this appliance, please do not hesitate to contact FMI Brands Inc. at **(888) 514-1663**
or E-Mail to info@outlandliving.com.