



LUMIX

Panasonic®

Basic Owner's Manual

Digital Camera

Model No. **DC-ZS99**

Please read these instructions carefully before using this product, and save this manual for future use.

More detailed owner's manual is available in "Owner's Manual for advanced features (PDF format)". To read it, download it from the website. (→72)

U.S. customers only

Register online at <http://shop.panasonic.com/support/register> to receive these benefits:

- ☒ Safety Notification
- ☒ Owner Verification
- ☒ Efficient Warranty Service
- ☒ Special Offers and Promotions from Panasonic



If you have any questions, visit:

USA : <http://shop.panasonic.com/support>

Canada : www.panasonic.ca/english/support



DVQX2698YA
M1224KZ1046

Dear Customer,
Thank you for choosing Panasonic!

You have purchased one of the most sophisticated and reliable products on the market today. Used properly, we're sure it will bring you and your family years of enjoyment. Please take time to fill in the information below. The serial number is on the tag located on the underside of your camera. Be sure to **retain this manual** as your convenient camera information source.

Date of Purchase	Dealer Phone No.
Dealer Purchased From	Model No.
Dealer Address	Serial No.

Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in this Owner's Manual.

Carefully observe copyright laws.

- Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.

For the U.S.A. and Canada only



A lithium ion battery that is recyclable powers the product you have purchased. Please call 1-800-8-BATTERY for information on how to recycle this battery.

Information for Your Safety

WARNING:

To reduce the risk of fire, electric shock or product damage,

- Do not expose this unit to rain, moisture, dripping or splashing.
- Use the recommended accessories.
- Do not remove covers.
- Do not repair this unit by yourself. Refer servicing to qualified service personnel.

The socket outlet shall be installed near the equipment and shall be easily accessible.

■ Product identification marking

Product	Location
Digital camera	Bottom

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

Certification and Compliance

Please select as follows:

MENU →  **[Setup]** → **[Approved Regulations]**

Contains FCC ID : VPYLBEE5ZZ1PJ

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines as this equipment has very low levels of RF energy.

THE FOLLOWING APPLIES ONLY IN THE U.S.A.

FCC Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

- Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.
- To assure continued compliance, follow the attached installation instructions and use only shielded interface cables with ferrite core when connecting to computer or peripheral devices.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Supplier's Declaration of Conformity

Trade Name: Panasonic

Model No.:DC-ZS99

Responsible Party: Panasonic Corporation of North America
Two Riverfront Plaza, Newark, NJ 07102-5490

Support Contact: <http://shop.panasonic.com/support>

THE FOLLOWING APPLIES ONLY IN CANADA.

Certification and Compliance

Please select as follows:

MENU →  **[Setup]** → **[Approved Regulations]**

Contains IC : 772C-LBEE5ZZ1PJ

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. DC-G97(HMN is 1PJ2402) has been tested and found to comply with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules.

■ About the battery pack

CAUTION

Battery pack (Lithium-ion battery pack)

- Use the specified unit to recharge the battery pack.
- Do not use the battery pack with equipment other than the specified unit.
- Do not get dirt, sand, liquids, or other foreign matter on the terminals.
- Do not touch the plug terminals (+ and -) with metal objects.
- Do not disassemble, remodel, heat or throw into fire.

If any electrolyte should come into contact with your hands or clothes, wash it off thoroughly with water.

If any electrolyte should come into contact with your eyes, never rub the eyes. Rinse eyes thoroughly with water, and then consult a doctor.

CAUTION

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
 - When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.
-
- Do not heat or expose to flame.
 - Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
 - Do not expose to low air pressure at high altitudes.
 - Do not expose to extremely low air pressure, as this may result in explosions or leakage of flammable liquids and gases.

Warning

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C (140 °F) or incinerate.

■ Concerning the button cell or coin battery

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- This product contains non-replaceable batteries.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: ML421
- Nominal voltage: 3V
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

■ About the AC adaptor (supplied)

CAUTION!

To reduce the risk of fire, electric shock or product damage,

- **Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.**
- The AC adaptor is in the standby condition when the mains plug is connected. The primary circuit is always “live” as long as the mains plug is connected to an electrical outlet.

AC adaptor

This AC adaptor operates on AC between 110V and 240V.

But

- In the U.S.A. and Canada, the AC adaptor must be connected to a 120V AC power supply only.
- When connecting to an AC supply outside of the U.S.A. or Canada, use a plug adaptor to suit the AC outlet configuration.

■ Cautions for Use

- Always use a genuine Panasonic Tripod Grip (DMW-SHGR2: optional).
- Use a High Speed HDMI micro cable (Type D–Type A plug) with the length less than 3 m (9.8 feet).

Keep this unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation may adversely affect this unit, disturbing the pictures and/or sound.
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor. Then reinsert the battery or reconnect AC adaptor and turn this unit on.

Do not use this unit near radio transmitters or high-voltage lines.

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.

-
- To clean your camera, remove the battery, card, or disconnect the power plug from the outlet, and wipe with a soft, dry cloth.
 - Do not press the monitor with excessive force.
 - Do not press the lens with excessive force.
 - Do not allow camera to come into contact with pesticides or volatile substances (can cause surface damage or coating to peel).
 - Do not keep rubber or plastic products in contact with the camera for a long period of time.
 - Do not use solvents such as benzine, thinner, alcohol, kitchen detergents, etc., to clean the camera, since it may deteriorate the external case or the coating may peel off.
 - Do not leave the camera with the lens facing the sun, as rays of light from the sun may cause it to malfunction.
 - Do not extend the supplied cord or cable.
 - While the camera is accessing the card (for operations such as picture writing, reading, deletion, or formatting), do not turn off the camera or remove the battery or card.
- Furthermore, do not subject the camera to vibration, impact or static electricity.
- The data on the card may be damaged or lost due to electromagnetic waves, static electricity or breakdown of the camera or the card. We recommend storing important data on a PC etc.
 - Do not format the card on your PC or other equipment. Format it on the camera only to ensure proper operation.
-

-
- **The battery is not charged when the camera is shipped. Charge the battery before use.**
 - **The battery is a rechargeable lithium ion battery. If the temperature is too high or too low, the operating time of the battery will become shorter.**
 - The battery becomes warm after using and during and after charging. The camera also becomes warm during use. This is not a malfunction.
 - **Do not leave any metal items (such as clips) near the contact areas of the power plug or near the batteries.**
 - Store the battery in a cool and dry place with a relatively stable temperature. (Recommended temperature: 15 °C to 25 °C (59 °F to 77 °F), Recommended humidity: 40%RH to 60%RH)
 - **Do not store the battery for a long time while fully charged.** When storing the battery for a long period of time, we recommend charging it once a year. Remove the battery from the camera and store it again after it has completely discharged.
 - Place the removed battery in a plastic bag, etc., and keep away from metallic objects (clips, etc.) for storage or transport.
 - When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.
 - When [Auto Power Off] or [Auto Power Off(Wi-Fi)] in [Power Save Mode] is set to [OFF], the power consumption of this camera may be increased.
-

[For U.S.A.]

To dispose of your product, please recycle in accordance with local environmental regulations.

For further recycling please visit

<https://shop.panasonic.com/recycle>

How to use this manual

■ About the symbols in the text

MENU Indicates that the menu can be set by pressing [MENU/SET] button.

Steps for setting a menu item are described as follows:

MENU →  **[Rec]** → **[Quality]** → **[.L.]**

- This Owner's Manual expresses the up, down, left, and right of the cursor button as ▲ ▼ ◀ ▶.

Recording mode:   **P** **A** **S** **M**  **SCN** 

- In Recording modes that show icons in black, you can select and execute indicated menus and functions.
- C1** / **C2** (Custom Mode) has different functions depending on the recording mode that is registered.

- The external design and specifications of this product, as described in this document, may differ from the actual product.
- Illustrations used in this document may differ from the actual product and the actual images displayed on the product.
- Images used in this document are sample pictures used to explain the functions and effects.

Contents

■ Information for Your Safety	3
-------------------------------------	---

Preparations/Basics

■ Before use	14
■ Standard accessories	16
■ Digital Camera Accessory System	17
■ Names and Functions of Main Parts	18
■ Quick Start Guide	20
Inserting the battery and/or SD memory card (optional)	20
Charging the battery	21
Setting the clock	25
Formatting the card (initialization)	26
Adjusting the angle of the monitor	26
Mode dial (Select the recording mode)	27
Holding the camera	28
Shutter button (Taking pictures)	28
■ Basic operations	29
■ Setting the menu	33

Recording

■ Taking pictures with automatic settings (Intelligent Auto Mode)	34
■ Taking Pictures of Yourself [Self Shot]	35
■ Recording with the 4K Photo function	36
■ Adjusting the focus after recording ([Post Focus] / [Focus Stacking])	40
■ Recording Videos	43

Playback

■ Viewing your pictures	45
-------------------------------	----

Menu

■ Menu list	46
-------------------	----

Wi-Fi/Bluetooth

■ What you can do with the Wi-Fi®/Bluetooth® function	52
■ Operating the camera by connecting it to a smartphone	54

Others

■ Downloading software	61
■ List of monitor displays	62
■ Q&A Troubleshooting	65
■ Specifications	68
■ Reading the Owner's Manual (PDF format)	72
■ Limited Warranty (ONLY FOR U.S.A.)	73
■ Limited Warranty (ONLY FOR CANADA)	77

Before use

■ Camera handling

Keep the camera away from excessive vibration, force, or pressure.

- Avoid using the camera under the following conditions, which may damage the lens, monitor, or camera body. This may also cause the camera to malfunction or prevent recording.
 - Dropping or hitting the camera against a hard surface
 - Sitting down with the camera in your pants pocket or forcing it into a full bag
 - Adding accessories to the camera strap
 - Pushing with excessive force on the lens or monitor
- If the camera [ON/OFF] button is pressed unintentionally while the camera is in a bag or pocket, the power will turn on and the lens barrel will extend. Applying pressure to the lens barrel can cause it to malfunction, so if you want to reduce the risk of the power turning on unintentionally, we recommend setting [Power Button(At Power ON)] to [LONG-PRESS] in the [Setup] menu. (→26)

The camera is not dust resistant, splash resistant, or waterproof.

Avoid using the camera in places with excessive dust or sand, or where water can come into contact with the camera.

If sand, dust, or liquids such as water droplets adhere to the monitor, wipe them off with a dry soft cloth.

- Not doing so may cause the monitor to respond incorrectly to touch operations.

■ Condensation (When the lens or the monitor is fogged up)

- Condensation may occur when the camera is exposed to sudden changes of temperature or humidity. Avoid these conditions, which may make the lens or monitor dirty, cause mold, or damage the camera.
- If condensation does occur, turn off the camera and wait about two hours before using it. Once the camera adjusts to the surrounding temperature, the fogging will clear naturally.

■ About strong light beams such as laser light


- Do not irradiate the camera (lens) directly with strong light beams such as laser beams.

Doing so may damage the image sensor and cause the camera to malfunction.

■ When in use

- Keep credit cards and other items sensitive to magnetism away from the magnetic portion of the camera. Otherwise, magnetic fields may damage their data and make them unusable.

Ⓐ Magnet

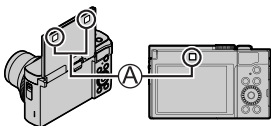

Standard accessories

Check that all the accessories are supplied before using the camera. Part numbers are as of December 2024. These may be subject to change.

☐ Battery pack DMW-BLG10PP • Charge the battery before use. • Battery pack is indicated as battery pack or battery in the text.	☐ USB connection cable K1HY24YY0030 
☐ AC adaptor SAE0012A 	☐ Hand strap VFC4297 

- **Cards are optional.** (SD Memory Card, SDHC Memory Card and SDXC Memory Card are indicated as card in the text.)
 - This unit is compatible with UHS-I UHS Speed Class 3 standard SDHC/SDXC memory cards.
 - The following SD standard-based cards can be used.
SD Memory Card/SDHC Memory Card/SDXC Memory Card (Maximum 512 GB)
 - Depending on recording conditions, the required card differs.

(For U.S.A. only)

- If accessories are lost, customers can visit us at <http://shop.panasonic.com/support> for further information about obtaining replacement parts.

(For Canada only)

- If any accessories are lost, customers in Canada should visit our support page at www.panasonic.ca/english/support for further information about obtaining replacement parts.
- Please dispose of all packaging appropriately.

Digital Camera Accessory System

Description	Accessory#
Battery pack	DMW-BLG10
Battery charger*1	DMW-BTC12
AC adaptor*2	DMW-AC11
Tripod grip	DMW-SHGR2

*1 Supplied with an AC adaptor and a USB connection cable.

*2 Supplied with an AC cable and a USB connection cable.

- Part numbers are as of December 2024. These may be subject to change.
- Some optional accessories may not be available in some countries.
- (For U.S.A. only)
To order optional accessories please visit <http://shop.panasonic.com> or your local Photo Specialty Dealer.
- Refer to the “Owner’s Manual for advanced features (PDF format)” for details about using this camera when using optional accessories.

This product incorporates the following software:


- (1) the software developed independently by or for Panasonic,
- (2) the software owned by third party and licensed to Panasonic,
- (3) the software licensed under the GNU General Public License, Version 2.0 (GPL V2.0),
- (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL V2.1), and/or
- (5) open source software other than the software licensed under the GPL V2.0 and/or LGPL V2.1.

The software categorized as (3) - (5) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please refer to the detailed terms and conditions thereof displayed by selecting [MENU/SET] → [Setup] → [Version Disp.] → [Software info]. At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL V2.0 or LGPL V2.1, as well as the respective copyright notice thereof.

Contact Information: oss-cd-request@gg.jp.panasonic.com

The source code and the copyright notice are also available for free in our website below.
<https://ospo.panasonic.com/oss>

Names and Functions of Main Parts

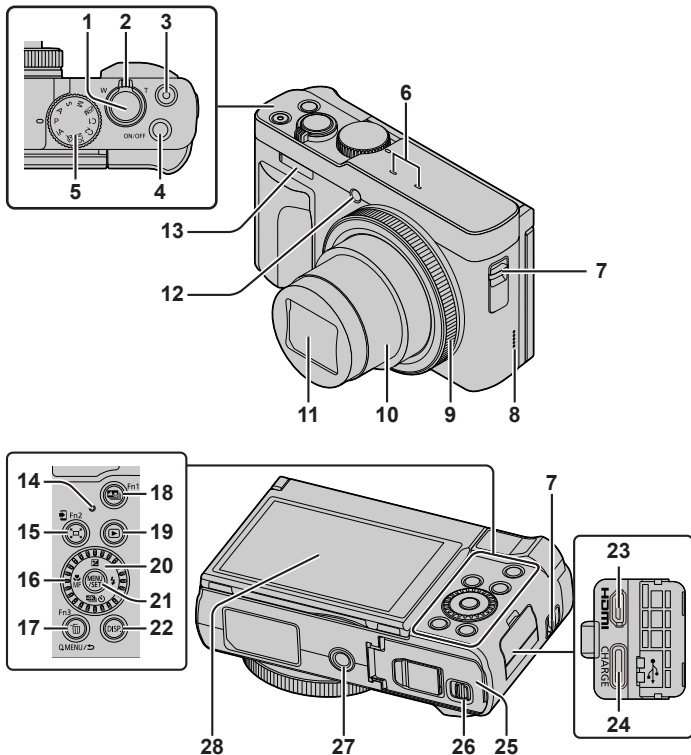

- 1 Shutter button (→28)
- 2 Zoom lever (→29)
- 3 Motion picture button (→43)
- 4 Camera [ON/OFF] button (→25)
- 5 Mode dial (→27)
- 6 Stereo microphone
- 7 Strap eyelet

- To prevent dropping, be sure to attach the supplied strap and fit it to your wrist.
- 8 Speaker
- 9 Control ring (→30)
- 10 Lens barrel
- 11 Lens
- 12 Self-timer indicator / AF Assist Lamp
- 13 Flash
- 14 Charging lamp (→22, 23) / WIRELESS connection lamp (→53)
- 15 [] ([Zoom Compose Assist]) button (→30) / [] ([Send Image (Smartphone)]) button / [Fn2] button (→32)
- 16 Control dial (→30)
- 17 [] (Delete) button (→45) / [Q.MENU] button /
 - You can easily call some of the menu items and set them during recording.
- 18 [] ([Post Focus]) button (→40) / [Fn1] button (→32)
- 19 [] (Playback) button (→45)
- 20 Cursor button (→31)
- 21 [MENU/SET] button (→33)
 - Confirmation of setting contents, etc., is performed.
- 22 [DISP.] button
 - Use this to change display.
- 23 [HDMI] socket
 - You can view pictures on a TV screen by connecting your camera to your TV with the HDMI micro cable.
- 24 [USB/CHARGE] socket (→22)
- 25 Card/Battery door (→20)
- 26 Release lever (→20)
- 27 Tripod mount
 - Do not attach this unit to tripods that have screws with a length of 5.5 mm (0.22 inch) or more. Doing so may damage this unit or the unit may not be secured properly on the tripod.
- 28 Touch screen (→32) / monitor (→62)

Function buttons [Fn4] to [Fn8] are touch icons.

They can be displayed by touching the [] tab on the recording screen.

Quick Start Guide

Inserting the battery and/or SD memory card (optional)

Make sure that the camera is turned off.


1 Slide the release lever (A) to the [OPEN] position and open the card/battery door

2 Insert the battery and card, making sure that their orientation is correct

- Battery: Insert the battery all the way firmly and check that it is locked by lever (B).
- Card: Insert the card all the way firmly until it clicks. Do not touch the terminal.

3 Close the door


Slide the release lever to the [LOCK] position.

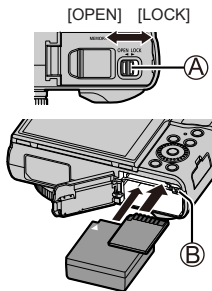

■ To remove


• To remove battery

Move lever (B) in direction of arrow.

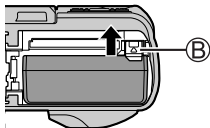

• To remove card

Press the center of the card.

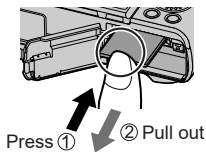

- Always use genuine Panasonic batteries (DMW-BLG10PP).
- If you use other batteries, we cannot guarantee the quality of this product.
- Keep the memory card out of reach of children to prevent swallowing.

Charging the battery

Use an AC adaptor (supplied/optional/commercially available) and USB connection cable (supplied/commercially available) to charge the battery.

- For charging, we recommend using the supplied AC adaptor or the AC adaptor (DMW-AC11: optional).
- The battery can be charged using a commercially available AC adaptor or USB connection cable.
 - Recommended specifications for AC adaptors (commercially available)
 - Supports DC 5 V / 3 A (15 W) output
 - USB Type-C
 - For charging, use a USB connection cable with an output of 15 W or higher.
- You can also use an AC adaptor of 5 V / 500 mA or higher for charging. However, charging time may be longer than the recommended AC adaptor.
- We do not guarantee operations with all commercially available devices.
- The AC adaptor (supplied) and the USB connection cable (supplied) are dedicated accessories of this camera. Do not use them for other devices.
- Charge the battery using this camera and the specified method. Using charging methods other than those specified may result in fluid leakage, overheating, combustion, rupturing, etc., and these may cause injury.

 

■ About the battery pack

The battery that can be used with this unit is DMW-BLG10PP.

- This battery may present a risk of fire or chemical burn if mistreated.
- To ensure that safe products are used, we recommend that a genuine Panasonic battery pack is used. There is a possibility that other battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack.

- The battery is not charged at the time of purchase. Charge the battery before use.
- We recommend charging in a location where the ambient temperature is between 10 °C and 30 °C (50 °F to 86 °F) (same for the battery temperature).

Insert the battery into the camera.
Make sure that the camera is turned off.

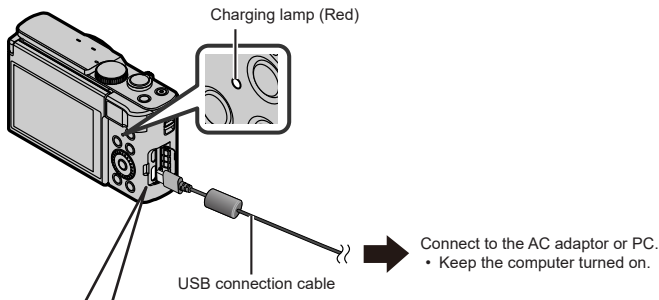

Ⓐ [USB/CHARGE] socket

- This terminal is located at the bottom.

- Always check the direction of the socket, and hold the plug straight to insert or remove it. (Inserting these at an angle may cause deformation or malfunction) Also, do not insert into the wrong socket. Doing so may cause damage to this unit.

Charging from the power outlet

Connect the AC adaptor and this camera with the USB connection cable, and insert the AC adaptor into the power outlet.

- Even when the camera is turned off, it consumes power.
When the camera will not be used for a long time, remove the power plug from the electrical outlet in order to save power.

Charging from a computer

Connect the computer and this camera with the USB connection cable.

- If the computer enters sleep mode during charging, charging may be stopped.
- If a notebook computer that is not connected to an electrical outlet is connected to the camera, the battery of the notebook computer will be depleted. Do not leave the camera and notebook connected for a long period of time.
- Always connect the USB connection cable to the USB connector on your computer. Do not connect the USB connection cable to the USB connector of the monitor, keyboard, printer, or USB hub.

■ Charging lamp indications (Red)

On: Charging in progress

Off: Charging complete (After charging stops, disconnect the camera from the electrical outlet or your computer.)

Flashing: Charging error (→65)

- If the battery indication does not go to  even when charging is complete, the battery may be deteriorating. Try not to use that battery.

■ Charging time

When using the AC adaptor (supplied)	Approx. 190 min.
--------------------------------------	------------------

 
- The charging time indicated above is the time required for charging in case when the battery is completely used up. The time required for charging differs depending on conditions of battery usage. Charging takes longer in cases when temperatures are either high or low and when the battery has not been used for a long period of time.
- The time required for charging through the computer varies depending on the power supply capacity of the computer.

Setting the clock

The clock is not set when the camera is shipped.

1 Turn the camera on

2 Press [MENU/SET]



3 Press ▲▼ to select the language and press [MENU/SET]

- The [Please set the clock] message appears.

4 Press [MENU/SET]

5 Press ◀▶ to select the items (year, month, day, hour, minute), and press ▲▼ to set


6 Press [MENU/SET]

7 When [The clock setting has been completed.] is displayed, press [MENU/SET]

8 When [Please set the home area] is displayed, press [MENU/SET]

9 Press ◀▶ to set your home area and press [MENU/SET]

- Time zones may be revised depending on the country or area, so the place name displayed on the screen may not match the actual time zone. Please also refer to the time difference displayed at the bottom of the screen before setting.

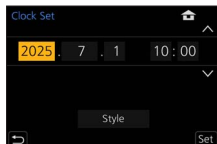

■ Setting the operation of camera [ON/OFF] button when turning on the camera

MENU →  **[Setup]** → **[Power Button(At Power ON)]**

[LONG-PRESS]	You can turn on the camera by pressing and holding the camera [ON/OFF] button. Selecting the [LONG-PRESS] setting reduces the risk of the power turning on unintentionally while the camera is in a bag or pocket. (When the camera is turned on, the lens barrel will extend. Applying pressure to the lens barrel can cause it to malfunction.)
[SHORT-PRESS]	You can turn on the camera by briefly pressing the camera [ON/OFF] button. (setting at the time of purchase)

Formatting the card (initialization)


Format the card before recording a picture with this unit.

Since data cannot be recovered after formatting, make sure to back up necessary data in advance.

MENU →  **[Setup]** → **[Format]**

Adjusting the angle of the monitor


- Be careful not to catch your finger, etc. in the monitor.
- When rotating the angle of the monitor, be careful not to apply too much force. Doing so may cause damage or malfunction. (Open and close with your finger on point A.)
- When not using this camera, close the monitor completely back to the original position.

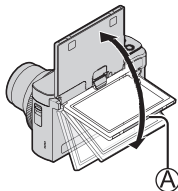

Mode dial (Select the recording mode)

1 Set to the desired recording mode

 - Rotate the mode dial slowly to select the desired mode.
- When you set the mode dial to [iA], the camera automatically optimizes the main settings.




iA	 Intelligent Auto Mode (→34)
	 Intelligent Auto Plus Mode (→34)
P	Program AE Mode Take pictures with automatic shutter speed and aperture value settings.
A	Aperture-Priority AE Mode Determine aperture, then take pictures.
S	Shutter-Priority AE Mode Determine shutter speed, then take pictures.
M	Manual Exposure Mode Determine aperture and shutter speed, then take pictures.
 M	Creative Video Mode Determine aperture, shutter speed and ISO sensitivity, then record motion pictures. • You cannot take still pictures.
C1/ C2	Custom Mode Take pictures using pre-registered settings.
SCN	Scene Guide Mode Take pictures that match the scene being recorded.
	Creative Control Mode Take pictures by selecting your preferred picture effect.

Holding the camera

- Do not block the flash, AF Assist Lamp, microphone, or speaker with your fingers or other objects.

- Ⓐ Flash/AF Assist Lamp
- Ⓑ Microphone
- Ⓒ Speaker

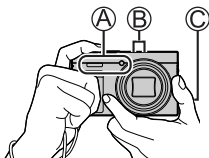


Shutter button (Taking pictures)

1 Press the shutter button halfway (press lightly) to focus on the subject



- Ⓐ Shutter speed
- Ⓑ Aperture value
- Ⓒ Focus display (Green)
(When focus is aligned: illuminated
When focus is not aligned: flashing)

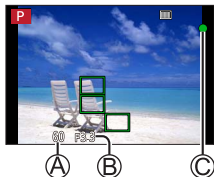

- If the aperture value and shutter speed are shown in red and flashing, you do not have the appropriate exposure, unless you are using the flash.

2 Press the shutter button fully (push the button all the way), and take the picture



- Pictures can be taken only when the image is correctly focused as long as the [Focus/Release Priority] is set to [FOCUS].

■ Estimated number of recordable pictures

1450: When [Aspect Ratio] is set to [4:3], [Quality] is set to [], [Picture Size] is set to [L] (20M), and using a card of 16 GB

■ Check the picture you have taken

Press the [] (Playback) button. (→45)

 
Basic operations

Zoom lever (Use zoom)

Optical Zoom:

You can zoom in without degrading the picture quality.

Maximum magnification: 30x



Extended optical zoom:

This function works when picture sizes with [EX] have been selected in [Picture Size]. Extended optical zoom allows you to zoom in using a higher zoom ratio than optical zoom, without degrading the picture quality.

Maximum magnification: 59.2x*1

*1 Including the optical zoom ratio.

[i.Zoom]:

Set the [i.Zoom] in the [Rec]/[Motion Picture] menu to [ON].

You can use the camera's intelligent resolution technology to increase the zoom ratio up to 2x*2 higher than the original zoom ratio with limited deterioration of picture quality.

*2 Up to 1.5x the original zoom ratio when [Picture Size] is set to [S]

[Digital Zoom]:

Set the [Digital Zoom] in the [Rec]/[Motion Picture] menu to [ON].

You can zoom in up to 4x the original zoom magnification. When [Digital Zoom] is used simultaneously with [i.Zoom], you can increase the combined zoom ratio up to 4x.

Note that, with Digital Zoom, enlarging will decrease picture quality.

- When [Monitor Display Speed] is set to [ECO 30fps], Digital Zoom is not available (setting at the time of purchase).

■ [Zoom Compose Assist] button (Using the Zoom Compose Assist function)

If you lose the subject while zoomed in:

- ① Press and hold [] ([Zoom Compose Assist]) button
 - A frame indicating the original zoom magnification (angle of view) will appear.

When you find the subject:

- ② Align the frame with the subject and release your finger from the button

Control ring/Control dial

You can use the control ring (A)/control dial (B) to change the settings for recording.



Following are the pre-assigned settings.

Mode dial	Control ring*1	Control dial
iA	Step Zoom	—
P	Program Shift	
A / A*3	Aperture adjustment	
S / S*3	Shutter speed adjustment	
M / M*3	Aperture adjustment*2	Shutter speed adjustment*2
SCN	Aperture adjustment*4 / Shutter speed adjustment*5	
	Picture effects change	

*1 When Manual Focus is set, the control ring is assigned to focus adjustment.

*2 Press to switch between shutter speed adjustment and aperture adjustment.

*3 You can change [Exposure Mode] (→46) from [Creative Video].

*4 The operation is possible only when the Scene Guide Mode is set to [Appetizing Food].

*5 The operation is possible only when the Scene Guide Mode is set to [Artistic Nightscape].

- You can change to your preferred settings using [Ring/Dial Set] (→48) from the [Custom] ([Operation]) menu.

Cursor button

Selection of items or setting of values etc., is performed.

You can perform the following operations while recording. (Some items or settings cannot be selected depending on the mode or display style the camera is in.)

[] (**Exposure compensation**) ()

- Corrects the exposure when there is a backlight or when the subject is too dark or too bright.

[] (**Flash Mode**) ()

- Changes flash mode.

[] (**Drive Mode**) ()

- [] ([Burst])*
 - Records in succession while the shutter button is pressed.
 - [] ([4K PHOTO])* (→36)
 - [] ([Post Focus])* (→40)
 - [] ([Self Timer])*
- * To cancel drive mode, select [] ([Single]) or [] ([Off]).

[] (**Focus Mode**) ()

- [AF]
 - Focus is set automatically when the shutter button is pressed halfway.
- [AF ] ([AF Macro])
 - You can take pictures of a subject as close as 3 cm (0.098 feet) from the lens by rotating the zoom lever upmost to Wide.
- [] ([Macro Zoom])
 - Use this setting to get close to the subject and then further enlarge when taking the picture. You can take a picture with the Digital Zoom up to 3x while maintaining the distance to the subject for the extreme Wide position (3 cm (0.098 feet)).
- [MF]
 - Manual focus is convenient when you want to lock the focus to take pictures or when it is difficult to adjust focus using auto focus.

Function buttons

- [Fn1] to [Fn3] are buttons on the camera.
- Function buttons [Fn4] to [Fn8] are touch icons. They can be displayed by touching the [Fn] tab on the recording screen.
- You can assign frequently-used functions to particular buttons or icons with [Fn Button Set] (→48) in [Custom] ([Operation]) menu.

Touch screen (Touch operations)

Touch

To touch and release the touch screen.




Drag

To touch and slide your finger across the touch screen.



Pinch (spread/pinch)

On the touch screen, spread (pinch out) your 2 fingers to zoom in, and pinch (pinch in) your 2 fingers to zoom out.

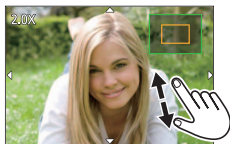


Setting the menu

1 Press [MENU/SET] to bring up the menu

2 Switch the menu type

- ① Press ◀
- ② Press ▲ ▼ to select a tab such as [🔧]
- ③ Press [MENU/SET]

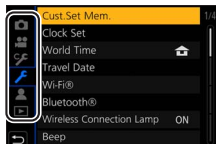

■ Menu types


- [📷] [Rec]
 - [🔧] [Setup]
 - [👤] [Motion Picture]
 - [👤] [My Menu]
 - [🔧] [Custom]
 - [▶] [Playback]
- Menus to be displayed in each recording mode (→46)

3 Press ▲ ▼ to select the menu item and press [MENU/SET]

- You can also switch to the next page by rotating the zoom lever.

4 Press ▲ ▼ to select the setting and press [MENU/SET]

- The setting methods vary depending on the menu item.

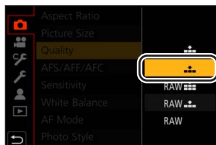

5 Press [📷] button repeatedly until the recording or playback screen reappears

- The menu screen can also be exited by pressing the shutter button halfway.
- The menu items that cannot be set are grayed out. In some setting conditions, the reason the setting is disabled is displayed when you press [MENU/SET] if you select a grayed-out menu item.

 
Taking pictures with automatic settings

(Intelligent Auto Mode)

This mode is recommended for those who want to point and shoot as the camera optimizes settings to match the subject and recording environment.

1 Set mode dial to [iA]

- At the time of purchase, the mode is set to Intelligent Auto Mode.



2 Point the camera at the subject

- When the camera identifies the optimal scene, the icon switches to the one for that scene. (Automatic Scene Detection)



Switching between Intelligent Auto Plus Mode and Intelligent Auto Mode

MENU → **iA** / **iA⁺** [Intelligent Auto] → [Intelligent Auto Mode]


Settings: [iA] (Intelligent Auto Mode) / [iA⁺] (Intelligent Auto Plus Mode)

- [iA⁺] allows you to adjust some settings such as the brightness and color tone while also using [iA] for other settings so that you can record pictures more suited to your preferences.

Auto Focus (Face/Eye Detection)

[AF Mode] is automatically set to [Face/Eye]. If you touch the subject, the camera switches to [Tracking] and the AF tracking function starts operating.

- You can also switch to [Tracking] by pressing [MENU/SET], going to the [Rec] menu, then going to the [AF Mode] menu and selecting [Tracking] (tracking). Align the AF tracking area with the subject and press the shutter button halfway to operate the AF tracking function.

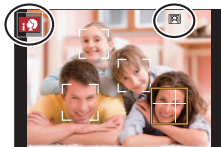

Taking Pictures of Yourself [Self Shot]

Recording mode:

You can easily take pictures of yourself while looking at the screen.

1 Rotate the monitor as shown in the figure

2 Touch the item

- You can record with the 4K Photo function by touching (4K Selfie). When using this function, only [Filter Select] can be selected. For details on how to record, refer to steps 3 - 4 of "Recording with the 4K Photo function". (→36 - 37)

- A [Soft Skin] / B [Filter Select]
 C [Background Control] /
 D [Slimming Mode] / E [Shutter] /
 F [Countdown] / [Shots]

3 Touch the slide bar



- You can set it to "Off" or a value in the range [1] to [10].
- In the case of [Filter Select], [Background Control], [Shutter], or [Shots], select from the icons.

4 Touch [Exit]

5 Decide on your poses while looking at the monitor

6 Press the shutter button halfway to focus and then press it fully to take the picture

- Look at the lens when recording.
- Be careful not to look at the light from the flash and the AF Assist Lamp directly.

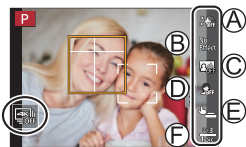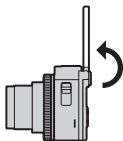

Recording with the 4K Photo function

Recording mode:




You can take burst pictures of approximately 8 million pixels with a burst rate of 30 fps. You can select and save a frame from the burst file.

- To record pictures, use a UHS Speed Class 3 card.

1 Press button (▼)

2 Press ◀▶ to select the 4K photo and press ▲

   3 Press ◀▶ to select the recording method and press [MENU/SET]

[4K Burst]	For capturing the best shot of a fast-moving subject Burst recording is performed while the shutter button is pressed and held. • Recording will start approximately 0.5 seconds after you press the shutter button fully. Therefore, press the button fully slightly in advance. Ⓐ Press and hold Ⓑ Recording is performed 
[4K Burst(S/S)] “S/S” is an abbreviation of “Start/Stop”.	For capturing unpredictable photo opportunities Burst recording starts when the shutter button is pressed and stops when pressed again. Ⓒ Start (First) Ⓓ Stop (Second) Ⓔ Recording is performed 
[4K Pre-Burst]	For recording as needed whenever a photo opportunity arises Burst recording is performed for approximately 1 second before and after the moment that the shutter button is pressed. Ⓕ Approximately 1 second Ⓖ Recording is performed 



 
**[4K Burst
(Wide-angle)]**

For taking selfies with an angle of view wider than that of [4K Burst]

- This setting is only available in Self Shot Mode. (→35)

Burst speed: 15 pictures/second

- Ⓐ Press and hold
- Ⓑ Recording is performed



4 Press the shutter button to perform recording

- When you press the [Fn1] button while recording, you can add a marker. (Up to 40 markers for each recording.) When selecting and saving pictures from a 4K burst file, you can skip to the positions where you added markers. ([4K Burst(S/S)] only)
- Burst pictures are saved as a single 4K burst file in the MP4 format.
- When [Auto Review] is enabled, the picture selection screen will be displayed automatically.

■ To cancel the 4K Photo functions

Press [**4K**] button (▼), and then select [□] ([Single]) or [**4K** OFF]

- If the surrounding temperature is high or 4K photos are recorded continuously, [△] may be displayed and recording may be stopped halfway through. Wait until the camera cools down.
- When [**4K Pre-Burst**] is set, the battery drains faster and the camera temperature rises. (to protect itself, the camera may switch to [4K Burst])**
Select [4K Pre-Burst**] only when recording.**
- Recording stops when the continuous recording time exceeds 15 minutes. When using an SDHC memory card, files are split into smaller picture files for recording and playback if the file size exceeds 4 GB. (You can continue to record pictures without interruption.)
 If using an SDXC memory card, you can record pictures in a single file even if the size is greater than 4 GB.
- When recording, the angle of view becomes narrower.

- When you perform [Light Composition] or [Sequence Composition], we recommend using a tripod and taking pictures remotely by connecting the camera to a smartphone to prevent camera shake. (→59)

Selecting pictures from 4K burst file and saving


1 Select a picture with the [▲/▼] on the playback screen, and press ▲

- In the case of recording with [4K Pre-Burst], proceed to the step 3.



2 Drag the slide bar to perform rough scene selection

- When [⏮→/→] is touched, the marker operation screen appears. (→39)

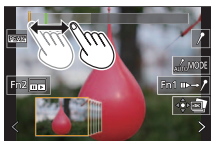

3 Drag to select the frame you want to save as a picture

- To continuously rewind/forward the scene or frame-by-frame, touch and hold [◀]/[▶].



4 Touch [⏏] to save the picture


- The selected picture will be saved as a new picture in the JPEG format separate from the 4K burst file.
- If you use [4K PHOTO Bulk Saving] (→49) in the [Playback] menu, you can bulk save 5 seconds' worth of 4K recording.

■ Marker

When selecting and saving pictures from a 4K burst file, you can select pictures easily by skipping between marked positions.

White marker: This is manually set during recording or playback.

Green marker: This is automatically set by the camera during recording.
(Auto Marking function*1)

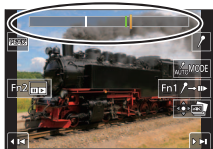

Marker operation screen

*1 The camera automatically sets markers on scenes in which a face or the movement of a subject is detected. (Up to 10 markers are displayed for each file.)
(Example: At the scene when a vehicle passes by, a balloon bursts, or a person turns around)

■ Skips to the marked positions

When [▶→/↵] is touched, the marker operation screen appears. You can use ◀◀▶▶ to skip to a marked position to select a picture.
Touch [↵→▶▶] to return to the original operation.

- In the following cases, markers may not be set by the Auto Marking function depending on the recording conditions and the status of subjects.
 - The camera is moving because of panning or jitter
 - The movement of a subject is slow/small, or the subject is small
 - A face is not facing front

■ Switches a marker to be displayed

① Touch [MODE]

Settings: [Auto] / [Face Priority] / [Motion Priority] / [Off]*2

*2 Displays manually set markers only

Adjusting the focus after recording

[Post Focus] / [Focus Stacking]

Recording mode:

You can record 4K burst pictures while changing the focus point and then select a focus point after recording. This function is best for non-moving subjects.

- To record pictures, use a UHS Speed Class 3 card.
- We recommend using a tripod to perform [Focus Stacking].

1 Press [] button

2 Press ◀▶ to select [ON] and press [MENU/SET]

3 Determine the composition and press the shutter button halfway



- Auto Focus activates and automatically detects the focus point on the screen. (While the shutter button pressed halfway, shake may be seen on the screen.)
- If there is no focus point on the screen, the Focus indicator (A) blinks and you cannot record.

From halfway pressing the shutter button to completion of recording

- Do not change the distance to subject or the composition.

4 Press the shutter button fully to start recording



- The focus point changes automatically while recording. When the recording progress bar (B) disappears, recording automatically ends.
- The data will be saved as a single file in the MP4 format.
- If [Auto Review] is set, a screen will automatically appear that lets you select the focus point. (→41)

■ Canceling [Post Focus]

Select [OFF] in step 2.

- If the surrounding temperature is high or [Post Focus] recording is performed continuously, [△] may be displayed and recording may be stopped halfway through. Wait until the camera cools down.
- During recording, the angle of view will be narrower.


Select the focus point and save the picture ([Post Focus])

- 1 On the playback screen, select the image with the [] icon and press ▲**



- 2 Touch the focus point**

- If there are no pictures with the focus on the selected point, a red frame will be displayed, and pictures cannot be saved.
- The edge of the screen cannot be selected.
- To switch to the [Focus Stacking] operations screen, touch []. (→42)
- To highlight in-focus portion with color, touch [PEAK].
- To enlarge the display, touch [Q].
- You can make fine adjustments to the focus by dragging the slide bar during enlarged display. (The same operation can be performed using ◀▶.)

 

- 3 Touch [] to save the picture**

- The selected picture will be saved as a new separate file in the JPEG format.

Select the focus range to combine and create a single picture ([Focus Stacking])

- 1 Touch  on screen in step 2 of “Select the focus point and save the picture ([Post Focus])” (→41)
- 2 Choose a stacking method and touch it

[Auto Merging]	Automatically select photos suitable for stacking and combine them into one picture. • Choose by giving preference to near-focus pictures. • Perform the focus stacking and save the picture.
[Range Merging]	Combine the pictures with the selected focus position into one picture.

(When selecting [Range Merging])


3 Touch the focus point

- Select positions at two or more points.
- Focus points between the selected two positions will be selected.
- Positions that cannot be selected, or that would produce an unnatural result will be grayed out.

- Touch a position again to deselect it.

4 Touch to combine and save the picture

- The picture will be saved in JPEG format.

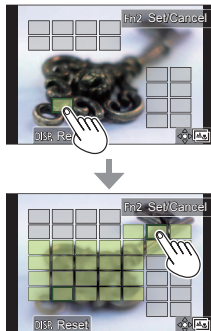

- Only pictures taken using [Post Focus] on this camera are eligible for [Focus Stacking].


Recording Videos

Recording mode:

You can record 4K or high-definition quality motion pictures in MP4 format.

1 Press the motion picture button to start recording

- (A) Red REC frame indicator
- (B) Recording (lights up in red)
- (C) Elapsed recording time
- (D) Remaining recording time

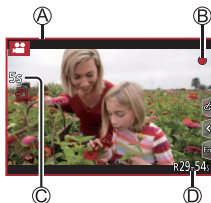

- Recording of motion picture appropriate for each motion picture mode is possible.
- Immediately release the motion picture button after pressing it.
- If you press the shutter button down fully, you can take still pictures while recording motion pictures. (Except for in Creative Video Mode)

2 Press the motion picture button again to end recording

- To record 4K motion pictures, use a UHS Speed Class 3 card.
- When you record 4K motion pictures, the angle of view will be narrower than motion pictures of other sizes.
- To ensure highly accurate focus, 4K motion pictures are recorded at reduced Auto Focus speeds. It may be difficult to focus on the subject with Auto Focus, but this is not a malfunction.
- **With recording in a quiet environment, the sound of aperture, focus and other actions may be recorded in motion pictures. This is not a malfunction.**

The focus operation during recording of motion pictures can be set to [OFF] in [Continuous AF].

- If the surrounding temperature is high, or a motion picture is recorded continuously, [] is displayed and recording may be stopped halfway through. Wait until the camera cools down.

■ Setting the picture size and recording frame rate

MENU →  **[Motion Picture]** → **[Rec Quality]**

MP4:

[4K/100M/30p]* / [FHD/28M/60p] / [FHD/20M/30p] / [HD/10M/30p]

- MP4 motion pictures with a [Rec Quality] size of [FHD] or [HD]:
Files are split into smaller motion picture files for recording and playback when the file size exceeds 4 GB. (You can continue to record motion pictures without interruption.)
- Motion pictures with [Rec Quality] setting of [FHD/28M/60p] in MP4:
Recording stops when the continuous recording time exceeds 29 minutes and 59 seconds.
- MP4 motion pictures with a [Rec Quality] size of [4K]:
Recording stops when the continuous recording time exceeds 15 minutes.
When using an SDHC memory card, files are split into smaller motion picture files for recording and playback if the file size exceeds 4 GB. (You can continue to record motion pictures without interruption.)
If using an SDXC memory card, you can record a motion picture in a single file even if the size is greater than 4 GB.

* 4K motion pictures

Viewing your pictures

1 Press [▶] (Playback) button

2 Press ◀▶ to select a picture to be displayed

- When you press and hold ◀▶, the pictures are displayed one after another.

■ Ending Playback

Press [▶] (Playback) button again or press the shutter button halfway.

- By holding down [▶] (Playback) button while the camera is off, you can turn the camera on in playback mode.
- When [Lens Retraction] is set to [ON], the lens barrel is retracted after approx. 15 seconds as the camera is switched to the playback screen from the recording screen.

■ Viewing motion pictures

This unit was designed to play motion pictures using the MP4 format.

- Motion pictures are displayed with the motion picture icon ([▶]).

① Press ▲ to start playback

- If you press [MENU/SET] during a pause, you can create a picture from a motion picture.



■ Deleting pictures

Deleted pictures cannot be recovered.

① Press [🗑] button to delete displayed picture

② Use ▲ to select [Delete Single] and press [MENU/SET]

Menu list

- You can display an explanation on the menu by pressing the [DISP.] button while you select a menu item or setting. (→33)



Menus to be displayed in each recording mode

iA iA⁺ [Intelligent Auto]

[Intelligent Auto Mode]

[iHandheld Night Shot]

[iHDR]

M [Creative Video]

[Exposure Mode]

[High Speed Video]

[4K Live Cropping]

C [Custom Mode]

You can select your preferred custom setting from [C1], [C2-1], [C2-2], and [C2-3].

SCN [Scene Guide]

[Scene Switch]

CC [Creative Control]

[Filter Effect]

[Simultaneous Record w/o Filter]

 [Rec]

[Aspect Ratio]	[i.Dynamic]*	[Burst Rate]
[Picture Size]	[i.Resolution]*	[4K PHOTO]
[Quality]	[Flash Adjust.]	[Self Timer]
[AFS/AFF/AFC]*	[ISO Auto Upper Limit (Photo)]	[Time Lapse Shot]
[Sensitivity]*	[Min. Shtr Speed]	[Stop Motion Animation]
[White Balance]	[Diffraction Compensation]*	[Silent Mode]
[AF Mode]*	[Stabilizer]*	[Shutter Type]
[Photo Style]*	[i.Zoom]*	[Bracket]
[Filter Settings]*	[Digital Zoom]*	[HDR]
[Metering Mode]*		

* The menu items are common for both [Rec] and [Motion Picture] menus. (Common menu items are indicated in the [Rec] menu list only) If a setting in one menu is changed, the setting with the same name in other menu will also be changed automatically.

 [Motion Picture]

[Rec Quality]	[ISO Auto Upper Limit (Video)]	[Wind Noise Canceller]
[Snap Movie]	[Flkr Decrease]	[Zoom Mic]
[Continuous AF]	[Level Shot]	

[Custom]

[Exposure]

[ISO Increments]

[Extended ISO]

[Exposure Comp. Reset]

[Focus / Release Shutter]

[AF/AE Lock]

[AF/AE Lock Hold]

[Shutter AF]

[Half Press Release]

[Quick AF]

[Pinpoint AF Setting]

[AF Assist Lamp]

[Direct Focus Area]

[Focus/Release Priority]

[AF+MF]

[MF Assist]

[MF Assist Display]

[Operation]

[Fn Button Set]

[Exposure Comp. Disp. Setting]

[Ring/Dial Set]

[Operation Lock Setting]

[Touch Settings]

[Dial Guide]

[Zoom lever]

[Zoom Compose Assist]

[Monitor / Display]

[Auto Review]

[Monochrome Live View]

[Peaking]

[Histogram]

[Guide Line]

[Center Marker]

[Highlight]

[Zebra Pattern]

[Expo.Meter]

[MF Guide]

[Rec Area]

[Remaining Disp.]

[Red REC Frame Indicator]

[Menu Guide]

[Lens / Others]

[Lens Position Resume]

[Lens Retraction]

[Self Timer Auto Off]

[Self Shot]

[Vertical Position Info (Video)]

[Face Recog.]

[Profile Setup]

 [Setup]

[Cust.Set Mem.]	[Power Button(At Power ON)]	[Version Disp.]
[Clock Set]	[Power Save Mode]	[Folder / File Settings]
[World Time]	[Monitor Display Speed]	[No.Reset]
[Travel Date]	[Monitor Display]	[Reset]
[Wi-Fi]	[Monitor Luminance]	[Reset Network Settings]
[Bluetooth]	[m/ft]	[Level Gauge Adjust.]
[Wireless Connection Lamp]	[TV Connection]	[Demo Mode]
[Beep]	[Language]	[Approved Regulations]
		[Format]

 [My Menu]

[My Menu Setting]

You can register frequently used menus.

 [Playback]

[Slide Show]	[4K PHOTO Bulk Saving]	[Rotate]
[Playback Mode]	[Light Composition]	[Video Divide]
[Protect]	[Sequence Composition]	[Time Lapse Video]
[Rating]	[Clear Retouch]	[Stop Motion Video]
[Title Edit]	[Text Stamp]	[Rotate Disp.]
[Face Rec Edit]	[Resize]	[Picture Sort]
[RAW Processing]	[Cropping]	

[Light Composition]

Select multiple frames from 4K burst files that you wish to combine. Parts of the image that are brighter than the preceding frame will be superimposed on the preceding frame to combine the frames into one picture.



MENU → **[Playback]** → **[Light Composition]**

1 Use ◀▶ to select the 4K burst files and press [MENU/SET]

2 Choose the combining method and press [MENU/SET]

■ [Composite Merging]: Selecting frames to combine

- ① Drag the slide bar or use ▲▼◀▶ to select the frames to combine
- ② Press [MENU/SET]
 - The selected frames are remembered, and the display goes to the preview screen.
 - Use ▲▼ to select items and press [MENU/SET] to perform the following operations.
 - [Next]: Lets you select more frames for combining.
 - [Reselect]: Discards the frame selected immediately before and lets you select a different image.
- ③ Repeat steps ① - ② to select more frames to combine (up to 40 frames)
- ④ Press ▼ to select [Save] and press [MENU/SET]

■ [Range Merging]: Selecting a range to combine

- ① Select the frame of the first picture and then press [MENU/SET]
 - The selection method is the same as in step ① of [Composite Merging] setting.
 - ② Select the frame of the last picture and then press [MENU/SET]
- The picture will be saved in JPEG format.

[Sequence Composition]

Select multiple frames from a 4K burst file to create a sequence composition of a moving subject into one picture.



MENU → **[Playback]** → **[Sequence Composition]**

- 1 Use ◀▶ to select the 4K burst files and press [MENU/SET]**
- 2 Select frames to combine**

Select the frames so that the moving subject will not overlap on the preceding or subsequent frames. (The sequence composition may not be created properly if the subject overlaps.)

- ① Drag the slide bar or use ▲▼◀▶ to select the frames to combine
 - ② Press [MENU/SET]
 - The selected frames are remembered, and the display goes to the preview screen.
 - Use ▲▼ to select items and press [MENU/SET] to perform the following operations.
 - [Next]: Lets you select more frames for combining.
 - [Reselect]: Discards the frame selected immediately before and lets you select a different image.
 - ③ Repeat steps ① - ② to select more frames to combine (from 3 to 40 frames)
 - ④ Press ▼ to select [Save] and press [MENU/SET]
- We recommend using a tripod to take pictures for Sequence Composition.
 - The picture will be saved in JPEG format.

What you can do with the Wi-Fi®/Bluetooth® function


Operating the camera by connecting it to a smartphone

- Operating the shutter button of the camera using a smartphone (remote recording) (→59)
- Playing back or saving images stored on the camera (→60)
- Combining motion pictures recorded with Snap Movie according to your preference on a smartphone

Expanding the scope of applications by connecting the camera to a smartphone compatible with Bluetooth Low Energy

- Pairing (connection setup) (→55)
 - Turning on/off the camera with a smartphone (→58)
 - Transferring recorded images to a smartphone automatically
 - Writing location information of a smartphone on a recorded image
 - Synchronizing the camera's clock with a smartphone
-
- This manual uses the term "smartphone" for both smartphones and tablets unless it is necessary to distinguish between them.
 - For details, refer to "Owner's Manual for advanced features (PDF format)".

■ Lighting of the WIRELESS connection lamp (Blue)

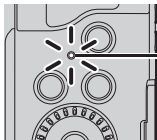

Lit: When the Wi-Fi/Bluetooth function is ON or connected
 Blinking: When sending picture data by operating the camera

- In [Wireless Connection Lamp] in the [Setup] menu, you can set the lamp so that it will not light/flash.

■ [Wi-Fi] button

In this owner's manual, a function button to which [Wi-Fi] is assigned is referred to as the [Wi-Fi] button. (At the time of purchase, [Wi-Fi] is assigned to [Fn4] in recording mode, and [Fn1] in playback mode.)

- For details on the function button, refer to (→32)

To start up the Wi-Fi function (When in recording mode):

① Touch [Fn]



② Touch [Fn4]



- The camera cannot be used to connect to a public wireless LAN connection.

Operating the camera by connecting it to a smartphone

Installing the smartphone app “Panasonic Image App”

- **Supported OS**

Android™: Android 10 or later

iOS: iOS 15 or later

- ① Connect your device to a network
- ② (Android) Select “Google Play™ Store”
(iOS) Select “App Store”
- ③ Enter “Panasonic Image App” or “LUMIX” into the search box
- ④ Select “Panasonic Image App” and install it



- Use the latest version.
- Supported OS versions as of December 2024. Supported OS versions may be changed without prior notice.
- The service may not be able to be used properly depending on the type of smartphone being used.

For the latest information on the “Image App”, refer to the support site below.

<https://panasonic.jp/support/global/cs/dsc/>

(This site is available in English only.)

- For details about the operating procedure, etc., refer to [Help] in the “Image App” menu.
- Some of the screens and information provided in this document may be different depending on the supported operating system and “Image App” version.

Connecting the camera to a smartphone compatible with Bluetooth Low Energy

You can connect the camera to a smartphone via a Bluetooth connection.

• Supported smartphones

Android: Android 10 or higher equipped with Bluetooth 4.0 or higher
iOS: iOS 15 or higher

 
■ First-time connection

You need to set up pairing (connection) for the first time only. When pairing is set up, a Wi-Fi connection is made automatically.

(On the camera)

MENU →  **[Setup]** → **[Bluetooth]** → **[Bluetooth]**
 → **[SET]** → **[Pairing]**

- The camera enters pairing standby mode and displays its device name.




(On your smartphone)

- ① Start "Image App"
 - If a message is displayed indicating that the smartphone is searching for cameras, close the message.
- ② Select [Bluetooth]
- ③ Turn on the Bluetooth
- ④ Select the device name displayed on the camera's screen from the [Camera enable to be registered] list
 - Bluetooth connection between the camera and the smartphone will be made. (For Android devices) A Wi-Fi connection will be made by selecting [Connection].

If you are using an Android device, follow the steps up to here to complete the setup.

Proceed to the steps below only if you are using an iOS device.

- You need to install the profile.
 - ❶ Install the profile
 - If the smartphone is locked with a passcode, enter the passcode to unlock the smartphone.
 - ❷ Exit the browser
- ❸ Turn on the Wi-Fi function in the setting menu
- ❹ On the Wi-Fi setting screen, select the SSID displayed on the camera (The device name selected in step ❸)
 - If the SSID is not displayed, it may be displayed after the Wi-Fi function is turned off and on.
 - When you need to change the connected device, follow the on-screen message to change the setting.
- ❺ Start “Image App”
 - The paired smartphone will be registered as a paired device after connected via Wi-Fi.
- To make a connection with the paired smartphone for the second and subsequent times, enable the Bluetooth function of the camera and set the Bluetooth for “Image App” on your smartphone to ON. Then, select a camera (device name) to be connected from the [Camera registered] list.
- [📶] is displayed on the recording screen when a Bluetooth device is connected. If the Bluetooth function is enabled, but the smartphone is not connected, the displayed [📶] is semi-transparent.

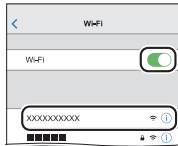

Connecting the camera to a smartphone that does not support Bluetooth Low Energy

Connect to a smartphone via Wi-Fi.

- You can also connect via Wi-Fi to a smartphone that supports Bluetooth Low Energy by following the same steps.

(On the camera)

MENU → **[Setup]** → **[Wi-Fi]** → **[Wi-Fi Function]** → **[New Connection]**
→ **[Remote Shooting & View]**


- The information (QR Code, SSID and Password) required for directly connecting your smartphone to this unit is displayed.

- Ⓐ SSID and Password
- Ⓑ QR Code



(On your smartphone)

- Turn on the Wi-Fi function in the setting menu
- Select the SSID displayed on the screen of the camera
- Enter the password displayed on the camera (For first time connection only)
- Start “Image App”

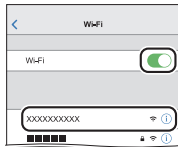

- You can also set up a connection using a QR code.
For details, refer to “Owner’s Manual for advanced features (PDF format)”.


Closing the Wi-Fi connection

1 Set the camera to Recording Mode

- Press the shutter button halfway to return to recording mode.

2 Select the camera's menu items to terminate the Wi-Fi connection

MENU →  **[Setup]** → **[Wi-Fi]**
→ **[Wi-Fi Function]** → **[Yes]**

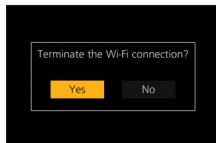

3 On the smartphone, close “Image App”

Turning on/off the camera with a smartphone

Wireless connectivity required: **Bluetooth** **Wi-Fi**

This function allows you to turn on the camera from a distant location and take pictures or view images on the camera even when it is in your bag.

1 Make a Bluetooth connection to the smartphone (→55)

2 Select the camera's menu

MENU →  **[Setup]** → **[Bluetooth]** → **[Remote Wakeup]** → **[ON]**

3 Turn off the camera

4 On the smartphone, start up the “Image App”, and set the Bluetooth function to a state in which a connection can be made (standby state)

5 Operate the smartphone

① Select []

② Select [Remote operation]



- The camera automatically turns on, allowing it to make a Wi-Fi connection automatically.
(iOS devices) Depending on the connection status of the smartphone, you may need to change the connected device on the Wi-Fi setup screen. Follow the on-screen message on the smartphone to change the setting.

■ Turning off the camera with the smartphone

① Select []

② Select [ OFF]

- When [Remote Wakeup] is set to [ON], the Bluetooth function continues to operate even after the camera is turned off, thus causing the battery to drain.

Operating the shutter button of the camera using a smartphone (remote recording)

Wireless connectivity required: Wi-Fi

1 Connect to a smartphone (→57)

2 Operate the smartphone

If the camera is already connected to the smartphone via Bluetooth, select [] → [Remote operation].

(iOS devices) When you need to change the connected device on the Wi-Fi setup screen, follow the on-screen message to change the setting.

① Select []

② Take pictures

- The recorded images are saved in the camera.
- Some settings are not available.



①

Using the smartphone to operate the shutter button via a Bluetooth connection only

Wireless connectivity required: **Bluetooth**

1 Make a Bluetooth connection to the smartphone (→55)

2 Operate the smartphone

- ① Select []
- ② Select [Shutter Remote Control]
- ③ Take pictures



- Read the [Help] in the “Image App” menu for further details on how to operate [Shutter Remote Control] of “Image App”.

Playing back or saving images stored on the camera

Wireless connectivity required: **Wi-Fi**

1 Connect to a smartphone (→57)

2 Operate the smartphone

If the camera is already connected to the smartphone via Bluetooth, select [] → [Remote operation].

(iOS devices) When you need to change the connected device on the Wi-Fi setup screen, follow the on-screen message to change the setting.

- ① Select []
 - You can switch a device of pictures to be displayed using the icon at the top left on the screen. Select [LUMIX] to display a picture saved in the camera.

(Playing back a picture)

- ② When the picture is touched, it is played back at a larger size

(Saving pictures)

- ③ Press and hold the picture and drag it



Downloading software

Download and install software to edit and play back images with a PC.

- To download the software, your PC must be connected to the Internet.
It may take time to download the software in some communication environments.
- Supported OS versions as of December 2024. Supported OS versions may be changed without prior notice.

PHOTOfunSTUDIO 10.0 AE (Windows® 8.1 / 10 / 11)

You can capture still pictures or motion pictures to your PC, or organize captured pictures by categorizing by recording date, model name of the digital camera used to record, etc. You can also correct still pictures, edit motion pictures, or write to DVD.

The software is available for download until the end of January 2030.

https://panasonic.jp/support/global/cs/soft/download/d_pfs10ae.html

- For details about information such as the operating environment or operating method, refer to the “Owner’s Manual for advanced features (PDF format)” or the operating instructions of “PHOTOfunSTUDIO” (PDF format).

SILKYPIX Developer Studio SE (Windows® 10 (64 bit) / 11, macOS 10.13 - 10.15 / 11 / 12 / 13 / 14)

This software develops and edits RAW file pictures. Edited pictures can be saved in a file format such as JPEG or TIFF that can be displayed on a PC, etc.

<http://www.isl.co.jp/SILKYPIX/english/p/>


- For details on the operating environment and how to use the SILKYPIX Developer Studio, refer to the “Help” or the Adwaa’s support website.

List of monitor displays

The screen display of the monitor indicates the camera's operating state.

- For details about the playback screen, refer to "Owner's Manual for advanced features (PDF format)".

In recording

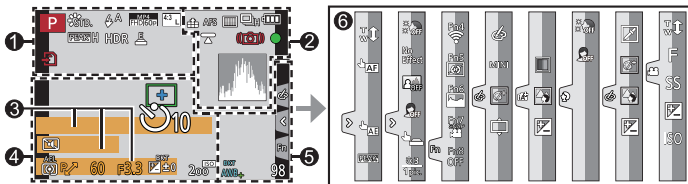

1	XXhXXmXXs	Elapsed recording time
P	Recording mode (→27)	Simultaneous recording indicator (When taking still pictures while recording a motion picture)
C 1	Custom Set	PEAK H [Peaking]
	[Photo Style]	HDR [HDR]/[iHDR]
	Flash Mode	Electronic shutter
MP4 FHD/60p	[Rec Quality] (→44)	Overheat indicator (→37, 41, 43)
SNAP 4SEC	[Snap Movie]	
4:3 L	[Aspect Ratio]/ [Picture Size]	
	Picture effect (Filter) adjustment display	
EXP5	Types of picture effects (Filter)	
	Card (displayed only during recording)	

2

	[Quality]
240fps 120fps	[High Speed Video]
AFS	[AFS/AFF/AFC]/MF
	[AF Mode]
	[Pull Focus] ([Snap Movie])
	[Face Recog.]
AFL	AF Lock
	Burst
	[4K PHOTO] (→36)
	[Post Focus] (→40)
	[Self Timer]
	Battery indicator
AF	Macro recording (→31)
	[Level Shot]
	[Stabilizer]
	Jitter alert
	Focus (Lights green.) (→28)/ Recording state (Lights up in red.) (→43)
	Focus (Under low illumination)
	Wi-Fi connection status
	Bluetooth connection status (→56)
GPS	Location Logging
	Histogram

3

Name*1
Travel elapsed days*2
Age in years/months*1
Location*2
Current date/time*2
Travel destination setting*2:
Exposure meter
Zoom (→29)

4

	AF area
+	Spot metering target
+	[Center Marker]
	[Self Timer]
	[Zoom Mic]
	[Silent Mode]
AEL	AE Lock
	[Metering Mode]
	Program Shift
60	Shutter speed
F3.3	Aperture value
	Exposure compensation
	Exposure Bracket
	Brightness (exposure)
	Manual Exposure Assist
	ISO sensitivity

5

	[Dial Guide]
AWBc	White Balance
BKT AWB+	White Balance Bracket
	White Balance Fine Adjustment
	Coloring
98	Number of recordable pictures
r20	Maximum number of pictures that can be taken continuously
RXXmXXs	Available recording time

6

Touch tab

	Touch zoom
	Touch Shutter
	Touch AF
	[Touch AE]
	[Peaking]
	[Self Shot] (→35)

	Function buttons (→32)
	Coloring
	Defocus control function
	Brightness (exposure)
	Type of defocus ([Miniature Effect])
	[One Point Color]
	[Sunshine]
	Picture effect (Filter) adjustment display
	Picture effects ON or OFF
MINI	Picture effects (Filter)
F	Aperture value
SS	Shutter speed
ISO	ISO sensitivity
	Scene Guide Mode ([Soft Skin], [Slimming Mode])

*1 This is displayed for about 5 seconds when the camera is turned on if the [Profile Setup] setting is set.

*2 This is displayed for about 5 seconds when the camera is turned on, after setting the clock and after switching from Playback Mode to Recording mode.

- The information displayed, such as histograms, magnifications, and numeric values, are only for the purpose of reference.

Q&A Troubleshooting

- Performing [Reset] in the [Setup] menu may resolve the issue.
- Further information is provided in the “Owner’s Manual for advanced features (PDF format)”. Check it together with the information in this section.

The charging lamp blinks.

- Charging is being performed in a place with extremely high or low temperature.
→ **Reconnect the USB connection cable and retry charging in a place where ambient temperature is 10 °C to 30 °C (50 °F to 86 °F) (temperature conditions also apply to the battery itself).**
- Charging is not possible if the power supply capacity of the computer is low.

Camera does not work even if the camera is turned on. Camera switches off as soon as the camera is turned on.

- Battery needs recharging.
→ Charge the battery. (→21)
- [Power Button(At Power ON)] is set to [LONG-PRESS].
→ If you set it to [SHORT-PRESS], you can turn on the camera by briefly pressing the camera [ON/OFF] button. (→26)

Multiple pictures are taken when I press the shutter button just once.

Check the following settings. If any of them apply, multiple pictures will be taken.

- Drive Mode is set to other than [Single].
→ Set Drive Mode to [Single].
- Bracket recording is set.
→ If any of the [BKT] icons (ex. [ ±0], [ ±1], etc.) is displayed on the screen, bracket recording is set. Under [Bracket] in the [Rec] menu, set [Bracket Type] to [OFF].

Focus not aligned correctly.

- Subject outside of focus range.
- [Focus/Release Priority] is set to [RELEASE]. (→48)
- [Shutter AF] is set to [OFF]. (→48)
- AF Lock is set inappropriately.
- If there are fingerprints or dirt on the lens, the focus may be set to the lens and not the subject.

Subject appears skewed in pictures.

- If you take a picture of a moving subject in the electronic shutter mode, motion picture recording mode, or 4K photo recording mode, the subject in the picture may be skewed in some cases. This is characteristic of MOS sensors which serve as the camera's pickup sensors. This is not a malfunction.

No flash emitted.

- The flash becomes unavailable in the following cases.
 - Flash set to [Ⓢ] (Forced Flash Off).
- Set [Shutter Type] to [AUTO] or [MSHTR]. (→47)
- Set [Silent Mode] to [OFF]. (→47)

Striping or flicker may appear under lighting such as fluorescent lighting and LED lighting fixture.

- This is a characteristic of MOS sensors which serve as the camera's pickup sensors. This is not a malfunction.
- If you are taking still pictures using the electronic shutter, the striping may be reduced by setting a slower shutter speed.
- When noticeable flicker or striping is seen under lighting such as a fluorescent or LED lighting fixture in the motion picture recording mode, you can reduce the flicker or striping by setting up [Flkr Decrease] (→47) and fixing the shutter speed. You can set the shutter speed manually in the Creative Video Mode. (→27)

A connection cannot be established. Radio waves get disconnected. (Wi-Fi)

- Bring the device (smartphone, etc.) you want to connect to closer to the camera to communicate. (The communication distance varies greatly depending on the usage environment, etc.)
- If any device, such as a microwave oven, cordless phone, etc., that uses 2.4 GHz frequency are used nearby this unit simultaneously, radio waves may get interrupted.
→ Use them sufficiently away from the device.
- If the device (smartphone, etc.) you want to connect to is connected to a wireless access point other than the camera, you will not be able to connect the device to the camera. Change the Wi-Fi settings of the device you want to connect to so that the access point to be used is set to the camera.
- When the battery indicator is flashing red, the connection with other equipment may not start or the connection may be disrupted. (A message such as [Communication error] is displayed.)
- When this unit is placed on a metal table or shelf, the connection may not be established easily because the camera is affected by radio waves. Use the camera away from metal surfaces.

The lens makes a clicking noise.

- When the camera is turned on or off, the lens is moved, or an aperture operation is performed, such a noise may be heard. This is not a malfunction.
- When the brightness changes after a zooming operation or moving the camera, the lens may make a noise while adjusting the aperture. This is not a malfunction.

Specifications

Digital Camera: Information for your safety

Power Source	DC 7.2 V (7.2 V ---)
Power	2.0 W (When recording)
Consumption	1.6 W (When playing back)

Camera effective pixels	Approx. 20,300,000 pixels
Image sensor	1/2.3" MOS sensor, total pixel number 21,100,000 pixels (Approx.) Primary color filter
Lens	Optical 30x zoom f=4.3 mm to 129 mm (35 mm film camera equivalent: 24 mm to 720 mm) Max. Wide: F3.3 to F8.0 Max. Tele: F6.4 to F8.0
Image Stabilizer	Optical method
Focus range	AF: 50 cm (1.6 feet) (Max. Wide)/ 2 m (6.6 feet) (Max. Tele) to ∞ AF Macro/MF/Intelligent Auto/Motion picture: 3 cm (0.098 feet) (Max. Wide)/ 2 m (6.6 feet) (Max. Tele) to ∞
Shutter system	Electronic shutter + Mechanical shutter
Minimum Illumination	Approx. 10 lx (when i-Low light is used, the shutter speed is 1/30th of a second)

Shutter speed	Still picture: 30 seconds to 1/2000th of a second (When the mechanical shutter is used and [Artistic Nightscapes] is selected as the Scene Guide Mode), 4 seconds to 1/2000th of a second (When the mechanical shutter is used, in cases other than the above), 1 second to 1/16000th of a second (When the electronic shutter is used) Motion picture: 1/2 second to 1/16000th of a second (When [Exposure Mode] is set to [M] in Creative Video Mode and [MF] is selected), 1/30th of a second to 1/16000th of a second (Other than the above)
Exposure (AE)	Program AE (P)/Aperture-priority AE (A)/ Shutter-priority AE (S)/Manual exposure (M) Exposure Compensation (1/3 EV steps, -5 EV to +5 EV)
Metering Mode	Multiple/Center weighted/Spot
Monitor	3.0" TFT LCD (3:2) (Approx. 1,843,200 dots) (field of view ratio about 100%) Touch screen
Flash	AUTO, AUTO/Red-Eye Reduction, Forced ON, Forced ON/Red-Eye Reduction, Slow Sync., Slow Sync./Red-Eye Reduction, Forced OFF

Microphones	Stereo
Speaker	Monaural
Recording media	SD Memory Card/SDHC Memory Card*/ SDXC Memory Card* * UHS-I UHS Speed Class 3
Recording file format	
Still picture	RAW/JPEG (based on Design rule for Camera File system, based on Exif 2.31 standard)
4K Photo	MP4
Motion picture	MP4
Audio compression format	AAC (2 ch)
Interface	
[HDMI]	Micro HDMI Type D
[USB/CHARGE]	USB 2.0 (High Speed)/USB Type-C®
Dimensions	Approx. 112.0 mm (W) × 67.8 mm (H) × 43.1 mm (D) [4.41" (W) × 2.67" (H) × 1.70" (D)] (excluding the projection part)
Mass (weight)	With card and battery: Approx. 322 g (0.71 lb) Excluding card and battery: Approx. 280 g (0.62 lb)
Operating temperature	0 °C to 40 °C (32 °F to 104 °F)
Operating humidity	10%RH to 80%RH
Language select	[ENGLISH] / [DEUTSCH] / [FRANÇAIS] / [ESPAÑOL] / [PORTUGUÊS] / [ITALIANO] / [繁體中文] / [日本語]

■ Wireless transmitter

Wireless LAN

Compliance standard	IEEE 802.11b/g/n (standard wireless LAN protocol)
Frequency range used (central frequency)	2412 MHz to 2462 MHz (1 to 11 ch)
Encryption method	Wi-Fi compliant WPA™/WPA2™
Access method	Infrastructure mode

Bluetooth function

Compliance standard	Bluetooth v5.0 (Bluetooth Low Energy (BLE))
Frequency range used (central frequency)	2402 MHz to 2480 MHz

■ AC adaptor

(Panasonic SAE0012A): Information for your safety

Input:	110 V – 240 V ~ 50/60 Hz 0.2 A
Output:	5 V === 1.0 A

■ Battery pack (lithium-ion)

(Panasonic DMW-BLG10PP): Information for your safety

Voltage/capacity:	7.2 V/1025 mAh
--------------------------	----------------

The symbols on this product (including the accessories) represent the following:

~	AC
===	DC
	Class II equipment (The construction of the product is double-insulated.)

Specifications are subject to change without notice.

Reading the Owner's Manual (PDF format)

More detailed operating instructions are available in "Owner's Manual for advanced features (PDF format)". To read it, download it from the website.

<https://panasonic.jp/support/dsc/oi/TZ99/index.html>



- Click the desired language.
- You will need Adobe Reader to browse or print the Owner's Manual (PDF format). You can download and install a version of Adobe Reader that you can use with your OS from the following website. (As of December 2024)
<http://www.adobe.com/products/acrobat/readstep2.html>

Limited Warranty (ONLY FOR U.S.A.)

Panasonic Products Limited Warranty

Limited Warranty Coverage (For USA Only)

If your product does not work properly because of a defect in materials or workmanship, Panasonic Corporation of North America (referred to as “the warrantor”) will, for the length of the period indicated on the chart below, which starts with the date of original purchase (“warranty period”), at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

Product or Part Name	Parts	Labor
Digital Camera	1 Year	1 Year
All included Accessories (Except Non-Rechargeable Batteries)	90 Days	Not Applicable
Only Non-Rechargeable Batteries	10 Days	Not Applicable

During the “Labor” warranty period there will be no charge for labor. During the “Parts” warranty period, there will be no charge for parts. This Limited Warranty excludes both parts and labor for non-rechargeable batteries, antennas, and cosmetic parts (cabinet). This warranty only applies to products purchased and serviced in the United States. This warranty is extended only to the original purchaser of a new product which was not sold “as is”.

Mail-In Service--Online Repair Request

Online Repair Request

To submit a new repair request and for quick repair status visit our Web Site at <http://shop.panasonic.com/support>.

When shipping the unit, carefully pack, include all supplied accessories listed in the Owner's Manual, and send it prepaid, adequately insured and packed well in a carton box. When shipping Lithium Ion batteries please visit our Web Site at <http://shop.panasonic.com/support> as Panasonic is committed to providing the most up to date information. Include a letter detailing the complaint, a return address and provide a daytime phone number where you can be reached. A valid registered receipt is required under the Limited Warranty.

IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD, THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Limited Warranty Limits and Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, or rental use of the product, or service by anyone other than a Factory Service Center or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE".

THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.

(As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but for illustration only.)

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to:

Panasonic Corporation of North America
Consumer Affairs Department
Two Riverfront Plaza
Newark NJ 07102-5490

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

Product registration is not mandatory. Failure to complete the form does not affect the consumer's warranty rights.

Shop **Accessories!**

for all your Panasonic gear

Go to

<http://shop.panasonic.com/support>

Get everything you need to get the most out of
your Panasonic products

Accessories & Parts for your Camera, Phone, A/V
products, TV, Computers & Networking, Personal
Care, Home Appliances, Headphones, Batteries,
Backup Chargers & more...

Customer Services Directory

For Product Information, Operating Assistance,
Parts, Owner's Manuals, Dealer and Service info
go to <http://shop.panasonic.com/support>

For the hearing or speech impaired TTY: 1- 855-497-2056

As of January 2026

Limited Warranty (ONLY FOR CANADA)

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

PANASONIC PRODUCT – LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship under normal use and for a period as stated below from the date of original purchase agrees to, at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by Panasonic Canada Inc.

Digital Camera	One (1) year, parts and labour
Digital Camera Peripherals	One (1) year, parts and labour
Digital Camera Accessories	Ninety (90) days, parts and labour

This warranty is given only to the original purchaser, or the person for whom it was purchased as a gift, of a Panasonic brand product mentioned above sold by an authorized Panasonic dealer in Canada and purchased and used in Canada, which product was not sold “as is”, and which product was delivered to you in new condition in the original packaging.

**IN ORDER TO BE ELIGIBLE TO RECEIVE WARRANTY SERVICE
HEREUNDER, A PURCHASE RECEIPT OR OTHER PROOF OF DATE
OF ORIGINAL PURCHASE, SHOWING AMOUNT PAID AND PLACE OF
PURCHASE IS REQUIRED**

LIMITATIONS AND EXCLUSIONS

This warranty **ONLY COVERS** failures due to defects in materials or workmanship, and **DOES NOT COVER** normal wear and tear or cosmetic damage. The warranty **ALSO DOES NOT COVER** damages which occurred in shipment, or failures which are caused by products not supplied by Panasonic Canada Inc., or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, improper batteries, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, or rental use of the product, or service by anyone other than a Authorized Servicer, or damage that is attributable to acts of God.

Dry cell batteries, printer ink cartridge and paper are also excluded from coverage under this warranty.

Rechargeable batteries are warranted for ninety (90) days from date of original purchase.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY. (As examples, this warranty excludes damages for lost time, travel to and from the Authorized Servicer, loss of or damage to media or images, data or other memory or recorded content. This list of items is not exhaustive, but for illustration only.)

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable. This warranty gives you specific legal rights and you may have other rights which vary depending on your province or territory.

WARRANTY SERVICE

For product operation, repairs and information assistance, please visit our Support page:

www.panasonic.ca/english/support

- SDXC Logo is a trademark of SD-3C, LLC.
- The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- HDAVI Control™ is a trademark of Panasonic Holdings Corporation.
- Adobe is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.
- Pentium is a trademark of Intel Corporation in the U.S. and/or other countries.
- Windows is either registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- Mac and macOS are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc.
- Google, Android and Google Play are trademarks of Google LLC.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Panasonic Holdings Corporation is under license. Other trademarks and trade names are those of their respective owners.
- “Wi-Fi®” is a registered trademark of Wi-Fi Alliance®.
- “WPA™”, and “WPA2™” are trademarks of Wi-Fi Alliance®.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- Other names, company names, and product names mentioned in these instructions are trademarks or registered trademarks of the companies concerned.



Panasonic Corporation of North America

Two Riverfront Plaza, Newark, NJ 07102-5490

<http://shop.panasonic.com>

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga,
Ontario L4W 2T3

www.panasonic.com

© Panasonic Corporation 2024

Printed in Vietnam