 


STEP1 Connection with a television and video cassette recorder

The equipment connections described are examples.

Before connection, turn off all equipment and read the appropriate operating instructions.

Peripheral equipment and optional cables are sold separately unless otherwise indicated.

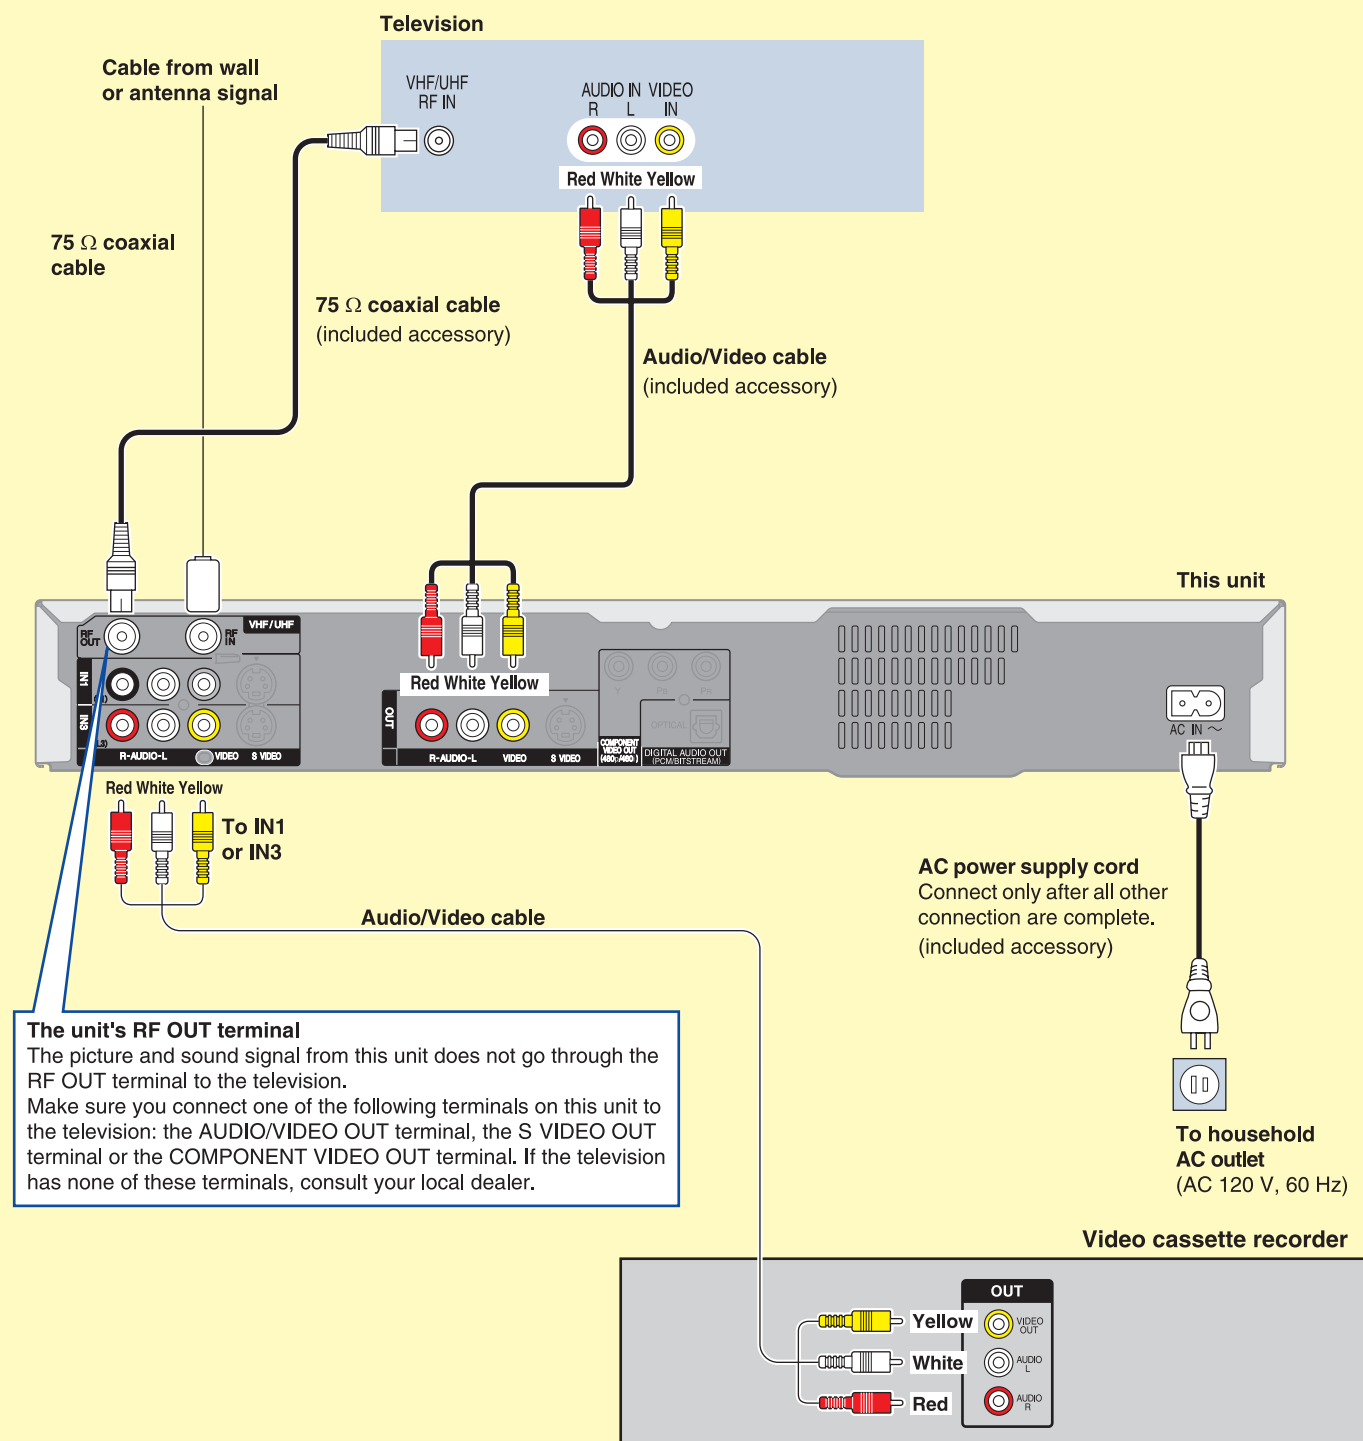

To view a menu

Preparation

- Turn on the television and select the appropriate video input to suit the connections to this unit.
- Turn the unit on.

STEP2 Disc information

What you can do on this unit (✓: Can do)


Disc type	DVD-RAM • 4.7 GB/9.4GB, 12 cm (5") • 2.8 GB, 8 cm (3")	DVD-R (DVD-Video format) • 4.7 GB, 12 cm (5") • 1.4 GB, 8 cm (3")	DVD-RW (DVD-Video format) • 4.7 GB, 12 cm (5") • 1.4 GB, 8 cm (3")	+R • 4.7 GB, 12 cm (5")
Logo				—
Recording	✓	✓	✓	✓
Playing back	✓	✓	✓	✓
Play on other players	✓ *	✓	✓	✓

*Only on DVD-RAM compatible players.


Only after finalizing the disc

STEP3 How to finalize

 
- While stopped
Press [FUNCTIONS].
- Press [▲,▼] to select “Other Functions” and press [ENTER].

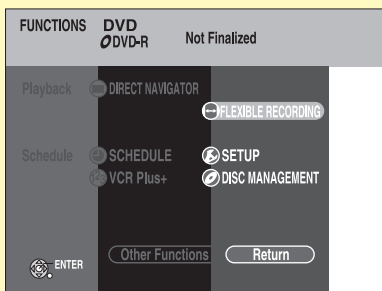

 - Press [▲,▼] to select “DISC MANAGEMENT” and press [ENTER].

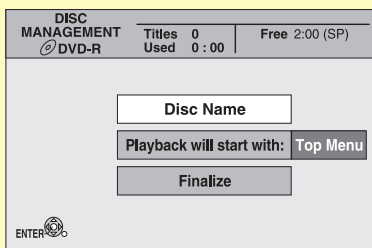


 - Press [▲,▼] to select “Playback will start with :” and press [ENTER].

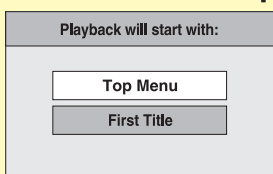


Press [▲,▼] to select “Top Menu” or “First Title” and press [ENTER].
You can select whether to show the top menu after finalizing.
Top Menu: The top menu appears first.
First Title: The disc content is played without displaying the top menu.

 - Press [▲,▼] to select “Finalize” and press [ENTER].

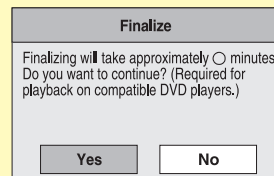

 - Press [◀,▶] to select “Yes” and press [ENTER].

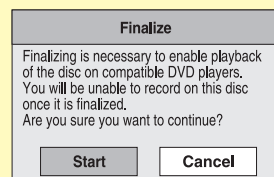

- Press [◀,▶] to select “Start” and press [ENTER].

A message appears when finished.

- Press [ENTER].

Note

When finalizing a high-speed recording compatible disc, it may take longer than displayed on the confirmation screen (approximately four times).

After finalizing

- **-R +R** The disc becomes play-only and you can no longer record or edit.
- **-RW(V)** You can record and edit the disc after formatting although it becomes play-only after finalizing.
- You cannot finalize DVD-R, DVD-RW (DVD-Video Format) or +R recorded on other manufacturers' equipment.