

Please read

• If you still have questions, visit our website!
➔ www.panasonic.ca

Discs you can record on

	DVD-RAM RAM RAM 4.7	DVD-R R R 4.7	DVD-R DL R R DL	DVD-RW R R W	+R	+R DL	+RW
Recording	Yes	Yes	Yes*	Yes	Yes	Yes*	Yes
Repeated recording	Yes	No	No	Yes	No	No	Yes
Copy-once recording (digital broadcasts)	Yes (CPRM compatible discs only)	No	No	No	No	No	No
Playing on other equipment	Yes (RAM compatible equipment only)	Yes	Yes	Yes	Yes	Yes	Yes


* You can record onto the second layer of dual- or double-layer discs after closing the first layer.

To play **DVD-R** **DVD-R DL** **DVD-RW** **+R** **+R DL** on other equipment,
Use the **Finalize** feature!


DVD-R, etc. recorded on this unit cannot be played on other players immediately after recording. Using the Finalize feature allows you to play these discs on other players. (However, once the disc is finalized you will no longer be able to record to the disc.)

Preparation: Insert the disc you want to finalize and stop play.

1 Display the Functions screen.

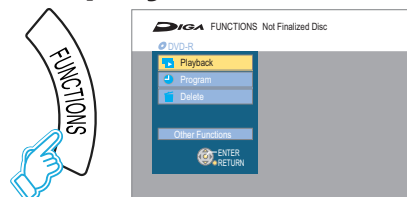

2 Display the Finalize screen.

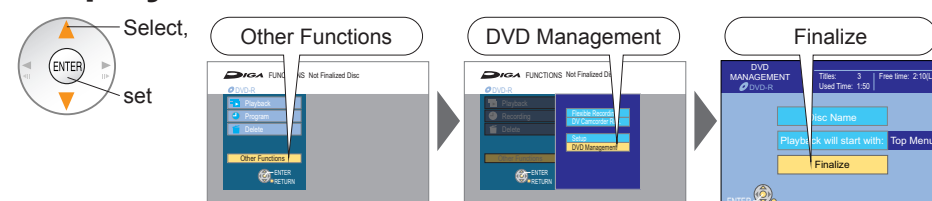

3 Follow the on-screen instructions to start finalizing.

• Finalizing takes up to 15 minutes.
(Do not disconnect the AC power supply cord while finalizing!)

Panasonic®

SET UP GUIDE


DMR-ES16



If you have any questions contact
1-800-561-5505


Connect and set as shown overleaf.

Let's begin!

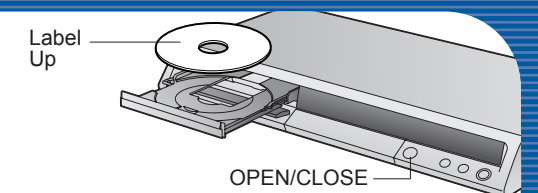


Record

1 Select the channel.

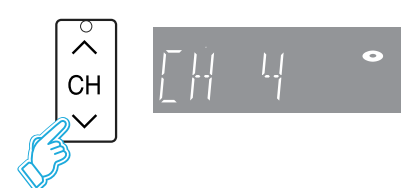

2 Select the picture quality.

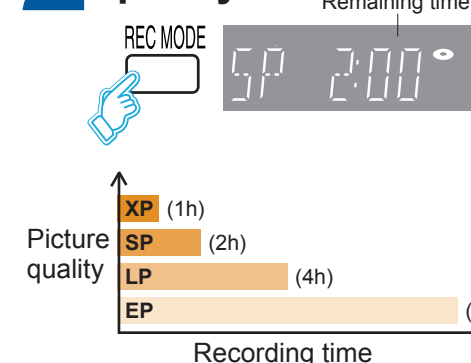


3 Start recording.




Play

1 Display the title view.

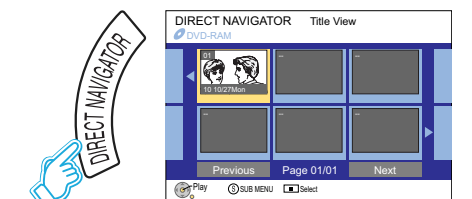

2 Start playing.

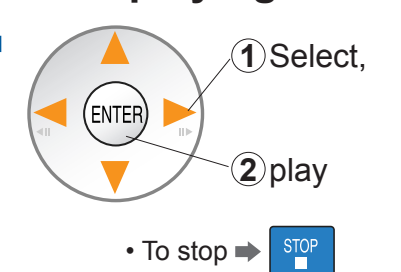


Information

• To play DVD-R, DVD-R DL, DVD-RW, +R, +R DL on other equipment
➔ Finalize them on this unit first ("Please read")

Connection


- Other connections (when you also want to record the television programs with a VCR, etc.).
➔ Operating Instructions (P.8 – 11).

With a TV and VCR

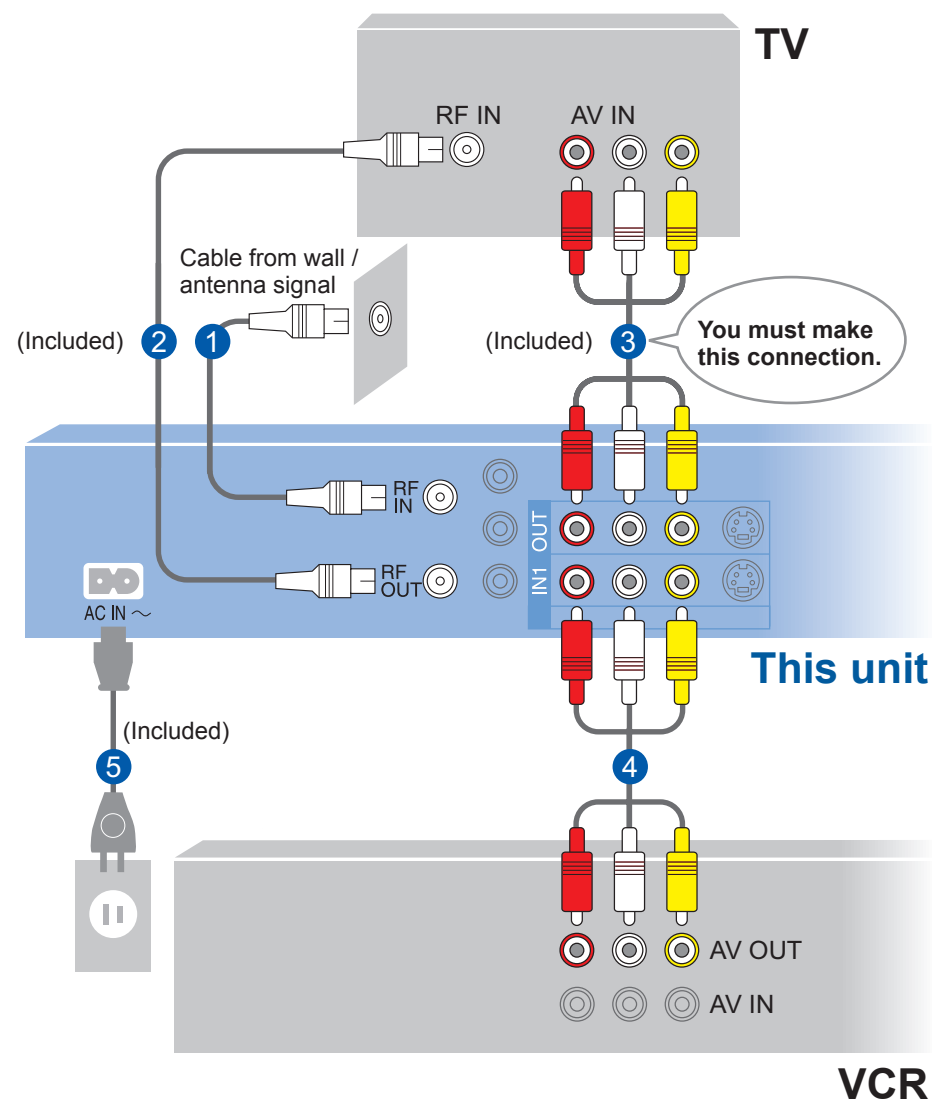


■ If your TV does not have AV terminals

(Instead of 2 and 3)

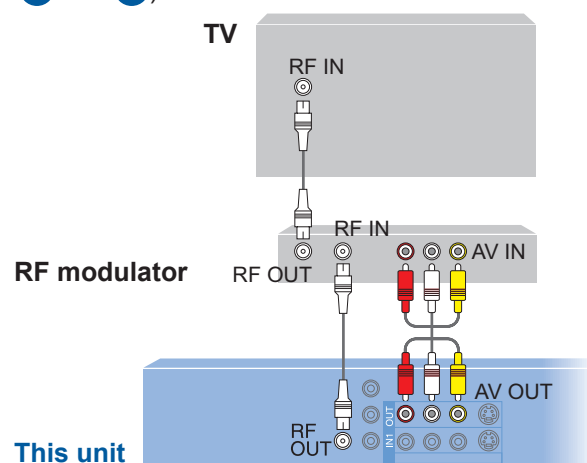


With a TV and cable box or satellite receiver

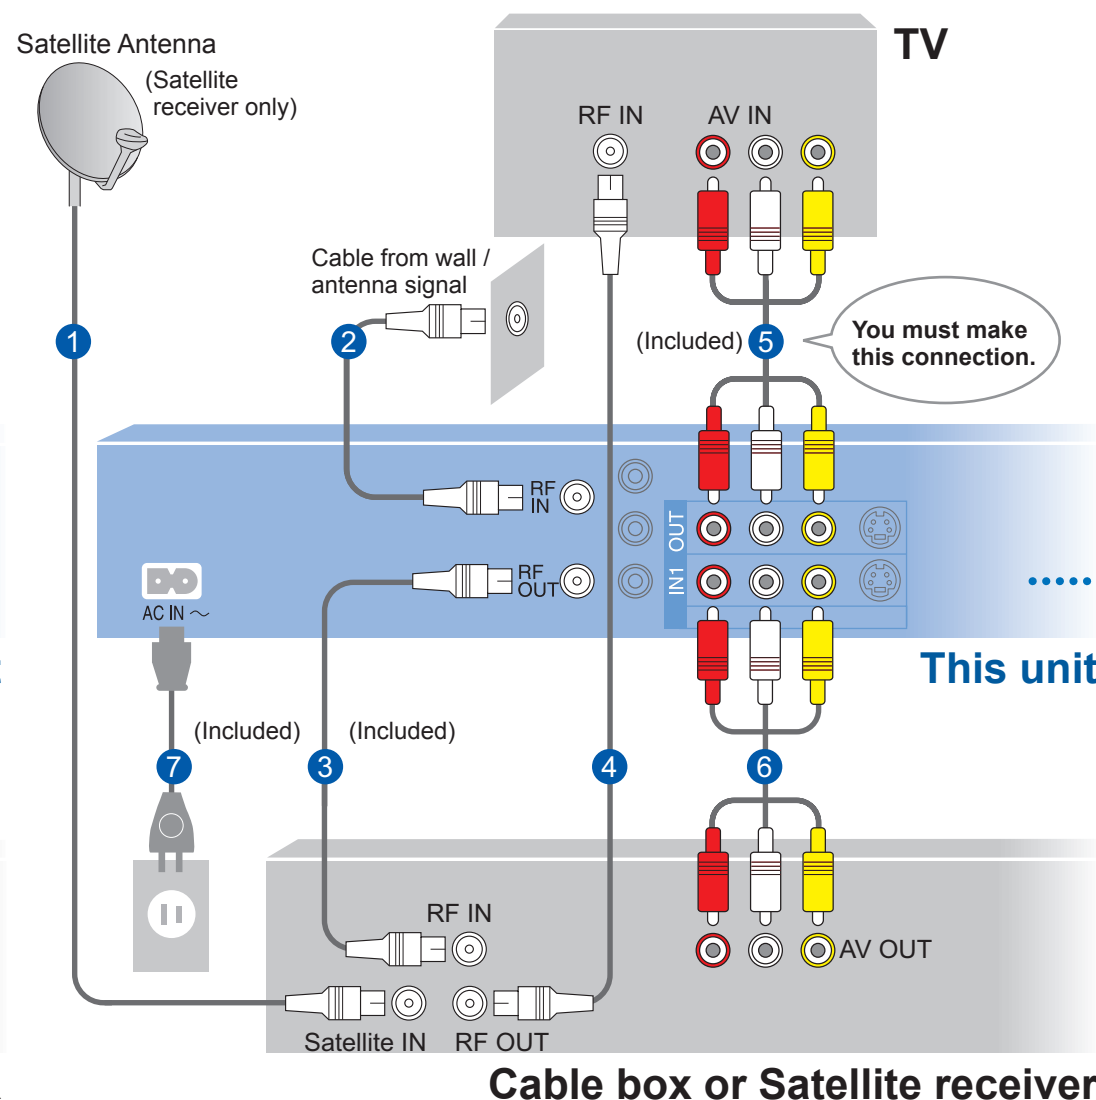


■ If your TV does not have AV terminals

(Instead of 4 and 5)

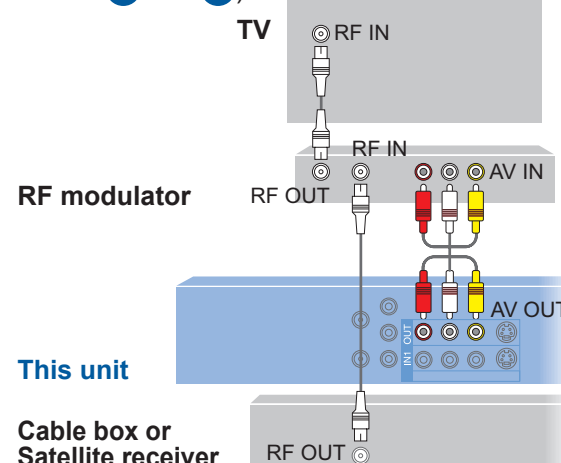

If you connect a VCR,

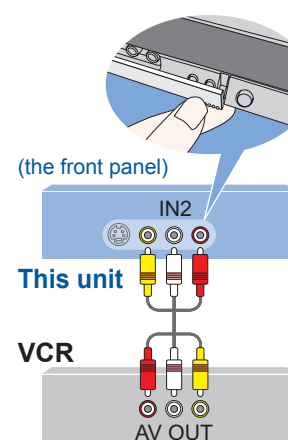

Setting

Preparing the TV

On your TV's remote control

1 Turn the TV on.


2 Switch input to "Video 1" etc.

e.g. the TV/VIDEO or INPUT button

3 Turn this unit on.





4 Select the language.

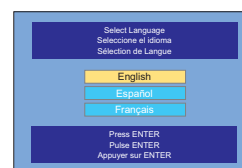


• If you make a mistake, press RETURN.

 5 Select the type of TV you are using.

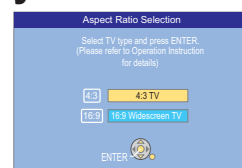

6 Select "On".

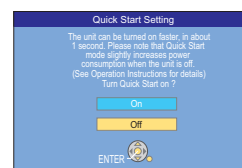


7 Select "Internal TV Tuner".



8 Complete the settings.

(If time is displayed ...)

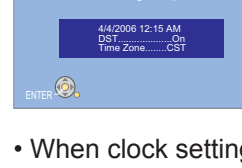

• When clock setting screen appears.

