

 
Important Information Guide

Multi-Function Printer


Model No. **KX-MB2000C**
KX-MB2010C
KX-MB2030C

Do NOT connect the unit to a computer with the USB cable until prompted to do so during the setup of Multi-Function Station (CD-ROM).

1

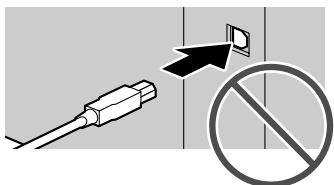

2

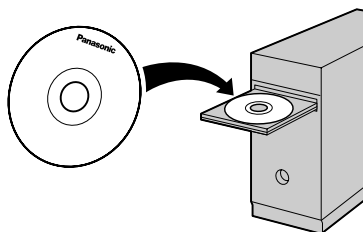 

Accessory information:

To ensure that the unit operates properly, we recommend the use of Panasonic toner and drum cartridges.

■ Replacement accessory

- Toner cartridge
 - Model No. (Part No.): KX-FAT411A/
KX-FAT411C
- Drum cartridge
 - Model No. (Part No.): KX-FAD412A/
KX-FAD412C

The supplied Setup CD-ROM provides the Operating Instructions in PDF format with a detailed description on how to use the unit. Adobe® Reader® is required to view them. Please read before using the unit and save the CD-ROM for future reference.

You can select the English or French language.

The display and reports will be in the selected language. The default setting is English. If you want to change the setting, see the operating instructions (feature #110).

**For assistance, please call
1-800-263-5008 or visit us at
www.panasonic.ca**

User record (for your future reference)

Date of purchase

Serial number (found on the rear of the unit)

Dealer's name and address

Dealer's telephone number

Attach your sales receipt here.

|

in part, is prohibited without the written consent of
Panasonic System Networks Co., Ltd.

© Panasonic System Networks Co., Ltd. 2010

Table of Contents

1.1 For your safety	3
1.2 Important safety instructions	5
1.3 Illegal copies	5
1.4 Turning the power switch ON	6
1.5 Selecting the operation mode (Scan/ Copy) (Fax: KX-MB2030 only)	6
1.6 Setting the original	6
1.7 Display messages	7
1.8 Limited Warranty	8
1.9 Important Information	9

Note:

- Save the original carton and packing materials for future shipping and transportation of the unit.
- After unpacking the product, take care of the packing materials and/or power plug cap appropriately.
- The suffix in the model number will be omitted in these instructions.
- Most illustrations shown in these instructions are based on a KX-MB2000.

Caution:

- **When you operate this product, the power outlet should be near the product and easily accessible.**

ENERGY STAR:

- As an ENERGY STAR® Partner, Panasonic has determined that this product meets the ENERGY STAR guidelines for energy efficiency. ENERGY STAR is a U.S. registered mark.

**Trademarks:**

- Adobe and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- All other trademarks identified herein are the property of their respective owners.

Copyright:

- This material is copyrighted by Panasonic System Networks Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or

1.1 For your safety

To prevent severe injury and loss of life/property, read this section carefully before using the unit to ensure proper and safe operation of your unit.

- The following symbols are used to classify and describe the level of hazard and injury caused when the denotation is disregarded and improper use is performed.



WARNING

Denotes a potential hazard that could result in serious injury or death.



CAUTION

Denotes hazards that could result in minor injury or damage to the unit.

- The following symbols are used to classify and describe the type of instructions to be observed.



This type of symbol is used to alert users to a specific operating procedure that must be performed carefully.



This type of symbol is used to alert users to a specific operating procedure that must not be performed.



This type of symbol is used to alert users to a specific operating procedure that must be emphasized in order to operate the unit safely.



WARNING

Power and ground connection



Unplug this unit from power outlets if it emits smoke, an abnormal smell or makes unusual noise. These conditions can cause fire or electric shock. Confirm that smoke has stopped and contact an authorized service centre.



Use only the power source marked on the unit. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.



For safety purposes this unit is equipped with a grounded plug. If you do not have this type of outlet, please have one installed. Do not defeat this safety feature by tampering with the plug.



Do not place objects on the power cord. Install the unit where no one can step or trip on the cord.



Do not overload power outlets and extension cords. This can result in the risk of fire or electric shock.



Completely insert the AC adaptor/power plug into the power outlet. Failure to do so may cause electric shock and/or excessive heat resulting in a fire.



Regularly remove any dust, etc. from the AC adaptor/power plug by pulling it from the power outlet, then wiping with a dry cloth. Accumulated dust may cause an insulation defect from moisture, etc. resulting in a fire.



Never touch the plug with wet hands. There is a danger of electric shock.

Installation



Place the unit securely on a stable, level surface. Serious damage and/or injury may result if the unit falls.



To prevent the risk of fire or electrical shock, do not expose this product to rain or any type of moisture.



Make sure that the unit is installed in a well ventilated room so as not to increase density of ozone in the air. Since ozone is heavier than air, it is recommended that air at floor level be ventilated.

Operating safeguards



Turn the power switch OFF before cleaning. Do not use liquid or aerosol cleaners.



Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating. Never place the unit near radiators, or in a place where proper ventilation is not provided.

1. Important Information



Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.



To reduce the risk of electric shock, do not disassemble this unit. Take the unit to an authorized service centre when service is required. Opening or removing covers may expose you to dangerous voltage or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.



Follow all warnings and instructions marked on this unit.



Do not spill liquids (detergents, cleansers, etc.) onto the telephone line cord plug, or allow it to become wet at all. This may cause a fire. If the telephone line cord plug becomes wet, immediately pull it from the telephone wall jack, and do not use (KX-MB2030 only).



Unplug this unit from power outlets and refer servicing to an authorized service centre when any of the following conditions occur:

- If the power cord is damaged or frayed.
- If the unit has been exposed to rain or water, or liquid has been spilled into the unit. Do not use a microwave oven to speed up the drying process of any parts of the unit to avoid permanent damage.
- If the unit does not work normally by following the operating instructions. Adjust only controls covered by the operating instructions. Improper adjustment may require extensive work by an authorized service centre.
- If the unit has been dropped or physically damaged.
- If the unit exhibits a distinct change in performance.

USB cable/LAN cable



To assure continued emission limit compliance;

- use only shielded USB cable (Example: Hi-Speed USB 2.0 certified cable).
- use only shielded LAN cable (category 5 straight cable).



CAUTION

Installation and relocation



After moving the unit from cold areas to warmer areas, wait approximately 30 minutes before turning on the power switch to allow the unit to adjust to the ambient temperature. If the power switch is turned on too soon after a sudden climate change, condensation may form inside the unit, causing malfunction.



Never turn the unit upside down or sideways when moving it.



Never install telephone wiring during a lightning storm (KX-MB2030 only).



Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations (KX-MB2030 only).



Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface (KX-MB2030 only).



Use caution when installing or modifying telephone lines (KX-MB2030 only).



 
Do not position the unit in a location where it is unstable or subject to vibrations.

Operating safeguards



When opening/closing the top cover, hold the indentations on both sides of the unit (①).

- To prevent injuries, be careful not to put your hands under the top cover.

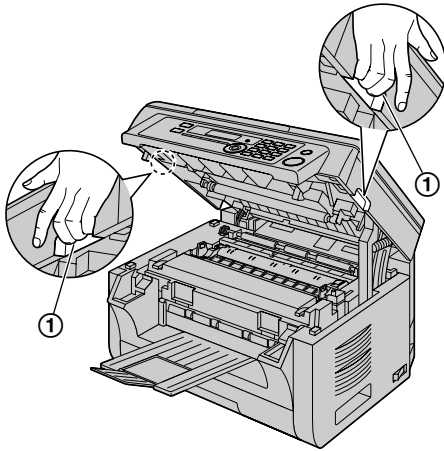

Toner cartridge

Avoid ingestion, inhalation, eye or skin contact.

- If ingestion occurs, drink several glasses of water to dilute stomach contents.
- If inhalation occurs, exit the area immediately into the fresh air.
- If skin contact occurs, wash thoroughly with soap and cold water, then air dry. Do not use hot water or hair dryer.
- If eye contact occurs, flush thoroughly with water.
- In all cases, seek medical treatment if adverse symptoms occur.



1.2 Important safety instructions

When using this unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Do not use this unit near water, for example near a bathtub, wash bowl, kitchen sink, etc.
2. During thunderstorms, avoid using telephones except cordless types. There may be a remote risk of an electric shock from lightning (KX-MB2030 only).
3. Do not use the telephone of this unit (if so equipped) to report a gas leak, when in the vicinity of the leak (KX-MB2030 only).

SAVE THESE INSTRUCTIONS

1.3 Illegal copies

- **It is unlawful to make copies of certain documents.**

Copying certain documents may be illegal in your country. Penalties of fines and/or imprisonment may be imposed on those found guilty. The following are examples of items that may be illegal to copy in your country.

- Currency
- Bank notes and cheques
- Bank and government bonds and securities
- Passports and identification cards
- Copyright material or trademarks without the consent of the owner
- Postage stamps and other negotiable instruments

This list is not inclusive and no liability is assumed for either its completeness or accuracy. In case of doubt, contact your legal counsel.

Laser radiation



The printer of this unit utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

See the operating instructions for the Laser diodes properties.

LED light

CLASS 1 LED PRODUCT



Do not view directly with optical instruments.

See the operating instructions for the CIS's LED light properties.

Fuser unit



During or immediately after printing, the fuser unit gets hot. This is normal. Do not touch the fuser unit.

Note:

- The area near the output tray may also get warm. This is normal.

 
1. Important Information

Notice:

- Install your machine near a supervised area to prevent illegal copies from being made.


1.4 Turning the power switch ON

Turn the power switch to the ON position (①).

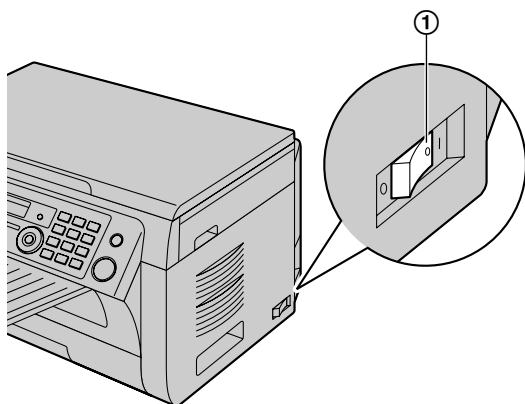


1.5 Selecting the operation mode (Scan/Copy) (Fax: KX-MB2030 only)

 You can select the desired mode by pressing one of the following buttons.

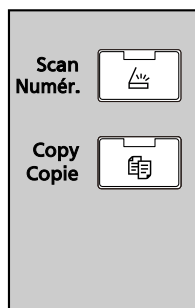

KX-MB2000
KX-MB2010

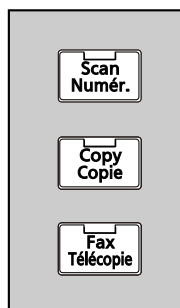 


KX-MB2030

- **[Scan]:** Select this mode when using the unit as a scanner.
- **[Copy]:** Select this mode when using the unit as a copier.
- **[Fax]** (KX-MB2030 only): Select this mode when using the unit as a fax machine.


1.6 Setting the original

 1.6.1 Using the scanner glass

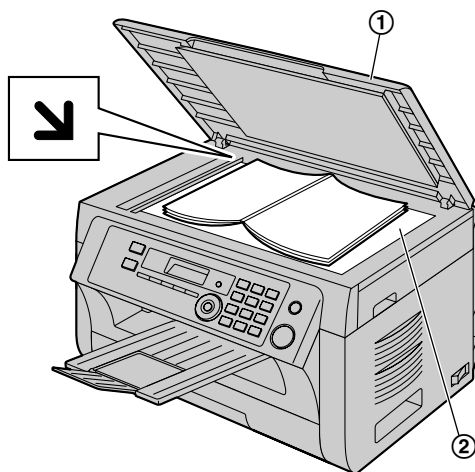

- 1 Open the document cover (①).
- 2 Place the document **FACE DOWN** on the scanner glass (②), aligning the top left of the document with the corner where the ↙ mark is positioned.
- 3 Close the document cover.

 1.6.2 Using the automatic document feeder (KX-MB2010/KX-MB2030 only)

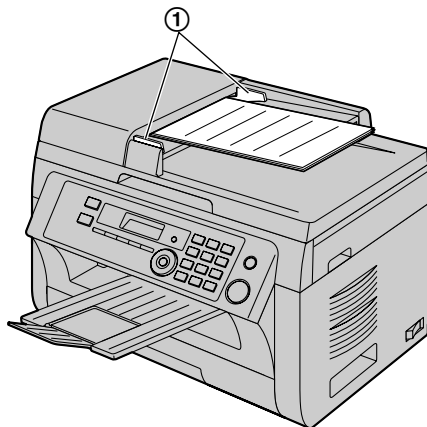

* The pictured model is KX-MB2010.

- 1 Insert the document (up to 20 pages) **FACE UP** into the feeder until a single beep is heard.
- 2 Adjust the width of the document guides (①) to fit the actual size of the document.

1.7 Display messages

To indicate the unit's status, one or more of the following messages will appear on the display. See the operating instructions for details.

- "CALL SERVICE"
- "CHANGE DRUM"
- "CHECK DOCUMENT"
- "CHECK DRUM"
- "CHECK PAPER #1"
- "CHECK PAPER TRAY #1"
- "CHECK PICK UP INPUT TRAY #2"
- "CHECK REAR COVER"
- "COOL DOWN FUSER"
- "DRUM LIFE LOW REPLACE SOON"
- "EMAIL SIZE OVER"
- "FAX IN MEMORY"
- "FILE SIZE OVER"
- "KEEP COPYING"
- "LOW TEMP."
- "MEMORY FULL"
- "MODEM ERROR"
- "NO FAX REPLY"
- "OUT OF PAPER INPUT TRAY #2"
- "PAPER IN TRAY #2"
- "PAPER JAMMED"
- "OPEN TOP COVER"
- "PC FAIL OR BUSY"
- "PHONEBOOK FULL"
- "PLEASE WAIT"
- "REDIAL TIME OUT"
- "REMOVE DOCUMENT"
- "REMOVE PAPER IN INPUT TRAY #2"
- "REPLACE DRUM CHANGE SUPPLIES"
- "RX MEMORY FULL"
- "SCANNER POSITION ERROR"
- "TONER EMPTY"
- "CHANGE SUPPLIES"
- "TONER LOW"
- "CHANGE SUPPLIES"
- "TOP COVER OPEN"
- "TRANSMIT ERROR"

1.8 Limited Warranty

Panasonic Canada Inc.

5770 Ambler Drive, Mississauga, Ontario L4W 2T3

PANASONIC PRODUCT - LIMITED WARRANTY

Panasonic Canada Inc. warrants this product to be free from defects in material and workmanship under normal use and for a period as stated below from the date of original purchase agrees to, at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by Panasonic Canada Inc.

All-In-One (AIO) Product - One (1) year, parts and labour

This warranty is given only to the original purchaser, or the person for whom it was purchased as a gift, of a Panasonic brand product mentioned above sold by an authorized Panasonic dealer in Canada and purchased and used in Canada, which product was not sold "as is", and which product was delivered to you in new condition in the original packaging.

IN ORDER TO BE ELIGIBLE TO RECEIVE WARRANTY SERVICE HEREUNDER, A PURCHASE RECEIPT OR OTHER PROOF OF DATE OF ORIGINAL PURCHASE, SHOWING AMOUNT PAID AND PLACE OF PURCHASE IS REQUIRED.

LIMITATIONS AND EXCLUSIONS

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by Panasonic Canada Inc., or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, misadjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, introduction of sand, humidity or liquids, or service by anyone other than a Authorized Servicer, or damage that is attributable to acts of God.

Consumables or Limited Life Items. Items such as Drum Cartridge, Toner Cartridge, Waste Toner Cartridge, Fuser Unit, Paper Feed Rollers, will require replacement due to normal wear and tear, and are warranted for ninety (90) days from product purchase and their respective rated life.

THIS EXPRESS, LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT WILL PANASONIC CANADA INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY. (As examples, this warranty excludes damages for lost time, travel to and from the Authorized Servicer, loss of or damage to media or images, data or other memory or recorded content. This list of items is not exhaustive, but for illustration only.)

In certain instances, some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or the exclusion of implied warranties, so the above limitations and exclusions may not be applicable. This warranty gives you specific legal rights and you may have other rights which vary depending on your province or territory.

WARRANTY SERVICE

For product information assistance, please contact Panasonic Support Centre:

Telephone #: 1-800-263-5008 (hours of operation 9:00am – 5:00pm Eastern Time, Mon-Fri)

Fax #: (905) 602-4509

Email:oss@ca.panasonic.com

TO OBTAIN MANUFACTURER'S WARRANTY SERVICE

An Authorization Number must be obtained from Panasonic Support centre

1.9 Important Information

SAFETY PRECAUTIONS

This unit may only be connected to electrical outlets that supply 120 V AC.

NOTICE:

This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, "IC:", before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure, for their own protection, that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION:

Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTICE:

The **Ringer Equivalence Number (REN)** assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

The Ringer Equivalence Number of This Unit:
(found on the rear of the unit)

Panasonic Canada Inc.
5770 Ambler Drive, Mississauga, Ontario L4W 2T3
www.panasonic.ca



MB2000C

PNQW2373ZA CM0610YH0

1/2

Printed in Malaysia