

Panasonic

Your new
HomeChef® 4-in-1
Multi-Oven comes with
a 3-year warranty!

To activate, register your product by
scanning the QR code below, or visit
<https://panasonic.registria.com/>



Quick Start and Cooking Guide

Home**CHEF**® 4-in-1 Countertop Multi-Oven

CONNECTS WITH
fresco®

Air Fryer • Convection Bake Oven • FlashXpress Broiler • Inverter Microwave Oven



*"I want to make healthy meals for my family,
but I need choices that are fast and easy."*

Enjoy everyday healthy cooking that won't take time away from what matters most.
Say hello to the **HomeChef® 4-in-1**, made even better with the **Panasonic Kitchen+ app**.

HomeCHEF lets you air fry, bake, broil and microwave your way to better results,
guided at each step by a smart cooking assistant in the Panasonic Kitchen+ app.

Use these four methods individually for delicious foods and snacks, or in combination
for fast, healthy, nutritious meals for the whole family.

Reclaim quality family mealtime with the Panasonic Kitchen+ app.

Scan to learn more about the HomeCHEF 4-in-1
and the Panasonic Kitchen+ app

 


Get the most from every meal with the **Panasonic Kitchen+** app

**Panasonic
KITCHEN+**


Introducing **Panasonic Kitchen+**, powered by Fresco, the smart cooking app that lets you spend less time in the kitchen and more time around the table. From easy step-by-step instructions to recipes that adapt to get more from your appliance, you can easily create meals that your family will love.

Now available on the HomeChef 4-in-1 multi-oven.

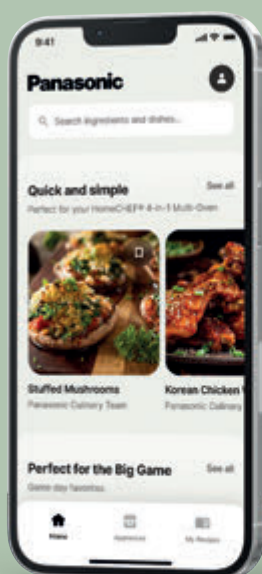

Find the perfect recipe
for your family

 100s of tried & tested recipes
Frequent & seasonal updates
Appliance-specific recipes

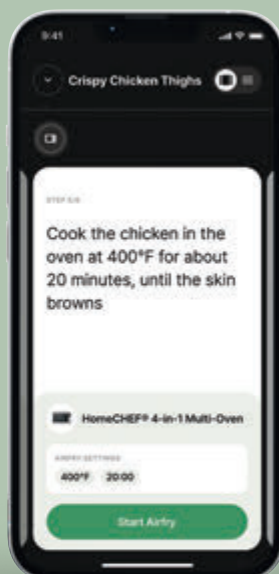

Enjoy simplified steps
with even better results

An easy step-by-step guide
Automatic cooking settings
Timely cooking notifications



Reclaim precious moments
around the dinner table

Shortcuts for weekly favorites
One-tap control for easy dishes
Real-time updates from anywhere

**Panasonic
KITCHEN+**

 
Panasonic Kitchen+

Scan me to get started...



Getting Started

With four distinct cooking methods, the **Panasonic HomeCHEF 4-in-1 Countertop Multi-Oven** offers a whole new world of culinary adventure—complete with customized accessories to make every menu item a masterpiece.

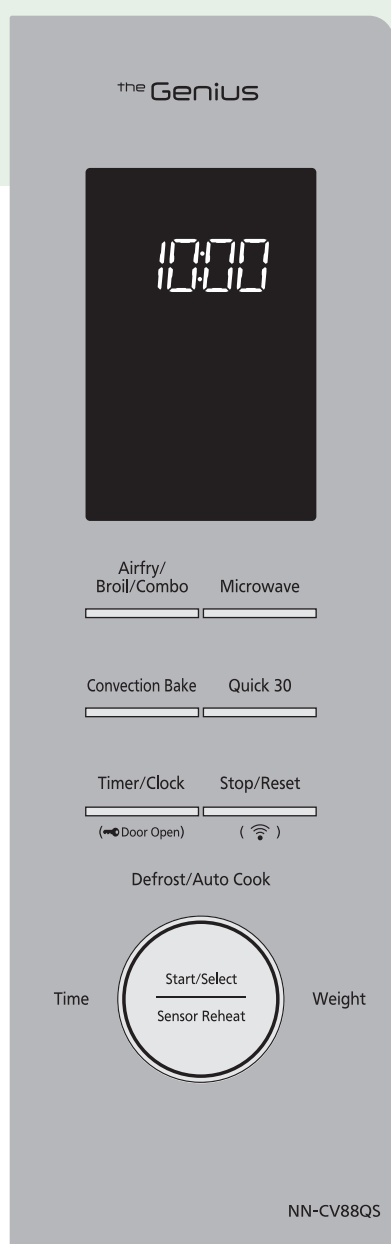

Included Accessories

Airfry Basket

- Airfry

Wire Rack

- Airfry
- Broil
- Convection Bake
- Combination Cooking

Enamel Tray

- Airfry
- Broil
- Convection Bake
- Combination Cooking



Setting the Clock

1. With the oven on standby, press **Timer/Clock** 2x.
The colon (:) will start to blink
2. Set time by **turning the dial**
Time appears in the display window—the colon will continue to flash
3. Press **Timer/Clock** to finish setting—the colon will stop blinking


- To reset clock, repeat steps 1-3 above
- The clock will retain the time of day as long as the oven is plugged in and electricity is supplied
- The clock is a 12-hour display
- Oven will not operate while the colon (:) is flashing

Quiet Mode

Sometimes you want peace and quiet—our quiet mode takes the beeps out of button pushes and cooking signals.

To enable quiet mode:

1. Press **Start/Select** 3x. BEEP ON/OFF will scroll across the display window.
The oven is defaulted to BEEP ON
2. Press **Timer/Clock** 1x and the mode will change to BEEP OFF
3. Press the **Stop/Reset** button to exit

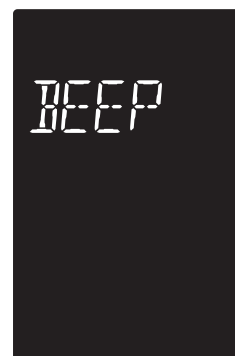

Please refer to the operation manual for full instructions and safety details.

Cooking Methods



Microwave



Microwave with Inverter Technology

With the distinct advantage of Inverter Technology, you can not only quickly and thoroughly cook everything from frozen snacks and tasty omelets to soups, sauces, side dishes and more, but also poach, braise and steam foods to perfection, all while preserving the essential vitamins and nutrients you want in your meals.



Airfry/
Broil/Combo




Press 1-3x

Air Fry

The Airfry function quickly circulates hot air around food to produce crispy, browned results. Air fried foods are healthier than deep fried foods because they need less oil to produce a similar taste and texture. Simply set the temperature, **no pre-heating required**.

 Use with



Convection Bake



Press 1x

Convection Bake

Now you can use your microwave as a second oven! The convection bake function circulates hot air throughout the oven for fast, easy cooking. Temperature ranges from 215°F to 425°F. Preheating is optional.

Use with



Airfry/
Broil/Combo



Press 4-5x

FlashXpress™ Broil

Utilizing dual, high-efficiency quartz heating elements in the oven's interior, this unique process is perfect for heating, browning and crisping mac and cheese, au gratins, thin slices of meat, seafood and more, including bread and meals. Select from two power levels. **No pre-heating required**.

Use with



Airfry/
Broil/Combo



Press 6x

Press 7x

Combination Cooking


Combo 1: Broil + Microwave. Ideal for dishes which require a crispy top layer, like casseroles, broiled meats and vegetables.

Combo 2: Convection + Microwave. Perfect for cooking frozen foods like chicken wings, frozen nuggets, pizza, entrees and more.

Use with




 Additional Features

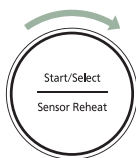


Genius Auto/Sensor Cook

 With the Genius Sensor, it's easy to make great snacks. Take popcorn for instance. Simply place the microwave popcorn bag into the oven, turn the control dial to "Popcorn" setting and press start. The oven senses bag size and automatically sets the optimum time for perfectly popped kernels.

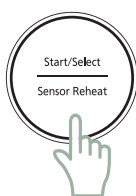


One Push Reheating

 Every ingredient has its own ideal cooking temperature... the one that naturally brings out its true flavor, texture and nutritional value. With just a touch of the Sensor Reheat button, the **Home Chef 4-in-1 Multi-Oven** monitors the amount of steam generated by the dish, then automatically sets and adjusts the time to avoid over-or-undercooking.

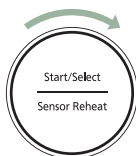


Turbo Defrost

 Turbo Defrost thaws and prepares frozen foods for even, more efficient cooking. Utilizing a smart microwave sequencing system based on the Inverter's continuous-power delivery, Turbo Defrost also protects and preserves food's flavor, texture and nutrients—no frozen centers or cooked edges.

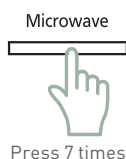

Keep Warm Feature

 Keep prepared foods, like dinner rolls, vegetables, soups, hors d'oeuvres, gravies, sauces and desserts, warm and ready to serve for up to 30 minutes after cooking.

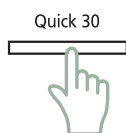

Quick 30

Set or add cooking time in 30-second increments to heat beverages, snacks and leftovers, or add a little extra cooking time when needed.

Presets and Cooking Mode Reference

Auto Presets



We created 21 preset programs for popular prep tasks and dishes, so you can get cooking with a simple twist of the dial.

- | | | |
|--------------------|-------------------|------------------------------------|
| 1 Defrost | 8 Butter | 15 Beef Rare |
| 2 Popcorn | 9 Cake | 16 Beef Medium |
| 3 Potatoes | 10 Cookie | 17 Tea/Coffee |
| 4 Steam Vegetables | 11 Frozen Pizza | 18 Milk/Hot Chocolate/Milky Coffee |
| 5 Fresh Fish | 12 Fresh Pizza | 19 Baguette/Crusty Rolls |
| 6 Cream Cheese | 13 Roast Chicken | 20 Croissants |
| 7 Chocolate | 14 Slow Cook/Stew | 21 Steam Clean |

Turn the dial to the desired preset, then press the dial to confirm selection.

Important: For complete step-by-step operating instructions and safety guidelines, please refer to the "Operation" section in the Owners Manual.

Airfry / Broil / Combination



Press to choose from 7 cooking modes:

- 1x Airfry - 425°F (220°C)
- 2x Airfry - 410°F (210°C)
- 3x Airfry - 400°F (200°C)
- 4x Broil1
- 5x Broil2
- 6x Combo1
- 7x Combo2

Turn dial to set cooking time.
Press dial to start.

Convection Bake



Press to select temp:

- | | |
|----------|-----------|
| 1x 300°F | 8x 425°F |
| 2x 325°F | 9x 100°F |
| 3x 340°F | 10x 215°F |
| 4x 350°F | 11x 230°F |
| 5x 375°F | 12x 250°F |
| 6x 400°F | 13x 270°F |
| 7x 410°F | 14x 285°F |

Press dial to preheat, or
turn dial to set cooking time.
Press dial to start.

Microwave



Press to select power level

- 1x 1000W (High)
- 2x 800W (Medium-high)
- 3x 600W (Medium)
- 4x 440W (Medium-low)
- 5x 300W (Defrost)
- 6x 100W (Low)
- 7x Keep Warm

Set cooking time by turning
the dial. Press dial to start.

Shortcuts

Included in the Owner's Manual is a handy *Microwave Shortcuts* section. This section provides recommended power, time and directions for many popular foods.

Defrosting Chart: provides defrosting time, method, and standing time for a variety of foods.

Reheating and Cooking Chart: provides the recommended power levels, approximate time, and instructions for various foods and weights.

Cookware and Utensil Chart: "May I use aluminum foil?" Find out which cooking method allows its use.

– Cool Down Sound –

When cooking is complete, you may notice a sound as if the multi-oven is still running. Don't worry, it's only a fan system cooling the oven. This cool-down period may last anywhere from 1 to 6 minutes and is a normal function.

Panasonic



Quick Start and Cooking Guide

Home **CHEF**[®] Magic Pot[™]

Pan Sear • Simmer • Steam • Grill



CONNECTS WITH
fresco



Say Hello to the Magic Pot™!

The Panasonic **HomeCHEF® Magic Pot™** is your simple, 4-in-1 solution for perfecting your favorite dishes. The Magic Pot helps you prepare food quickly and easily in the microwave oven using 4 cooking methods—sear, simmer, steam, and grill—for the perfect flavor and texture every time.

Safe, easy to use, and easy to clean, the Magic Pot is a trusted companion for preparing your favorite dishes in record time, with exceptional flavor and texture.

Included Accessories

The **HomeCHEF Magic Pot** is made up of 3 separate pieces. Use them in different combinations to get just the right flavor and texture in your favorite dishes.

Check out delicious recipes in the **Panasonic Kitchen+ app** and find out how!



Stainless Steel **Lid**
with silicone rim

Heat-resistant plastic
Steam Tray

Aluminum **Crispy Pot**
with microwave-
absorbing rubber base

Overview

Metal in a Microwave? (Yes, it's okay—and safe!)

 
We were taught never to place anything metallic in a microwave oven.

Don't fear, the **Magic Pot is microwave safe**. How is that true?

Panasonic designed this pot with silicone, rubber, stainless steel, and aluminum in all the right places to create a safe, optimal cooking experience. When the Magic Pot is placed correctly in the center of the microwave oven, the metal deflects heat and the rubber base absorbs it, conducting the heat only to the bottom and sides of the Crispy Pot.



Please see pg. 12 (and refer to the operation manual) for correct placement of the Magic Pot in the microwave.

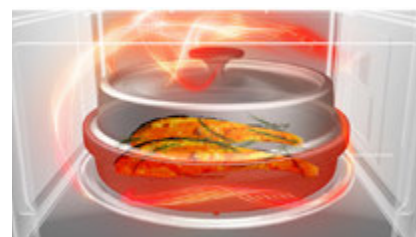

Cooking Methods

We've designed the Magic Pot to be incredibly versatile! Each method has its own way of bringing out just the right texture and flavor of different foods.



Pan Sear

Cook: Fish fillets, chicken pieces, burgers

How it Works: Heat is directed to Crispy Pot to brown and crisp food from the bottom up, while the Stainless Steel Lid contains moisture to keep food juicy

General Instructions: Place ingredients in Crispy Pot, cover with Stainless Steel Lid, and place in middle of glass turntable. If needed, turn or rearrange food during cooking.

Use with



Simmer

Cook: Risotto, seafood pot, stews, soups

How it Works: Heat is directed to Crispy Pot to simmer food while Stainless Steel Lid retains liquid

General Instructions: No preheating needed. Place ingredients directly in Crispy Pot, cover with Stainless Steel Lid, and place in the middle of the glass turntable. If needed, stir during cooking.

Use with



Steam

Cook: Vegetables, potatoes, fish, chicken breast

How it Works: Water boils under Steam Tray, steaming food that rests on the Tray, while Stainless Steel Lid contains moisture

General Instructions: Pour specified amount of water into Crispy Pot and place Steam Tray inside Crispy Pot. Place food directly on Tray. Cover Pot with Lid and place on the glass turntable. If needed, turn or rearrange food during cooking.

Use with



Crisping Grill

Cook: Pizza, quiche, pie, breaded foods

How it Works: Microwaves cook food while the FlashXpress broiler browns and crisps the top.

Instructions: Brush empty Crispy Pot with oil, place directly on glass turntable, and preheat per recipe. Place food directly in preheated Pot and cook with Combo feature.

Use with

 


Please refer to the operation manual for full instructions and safety details.


FAQ

How Do I Place the Magic Pot Correctly in the Microwave?

The pot should be placed in the center of the microwave turntable. NEVER let the Magic Pot touch the walls of the microwave, as it will cause arcing (sparks). If arcing occurs, immediately stop the microwave cooking and center the Magic Pot.

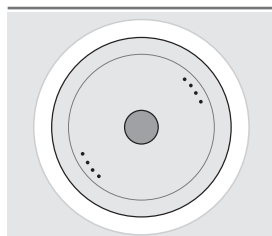

CORRECT – Centered

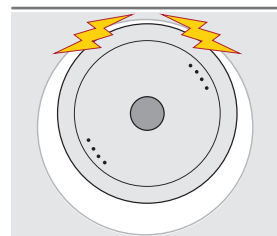 

NO – Too close to wall

Is the Magic Pot Going to Get Hot?

YES. Always use oven mitts to insert and remove your Magic Pot from the microwave. Do not touch the heated Magic Pot with your bare hands.

Which Microwave Ovens Are Compatible with My Magic Pot?

The Magic Pot is designed especially for the Panasonic inverter microwave oven series:

- NN-CD8***
- NN-GN6***
- NN-SD7***
- NN-SE7***
- NN-SN6***
- NN-CV8***
- NN-SD9***
- NN-SE9***
- NN-SN7***
- NN-SN9***

What Microwave Settings Do I Use with My Magic Pot?

For multi-function ovens, the Magic Pot is compatible only with certain oven settings. Using the Broil or other functions with the Stainless Steel Lid will damage your Magic Pot. Please refer to the operation manual for full instructions and safety details.



Panasonic



Get the most from every meal with the **Panasonic Kitchen+** app

**Panasonic
KITCHEN+**

Introducing **Panasonic Kitchen+**, powered by Fresco, the smart cooking app that lets you spend less time in the kitchen and more time around the table. From easy step-by-step instructions to recipes that adapt to get more from your appliance, you can easily create meals that your family will love.

Now available for the Magic Pot used with the HomeCHEF 4-in-1 multi-oven.



**Panasonic
KITCHEN+**

Panasonic Kitchen+

Scan me to get started...



Cooking Chart

PAN SEAR

Food	Weight Quantity	Fresh	Frozen
		NN-CV88QS	NN-CV88QS
Salmon ^{1,3}	2 pcs 10oz	1000 W 9-11 mins	-
Sea bass ^{1,3}	2 pcs 6oz	1000 W 7-9 mins	-
Chicken thighs with skin ^{1,2,3}	4 pcs 17oz	1000 W 20-22 mins	-
Chicken breast with skin ^{1,2,3}	2 pcs 11oz	1000 W 19-21 mins	-
Breaded fish ¹	2 pcs 10oz	1000 W 12-14 mins	-
Fish fingers ¹	8 pcs 8oz	-	1000 W 13-15 mins

Use Crispy Pot + Stainless Steel Lid



STEAM

Food	Weight Quantity	Fresh
		NN-CV88QS
Broccoli	10oz	1000 W 10-12 mins
Carrots	9oz	1000 W 12-14 mins
Corn	8 pcs 18oz	1000W 14-16 mins
Potatoes	12pcs 14oz	1000W 14-16 mins
Fish Fillet	1 pc 8oz	1000 W 8-10 mins
Chicken Breasts ²	2 pcs 10oz	1000 W 22-24 mins
Shrimp	12oz	1000 W 13-15 mins
Whole mackerel	2 pcs 7oz	1000 W 15-17 mins
Whole sea bream ²	2 pcs 10oz	1000 W 18-20 mins

Use Crispy Pot + Steam Tray + Stainless Steel Lid—pour 5 fl.oz. of water in the Crispy Pot



NOTES:

(1) turn or stir at 2/3 time. (2) Standing 2-3 mins. (3) Skin side down.
(P) Place on preheated Crispy Pot (3 min on 1000W/P10), greased if necessary.
Always add 5 fl.oz of water into the crispy pot before using steam menu.

Please refer to the operation manual for full instructions and safety details.

Cooking Chart

CRISPING GRILL

Food	Weight Quantity	Fresh	Frozen
		NN-CV88QS	NN-CV88QS
Chicken nuggets ^{P,1}	8 pcs 3oz	–	Combo 2 7-9 mins
Chilled Quiche ^{P,2}	1 pc 5oz	Combo 2 9-11 mins	–
Cheese croissant ^P	1 pc 2oz	Combo 2 2-3 mins	Combo 2 3-4 mins
	2 pcs 5oz	Combo 2 3-4 mins	Combo 2 5-6 mins
Breaded fish fillets ^{P,1}	1 pc 5oz	Combo 2 14-16 mins	Combo 2 15-17 mins
	2 pcs 10oz	Combo 2 16-18 mins	Combo 2 17-19 mins
Pizza ^P	9 inch	–	Combo 2 15-17 mins
Galettes / Vegetables ^{P,1}	4 pcs 5oz	–	Combo 2 7-9 mins
Meat / Sausage roll ^{P,1}	2 pcs 6oz	Combo 2 7-9 mins	Combo 2 10-12 mins
Quiche, onion ^{P,2}	1 pc 5oz	Combo 2 9-11 mins	Combo 2 13-15 mins
Quiche, spinach ^{P,2}	1 pc 14oz	Combo 2 14-16 mins	Combo 2 24-26 mins
Pancakes stuffed, rolls ^{P,1}	4 pcs 8oz	Combo 2 4-6 mins	Combo 2 6-8 mins
Meat pies ^{P,1}	1 pc 2oz	Combo 2 5-7 mins	Combo 2 8-10 mins
	2 pcs 5oz	Combo 2 8-10 mins	Combo 2 10-12 mins
Samosas ^{P,1}	4 pcs 8oz	Combo 2 9-11 mins	Combo 2 15-17 mins
Tortilla ^{P,1}	2 pcs 8oz	Combo 2 8-10 mins	Combo 2 14-16 mins
	4 pcs 16oz	Combo 2 11-13 mins	Combo 2 15-17 mins
Sausage, raw, thick ^{P,1}	4 pcs 7oz	Combo 2 10-12 mins	–
Sausage, raw, thin	4 pcs 5oz	Combo 2 7-9 mins	–

Use Crispy Pot

MAGIC POT CARE:

- Never cut pizza, quiche, or any other food directly in the Crispy Pot—this will damage the non-stick surface.
- After use, wash the Magic Pot in hot soapy water and rinse in hot water. Do not use any abrasive cleaning substances or scouring pads as this will damage the surface of the Crispy Pot.

Please refer to the operation manual for full instructions and safety details.



Setting up your HomeCHEF 4-in-1 with the **Panasonic Kitchen+** app

For everyday cooking success with your HomeChef 4-in-1, follow these simple steps to get started!

1. Ensure your home wireless network is on and that the microwave oven is within range.
2. Plug the microwave oven into a grounded power outlet.
3. Once plugged in, the microwave oven should automatically be in setup mode with a blinking wireless connection icon [📶].
 - If the 📶 is not flashing, press the **Stop/Reset** button for 2 seconds—the display will show “1. SETUP CONNECT”, then
 - Press the **Start/Select** dial button to reactive the wireless setup mode.
4. Scan the QR code on the right to install the latest version of Panasonic Kitchen + app onto your device.
5. Create an account with our smart kitchen partner, Fresco, verify this account, and sign into the app.
6. Navigate to ‘Appliances’, select Panasonic HomeChef 4-in-1 Multi-Oven by clicking the [+] icon.
7. Select your home wireless network. If you have multiple wireless band options, **please use 2.4 GHz**. Do not select 5 GHz or other bands.
8. When the 📶 blinks quickly, the oven is in pairing state. When the 📶 stops blinking and stays on steadily, your microwave is connected and ready to start cooking!

Scan me to get started



CONNECTS WITH
fresco

Panasonic
Two Riverfront Plaza
Newark, NJ 07102

Actual product may vary slightly from photographs.

*By scanning the QR code, you acknowledge that you understand that Personally Identifiable Information ("PII") like Advertising Identifier, IP Address, Country Code and Geolocation Information may be shared with Fresco, a Panasonic business partner, and mobile technology software provider Branch. Fresco Privacy policies: <https://frescocooks.com/privacy-policy#privacy>

F0049CW90AP
24-0224_NN-CV880S