


Easy Setting Guide

Blu-ray Disc™ Home Theater Sound System

Model No. **SC-BTT190**

STEP 1: Attaching the sticker to the speaker cables

e.g., Front speaker Lch

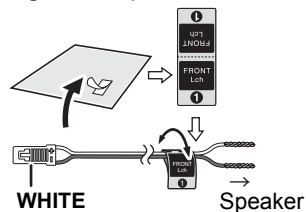


Speaker cable sticker	Connector
FRONT Lch ①	WHITE
FRONT Rch ②	RED
SURROUND Lch ③	BLUE
SURROUND Rch ④	GRAY
CENTER ⑤	GREEN
SUBWOOFER ⑥	PURPLE

STEP 2: Confirming the corresponding cable

Refer to the rear label of the speaker before connecting the corresponding cable.
Verify the type of speaker with the label on the rear of the speaker.


e.g., Front speakers

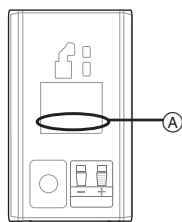


Speakers	①
Front speakers	FRONT/AVANT
Center speaker	CENTER/CENTRE
Surround speakers	SURROUND/AMBIOPHONIE

STEP 3: Connecting the speaker cables

• Front speakers and Surround speakers have no difference between right and left.

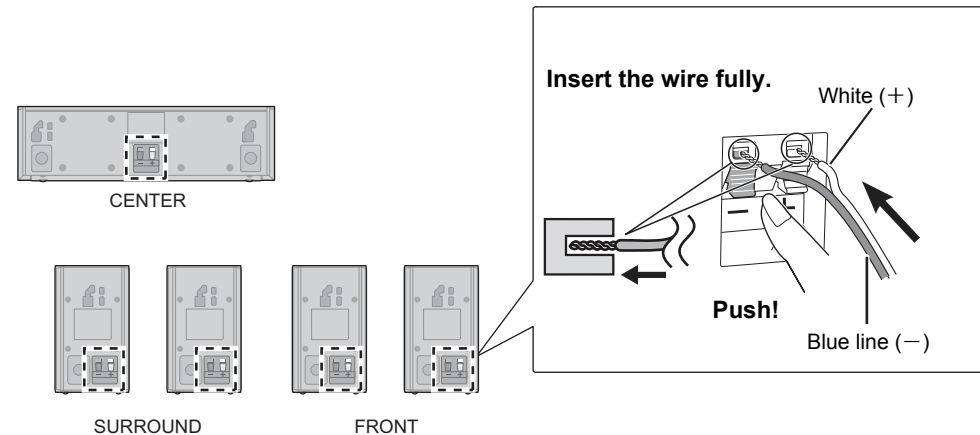

STEP 4: Placing the speakers

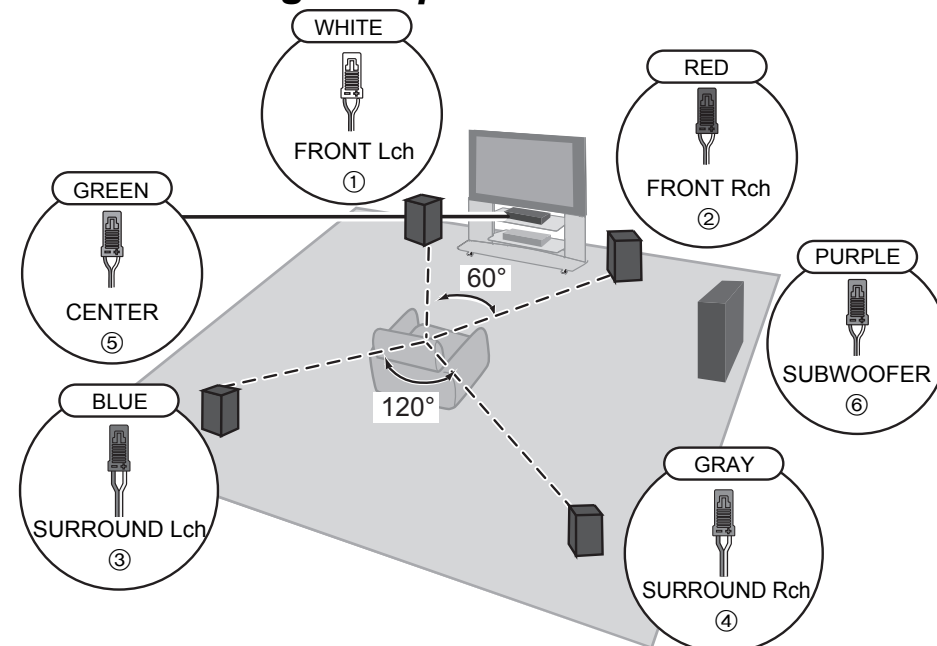

If you have any questions, contact:

U.S.A. and Puerto Rico:

1-800-211-PANA (7262)

Mon-Fri 9 am–9 pm (EST) Lunes-Viernes

Sat-Sun 10 am–7 pm (EST) Sabado-Domingo

www.panasonic.com/help

Canada:


Telephone: 1-800-561-5505

E-mail link: "Support → contact us →

email" on www.panasonic.ca


STEP 5: Connecting the cables

For information on other connection methods and the internet features, refer to the Owner's Manual.

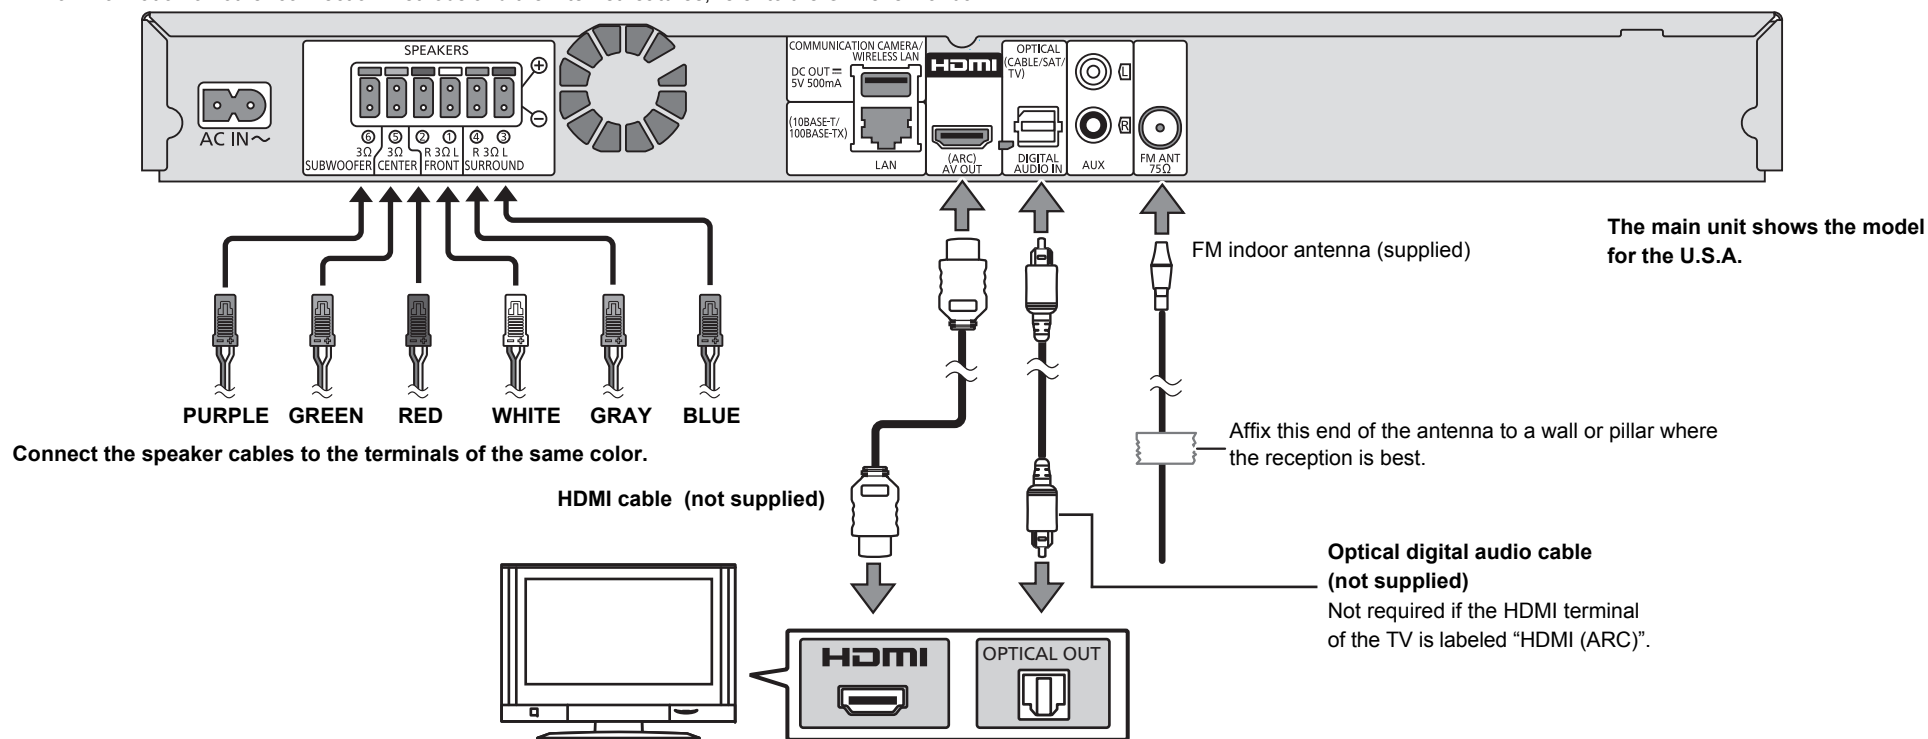


STEP 6: Turning on the system

1 Connect the AC power supply cord.

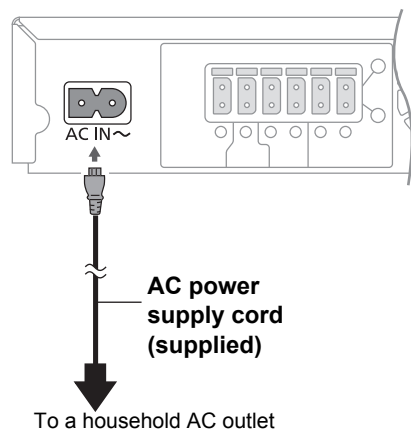


2 Turn on the TV.

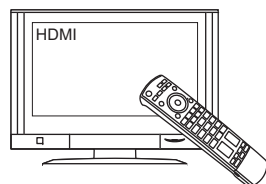

Set the video input mode to HDMI, etc.

3 Turn on the system.

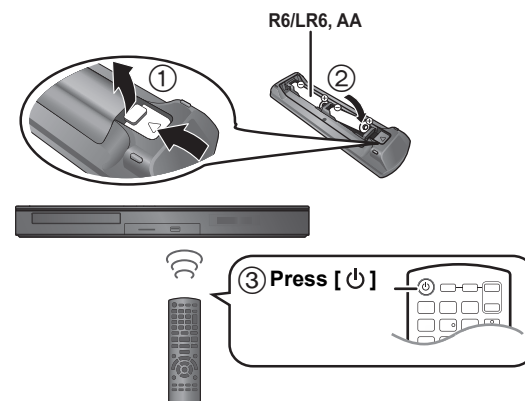

4 The Easy setting starts.

Follow on-screen instructions.