 



Overview of controls

Remote control

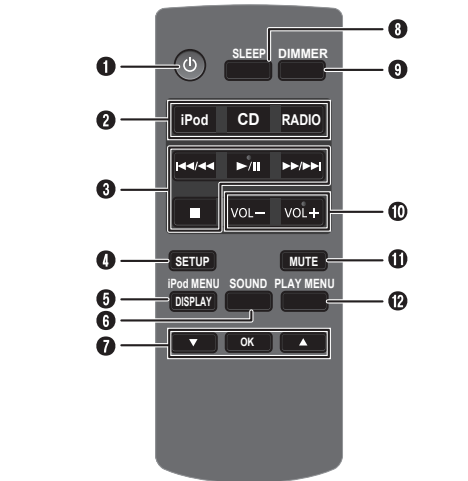


Main unit

 Top view

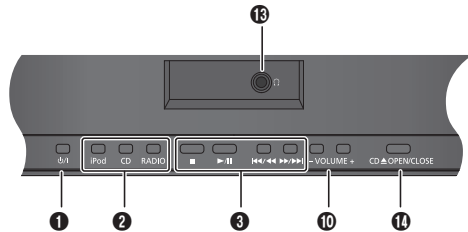


Front view

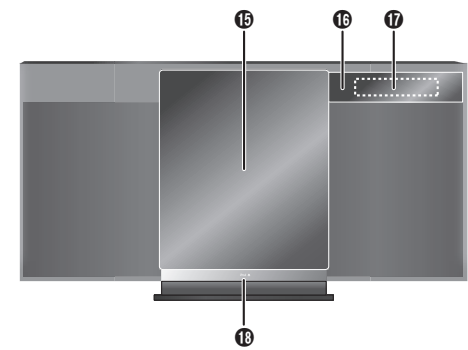 

Getting started



 
- Connect the FM indoor antenna.**
Place the antenna where reception is best.
- Connect the AC power supply cord.**
Power consumption in standby mode: 0.1 W (approximate).
Do not use an AC power supply cord from other equipment.

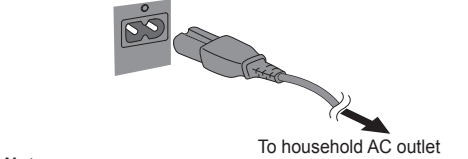

- Note:**
- Some settings return to default when you disconnect the system.
 - These speakers do not have magnetic shielding. Do not put them near TVs, PCs or other equipment easily influenced by magnetism.
 - You cannot remove the net of the speakers.


Preparing the remote control

 Before using

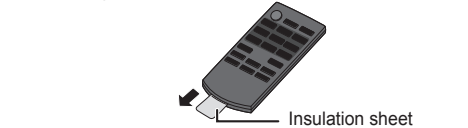

Replacing the battery
Replace with a new battery (CR2025 lithium battery).

 - While pressing the stopper, pull out the battery holder.
- Insert a new battery with the (+) side facing up.
- Push the battery holder back fully.

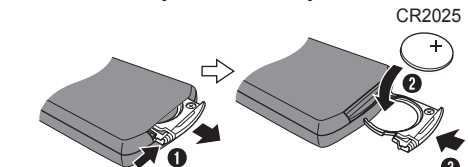

Warning!
Keep the button-type battery out of reach of children to prevent swallowing.

Radio

30 FM stations can be preset.

Preparation
Connect the FM indoor antenna (⇒ "Getting started").

Press [RADIO].

Automatic presetting

- Press [PLAY MENU] to select "A.PRESET".
- Press [▲, ▼] to select "LOWEST" or "CURRENT" frequency.
LOWEST : To begin auto preset from the lowest frequency.
CURRENT : To begin auto preset from the current frequency.
* To change the frequency, refer to "Manual tuning and presetting".
- Press [OK] to start presetting.
The tuner presets all the stations it can receive into the channels in ascending order.
To cancel, press [■].

Manual tuning and presetting

- Press [PLAY MENU] to select "TUNEMODE".
- Press [▲, ▼] to select "MANUAL" and then press [OK].
- Press [◀◀◀◀◀ or ▶▶▶▶▶] to tune in to the station.
To tune automatically, press and hold the button until the frequency starts changing quickly.
"STEREO" is shown when the system is tuned in to a stereo broadcast.

To preset the station

- Press [OK].
- Press [▲, ▼] to select a preset number.
- Press [OK].
Do steps 3 through 6 again to preset more stations.

Note:
A station previously stored is overwritten when another station is stored in the same preset number.

Selecting a preset station

- Press [PLAY MENU] to select "TUNEMODE".
- Press [▲, ▼] to select "PRESET" and then press [OK].
- Press [◀◀◀◀◀ or ▶▶▶▶▶] to select the preset station.

FM allocation setting (by main unit only)

This system can also receive FM broadcasts allocated in 0.1 MHz steps.

- Press [RADIO].

- Press and hold [RADIO].

After a few seconds, the display panel shows the current minimum radio frequency. Release the button when the minimum frequency changes.
• To go back to the initial setting, do the above steps again.
• After you change the setting, preset frequencies are erased.

Improving the sound quality

- Press [PLAY MENU] to select "FM MODE".
- Press [▲, ▼] to select "MONO" and then press [OK].
To cancel, select "STEREO".
"MONO" is also canceled when you change the frequency.

To memorize the setting
Continue with steps 4 through 6 of "Manual tuning and presetting".

Checking the signal status

Press [DISPLAY].

FM	The FM signal is in monaural. The system is not tuned in to a station.
FM ST	The FM signal is in stereo.
FM MONO	"MONO" is selected as the FM MODE.

Clock and timers

Setting the clock

This is a 12-hour clock.

- Press [SETUP] to select "CLOCK".
- Press [▲, ▼] to set the time.
- Press [OK].

To show the clock for a few seconds
Press [SETUP] to select "CLOCK" and then press [OK].

Note:
Reset the clock regularly to maintain accuracy.

Play timer

You can set the timer to come on at a certain time to wake you up.

Preparation
Set the clock.

- Press [SETUP] to select "TIMER ADJ".
- Press [▲, ▼] to set the start time.
- Press [OK].
- Do steps 2 and 3 again to set the end time.

To start the timer

- Prepare the audio source you want to listen to and set the volume.
- Press [SETUP] to select "TIMER SET".
- Press [▲, ▼] to select "SET" and then press [OK].
"0" is shown.
The system must be switched off for the timer to operate.

Check the settings	1. Press [SETUP] to select "TIMER ADJ". 2. Press [OK].
Cancel	1. Press [SETUP] to select "TIMER SET". 2. Press [▲, ▼] to select "OFF" and then press [OK].

- Note:**
- The timer starts at a low volume and increases gradually to the preset level.
 - The timer comes on at the set time every day if the timer is on.
 - If you switch off the system and switch on again while a timer is in operation, the timer will not stop at the end time.

Troubleshooting

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the solutions indicated do not solve the problem, refer to "Customer Services Directory (United States and Puerto Rico)" on page 1.

Common problems

No operations can be done with the remote control.

- Examine that the battery is installed correctly.
- The remote control and this unit are using different codes (⇒ right, "REMOTE □").

Sound is distorted or no sound.

- Adjust the volume of the system.
- Examine the volume of the iPod/iPhone.
- Switch off the system, determine and correct the cause, then switch the system on again. It can be caused by straining of the speakers through excessive volume or power, and when using the system in a hot environment.

A "humming" sound can be heard during playback.

- An AC power supply cord or fluorescent light is near the cable. Keep other appliances and cords away from the cable of this system.

iPod/iPhone

You cannot switch on the iPod/iPhone.

- Examine that the battery of the iPod/iPhone is not depleted.
- Switch off the iPod/iPhone and the system before you connect the iPod/iPhone. Connect the iPod/iPhone and try again.

iPod/iPhone does not charge.

- Examine the connection.

Disc

Display not shown correctly.

- Playback does not start.
 - You did not put the disc in correctly. Put it in correctly.
 - Disc is dirty. Clean the disc.
- Replace the disc if it is scratched, warped, or non-standard.
- There is condensation. Let the system dry for 1 to 2 hours.

Radio

A beat sound is heard.

- Switch off the TV or move it away from the system.
- Move mobile telephones away from the unit if the interference is apparent.

Stations cannot be selected.

- Change the FM frequency step (⇒ "FM allocation setting").

Main unit displays

"-.-.-"

- You connected the AC power supply cord for the first time or there was a power failure recently. Set the clock.

"ADJUST CLOCK"
• Clock is not set. Adjust the clock accordingly.

"ADJUST TIMER"
• Play timer is not set. Adjust the play timer accordingly.

"DIMMER"
• 10 seconds after the volume is set to "0", the brightness of the display panel is decreased.

ESPAÑOL

Cómo realizar las conexiones

- Conecte la antena interior FM.**
Coloque la antena donde la recepción sea la mejor.
- Conecte el cable de alimentación de CA.**
Consumo en el modo de espera: 0.1 W (aproximado).
No use un cable de alimentación de CA de otro equipo.

 


iPod/iPhone, Disco

Cómo introducir o quitar medios

iPod/iPhone

Pulse [iPod ▲] para abrir la bandeja de la estación de acoplamiento.

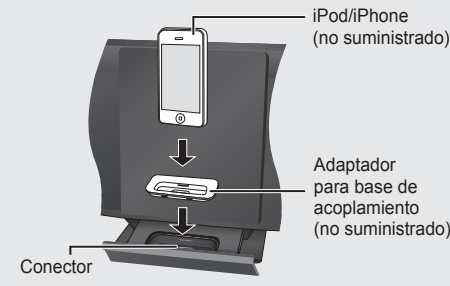

Disco

Pulse [CD ▲ OPEN/CLOSE] en la unidad principal para abrir la puerta correa.



Reproducción básica

Pulse [iPod] o [CD] para seleccionar la fuente.

Reproducir	Pulse [▶/II].
Detener	Pulse [■].
Pausar	Pulse [▶/II]. Pulse nuevamente para continuar la reproducción.
Saltar pista	Pulse [◀◀◀◀◀ o ▶▶▶▶▶].
Buscar por pista	Pulse y mantenga pulsado [◀◀◀◀◀ o ▶▶▶▶▶].

Radio

Se pueden preconfigurar 30 emisoras de FM.

Preparación
Conecte la antena interior FM (⇒ "Cómo realizar las conexiones").

Pulse [RADIO].

Preconfiguración automática

- Pulse [PLAY MENU] para seleccionar "A.PRESET".
- Pulse [▲, ▼] para seleccionar la frecuencia "LOWEST" (más baja) o "CURRENT" (actual).
- Pulse [OK] para iniciar la preconfiguración.
Para cancelar, pulse [■].

Selección de una emisora preconfigurada

- Pulse [PLAY MENU] para seleccionar "TUNEMODE".
- Pulse [▲, ▼] para seleccionar "PRESET" y después pulse [OK].
- Pulse [◀◀◀◀◀ o ▶▶▶▶▶] para seleccionar la estación preconfigurada.

Reloj y temporizador

Configuración de la hora

Éste es un reloj con un sistema de 12 horas.

- Pulse [SETUP] para seleccionar "CLOCK".
- Pulse [▲, ▼] para configurar la hora.
- Pulse [OK].

Para visualizar el reloj durante unos segundos
Pulse [SETUP] para seleccionar "CLOCK" y después pulse [OK].

Temporizador de reproducción

- Pulse [SETUP] para seleccionar "TIMER ADJ".
- Pulse [▲, ▼] para configurar la hora de inicio.
- Pulse [OK].
- Repita los pasos 2 y 3 para configurar la hora de finalización.

Para iniciar el temporizador

- Prepare la fuente de audio que desea escuchar y configure el volumen.
- Pulse [SETUP] para seleccionar "TIMER SET".
- Pulse [▲, ▼] para seleccionar "SET" y después pulse [OK].
Se visualiza "0".
La sistema debe estar apagado para que el temporizador funcione.

iPod/iPhone

Ver el menú del iPod	Pulse [iPod MENU].
Seleccionar un elemento	Pulse [▲, ▼] y después pulse [OK].

Disco

Visualizar información	Pulse [DISPLAY].
------------------------	------------------

Menú de reproducción

- Pulse [PLAY MENU] para seleccionar "PLAYMODE" o "REPEAT".
- Pulse [▲, ▼] y después pulse [OK] para seleccionar el modo deseado.

PLAYMODE	
OFF PLAYMODE	Reproducir todas las pistas.
1-TRACK 1▶	Reproducir una pista seleccionada. Pulse [◀◀◀◀◀ o ▶▶▶▶▶] para seleccionar la pista.
RANDOM RND	Reproducir todas las pistas aleatoriamente.
REPEAT	
ON REPEAT	Repetir la reproducción.
OFF REPEAT	Cancelar la reproducción repetida.

Sintonización y preconfiguración manual

- Pulse [PLAY MENU] para seleccionar "TUNEMODE".
- Pulse [▲, ▼] para seleccionar "MANUAL" y después pulse [OK].
- Pulse [◀◀◀◀◀ o ▶▶▶▶▶] para sintonizar la estación.

Para preconfigurar la estación

- Pulse [OK].
- Pulse [▲, ▼] para seleccionar un número preconfigurado.
- Pulse [OK].
Realice los pasos 3 al 6 nuevamente para preconfigurar más estaciones.

Temporizador de apagado automático

Pulse [SLEEP] para seleccionar la configuración (en minutos).
Para cancelar, seleccione "OFF".

SLEEP 30 → SLEEP 60 → SLEEP 90 → SLEEP120
OFF

Función de apagado automático

Esta función apaga el sistema (excepto cuando está en fuente de radio) si no utiliza el sistema durante aproximadamente 30 minutos.

- Pulse [SETUP] para seleccionar "AUTO OFF".
- Pulse [▲, ▼] para seleccionar "ON" (activación) o "OFF" (desactivación) y después pulse [OK].