

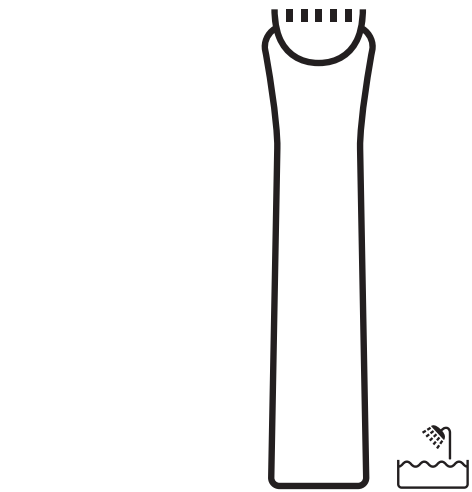


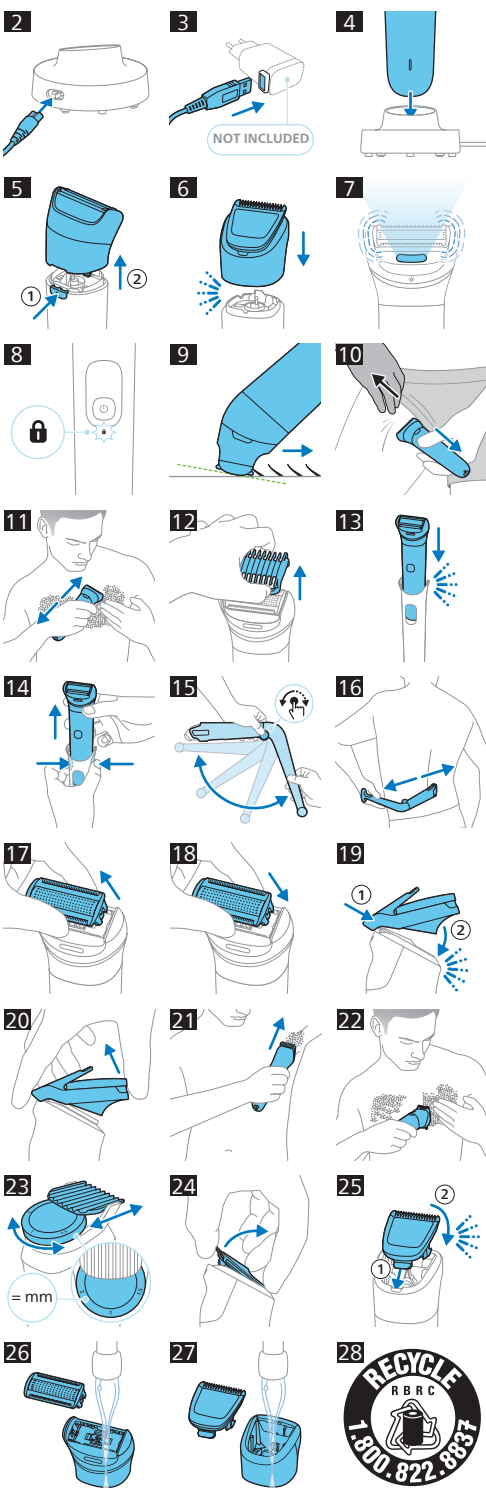

3000.126.0197.2 (30/06/2025)
©2025 Philips North America LLC. All rights reserved.
Philips and Philips shield are registered trademarks of Philips North America LLC.
Norelco is a registered trademark of Philips North America LLC.
This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc. (UL) as a Class II, Limited Power Source (LPS) device.
Manufactured for: Philips Personal Health
a division of Philips North America LLC
P.O. Box 10313, Stamford, CT 06904, USA

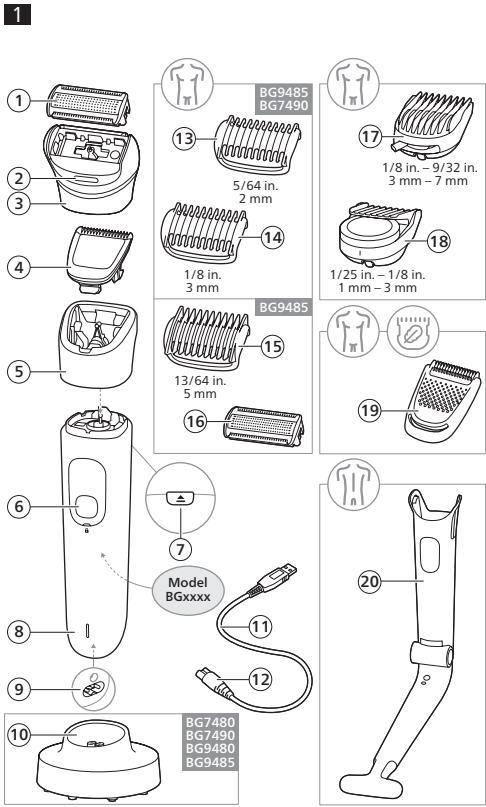

IMPORTANT SAFETY INSTRUCTIONS

When using an electric product, basic precautions should always be followed, including the following:
Read all instructions before using this product.

DANGER

To reduce the risk of electric shock:

- To charge the product, only use a USB power source on a certified product with output rating 5 V, ≥ 1 A. For safe charging in a moist environment (e.g. in a bathroom), only use an IPX4 (splash-proof) power source. A suitable power source (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB power source, contact Philips support at 1-800-243-3050. Using a non-certified USB power source may cause hazards or serious injuries.
- Keep the USB cable, the USB power source and the charging stand (if provided) dry.
- Do not reach for a corded product that has fallen into water. Unplug immediately from the power outlet.
- Do not place or store the product where it can fall or be pulled into a tub or sink. Do not place or drop the product into water or other liquid.
- This product does not work while it is connected to the power outlet. Except when charging, always unplug this product from the power outlet.
- Remove USB power source from power outlet and product before cleaning the product with water.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- Use this product only for its intended household use as described in this manual. Misuse can lead to hazards or serious injuries. Do not use attachments not recommended by Philips North America LLC.
- Never operate this product if it has a damaged USB power source, if it is not working properly, after it has been dropped or damaged, or after the product or the USB power source has been dropped into water. For assistance call 1-800-243-3050.
- Keep the USB cable and the USB power source away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use the USB power source in or near a power outlet that contains an electric air freshener to prevent damage to the USB power source.
- Do not use product outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always check cutting units and other attachments and accessories before you use the product. Never use the product with a damaged cutting unit, attachment or accessory, as injury may occur.
- Always attach the USB cable to the USB power source and the product first, then attach the USB power source to the power outlet. To disconnect, set all controls to 'off' position. Then remove the USB power source from the power outlet.
- Plug USB power source directly into power outlet. Do not use an extension cord.
- Unplug USB power source before plugging in or unplugging the product.
- The batteries used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100 °C (212 °F) or incinerate.
- Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 50 °F / 10 °C and 95 °F / 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.
- When you handle batteries, make sure that your hands, the product and the batteries are dry.
- To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

SAVE THESE INSTRUCTIONS

General description (Fig. 1)

- 1 Cutting unit of shaving head
- 2 Integrated light
- 3 Shaving head
- 4 Cutting unit of trimming head
- 5 Trimming head
- 6 On/off button
- 7 Release button
- 8 Battery status indicator
- 9 Socket for small plug
- 10 Charging stand (only with models BG7480, BG7490, BG9480, BG9485)
- 11 USB cable

Note: The power source is not included. A suitable power source (e.g. Philips HQ87) is available via www.philips.com/support.

- 12 Small plug
 - 13 Shaving guard 2 mm (5/64 in.) (only with models BG7490, BG9485)
 - 14 Shaving guard 3 mm (1/8 in.) (only with models BG7490, BG9485)
 - 15 Shaving guard 5 mm (13/64 in.) (only with model BG9485)
 - 16 Replacement cutting unit of shaving head (only with model BG9485)
 - 17 Adjustable trimming guard 3 mm – 7 mm (1/8 in. – 9/32 in.)
 - 18 Adjustable precision trimming guard 1 mm – 3 mm (1/25 in. – 1/8 in.)
 - 19 Intimate guard
 - 20 Back shaving attachment
- Not shown: storage pouch, cleaning brush

Introduction

Congratulations on your purchase and welcome to Philips Norelco!
To fully benefit from the support that Philips Norelco offers, register your product at:
www.norelco.com/register.

You can find the model number on the back of your product.

The full model number (e.g. BG1234/56) is located on the bottom of the packaging, your receipt or order confirmation.

IMPORTANT TO KNOW

- Charge the product fully before you use it for the first time.



- This product is waterproof. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the product can therefore only be used without cord.
- You can use the product wet or dry to shave or trim hair on all parts of the body below the neckline. The product is not intended for shaving or trimming your face or head.
- While the product can be used both wet and dry, we recommend using it on clean, dry hair, as wet hair tends to stick to the body.
- Always check the shaving head, the trimming head and the cutting units before use to make sure they are clean, in good condition and not damaged or worn. A damaged part can cause skin irritation and reduced product performance.
- Only use the back shaving attachment in combination with the shaving head.
- Always use the intimate guard when trimming sensitive areas.
- Whenever possible, stretch the skin with your free hand for easier shaving or trimming.
- Clean the product after each use (see 'Cleaning').

Charging

- Charging or using the product at temperatures below 50 °F / 10 °C or higher than 95 °F / 35 °C adversely affects the lifespan of the battery.
- If the product is subjected to a major change in temperature, pressure or humidity, let the product acclimatize for 30 minutes before use.

Battery status indicator

Battery status	Indicator mode
Almost empty	Flashing orange light
Charging	Flashing white light
Fully charged	Solid white light

Note: Approx. 60 seconds after the battery is fully charged, the battery status indicator switches off automatically.

Charge the product before first use and when the battery status indicator shows that the battery is almost empty. When the product has charged for 60 minutes, it has a cordless operating time of up to 120 minutes.

Warning: Keep the USB cable, the USB power source and the charging stand (if provided) dry.



Charging with a USB power source

- 1 Make sure that the product is switched off.
- 2 Insert the small plug of the USB cable into the socket in the bottom of the product.
- 3 Insert the USB plug into the USB power source (not included) (Fig. 3).
- 4 Insert the USB power source into the power outlet.
- 5 After charging, remove the USB power source from the power outlet and pull the small plug out of the product.

Charging with the charging stand (BG7480, BG7490, BG9480, BG9485)

- 1 Make sure that the product is switched off.
- 2 Insert the small plug into the charging stand (Fig. 2).
- 3 Insert the USB plug into the USB power source (not included) (Fig. 3).
- 4 Insert the USB power source into the power outlet.
- 5 Put the product in the charging stand (Fig. 4).
- 6 After charging, take the product out from the charging stand, remove the power source from the power outlet, pull the USB plug out of the power source and then pull the small plug out of the charging stand.

Quick charge

After approx. 5 minutes of charging, the product contains enough power for one trimming session.

Using the product

Always check the product and all accessories before you use it. Do not use the product or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

Because of hygiene, only one person should use the product.

Changing the heads

- 1 To detach the shaving head or the trimming head from the product, press the release button at the back of the handle and gently lift the head off the handle (Fig. 5).
- 2 To attach the shaving head or the trimming head onto the product, align the head with the top of the handle and gently press it down until it clicks into place (Fig. 6).

Switching the product on and off

- 1 Press the on/off button once to switch the product on or off.

Integrated light

The integrated light goes on automatically when you switch on the product to give you a better view while shaving or trimming (Fig. 7). You can turn the integrated light off or back on by pressing the on/off button for 1 second when the product is switched off.

Note: If you hold the on/off button for 5 seconds, this will activate the travel lock (see 'Travel lock').

Travel lock

- 1 To activate the travel lock, press and hold the on/off button for 5 seconds when the product is switched off. The lock icon will light up on the handle (Fig. 8).
- 2 To deactivate the travel lock, press and hold the on/off button for 5 seconds. The lock icon will switch off.

Shaving

- When shaving sensitive areas for the first time, you may experience some discomfort, irritation or reddening of the skin. This is normal as your skin needs time to adjust to shaving.
- For fast shaving, hold the product in such a way that both the front teeth and the cutting unit of shaving head touch the skin. This allows you to catch both short and long hairs in each stroke (Fig. 9).
- If your hair is longer than 13/32 in. (10 mm), pre-trim your hair to a shorter length first for optimum shaving results.

Shaving body hair

Use the shaving head to shave body hair below the neckline.

- 1 Attach the shaving head onto the product (see 'Changing the heads').
- 2 Switch on the product.
- 3 Stretch your skin with your free hand. Place the shaving head in such a way so that both the front teeth and the cutting unit of shaving head touch the skin. Gently press the shaving head onto the skin and move it slowly and smoothly against the direction of hair growth (Fig. 10).

Do not press too hard. Too much pressure can distort the cutting unit of shaving head and cause skin irritation.

The shaving head is bi-directional, which means that you can shave by moving the product up and down (Fig. 11). Shave against the direction of hair growth for optimal performance.

- 4 Switch off and clean the product after each use (see 'Cleaning').

Shaving guards (BG7490, BG9485)

You can attach a shaving guard onto the shaving head to trim hairs to an even length. The numbers on the guards correspond to the millimeters of hair length that will remain after trimming.

Attaching and detaching shaving guards

- 1 To attach a shaving guard onto the shaving head, align the indent in the guard with the notch on the back of the shaving head. Then simply snap the guard onto the shaving head ('click').
- 2 To detach the shaving guard from the shaving head, place a fingernail between the guard and the shaving head to the left or right of the notch on the back. Then pull the back of the guard upwards (Fig. 12).

Do not pull at the sides or teeth of the shaving guard to remove it.

Trimming with a shaving guard

- 1 Attach the shaving guard onto the shaving head (see 'Attaching and detaching shaving guards').
- 2 Switch on the product.
- 3 Move the product slowly and with light pressure against the direction of hair growth.
- 4 Switch off and clean the product after each use (see 'Cleaning').

The guard is bi-directional, which means that you can move the product up and down while shaving. Shave against the direction of hair growth for optimal performance.

Back shaving attachment

Use the shaving head with the back shaving attachment to shave hair on your back.

Attaching and detaching the back shaving attachment

Use the back shaving attachment in combination with the shaving head. Do not attempt to use the back shaving attachment while the trimming head is attached.

- 1 Make sure that the shaving head is attached to the product (see 'Changing the heads').
- 2 Slide the handle into the opening at the top of the back shaving attachment until the handle locks into place with a click. You should see the on/off button through the opening in the front of the back shaving attachment (Fig. 13).
- 3 To detach the back shaving attachment, press the release buttons on both sides of the back shaving attachment while gently pulling out the handle (Fig. 14).

Shaving with the back shaving attachment

- 1 Make sure that the shaving head is attached to the product (see 'Changing the heads').
- 2 Attach the back shaving attachment to the product (see 'Attaching and detaching the back shaving attachment').
- 3 The back shaving attachment can be unfolded to different angles. Press and hold the button on the side of the back shaving attachment to set the best angle for reaching different areas of your back (Fig. 15).
- 4 Switch on the product.
- 5 Place the shaving head on the skin in such a way that both the front teeth and the cutting unit of shaving head touch the skin. Gently press the shaving head onto the skin and move the back shaving attachment slowly up and down or across your back (Fig. 16).
- 6 Switch off and clean the product after each use (see 'Cleaning').

Detaching and attaching the cutting unit of shaving head

Detach the cutting unit of shaving head for thorough cleaning or to replace a worn cutting unit (see 'Replacement').

The cutting unit of shaving head is a precision part. Handle it with care.

Hold the cutting unit of shaving head by its plastic housing only (Fig. 17).

- 1 To detach the cutting unit from the shaving head, hold the plastic housing of the cutting unit on both sides and gently pull it out of the shaving head (Fig. 17).
- 2 To attach the cutting unit onto the shaving head, align the cutting unit with the shaving head and snap it into place (Fig. 18).

Trimming

- Always use the trimming head with a trimming guard attached to protect the skin.
- While trimming, keep the trimming guard flat on the skin for highest comfort.
- When you trim for the first time, use the highest trimming setting of the adjustable guard to familiarize yourself with the product.
- Since hairs do not all grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards, or across). Practice is best for optimum results.
- Always make smooth and gentle movements and make sure that the surface of the guard stays in contact with your skin.

Trimming guards

Use the trimming head with a trimming guard to trim hair on your body to the desired length. The product comes with three guards:

Guard	in.	mm	Intended use
Intimate guard	1/32 in.	1 mm	Sensitive areas (e.g. pubic area, scrotum, armpits)
Adjustable precision trimming guard	1/25 in. – 1/8 in.	1 mm – 3 mm	Body below neckline
Adjustable trimming guard	1/8 in. – 9/32 in.	3 mm – 7 mm	Body below neckline

Attaching and detaching trimming guards

- 1 To attach a trimming guard to the trimming head, slide the front part of the guard onto the teeth of the trimming element and press the plastic notch at the back of the guard downwards until the guard clicks into place (Fig. 19).
- 2 To detach the trimming guard, carefully push the back part of the guard off the product and then slide it off the trimming element (Fig. 20).

Trimming with a trimming guard

- Use the intimate guard to trim sensitive areas to a length of 1 mm (1/32 in.), for extra protection of the skin (Fig. 21).
- Use an adjustable guard to trim your body hair to the desired length on less sensitive areas (Fig. 22). The settings on the guard correspond to the remaining hair length in millimeters.
- 1 Attach the trimming head to the product (see 'Changing the heads').
 - 2 Attach a trimming guard onto the trimming head (see 'Attaching and detaching trimming guards').
 - 3 When trimming with an adjustable guard, use the hair length setting wheel or the slide switch on the guard to adjust the length (Fig. 23).
 - 4 Switch on the product.
 - 5 To trim in the most effective way, move the guard against the direction of hair growth. Make sure that the surface of the guard always stays in contact with the skin.
 - 6 Switch off and clean the product after each use (see 'Cleaning').

Detaching and attaching the cutting unit of trimming head

Detach the cutting unit from the trimming head for thorough cleaning.

- 1 To detach the cutting unit from the trimming head, place your finger near the teeth of the cutting unit and push gently upwards until the cutting unit is released from the trimming head (Fig. 24).

- 2 To attach the cutting unit onto the trimming head, insert the plastic notch at the back of the cutting unit into the guiding slot in the trimming head and gently press the teeth of the cutting unit downwards until the cutting unit clicks into place (Fig. 25).

Cleaning

Switch off the product before removing or attaching attachments and before cleaning.

Only use cold or lukewarm water to clean the product.

Never use scouring pads, abrasive cleaning agents or aggressive liquids such as gasoline or acetone to clean the product.

Never dry the cutting unit of a trimming or shaving head with a towel or tissue, as they may get caught in the teeth and cause damage.

Cleaning the shaving head

Do not clean the cutting unit of shaving head with the brush. The brush can be used for all other parts and attachments.

- 1 Switch off the product.
- 2 Detach the back shaving attachment, if attached to the product (see 'Attaching and detaching the back shaving attachment').
- 3 Detach any shaving guard from the product (see 'Attaching and detaching shaving guards') and clean it with the brush.
- 4 Detach the shaving head from the product (see 'Changing the heads').
- 5 Remove the cutting unit from the shaving head (see 'Detaching and attaching the cutting unit of shaving head'). Clean the hair chamber with the brush.
- 6 Rinse the cutting unit of shaving head, the shaving guards and the shaving head under the tap (Fig. 26).
- 7 Carefully shake off excess water and let all parts air dry completely.

Cleaning the trimming head

- 1 Switch off the product.
- 2 Detach the trimming guard and the trimming head from the product (see 'Changing the heads').
- 3 Remove the cutting unit from the trimming head (see 'Detaching and attaching the cutting unit of trimming head').
- 4 Clean the hair chamber, the cutting unit of trimming head, the trimming guards and the trimming head with the brush and rinse them under the tap (Fig. 27).
- 5 Carefully shake off excess water and let all parts air-dry completely.

Storage

Do not place or store the product where it can fall or be pulled into a tub or sink, water or other liquid.

- Make sure that the product is switched off and that the USB power source has been removed from the power outlet and from the product.
- Do not wrap the USB cable around the product when storing.
- Attach a guard onto the cutting unit of trimming head to protect it during storage.
- If provided with your product, attach a shaving guard onto the shaving head to protect the cutting unit during storage.
- Store the product, the USB power source and all the accessories in the pouch supplied. Place the pouch in a safe, dry location, where it will not be crushed, banged, or subject to damage.
- Make sure that the product and the accessories are dry before you store them in the pouch.

Replacement

Replacing the cutting element of shaving head

For maximum shaving performance, we advise you to replace the cutting unit of shaving head every year (BG2010). If the the cutting unit is worn or damaged, do not use the product and replace it immediately. Always replace the cutting unit of shaving head with the original Philips Norelco accessory.

- 1 Switch off the product and disconnect it from the power outlet.
- 2 Remove the cutting unit from the shaving head by pulling it off the product.
- 3 Place the new cutting unit onto the shaving head by snapping it into place. You will hear a click.
- 4 After replacing the cutting unit, make sure that the shaving head is firmly attached before using the product.

Accessories

Replacement parts may be purchased on our website www.philips.com/store. For maximum product performance, replace the cutting unit of shaving head once a year.

- Cutting unit of shaving head: model BG2010/40.

Assistance

For assistance, visit our website: www.philips.com/support or call toll free 1-800-243-3050.

Disposal

- This product contains a rechargeable lithium-ion battery which must be disposed of properly.
- Contact your local town or city officials for battery disposal information. You can also call 1-800-822-8837 or visit: www.call2recycle.org for battery drop-off locations (Fig. 28).
- For assistance, visit our website www.philips.com/support or call 1-800-243-3050 toll free.
- Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. For recycling information, please contact your local waste management facilities or visit: www.recycle.philips.com.

Full Two-Year Warranty

Philips North America LLC warrants this new product against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, in the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.*

Cutting units and guards are not covered by the terms of this warranty because they are subject to wear and tear.

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com/support. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips North America LLC. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

*Read enclosed instructions carefully.

45-DAY MONEY-BACK GUARANTEE

If you are not fully satisfied with your product send the product back and we'll refund you the full purchase price.

The product must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price and date of purchase.

We cannot be responsible for lost mail. The product must be postmarked no later than 45 days after the date of purchase. Philips reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.

To obtain the money-back guarantee service, please go to www.PhilipsMoneyBack.com and follow the simple 3-step process.

Delivery of refund check will occur 6–8 weeks after receipt of returned product.

