
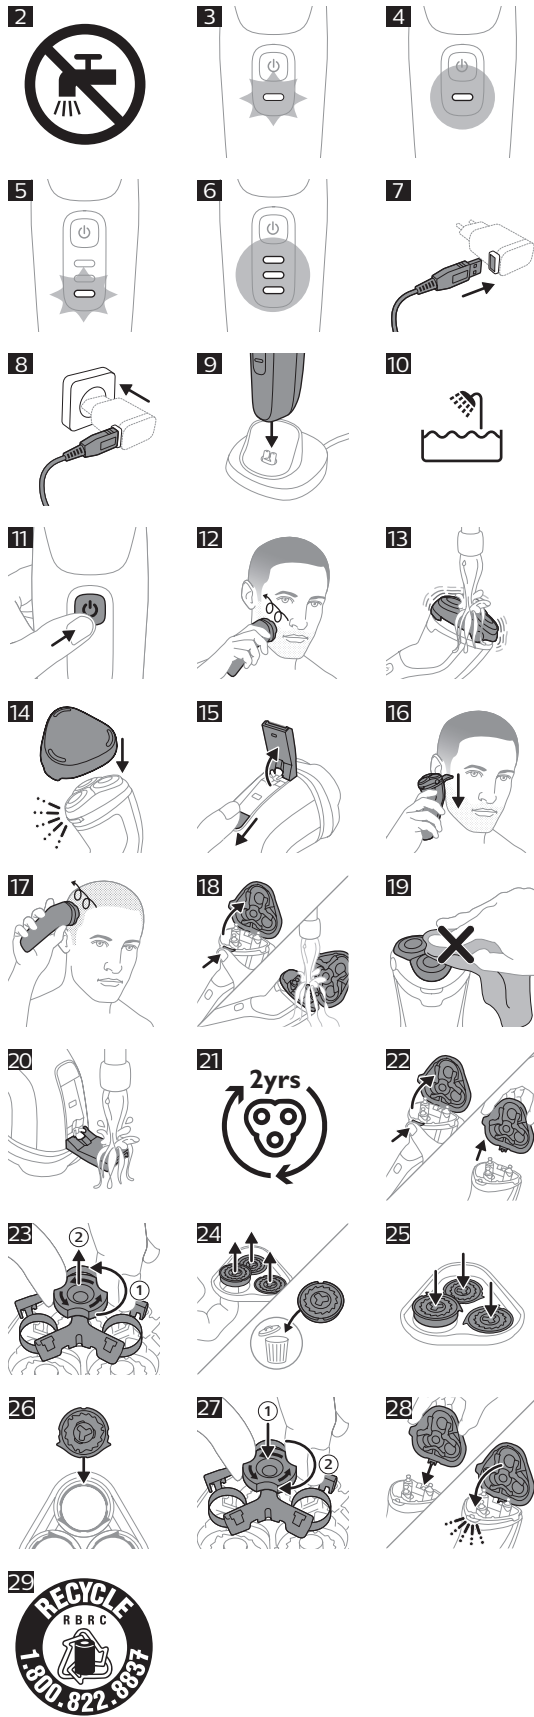


Philips and Philips shield are registered trademarks of Philips North America LLC. Philips Personal Health is a division of Philips North America LLC. P.O. Box 10313, Stamford, CT 06904

Manufactured for: Philips Personal Health is listed by Underwriters Laboratories, Inc. This symbol on the product's nameplate means it is listed by Underwriters Laboratories, Inc.

Norelco and Tripleheader are registered trademarks of Philips North America LLC. Philips and Philips shield are registered trademarks of Philips North America LLC. P.O. Box 10313, Stamford, CT 06904

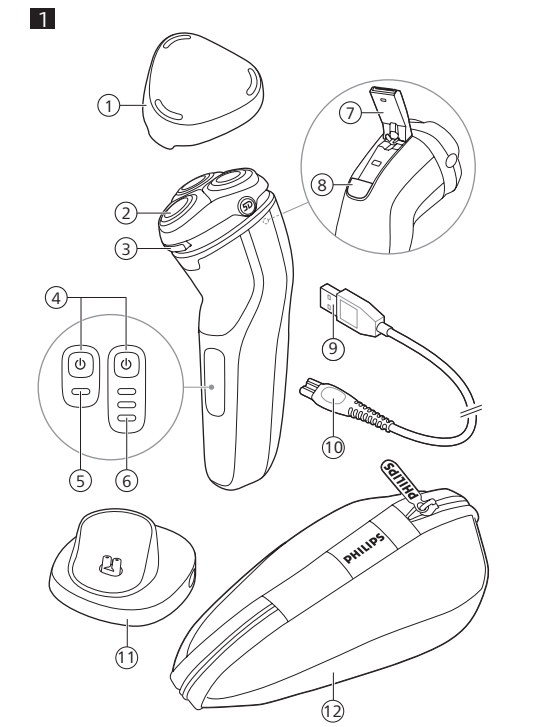

English

IMPORTANT SAFETY INSTRUCTIONS

When using an electric product, basic precautions should always be followed, including the following: **Read all instructions before using this product.**

DANGER

To reduce the risk of electric shock:

- To charge the product, only use a USB power source on a certified product with output rating 5 V, ≥ 1 A. For safe charging in a moist environment (e.g. in a bathroom), only use an IPX4 (splash-proof) power source. A suitable power source (e.g. Philips HQ87) is available via www.philips.com/support. If you need support finding the correct USB power source, contact Philips support at 1-800-243-3050. Using a non-certified USB power source may cause hazards or serious injuries.
- Keep the USB cable, the USB power source and the charging stand dry (Fig. 2).
- Do not reach for a corded product that has fallen into water. Unplug immediately from the power outlet.
- Do not place or store the product where it can fall or be pulled into a tub or sink. Do not place or drop the product into water or other liquid.
- This product does not work while it is connected to the power outlet. Except when charging, always unplug this product from the power outlet.
- Remove USB power source from power outlet and product before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- This product is only intended for shaving facial hair and scalp hair. Scalp hair must be shorter than 1.5 mm.
- Only use this product on skin that is undamaged and not affected by skin growths, skin disease or severe skin irritation.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- Use this product only for its intended household use as described in this manual. Misuse can lead to hazards or serious injuries. Do not use attachments not recommended by Philips North America LLC. Accessories supplied may vary for different products.
- Never operate this product if it has a damaged USB power source, if it is not working properly, after it has been dropped or damaged, or after the product or the USB power source has been dropped into water. For assistance call 1-800-243-3050.
- Keep the USB cable and the USB power source away from heated surfaces.
- Never drop or insert any object into any opening. Do not use the USB power source in or near a power outlet that contains an electric air freshener to prevent damage to the USB power source.
- Do not use product outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always check shaving heads (guards and cutters) before using the product. Do not use the product if cutters or guards are damaged, as injury may occur.
- Always attach the USB cable to the USB power source and the product first, then attach the USB power source to the power outlet. To disconnect, set all controls to 'off' position. Then remove the USB power source from the power outlet. Do not use an extension cord.
- Unplug USB power source before plugging in or unplugging the product.
- The batteries used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100 °C (212 °F) or incinerate.
- Only use original Philips accessories or consumables.
- Charge, use and store the product at a temperature between 50 °F / 10 °C and 95 °F / 35 °C.
- Keep product and batteries away from fire and do not expose them to direct sunlight or high temperatures.
- If the product becomes abnormally hot or smelly, changes color or if charging takes longer than usual, stop using and charging the product and contact Philips.
- Do not place products and their batteries in microwave ovens or on induction cookers.
- Do not open, modify, pierce, damage or dismantle the product or battery to prevent batteries from heating up or releasing toxic or hazardous substances. Do not short-circuit, overcharge or reverse charge batteries.
- If batteries are damaged or leaking, avoid contact with the skin or eyes. If this occurs, immediately rinse well with water and seek medical care.
- When you handle batteries, make sure that your hands, the product and the batteries are dry.
- To avoid accidental short-circuiting of batteries after removal, do not let battery terminals come into contact with metal objects (e.g. coins, hairpins, rings). Do not wrap batteries in aluminum foil. Tape battery terminals or put batteries in a plastic bag before you discard them.

SAVE THESE INSTRUCTIONS

Introduction

Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at www.philips.com/register.

General description (Fig. 1)

- 1 Protective cap
- 2 Shaving unit
- 3 Shaving unit release button
- 4 On/off button
- 5 1-level charging light (S31xx only)
- 6 3-level charging light (S32xx and S33xx only)
- 7 Pop-up trimmer
- 8 Trimmer release slide
- 9 USB cable

Note: A suitable power source (e.g. Philips HQ87) is available via www.philips.com/support.

- 10 Small plug
- 11 Charging stand (S33xx only)
- 12 Travel pouch (S3243, S3341, S3112, S3211, S3212, S3311 only)

Charge indications

S31xx

Battery low

When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the charging light flashes orange (Fig. 3).

When you switch off the product, the charging light continues to flash orange for a few seconds.

Charging

When the shaver is charging, the charging light flashes white (Fig. 3).

Battery fully charged

When the battery is fully charged, the charging light lights up white continuously (Fig. 4).

Note: After approx. 30 minutes, the charging light goes out to save energy.

Quick charge

When you start charging the empty battery, the charging light flashes white quickly. After approx. 5 minutes the charging light flashes white slowly. The shaver now contains enough energy for a 5-minute shave.

S32xx, S33xx

Battery low

When the battery is almost empty (when there are only 5 or fewer shaving minutes left), the bottom charging light starts to flash orange (Fig. 5).

When you switch off the shaver, the bottom charging light continues to flash orange for a few seconds.

Charging

While the shaver charges, first the bottom charging light flashes and then lights up continuously. Next the second charging light flashes and then lights up continuously, and so on until the shaver is fully charged (Fig. 5).

Battery fully charged

When the battery is fully charged, all charging lights light up white continuously (Fig. 6).

Note: After approx. 30 minutes, the charging lights go out to save energy.

Quick charge

When the shaver is in quick charge mode, the charging lights light up one after the other. After approx. 5 minutes, the bottom charging light flashes white. The shaver now contains enough energy for a 5-minute shave.

Charging

- If the product is subjected to a major change in temperature, pressure or humidity, let it acclimatize for 30 minutes before using.
- Do not charge the shaver in a pouch or travel case. Charge the shaver before you use it for the first time and when the charging light indicates that the battery is almost empty.
- Charging takes approx. 1 hour.
- Quick charge: After approx. 5 minutes of charging, the battery contains enough energy for a 5-minute shave.
- When the product is fully charged it has a cordless operating time of up to 60 minutes.

Note: You cannot use the product while it is charging.

Danger: Keep the USB cable, the USB power source and the charging stand (if provided) dry (Fig. 2).

Charging with a USB power source

- 1 Make sure that the product is switched off.
- 2 Insert the small plug of the USB cable into the socket in the bottom of the product.
- 3 Insert the USB plug into the USB power source (not included) (Fig. 7).
- 4 Insert the USB power source into the power outlet (Fig. 8).
- 5 The charging light on the product will indicate the charging status (see 'Charge indications').
- 6 After charging, remove the USB power source from the power outlet and pull the small plug out of the product.

Charging with charging stand (S33xx only)

- 1 Make sure that the product is switched off.
- 2 Connect the small plug of the USB cable to the charging stand.
- 3 Insert the USB plug into the USB power source (not included) (Fig. 7).
- 4 Insert the USB power source into the power outlet (Fig. 8).
- 5 Place the shaver in the charging stand in upright position, making sure the charging contacts in the bottom of the stand fit into recess in the bottom of the shaver (Fig. 9).
- 6 The charging light on the product will indicate the charging status (see 'Charge indications').
- 7 After charging, remove the shaver from the charging stand by lifting it straight up. Do not tilt the shaver.

Using the product

Always check the product and all accessories before use. Do not use the product or any accessory if it is damaged, as this may cause injury. Always replace a damaged part with one of the original type.

This product is only intended for household use.

For hygienic reasons, the product should only be used by one person.

Note: This product is waterproof (Fig. 10). It is suitable for use in the bath or shower and for cleaning under the tap with water. For safety reasons, this product can only be used without cord.

Switching the product on and off

To switch the product on or off, press the on/off button once (Fig. 11).

Shaving

For the best results on skin comfort, pre-trim your beard if you have not shaved for 3 days or longer. You can use this product either wet or dry, or even in the shower. For a wet shave, apply some water and shaving foam or gel to your skin and rinse the shaving heads under the tap with warm water before following the steps below.

- 1 Switch on the shaver.
- 2 Move the shaver in circular movements over your skin to catch hair growing in all directions (Fig. 12). Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.

Note: If you are shaving with gel or foam, rinse the shaving unit regularly during your shave to ensure that it continues to glide smoothly over your skin (Fig. 13).

- 3 Use the narrow sides of the shaving unit to shave in hard-to-reach areas such as along your jawline and under your nose.
- 4 Switch off and clean the product after each use (see 'Cleaning and maintenance').
- 5 Put the protective cap on the product to protect the shaving heads during storage and travel (Fig. 14).

Note: Make sure you rinse all foam or shaving gel off the product.

21-Day adaptation process

- 21 Day Trial and Conversion Process. It is a fact that your skin and beard need time to adjust to a new grooming system.
- Use your new shaver exclusively for 3 weeks to fully enjoy the closeness of a Philips Norelco shave.
- At first you may not get as close a shave as you expect, or your face may even become slightly irritated. This is normal since your beard and skin will need time to adjust. Invest 3 weeks and you'll soon experience the full joy of your new shaver.
- Stick with it! If you alternate shaving methods during the adjustment period, it may make it more difficult to adapt to the Philips Norelco shaving system.
- If you are still not convinced after 21 days, Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.

Trimming with pop-up trimmer

You can use the trimmer to groom your sideburns and moustache.

- 1 Push the trimmer release slide downwards to open the trimmer (Fig. 15).
- 2 Press the on/off button once to switch on the product (Fig. 11).
- 3 Hold the trimmer perpendicular to the skin and move the product downwards, exerting gentle pressure (Fig. 16).
- 4 Switch off the product and clean the trimmer after each use to prevent clogging and damage (see 'Cleaning and maintenance').
- 5 Close the trimmer ('click').

Head shaving

Warning: Pre-trim your hair if it is longer than 1.5 mm.

You can use this product either wet or dry, or even in the shower. For a wet shave, apply some water and shaving foam or gel to your skin and rinse the shaving heads under the tap with warm water before following the steps below.

- 1 Switch on the shaver.
- 2 Move the shaver in circular movements over your head, and shave in the direction of hair growth (Fig. 17).

Note: Shaving against the direction of hair growth may cause skin irritation.

- 3 Stretch your skin with your free hand so the blades can lift and cut hair. Make sure each shaving head is fully in contact with the skin. Exert gentle pressure for a close, comfortable shave.

Note: Do not press too hard, as this can cause skin irritation.

Note: Regularly remove cut hair from the hair chamber (see 'Cleaning and maintenance').

Note: If you are shaving with gel or foam, rinse the shaving unit regularly during your shave to ensure that it continues to glide smoothly over your skin (Fig. 13).

- 4 Switch off and clean the product after each use (see 'Cleaning and maintenance').
- 5 Put the protective cap on the product to protect the shaving heads during storage and travel (Fig. 14).

Cleaning and maintenance

Regular cleaning guarantees better shaving results.

Never clean, remove or replace the shaving unit while the shaver is switched on.

Do not touch shaving heads with hard objects as this may dent or damage the precision-made slotted shaving heads.

Do not use abrasives, scourers or aggressive liquids such as gasoline or acetone to clean the shaver.

Cleaning the shaver

Clean the shaver after every shave for optimal shaving performance.

Always check if the water is too hot, to prevent burning your hands.

While rinsing shaving heads, water may drip out of the base of shaver. This is a normal occurrence. Internal electric parts are in a waterproof compartment so the shaver will be protected against water damage.

- 1 Press the on/off button once to switch on the product (Fig. 11). Rinse the shaving unit with cold or lukewarm water (Fig. 13).
- 2 Press the on/off button to switch off the product. Press the shaving unit release button to open the shaving unit (Fig. 18). Rinse the shaving unit and hair chamber with lukewarm water (Fig. 18).
- 3 Rinse the outside of the shaving unit with lukewarm water.
- 4 Carefully shake off excess water and let the shaver air dry.

Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads (Fig. 19).

- 5 Close the shaving unit.

Cleaning the pop-up trimmer

Caution: Never dry the trimmer teeth with a towel or tissue, as this may damage the trimmer teeth.

Clean the trimmer after each use to prevent clogging and damage.

- 1 Switch off the shaver.
- 2 Push the trimmer release slide downwards to open the trimmer (Fig. 15).
- 3 Switch on the shaver and rinse the pop-up trimmer under warm water (Fig. 20).
- 4 Switch off the shaver after cleaning.
- 5 Carefully shake off excess water and let the pop-up trimmer air dry.
- 6 Close the trimmer ('click').

Tip: For optimal performance, lubricate the teeth of the pop-up trimmer with a drop of mineral oil every six months (oil not included).

Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years (Fig. 21). Replace damaged shaving heads immediately. Always replace the shaving heads with original Philips Norelco shaving heads (see 'Accessories').

- 1 Switch off the shaver.
- 2 Press the shaving unit release button to open the shaving unit. Pull the shaving unit off the shaver (Fig. 22).
- 3 Turn the lock counterclockwise and remove the retaining frame. Place it aside in a safe place (Fig. 23).
- 4 Remove the shaving heads from the shaving unit. Discard the used shaving heads immediately to avoid mixing them with the new shaving heads (Fig. 24).
- 5 Place new shaving heads in the shaving unit (Fig. 25).

Note: Make sure that the shaving heads with the projections fit exactly onto the hooks of the shaving head holder when placing them (Fig. 26). The shaving heads supplied with the shaver either have notches or projections. Both shaving systems are the same.

- 6 Put the retaining frame back into the shaving unit and turn the lock clockwise (Fig. 27).
- 7 Insert the hinge of the shaving unit into the slot in the top of the shaver. Then close the shaving unit (Fig. 28).

Note: If the shaving unit does not close smoothly, check if you have inserted the shaving heads properly and if the retaining frame is locked.

This product has no other user-serviceable parts. For assistance call 1-800-243-3050.

Storage

- Make sure the product is switched off. Remove the USB power source from the power outlet and the product before storing the product in a safe, dry location where it will not be crushed, banged, or subject to damage.
- Do not wrap cord around the product when storing.
- Store cord and other accessories in a safe location where these will not be cut or damaged.
- Do not place or store the product where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.

Put the protective cap on the shaver to prevent damage (Fig. 14).

Note: Always let the shaver dry completely before storing.

Storage in travel pouch (S3243, S3341, S3112, S3211, S3212, S3311 only)

Store the shaver in the travel pouch supplied.

Note: Make sure the shaver is dry before you store it in the travel pouch.

- Nota:** Siempre deje secar completamente la afeitadora antes de guardarla.