


PRESTO®

PopLite® our munch™ Hot Air Popper

- Pops with hot air, not oil, for a low-fat treat.
- Pops up to 15 cups of regular or gourmet popcorn in minutes.
- Cover flips over after popping for use as a serving bowl.

Para instrucciones en español, escanee este código QR.

Si prefiere una copia impresa, puede descargar un PDF de nuestro sitio www.GoPresto.com/espanol, enviar un correo electrónico a contact@GoPresto.com, o llamar al 1-800-877-0441.

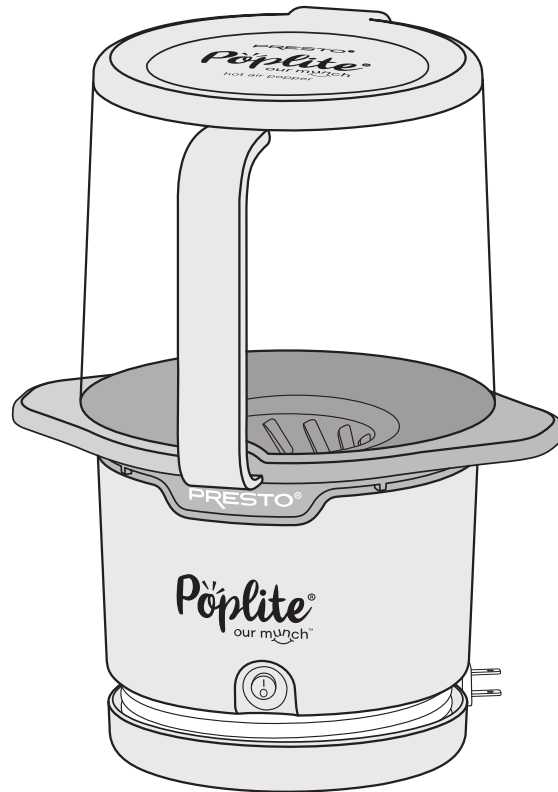

Visit www.GoPresto.com

INSTRUCTIONS

©2025 National Presto Industries, Inc.
Form 4127-171B

This is a  Listed appliance. The following important safeguards are recommended by most portable appliance manufacturers.

IMPORTANT SAFEGUARDS

To reduce the risk of personal injury or property damage when using electrical appliances, basic safety precautions should always be followed, including the following:

1. **Read all instructions.** Do not leave unit unattended while in use.
2. Popper cover/serving bowl must be in place before turning unit on.
3. This unit pops with hot air. Do not place oil, shortening, butter, or margarine in the popping chamber. Use of these substances will cause hazards and will damage the unit.
4. Do not touch hot surfaces. Use handles or knobs.
5. To protect against electrical hazards, do not immerse cord, plug, or popper base in water or other liquids.
6. Close supervision is necessary when any appliance is used by or near children.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
8. Do not operate any appliance with a damaged cord or plug, or in the event the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the Presto Service Department for examination, repair, or electrical or mechanical adjustment.
9. The use of accessory attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock, or injury. Use only genuine Presto® accessory attachments and replacement parts.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter, or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

Important Cord Information

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. An extension cord may be used if care is properly exercised in its use.

If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Connect the power supply cord to a 120VAC electrical outlet only.

Before First Use

- Become familiar with the popper parts (Fig. A) and read the following instructions carefully.
- The popper is shipped with the base nested in the popper cover/serving bowl. Invert the unit so the serving bowl lid is facing up (Fig. A) and lift the cover/serving bowl off the base.
- Wipe the popper base with a damp cloth.

CAUTION! To prevent electrical shock and damage to the popper base, never immerse the popper base in water or other liquid.

- Wash the popper cover/serving bowl and serving bowl lid in warm, soapy water; rinse and dry thoroughly. **Do not wash in the dishwasher.**

How to Use

1. Unwrap the power cord from the popper base. Plug the unit into a 120VAC electrical outlet. Do not turn the unit on until step 5 as preheating the popper is not necessary.
2. Pour $\frac{1}{2}$ cup of popping corn in the metal popping chamber or alternatively fill the chamber to the upper edge (Fig. A). By design, the popped corn will not totally fill the bowl. The space between the top of the popped corn and the bowl allows for neat and easy mixing. It is typical for yellow popcorn to yield larger popped volumes than white or specialty popcorn.

If a small quantity of popcorn is desired, you can pop as little as $\frac{1}{4}$ cup of popping corn. If a larger batch is preferred, you can experiment by increasing the amount in 1 tablespoon increments until you find the measurement that works best for the type of popcorn you are using.

NOTE: If too much popcorn is used, the popper cover may lift as it fills with popcorn and both popped and unpopped kernels may spill out the sides. Likewise, scorching may occur.

WARNING! Do not place salt, seasoning, butter, margarine, shortening, or microwave popcorn in the popping chamber as this could damage the popper and cause a fire hazard.

3. Place the cover/serving bowl over the popper base so the clear cover handles align with the base handles.
4. Remove the serving bowl lid to allow steam to vent during popping.

NOTICE: Failure to remove the lid will result in poor popping performance and may cause the lid and the cover vents to melt.

5. Press the “I” on the power switch to turn the unit on (Fig. A). Once popping starts, it will be completed in $2\frac{1}{2}$ to 3 minutes. When you turn the unit on and also during popping, you may notice popcorn chaff releasing from the popping chamber as a result of the hot air blowing. This is normal.
6. **At the first sign that popping is slowing** (about 1 to 2 seconds between pops), press the “O” on the power switch to turn the unit off and snap the lid onto the cover/serving bowl.

NOTE: Popcorn may scorch if the popper is not turned off as soon as popping slows.

7. Hold the clear cover handles and popper base handles together and immediately flip the unit over. Grasp the base under the built-in cord wrap (Fig. A) and lift it off the cover/serving bowl.


CAUTION! Do not touch the popping chamber as it will be hot.

8. Add salt or seasoning to popcorn as desired.

NOTICE: If using spray butter, transfer the popcorn to another bowl before applying the spray butter. Spray butter may damage the cover/serving bowl.

Hint: Before adding salt or seasoning, lightly spray popcorn with no-stick cooking spray to add flavor. Salt and seasoning will also adhere better after spraying.

Fig. A

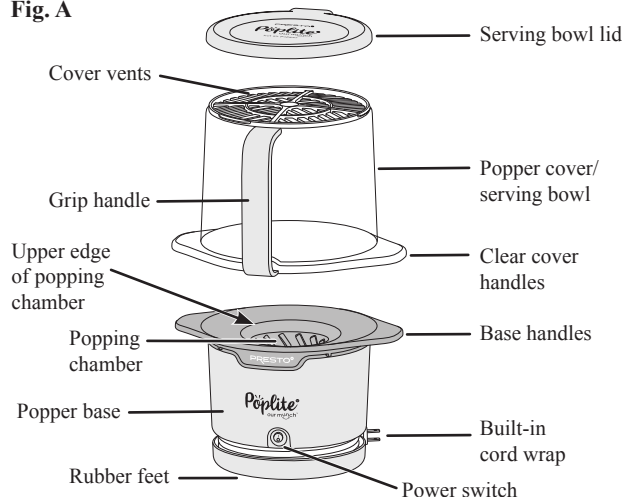

IMPORTANT: If popping consecutive batches, allow the popper to cool 1 minute between batches. Failure to do so may cause the popper to shut off temporarily. If that happens, turn the popper off, snap the lid on, and flip the unit over. Lift the base off the serving bowl and empty any popped or unpopped corn. Allow the unit to cool for 5 minutes and begin again with step 2.

How to Clean

1. Allow the popper to cool before cleaning.
2. Wash the cover/serving bowl and lid in warm, soapy water; rinse and dry thoroughly.
Do not wash in the dishwasher or scour surfaces with steel wool or abrasive cleaners.
3. Wipe the popper base, including the popping chamber, with a soft, dry cloth to clean. Do not use steel wool or abrasive cleaners. Occasionally clean the bottom of the rubber feet with a damp cloth to remove any dust or debris. **Never immerse the popper base in water or other liquid.**
4. Wrap the cord around the bottom of the base (Fig. A, page 2) and place the base inside the cover/serving bowl for compact storage (Fig. B).

Fig. B

Popper base nests in popper cover/serving bowl for compact storage.



Helpful Hints

- This popper is designed to pop regular and premium brands of popcorn. Try different brands to find the one you like best. Yellow popcorn generally pops into larger kernels than white.
- Some varieties of small and lighter weight kernel popcorn are not recommended for use with hot air poppers. Refer to popcorn packaging for any additional instructions.
- Always use fresh popcorn for the best popping performance. Store popcorn in a tightly sealed container. Do not store popcorn in a refrigerator or freezer as this can dry out the kernels quickly.
- If your popcorn does not pop well, it may be too dry. Try adding a little bit of water to the popcorn. Add 1 tablespoon per quart of popcorn. Then place the corn in an airtight container and shake at frequent intervals until the popcorn has absorbed the water. Wait for 3 or 4 days and then try popping the corn.

Consumer Service Information

If you have any questions regarding the operation of your Presto® appliance, need parts, or repair for your appliance, contact us by any of these methods:

- Call 1-800-877-0441 weekdays 8 a.m. to 4 p.m. (Central Time)
- Email us through our website at www.GoPresto.com/contact
- Chat at GoPresto.com weekdays 9 a.m. to 12 noon and 1 to 3 p.m. (Central Time)
- Write: National Presto Industries, Inc.
Consumer Service Department
3925 North Hastings Way
Eau Claire, WI 54703-3703

Inquiries will be answered promptly by email, telephone, or letter. When emailing or writing, please include a phone number and a time when you can be reached during weekdays if possible.

When contacting the Consumer Service Department, please indicate the model and series numbers for the popper. These numbers can be found on the bottom of the popper.

Please record this information:

Model _____ Series _____ Date Purchased _____

The Presto Service Department is equipped to service Presto® appliances and supply genuine Presto® parts. Genuine Presto® replacement parts are manufactured to the same exacting quality standards as Presto® appliances and are engineered specifically to function properly with its appliances. Presto can only guarantee the quality and performance of genuine Presto® replacement parts. “Look-alikes” might not be of the same quality or function in the same manner. To ensure that you are buying genuine Presto® replacement parts, look for the Presto® trademark.

Product Registration

IMPORTANT: Please go online and register this product within 10 days of purchase. Proper registration will serve as proof of purchase in the event your original receipt becomes misplaced or lost. Registration will not affect warranty coverage, but it may expedite the processing of warranty claims. The additional information requested will help us develop new products that best meet your needs and desires. To register your product, simply scan this QR code or visit www.GoPresto.com/registration. If you do not have computer access, call the Consumer Service Department at 1-800-877-0441 for assistance with registration.



Presto® Limited Warranty

(Applies only in the United States)

This quality Presto® appliance is designed and built to provide many years of satisfactory performance under normal household use. Presto pledges to the original owner that should there be any defects in material or workmanship during the first year after delivery of the Presto® appliance, we will repair or replace it at our option. Our pledge does not apply to damage caused by shipping. ***Outside the United States, this limited warranty does not apply.***

To obtain service under the warranty, please call our Consumer Service Department at 1-800-877-0441 or visit www.GoPresto.com/contact. If unable to resolve the problem, you will be instructed to send your Presto® appliance to the Presto Service Department for a quality inspection; shipping costs will be your responsibility. When returning an appliance, please include your name, address, phone number, and the date you purchased the appliance as well as a description of the problem you are encountering with the appliance.

We want you to obtain maximum enjoyment from using this Presto® appliance and ask that you read and follow the instructions enclosed. Failure to follow instructions, damage caused by improper replacement parts, abuse, misuse, disassembly, alterations, or neglect will void this pledge. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is Presto's personal pledge to you and is being made in place of all other express warranties.

**National Presto Industries, Inc.
Eau Claire, WI 54703-3703**

Form 4127-171B