


PRESTO® FryDaddy®

electric deep fryer

- Delicious deep-fried foods, fast and easy.
- Makes four servings of french fries with just four cups of oil.
- Maintains the proper frying temperature automatically.

Para instrucciones en español, escanee este código QR.
Si prefiere una copia impresa, puede descargar un PDF de nuestro sitio www.GoPresto.com/espanol, enviar un correo electrónico a contact@GoPresto.com, o llamar al 1-800-877-0441.

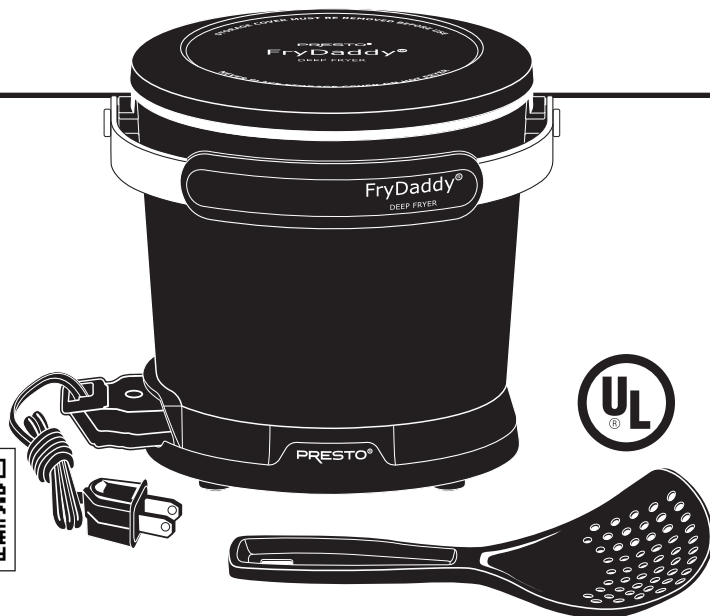

Visit www.GoPresto.com

INSTRUCTIONS

©2026 National Presto Industries, Inc.
Form 4075-015D

This is a  Listed appliance. The following important safeguards are recommended by most portable appliance manufacturers.

IMPORTANT SAFEGUARDS

To reduce the risk of personal injury or property damage when using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles.
3. To protect against electrical shock or burns, do not immerse unit, cord, or plug in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Do not let children handle or put electrical cords or plugs in their mouths.
6. Always attach the magnetic plug end to the appliance first, then plug cord into the wall outlet. To disconnect, remove the plug from wall outlet first, then from the appliance.
7. Unplug from wall outlet when unit is not in use and before cleaning. Allow the appliance to cool before putting on or taking off parts and before cleaning.
8. Do not operate any appliance with a damaged cord or plug or in the event the appliance malfunctions or has been damaged in any manner. Return the appliance to the Presto Service Department for examination, repair, or electrical or mechanical adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries. Use only genuine Presto® accessory attachments and replacement parts.
10. Do not use outdoors.
11. Do not let the cord hang over the edge of the table or counter, or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. It is recommended that this fryer not be moved when it contains hot oil or other hot liquid. If it must be moved when it contains hot oil or other hot liquid, use extreme caution.
14. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

Important Cord Information

A short detachable power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. **DO NOT USE WITH AN EXTENSION CORD.**

Do not allow the cord to run underneath or around the unit. The magnetic cord may not detach easily if the cord is positioned in this fashion.

Connect the power supply cord to a 120VAC electrical outlet only.

Important Safety Information

WARNING! Burn Hazards

- Hot oil can cause serious and painful burns. Close supervision is necessary when any appliance is used by or near children.
- **Oil and water do not mix.** The combination can be dangerous. Accordingly, before pouring oil into the fryer be sure it is COMPLETELY DRY. In addition, before placing food in deep fryer, always remove ice crystals and excess moisture from food by patting dry with paper towels. When the oil is heated, any water droplets in the oil superheat, becoming a volatile steam that can cause hot oil to spatter, boil over, or even erupt out of the deep fryer.
- Use caution when frying doughs, such as beignets, donuts, dumplings, hushpuppies, and fritters. These foods may develop air bubbles during heating, which may burst and cause burns. Use the scoop provided or a tongs, rather than a fork, to turn food during frying and to remove food from oil.
- Use caution when frying flour tortillas. Flour tortillas contain air bubbles. During frying, oil can become trapped within these bubbles. If not properly drained, the bubbles can burst and cause burns. Accordingly, after frying, carefully raise the tortillas out of the vegetable oil and allow to drain for approximately 30 seconds.

WARNING! Electrical Hazards

To avoid the risk of electrocution or severe disfiguring electrical burns:

- Do not let cord or plug come in contact with water or other liquid.
- Do not let children handle or put electrical cords or plugs in their mouths.

Important Fryer Guidelines

- **Use deep fryer only on a clean, dry, level, stable, and heat-resistant surface, away from the edge.**
- Use vegetable oils, such as peanut, canola, corn, sunflower, soybean, and light olive oil. These oils can withstand the high temperatures required for deep frying. Do not use extra virgin olive oil or other vegetable oils as they deteriorate at temperatures below those required for deep frying.
- Deep frying foods in butter, margarine, or animal fat is not recommended because of lower smoking temperatures.
- Avoid preheating oil longer than necessary and unplug the fryer once the last batch of food has been removed. The longer the oil is heated, the more it deteriorates.
- Always remove plug from wall outlet and then from deep fryer when unit is not in use.
- Always allow fryer to cool completely before removing oil and before cleaning.
- If unit fails to preheat or if the cooking process stops, check cord assembly to assure magnetic plug is attached to the appliance and the cord is plugged into the wall outlet.

How to Use


Before using for the first time, wash scoop and interior of unit with warm, soapy water and dry thoroughly. **CAUTION!** To avoid electrical shock, never immerse unit in water or other liquid or wash in dishwasher.

1. Remove plastic cover.
2. Check the rubber pads on the bottom of the unit before each use to be sure they are free of oil or other debris. Wipe pads with warm, soapy water if necessary, then dry thoroughly.
3. Place deep fryer on a clean, dry, level, stable, and heat-resistant surface, away from any edges.
4. Fill unit with vegetable oil or shortening up to oil level line located on inside of unit.

Never use more than four, 8-ounce cups of cooking oil or 2 pounds of shortening.

Never use any cover while oil is heating or while frying food.

5. Attach the cord to the unit by aligning the magnetic plug end of the cord assembly with the two electrical pins located in the recessed area of the fryer base. When properly aligned, the plug will magnetically attach itself to the appliance. **For proper connection, the magnetic plug end must be parallel with the counter-top.**

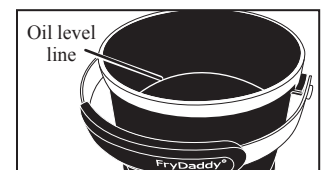

Important: The magnetic cord was designed to detach easily from the fryer. As a result, if bumped or touched during use, the cord could detach, causing the unit to stop heating. Avoid contact with cord during operation. If contact occurs, verify cord is still properly connected.

6. Plug cord into a 120VAC electrical wall outlet only. The unit is now on and will remain on until unplugged.

Note: You may hear an occasional pop or clicking sound while the fryer is preheating or cooling down. This is normal.

When using the fryer for the first time, a slight odor or light smoking may occur as manufacturing residue evaporates. This is normal.

7. Preheat oil for 12 minutes.

8. Gently place 1 to 4 cups of food into unit. For homemade fries, fry only 1 cup at a time to avoid oil boiling over. Use scoop to lessen spattering of hot oil.

Note: If the plug accidentally detaches from the fryer during operation, reattach the cord following step 5, page 2. Use extreme caution as unit will be hot.

9. Occasionally stir food gently while frying to prevent foods from sticking together. Use scoop provided or other heat-resistant utensil.
10. When food reaches desired brownness, lift and drain with scoop; for recommended cooking times, refer to page 4. Place food on paper towels. Season to taste. Repeat steps 8, 9, and 10 for additional servings.
11. Remove plug from wall outlet and then from deep fryer. Allow oil and fryer to cool completely in a safe place. Do not place the cover on the unit until it is completely cool. **Placing the cover on a hot unit may cause the cover to melt.**

CAUTION! To avoid risk of burns, do not touch the aluminum portion of the handle when the unit is hot. Only the plastic grip in the center portion of the handle may be grasped.


Care and Cleaning

1. After the unit and oil have cooled completely, discard or strain the oil. Refer to the section “Handling Oil after Frying” below.
2. Wash fryer and scoop with warm water and mild detergent. If necessary, clean the interior and exterior of unit with a non-metal cleaning pad, such as Scotch-Brite® Multi-Purpose Scrub Sponge. Firm pressure can be applied, when needed. Rinse thoroughly.

CAUTION! To avoid electrical shock, never immerse the unit in water or other liquid or wash in the dishwasher.

Use a soft dry cloth to gently wipe all oil residue from the magnetic end of the cord, as well as the recessed area on the fryer base, including the electrical pins.

3. **Dry fryer completely.** Even small amounts of moisture present in the fryer during heating can produce large amounts of steam which will expand and possibly cause oil to erupt out of the fryer.
4. Do not use steel wool scouring pads or abrasive kitchen cleaners on the nonstick finish.
5. Store the cord in a clean, dry location away from metal objects. Always check the magnetic plug before use to assure metal items have not become attached.

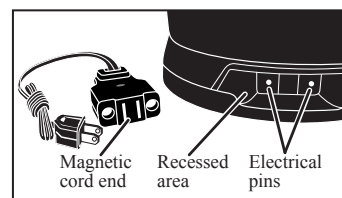

Handling Oil after Frying

After frying foods, allow oil to cool. If planning to reuse the cooking oil, strain it through a filter or a double thickness of cheesecloth to remove the accumulated residue. Clean the unit as described above. Then pour the oil back into the fryer and cover with the storage lid. Store the oil in a cool, dark area.

The number of times the oil can be reused will depend on the type of oil used and the food that is fried in it. For example, the oil will need to be replaced more often if fish or food coated with bread or cracker crumbs is fried frequently.

Replace the oil if it is dark in color, has an unpleasant odor, smokes when it is heated, or foams excessively during frying.

Helpful Hints for Deep Frying

- Fry foods of equal size and thickness as they will fry more evenly and at the same speed.
- Do not overfill the fryer. Fry 1 to 4 cups of food at a time. If too much food is fried at the same time, the food will not get crisp.
- Use only heat-resistant utensils in the fryer. Hot oil damages most plastic or rubber utensils. Do not leave metal utensils in the fryer as they will become hot and can cause injury.
- When breading food, use any type of flour, corn meal, fine bread or cracker crumbs, or commercial breading to coat the food. To get the breading to adhere better to the food, dip the food first in a mixture of egg and milk (see Crispy Coating recipe on page 4).

*Scotch-Brite is a registered trademark of 3M Company. Presto is not affiliated with this company.

Crispy Coating Recipe

½ cup milk
1 egg, beaten

Salt and Pepper
Flour

Beat milk and egg together in a shallow bowl. Combine flour and seasonings in another shallow bowl. Dip food into milk mixture, then coat in seasoned flour. Fry food according to timetable on the next page.

Frying Timetable

Fry 1 to 4 cups of food at a time. When frying homemade fries, fry only 1 cup at a time. The following times are approximate.

TYPE OF FOOD	APPROXIMATE FRYING TIME
Cheese	
Nuggets, frozen	2 to 3 minutes
Chicken	
Nuggets/Strips, frozen	3 to 5 minutes
Pieces (serving size), raw, breaded	12 to 18 minutes
	Note: Breasts larger than 6 ounces will require additional frying time.
Strips, raw, breaded	2 to 3 minutes
Donuts	2 to 3 minutes
Egg Rolls	
Frozen	8 to 10 minutes
Fresh	3 to 5 minutes
Fish Fillets	
Frozen, battered/breaded	5 to 7 minutes
Raw, battered/breaded	3 to 4 minutes
Onion Rings	
Frozen, battered/breaded	2 to 3 minutes
Fresh, battered/breaded	1½ to 2½ minutes
Potatoes	
French fries, frozen	8 to 10 minutes
French fries, homemade	9 to 11 minutes
Shrimp	
Frozen, battered/breaded	4 to 8 minutes
Raw, battered/breaded	2 to 5 minutes

Consumer Service Information

If you have any questions regarding the operation of your Presto® appliance, or need parts or repair for your appliance, contact us by any of these methods:

- Call 1-800-877-0441 weekdays 8 a.m. to 4 p.m. (Central Time)
- Email us through our website at www.GoPresto.com/contact
- Chat at GoPresto.com weekdays 9 a.m. to 12 noon and 1 to 3 p.m. (Central Time)
- Write: National Presto Industries, Inc., Consumer Service Department
3925 North Hastings Way, Eau Claire, WI 54703-3703

Inquiries will be answered promptly by email, telephone, or letter. When emailing or writing, please include a phone number and a time when you can be reached during weekdays if possible.

When contacting the Consumer Service Department, please indicate the model and series numbers for the deep fryer. These numbers can be found on the bottom of the fryer. Please record this information:

Model _____ Series _____ Date Purchased _____

The Presto Service Department is equipped to service Presto® appliances and supply genuine Presto® replacement parts. Genuine Presto® replacement parts are manufactured to the same exacting quality standards as Presto® appliances and are engineered specifically to function properly with its appliances. Presto can only guarantee the quality and performance of genuine Presto® replacement parts. “Look-alikes” might not be of the same quality or function in the same manner. To ensure that you are buying genuine Presto® replacement parts, look for the Presto® trademark.

Product Registration

IMPORTANT: Please go online and register this product within 10 days of purchase. Proper registration will serve as proof of purchase in the event your original receipt becomes misplaced or lost. Registration will not affect warranty coverage, but it may expedite the processing of warranty claims. The additional information requested will help us develop new products that best meet your needs and desires.

To register the product, visit www.GoPresto.com/registration or simply scan this QR code. If you do not have computer access, contact the Consumer Service Department at 1-800-877-0441 for assistance with registration.



Presto® Limited Warranty

(Applies only in the United States)

This quality Presto® appliance is designed and built to provide many years of satisfactory performance under normal household use. Presto pledges to the original owner that should there be any defects in material or workmanship during the first year after delivery of the Presto® appliance, we will repair or replace it at our option. Our pledge does not apply to damage caused by shipping. ***Outside the United States, this limited warranty does not apply.***

To obtain service under the warranty, please call our Consumer Service Department at 1-800-877-0441 or visit www.GoPresto.com/contact. If unable to resolve the problem, you will be instructed to send your Presto® appliance to the Presto Service Department for a quality inspection; shipping costs will be your responsibility. When returning an appliance, please include your name, address, phone number, and the date you purchased the appliance as well as a description of the problem you are encountering with the appliance.

Because we cannot control the quality of appliances sold by unauthorized sellers, this warranty applies only to appliances that were purchased from Presto® or a Presto authorized seller, unless otherwise prohibited by law. We reserve the right to reject warranty claims for appliances purchased from unauthorized sellers, including unauthorized internet sites. For additional information, simply scan this QR code or visit www.GoPresto.com/downloads/warranty.



We want you to obtain maximum enjoyment from using this Presto® appliance and ask that you read and follow the instructions enclosed. Failure to follow instructions, damage caused by improper replacement parts, abuse, misuse, disassembly, alterations, or neglect will void this pledge. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is Presto's personal pledge to you and is being made in place of all other express warranties.

National Presto Industries, Inc., Eau Claire, WI 54703-3703

Form 4075-015D