



Multiroom App Guide

imagine the possibilities

Thank you for purchasing this Samsung speaker.
To receive more complete service,
please register your speaker at
www.samsung.com/register

- This Multiroom app guide is based on the speaker using the Android or iOS operating system.
- The Multiroom app screen is based on the Android operating system.
The screen configuration may change after you upgrade the software version.

Contents

CONNECTING TO A WI-FI NETWORK

Preparing to Connect	4
Requirements	4
Installing the Samsung Multiroom app....	4
Launching the Samsung Multiroom app....	4
Connecting to Wi-Fi.....	5
Connecting to Wi-Fi automatically	5
Connecting to Wi-Fi manually.....	8
Connecting with a LAN Cable (Soundbar only)	10
Adding Additional Speaker(s)	11

USING THE SAMSUNG MULTIROOM APP

The App at a Glance.....	13
Playing Music	14
Playing a music file stored in the smart device	14
Listening to streaming music.....	15
Listening to Internet Radio	16
Following a station	17
Setting presets.....	18

Listening to Music from Other Devices Connected to Your Network	19
---	----

Using Play Screen Features	20
----------------------------------	----

 Adding music to favorites	20
 Using playback options	20
 Current playlist.....	20
Music control icons	21
Adjusting the equalizer functions	22
Managing the current playlist	23
Managing a playlist	25

Using the Settings Menu	27
-------------------------------	----

Add Speaker.....	27
Alarm	27
Sleep Timer	28
Input Source	29
Music Services.....	29
Device Settings	30
Support	33
Information.....	33

Listening to Music through Multiroom App in Smart Watch	34
--	----

Galaxy Gear S: Downloading Multiroom app	34
---	----

Apple Watch: Setting MultiRoom in smart device	34
---	----

Using the Multiroom app in Smart Watch.....	35
--	----

CONNECTING MULTIPLE SPEAKERS

Setting Groups	37
Configuring Stereo/Surround Sound Mode Settings.....	40
Configuring multi-channel by connecting TV to Multiroom speaker wirelessly	41
Configuring multi-channel by connecting TV & Soundbar to Multiroom speaker	42

USING MISCELLANEOUS FUNCTIONS

Playing Media Content Saved on a PC	44
Samsung Link.....	44
Wireless Audio - Multiroom for Desktop	45

APPENDIX

Troubleshooting.....	47
Compatible devices	47

Connecting to a Wi-Fi network

Preparing to Connect



Requirements

- 1 Wireless Router, Smart Device
- 2 The wireless router must be connected to the Internet.
- 3 The smart device must be connected to the router via a Wi-Fi connection.

 
Installing the Samsung Multiroom app

To use the speaker, you must download and then install the **Samsung Multiroom** app on your smart device. You can download the app from Google play or the App Store. Install **Samsung Multiroom** to play music saved on a smart device, music provided in music services, or an Internet radio broadcast.

Android	iOS
Market search : Samsung Multiroom 	Market search : Samsung Multiroom 

Launching the Samsung Multiroom app

To launch the **Samsung Multiroom** app, select the Multiroom app icon on your smart device.

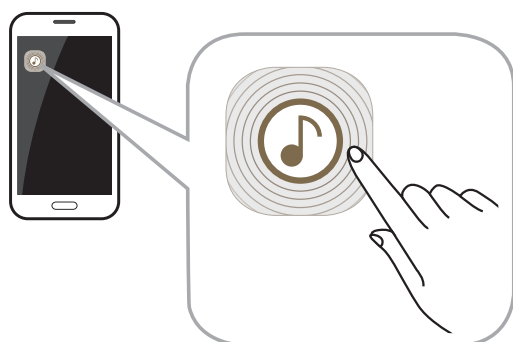

NOTE

- ✓ Please terminate the **Samsung Multiroom** App when you are not using your speaker. The app can cause the battery in your smart device to discharge more quickly if it continues to run.

Connecting to Wi-Fi

■ Connecting to Wi-Fi automatically

- 1 Plug the speaker into an electrical outlet.
- 2 On your Smart device, select the **Samsung Multiroom** app.
- 3 Select **NEW SETUP**.
- 4 Select the speaker to connect.
- 5 Check that the speaker power is connected and is within the effective range for Wi-Fi connection, and then select **Yes**.
 - Your smart device searches for devices available for pairing.

 


- 6 Once your smart device finds the Speaker, it attempts to connect it to your wireless network. If your network requires a password, the password prompt appears on the smart device's screen. Use the on-screen keyboard to enter the password.
 - Depending on your network environment, the speaker may not connect automatically. If this occurs, select **Not Blinking**, and then go to pages 8~9 for instructions.


[Click here.](#)

- 7 Select **Connect**.
 - 8 To connect only the speakers found from search and finish the process, select **No**.
To connect an additional speaker on the same network, select **Yes**.
(Applicable to Android only).
- The network connection is complete.

<Android>

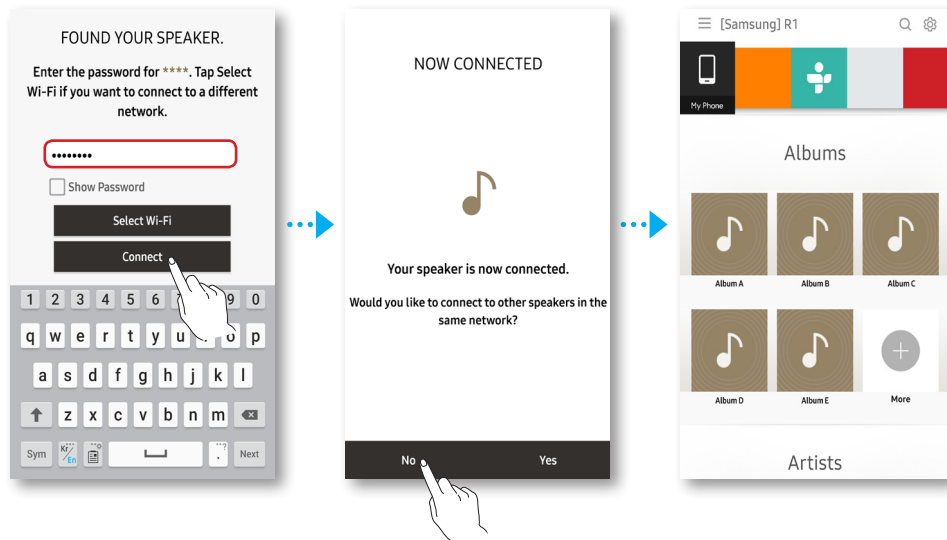

<iOS>

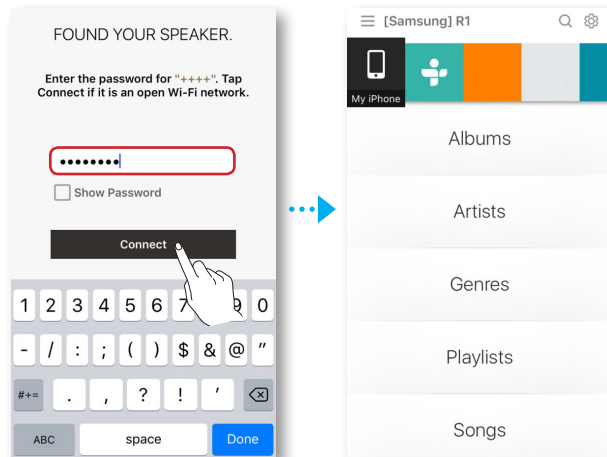 



NOTES

- ✓ To connect the Speaker to a secure wireless network safely, you must enter a valid password.
 - If you have network specific questions about connecting this speaker to your home or work wireless network, consult your service provider or the network administrator.
- ✓ If the speaker is not connected to the network or the network connection does not work properly, move the speaker closer to the router and try again.
- ✓ The distance between devices, obstructions, or interference from other wireless devices may impact communication between the Speaker and your network.
- ✓ This speaker may be found by some other Wi-Fi devices. However, they are not allowed to connect to it.
- ✓ Once the Wi-Fi connection is established initially, it is maintained unless the wireless router is replaced or its network settings are changed.
- ✓ In case of mobile device that supports Quick Connect function, connection with the Speaker can be easily done by the pop-up screen on your mobile device.

 
■ Connecting to Wi-Fi manually

Depending on your network environment, the speaker(s) may not connect automatically. If this occurs, you can set up the Speaker manually to connect to the network.


- 1 If an automatic connection fails, select **Not Blinking**.



- 2 **WAM5500/WAM3500/WAM3501/WAM1500/WAM1501/WAM1400** : On the lower part of the speaker, briefly press **SPK ADD/Wi-Fi SETUP** and start **Wi-Fi Setup**.

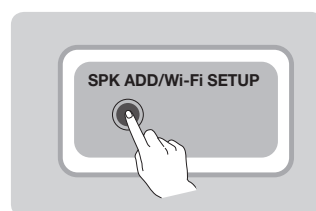


 Soundbar : After turning the speaker on, press and hold the **Wi-Fi SETUP** button located at the back for 5 seconds.

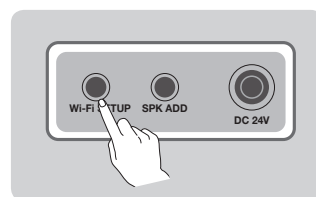


WAM7500/WAM6500 : Press and hold the **Play/Pause** and **Standby** buttons on the speaker simultaneously for more than 5 seconds to initiate **Wi-Fi Setup**.

 - After initiating Wi-Fi Setup, you have two minutes to establish the Wi-Fi connection using your smart device.

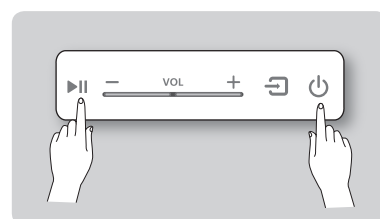


- 3 Your smart device searches for devices available for pairing.
- 4 If a speaker is found during search, a connection is established between the speaker and smart device, and then a connection to the Wi-Fi network is attempted.
If the network is protected, the smart device displays a password input screen.
Use the keyboard to enter your password.
- 5 To connect only the speakers found from search and finish the process, select **No**.
To connect an additional speaker on the same network, select **Yes**.
(Applicable to Android only).
 - The network connection is complete.
 
<Android>

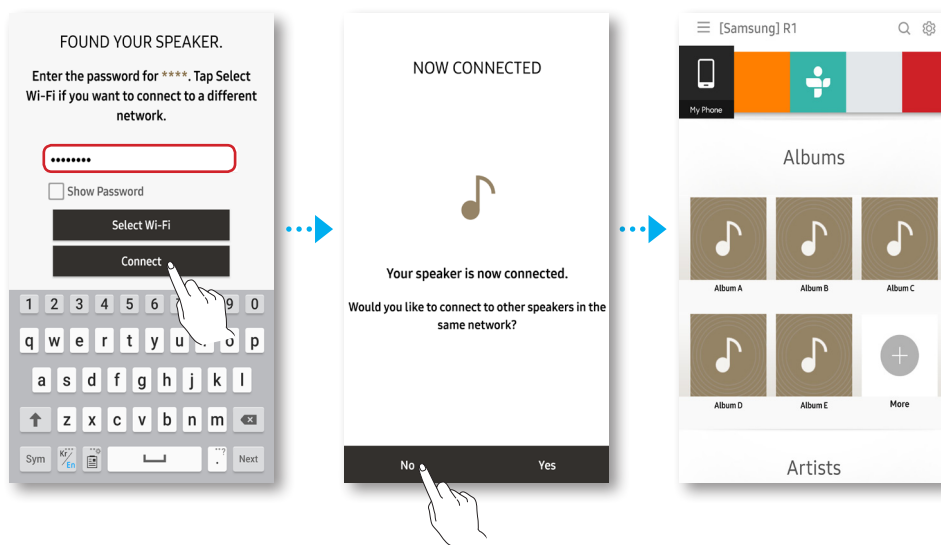


<iOS>

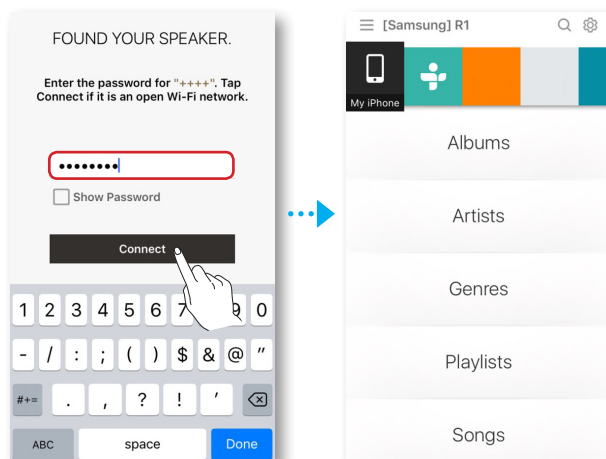 

Connecting with a LAN Cable (Soundbar only)

 
- 1 Connect one end of the LAN cable to the speaker's **LAN** port and the other end to the wireless router.
(The speaker and smart device must be connected to the same wireless router.)
- 2 Plug the speaker into an electrical outlet.
- 3 On your Smart device, select the **Samsung Multiroom** app.
- 4 At the top left of the home screen, select  to display the list of speakers. Check that the Soundbar is included in the list.

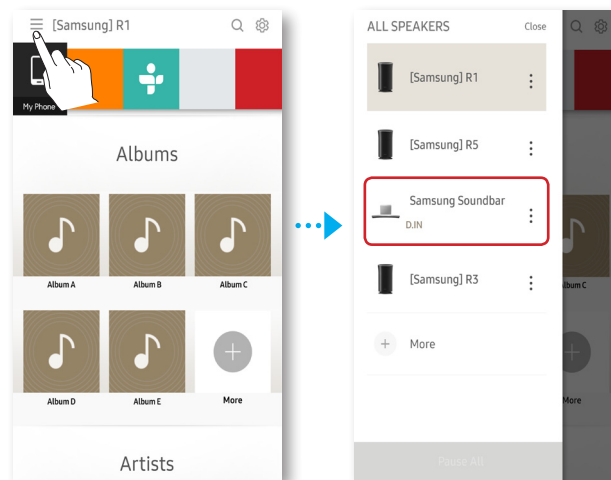

Adding Additional Speaker(s)

You can add additional speakers to your network using the Add Speaker function.

 
- 1 Connect the power cable of the new speaker to a wall outlet.
 - When you connect the power cable of the speaker to a wall outlet, the speaker boots up (which takes about 30 seconds), and then initiates Wi-Fi setup automatically.
 - After Wi-Fi setup is initiated, you have two minutes to establish the Wi-Fi connection using your smart device.
- 2 On your Smart device, select the **Samsung Multiroom** app.
- 3 At the top left of the home screen, select  to display the list of speakers.
- 4 Select **More**.
- 5 Select **Add New Speaker**.

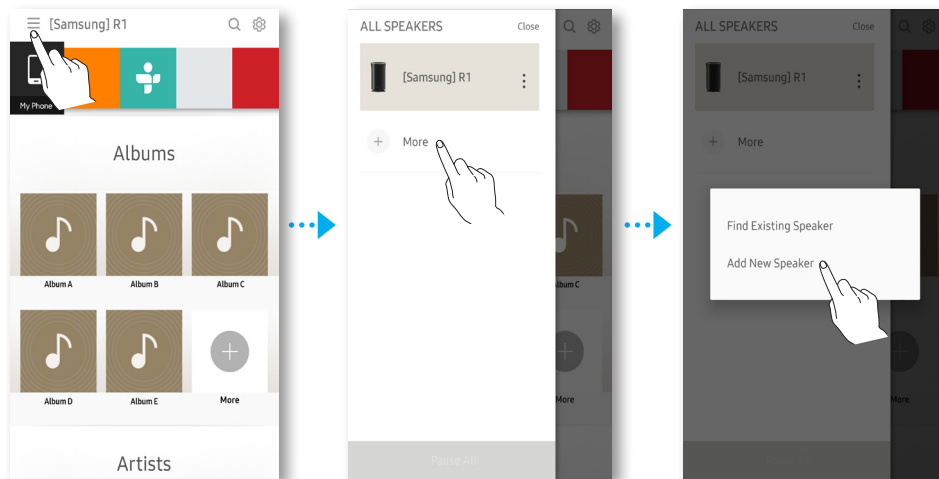

- 6 Select the speaker to add.
- 7 Check that the speaker power is connected and is within the effective range for Wi-Fi connection, and then select **Yes**.
 - Your smart device searches for devices available for pairing.




 - 8 If a speaker available for connection is found, connecting to the Wi-Fi network is attempted based on network information on the existing speaker. Select **Yes**.
- To connect to another network, select **No**. If the network is protected, the smart device displays a password input screen. Use the keyboard to enter your password.
 - Depending on your network environment, the speaker(s) may not connect automatically. If this occurs, refer to [Click here.](#) on pages 8~9.
- 9 To connect only the speakers found from search and finish the process, select **No**. To connect an additional speaker on the same network, select **Yes**. (Applicable to Android only).
- Your new speaker is added.

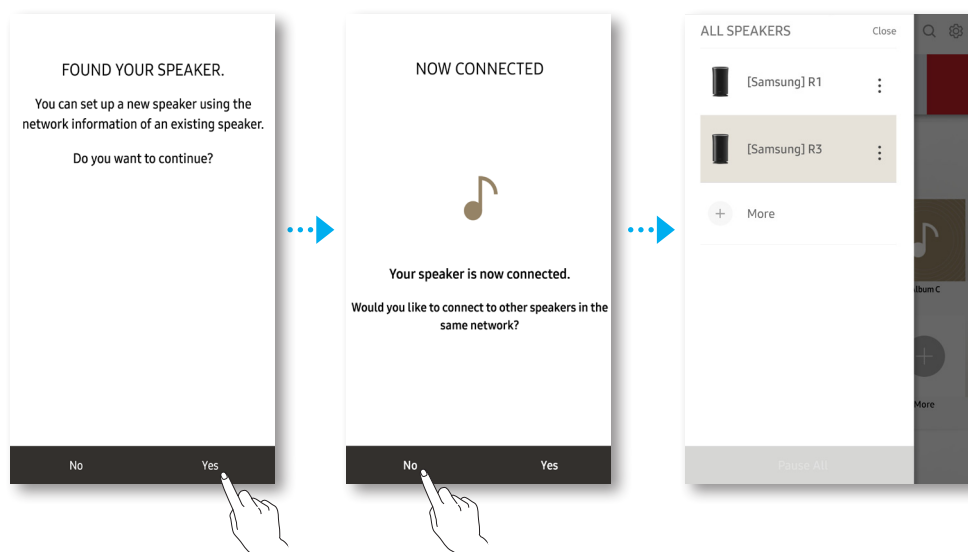

Using the Samsung Multiroom App

 The App at a Glance

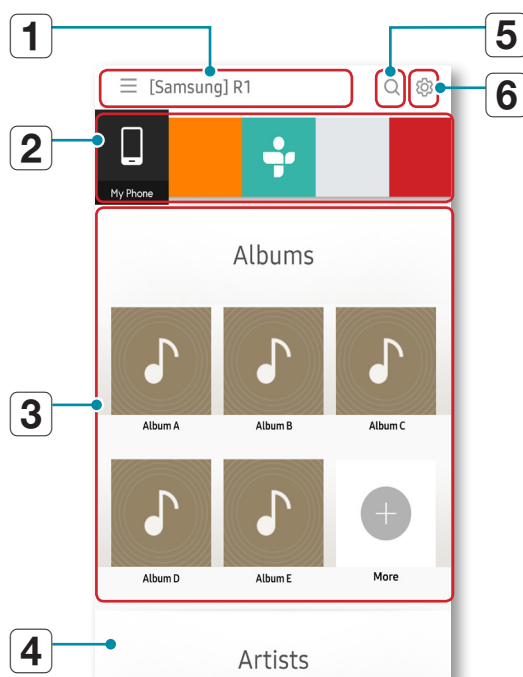

- | | |
|---|---|
| 1 | View the full list of connected speakers. |
| 2 | View available sources of music.
Scroll left or right here to view available sources of music. |
| 3 | View files available under the selected source of music. |
| 4 | Several categories of music are listed below this option.
Scroll down to select the desired category of music. |
| 5 | Enter a keyword to search for the music desired. |
| 6 | Display the settings menu. |

Playing Music

 


NOTES

- ✓ You can search by artist, album, music title, and station in your mobile, network-connected device and logged-in music services. You can search for music service(s) only if you logged in the service(s).
- ✓ Spotify does not support the search function since it uses the Spotify Connect function.

■ Playing a music file stored in the smart device


- 1 At the top of the home screen, select **My Phone** (files saved on your smart device).
- 2 Select the desired category from the screen.
 - **Albums** : Lists all the music files by album.
 - **Artists** : Lists all the music files by artist.
 - **Genres** : Lists all the music files by genre.
 - **Folders** : Lists all the music files by stored folder.
 - **Playlists** : Lists all the music files by playlist.
 - **Songs** : Lists all the music files by name.
 - **Favorites** : Lists all the music files marked as favorites.
 - **Recently Added** : Display a list of music files recently added.
- 3 After selecting a category, find and select your desired music.

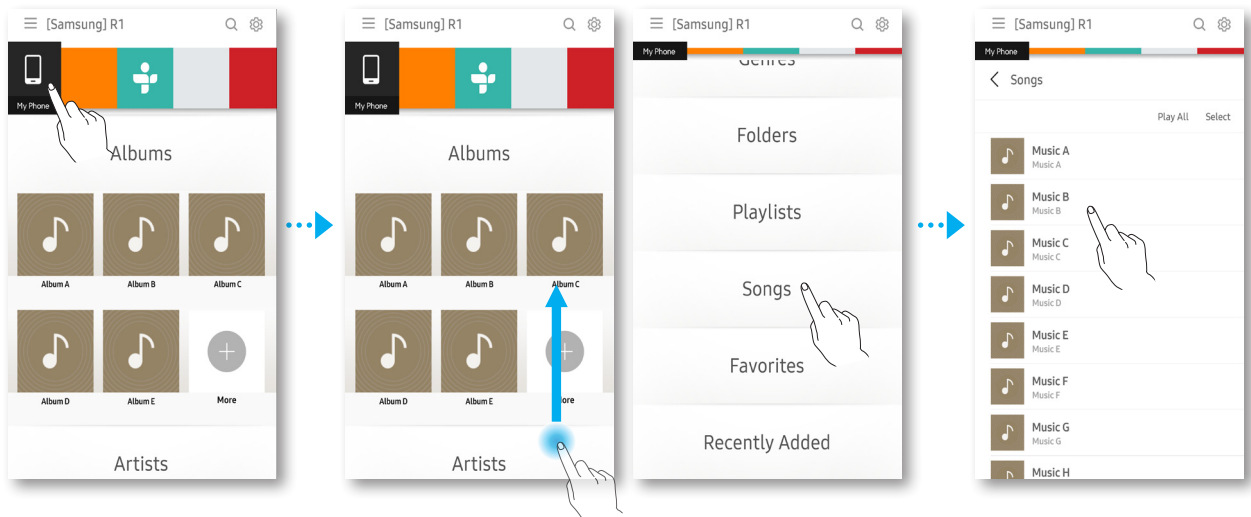


■ Listening to streaming music

Select a music streaming service provider and play music.

 - 1 At the top of the home screen, select the desired music streaming service.

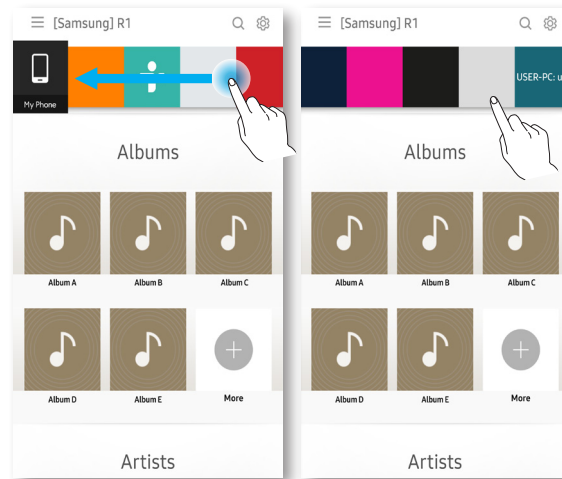

 - 2 To rearrange music streaming services, drag the target service for rearrangement left or right to the desired position.

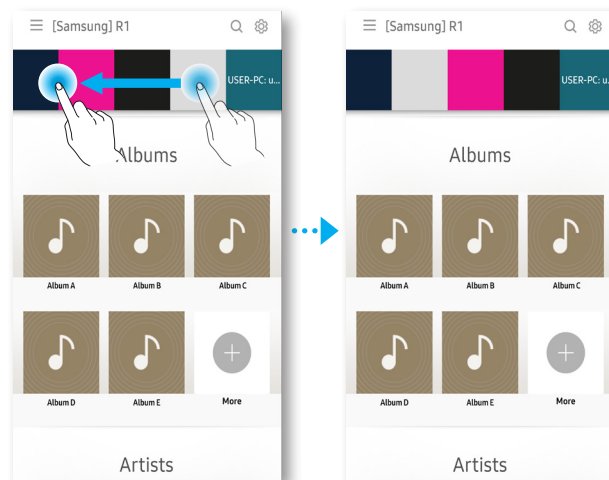


NOTES


- ✓ Available music streaming services depend on the area and the smart device manufacturer.
- ✓ Some streaming services may require you to sign up for a membership or log in.
- ✓ You cannot initiate a subscription to a service using your smart device.
To use a for-pay service, first subscribe to the service through your computer.
- ✓ Some TuneIn radio channels may be restricted depending to their site policy.
- ✓ Supported streaming services are provided by third parties and may be terminated at any time.

Listening to Internet Radio

 - 1 At the top of the home screen, select **TuneIn**.
- 2 Select a category.
 - **Following** : Shows the list of stations added to the preset list or marked by you as stations you are following. By default, 3 radio stations are displayed in the preset list.
 - **Browse** : Lists all supported Internet radio stations.
 - **Search** : Allows you to search for an Internet radio station using the on screen keyboard.

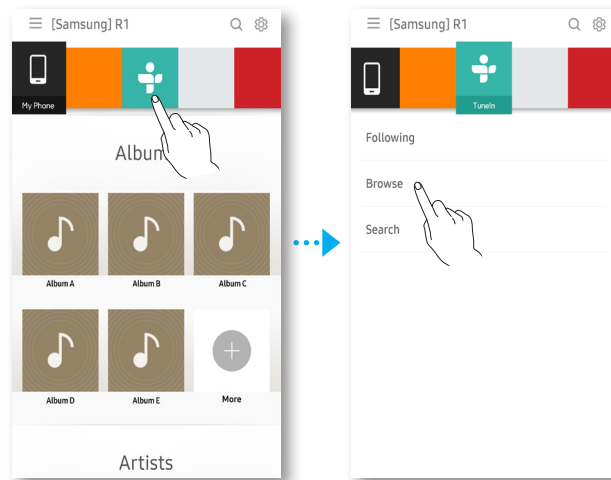

- 3 Find and select a station.

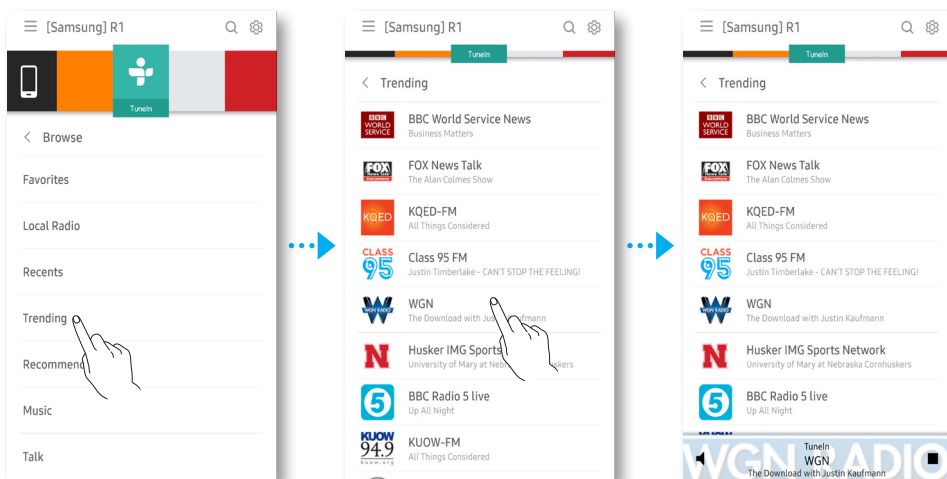 

■ Following a station

You can add a station to the **Following** list.

- 1 Select the desired station.
- 2 At the bottom of the screen, select the play screen to display it in full screen.
- 3 Select ⋮ to display the pop-up menu and select **Follow This Station**.
 - The station you are currently listening to is added to the **Following** list.



NOTE

 
- ✓ **Followed Station** appears if you attempt to add a broadcast channel that is already included in the list under Following.



Setting presets

You can add an Internet radio station you are following to the preset list or re-arrange the order of the list.

- 1 At the top of the home screen, select **TuneIn**.
- 2 Select **Following**.
- 3 Select **Edit**. Delete or rearrange broadcast channels in the list under Following
 - To delete a broadcast channel, select the X icon. To rearrange a broadcast channel, press and drag  to the desired position.

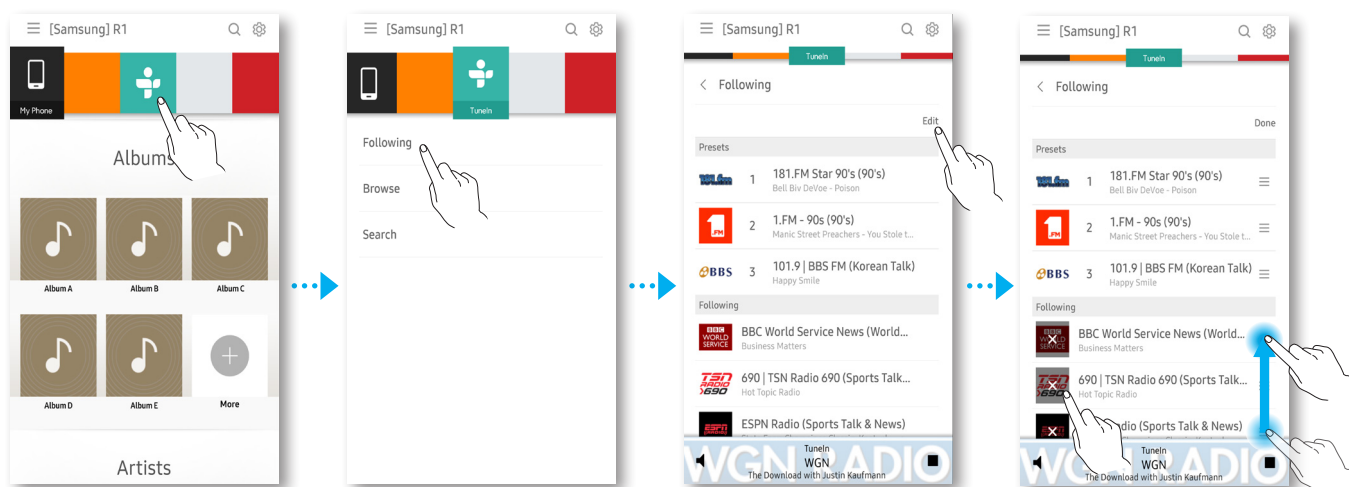


- 4 Touch, hold, and then drag the desired station from **Following** to **Presets**.



NOTES

- ✓ A maximum of 3 items can be included in the list under Presets.
- ✓ Moving a broadcast from the list under Following to the list under Presets will delete a broadcast in the list under Presets.
- ✓ Moving a broadcast from the list under Presets to the list under Following does not affect the list under Following.

 - 5 To save changes and close the process, select **Done**.

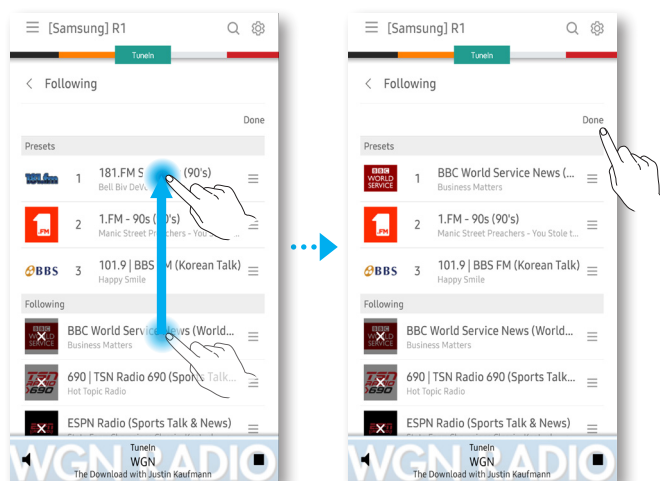


Listening to Music from Other Devices Connected to Your Network

You can listen to music stored on another device, such as PC, tablet, or smart phone, that is connected to the same network as the speaker.

You can share music stored on your PC or on smart devices connected to your PC.

For details, refer to "**Wireless Audio - Multiroom for Desktop**" on pages 45~46. [Click here.](#)

 - 1 At the top of the home screen, select the desired device connected to the network.
- 2 You can play music files stored on the device you selected through the speaker.

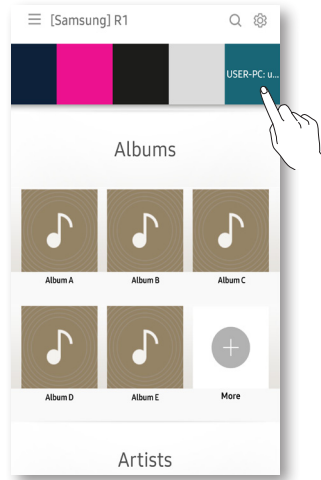

Using Play Screen Features

Use the various features in the play screen.

Adding music to favorites

Select  to add music currently playing to favorites. Tapping it again will delete the music from favorites.

Using playback options

Add to Playlist

 
Create a playlist. Add a music file currently playing to a playlist.

Equalizer

Customize the volume for each frequency, according to the genre of music, your taste, or the location.

Play on a Different Speaker


Play the current music via another speaker.

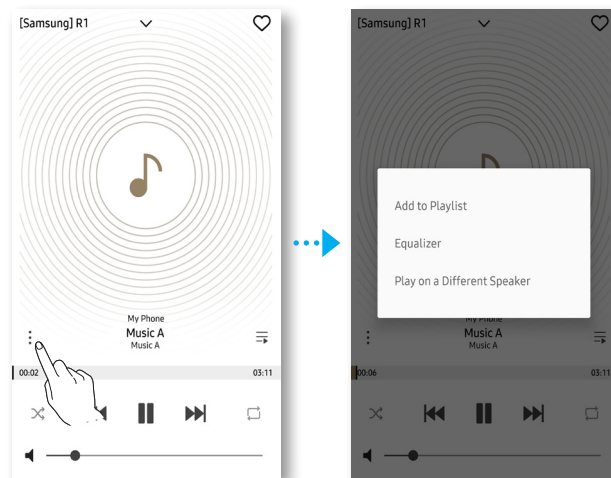

Current playlist

View the list of music files currently playing. Rearrange or delete files in the list (See page 23 for details). [Click here.](#)

 ■ Music control icons

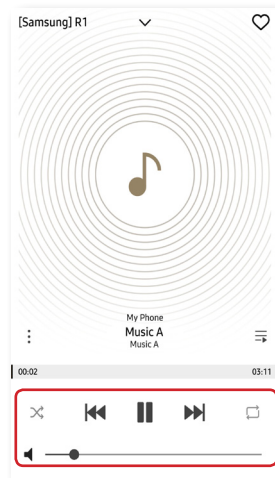


-  **Shuffle Off** /  **Shuffle On**
Play music files in the current playlist, in random order.
-  **Previous Music**
Play the previous music.
-  **Pause** /  **Play**
Pause or play music.
-  **Next Music**
Play the next music.
-  **Repeat Off** /  **Repeating One File** /  **Repeating All**
Repeat the current music file. Repeat a single file or all files in the current playlist.
-  **Volume Control Bar**
Use the volume control bar to customize the volume.
 - Alternatively, use the volume buttons on the smart device to adjust the volume.

■ Adjusting the equalizer functions

You can select one of the presets provided by default in the Equalizer option or create your own settings by adjusting the frequencies manually.

To create your own **Equalizer** setting:

 - 1 Select **⋮**.
- 2 The pop-up menu appears. Select **Equalizer**.
- 3 Drag each frequency up or down to adjust it, and select **SAVE**.
- 4 Select **Custom**, enter a title, and then select **Done**.
- 5 Select **Yes**.

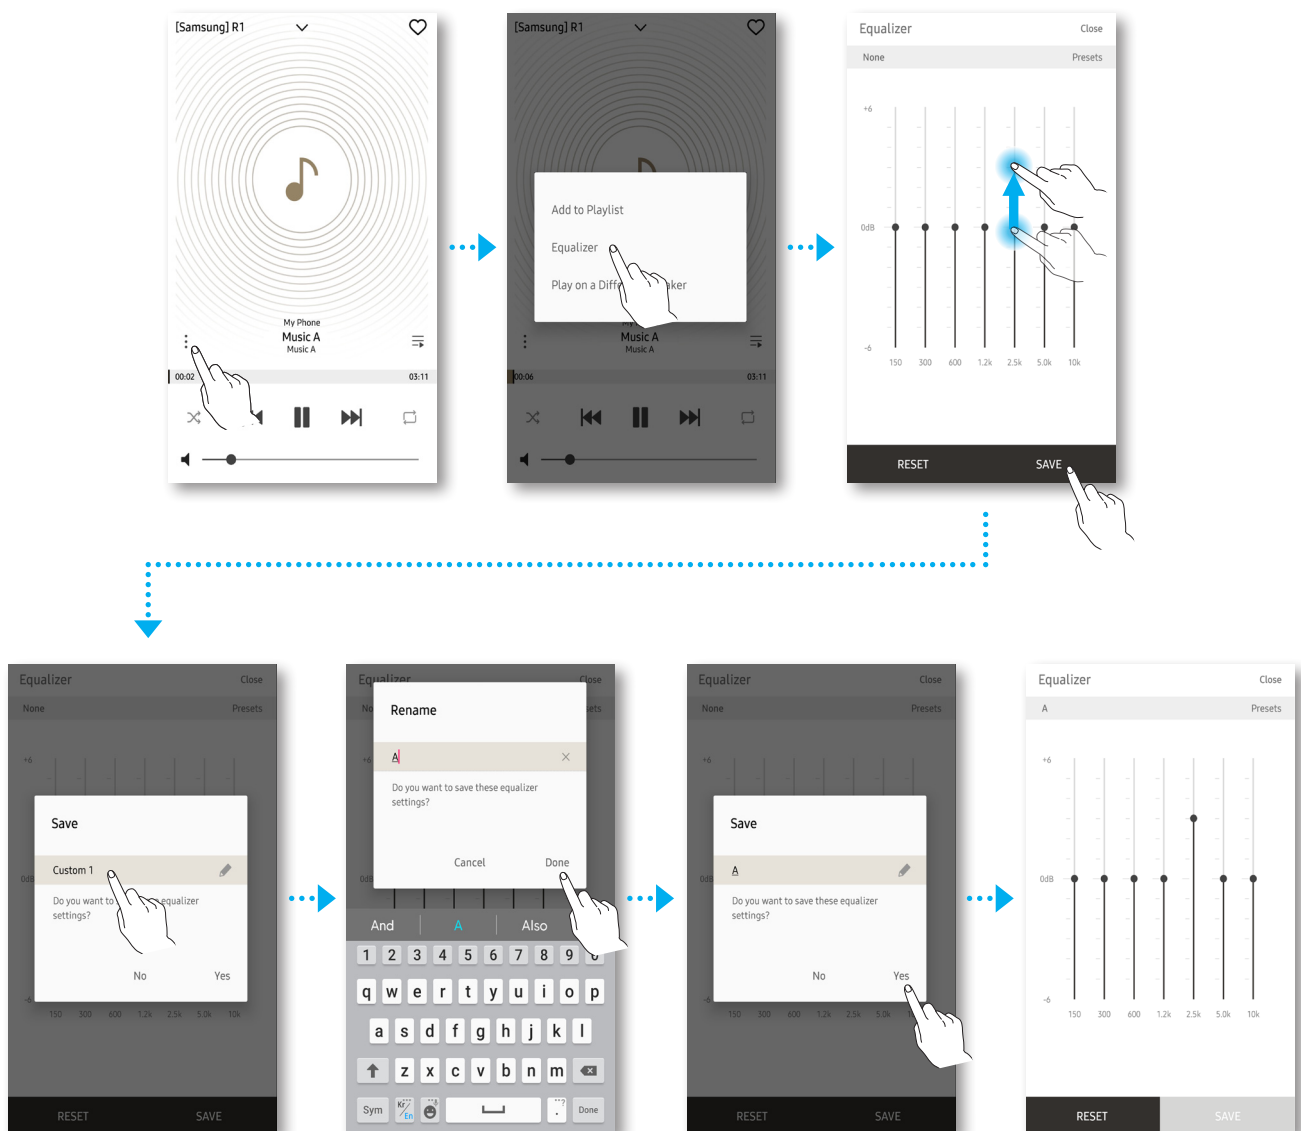

NOTE

 
- ✓ A maximum of 10 custom equalizer modes can be added.

■ Managing the current playlist


■ Adding music to the current playlist

Add or edit a music file in the current playlist.

- 1 On the home screen, select the desired category.
- 2 Select **Select**.
- 3 Select the music file to be added to the current playlist, and select **Add** (to select all files in the list, select **All**).

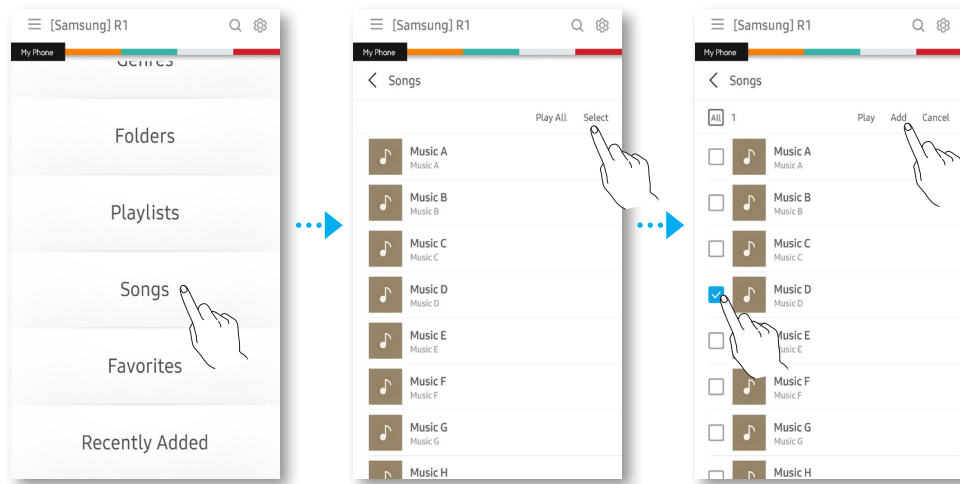

 - 4 In the pop-up screen, select **Add to Queue**.
- 5 "Added to your queue." appears at the bottom of the screen after the file is successfully added.

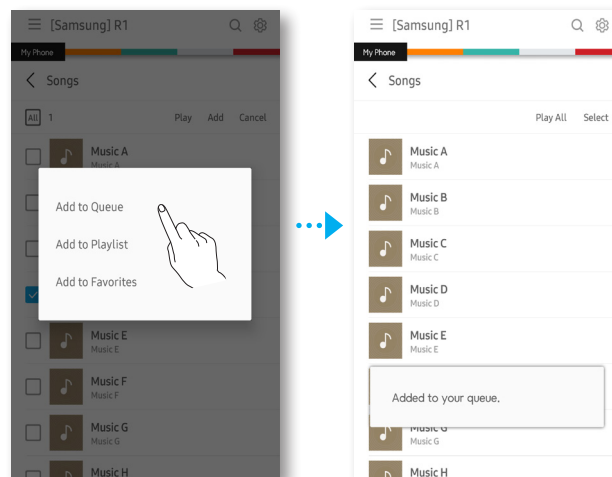


NOTES

- ✓ To manage the current playlist, select  in the play screen.
- ✓ A maximum of 360 files can be saved in the current playlist.
- ✓ Files from station-based music streaming services, such as TuneIn and Pandora, cannot be saved to the current playlist.


■ Rearranging files in the current playlist

 - 1 On the play screen, select .
- 2 Select **Edit**.
- 3 Select and drag  to rearrange the (music) files in the list.

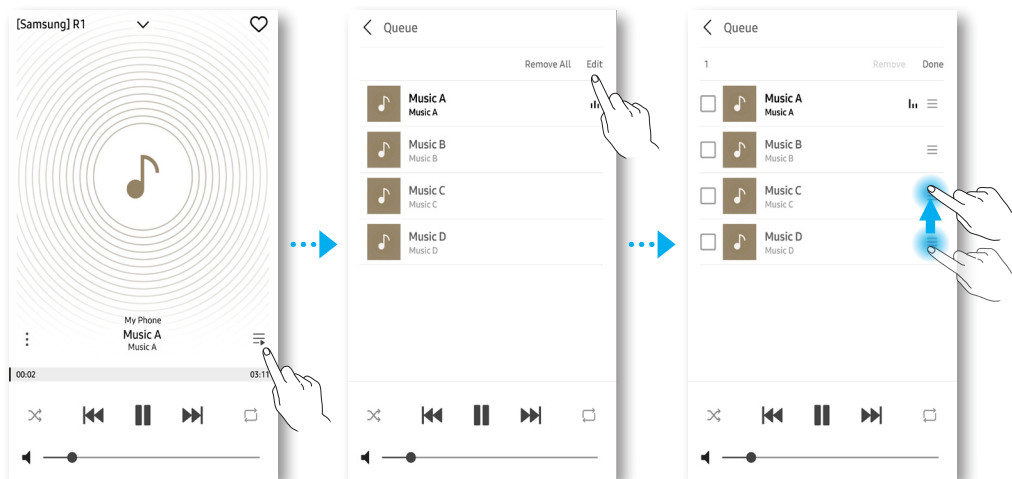

■ Deleting music from the current playlist

 - 1 On the play screen, select .
- 2 To delete several music files, select **Edit**. If you select **Edit**, a checkbox appears in front of each file. To delete all files in the current playlist, select **Remove All**.
- 3 Select the files to be deleted and select **Remove**.
- 4 Select **Yes**.

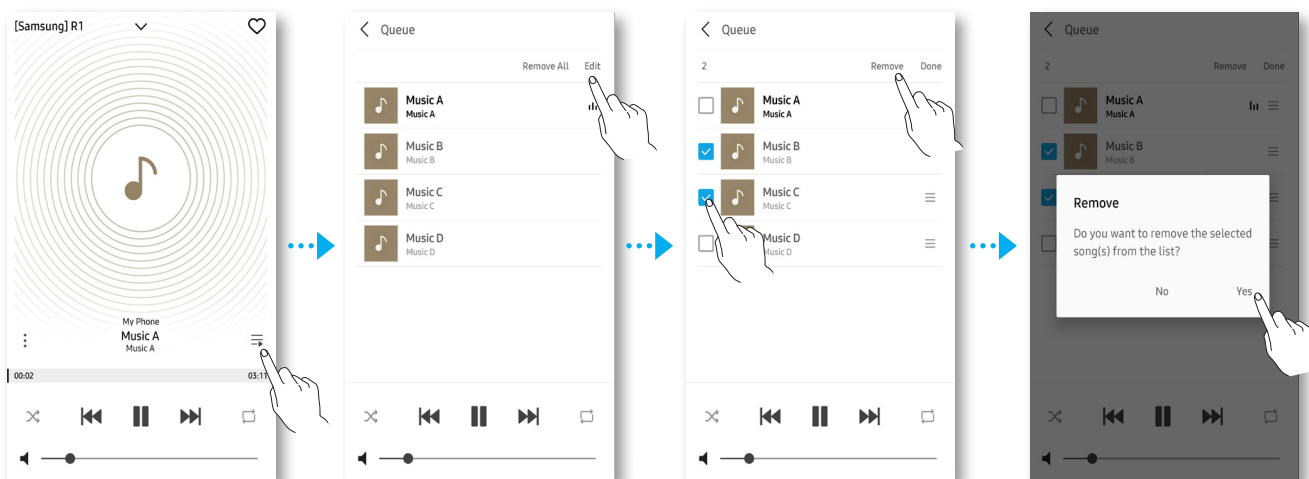


■ Managing a playlist


■ Creating a Playlist

You can create your own playlist.

 - 1 On the home screen, select **Playlists**.
- 2 Select **Create Playlist** ➡.
- 3 Enter a playlist name and select **Done**.

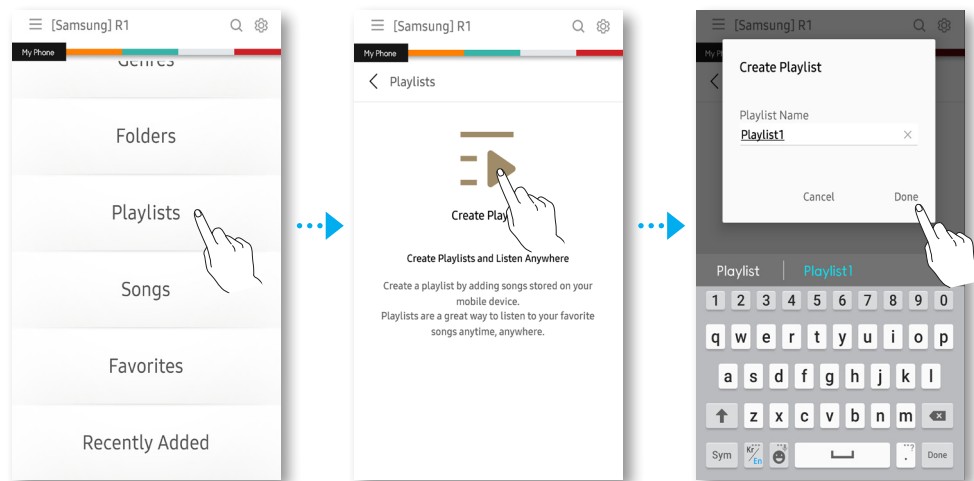

 - 4 On the add songs screen, select the desired category.
- 5 Select the desired music files and tap **Add**. The playlist is added.

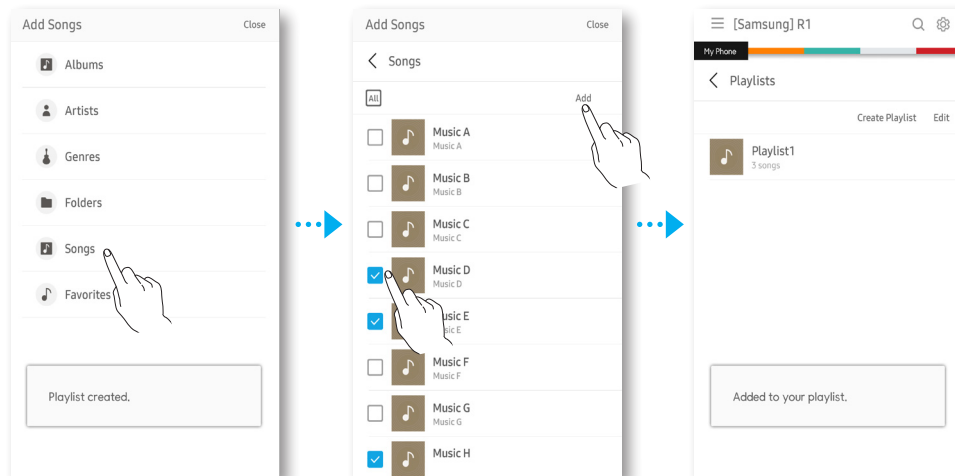


NOTE


- ✓ You can save up to 360 music files in a playlist.

■ Editing a Playlist

 - 1 On the home screen, select **Playlists**.
- 2 Select **Edit**.
- 3 To delete a playlist, select the playlist to be deleted and select **Remove**.
 - To rename a playlist, select .

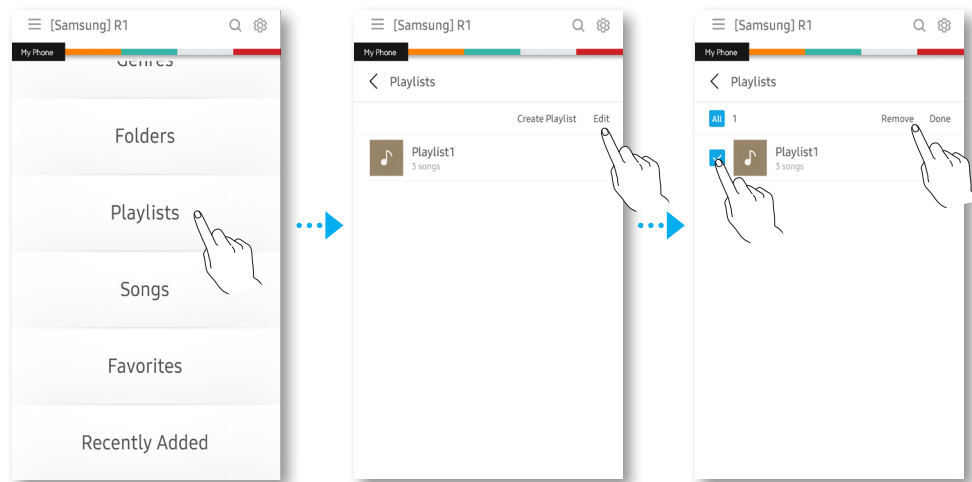


 - 4 To use additional options, select a playlist name to display a list of music files.
- 5 Select **Select**.
- 6 Select the music file to play, or the music file to add or delete in the current playlist.
- 7 To play the selected music file, select **Play**. To add or delete the file in the current playlist, select **More**.

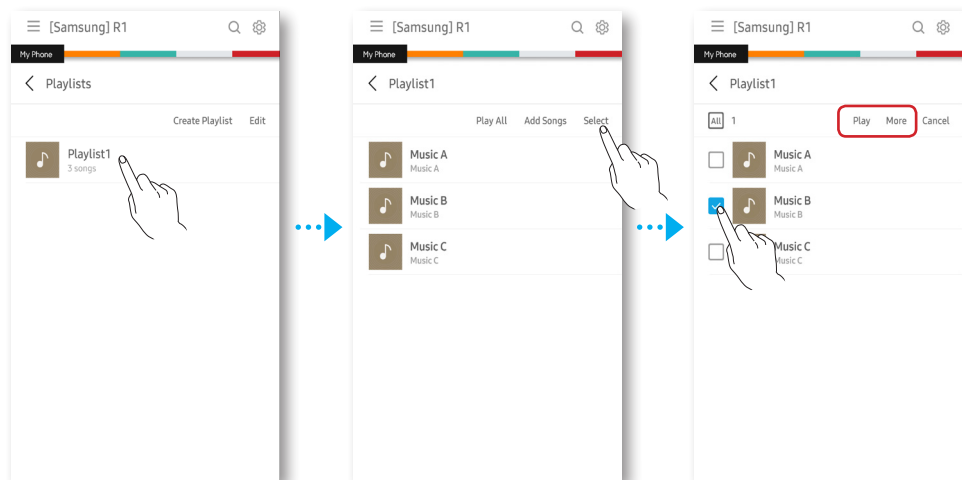

Using the Settings Menu

 - 1 On your Smart device, select the **Samsung Multiroom** app.
- 2 At the top of the home screen, select .

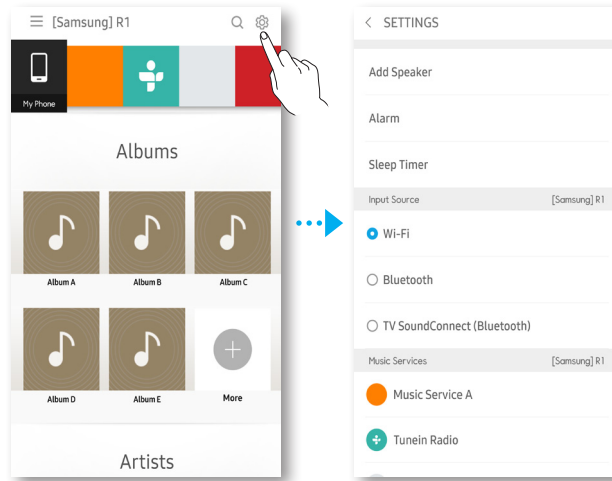

Add Speaker

 
You can connect multiple Samsung WAM wireless speakers to your network. To add speaker(s) to your network, refer to "Adding Additional Speaker(s)" on pages 11~12.

[Click here.](#)

Alarm

- 1 Select **Alarm** and then select **Add Alarm**.
- 2 Set the time, days, music, volume, and duration.
 - If two or more speakers are connected, select **Change** to change the speaker that will play the alarm.
- 3 Select **Music**, and then select either **Sound** or **TuneIn** to select an alarm tone.

4 To save settings and close the process, select **Done**.

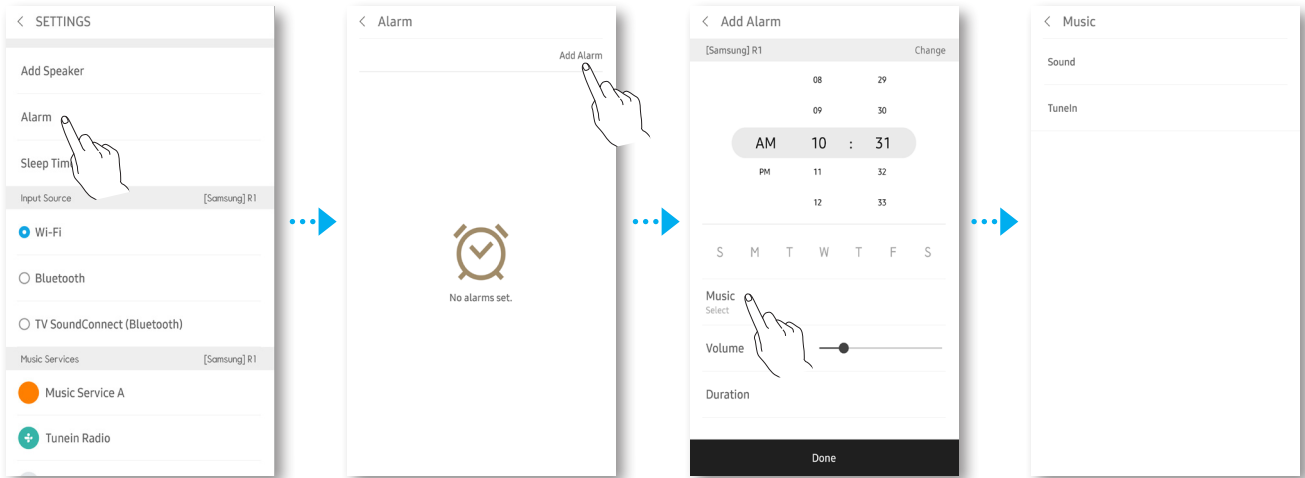


NOTE

✓ Alarm will not play if the power plug of the speaker is not connected.

Sleep Timer

You can set the speaker to turn off after a set amount of time has passed by setting the **Sleep Timer**.

 
- 1 Select **Sleep Timer** and then select **OFF** for the speaker to which to apply sleep timer.
- 2 Set the time and select **TURN ON**.

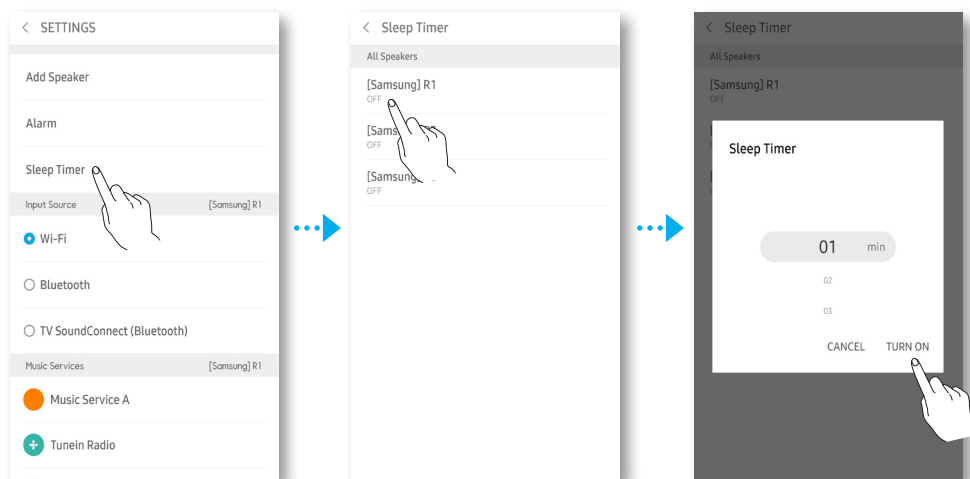


Input Source

Change the input source for an active speaker.
 
<Wireless Speaker>

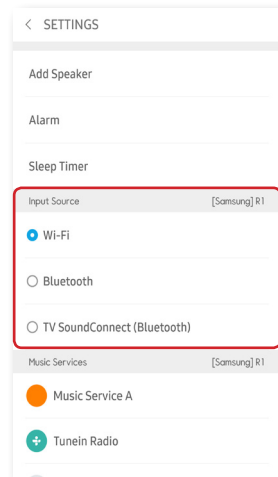


<Soundbar>

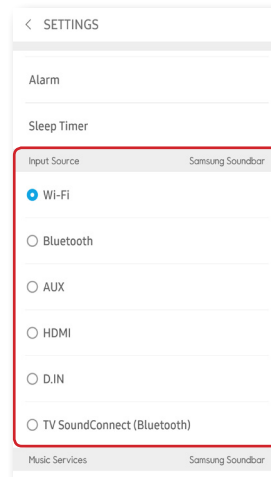 

Music Services

 Displays a list of available streaming services and allows you to manage them.

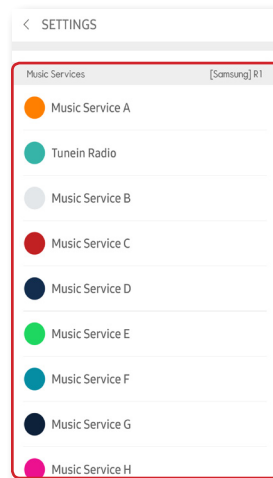

NOTES

 
- ✓ Available music streaming services depend on the area and the smart device manufacturer.
- ✓ Some music services may require you to sign up for a membership or log in.
- ✓ You cannot initiate a subscription to a service using your smart device.
To use a for-pay service, first subscribe to the service through your computer.
- ✓ Some TuneIn radio channels may be restricted depending to their site policy.
- ✓ Supported streaming services are provided by third parties and may be terminated at any time.

■ Device Settings

■ Advanced Settings

LED On/Off

To turn on or off the frontal LED indicator lamp on a speaker, toggle the switch right or left.

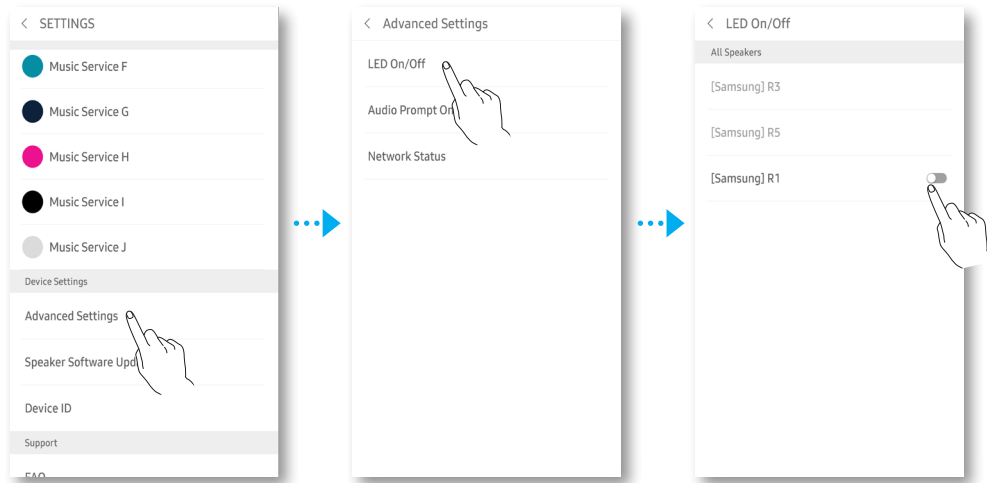


NOTE

- ✓ This feature may not be available, if the speaker does not support it.

Audio Prompt On/Off


The audio guide feature informs the user of the current speaker status with voice or other sound.

 To turn on or off the audio guide feature, toggle the switch right or left.

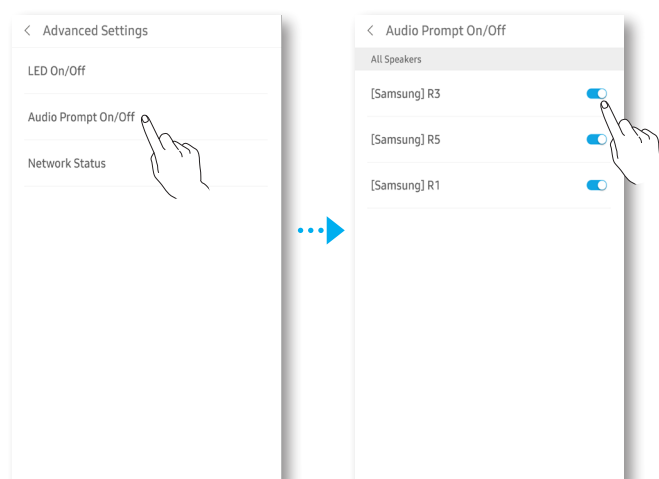

Network Status

 Check the network status for speakers connected over a network.

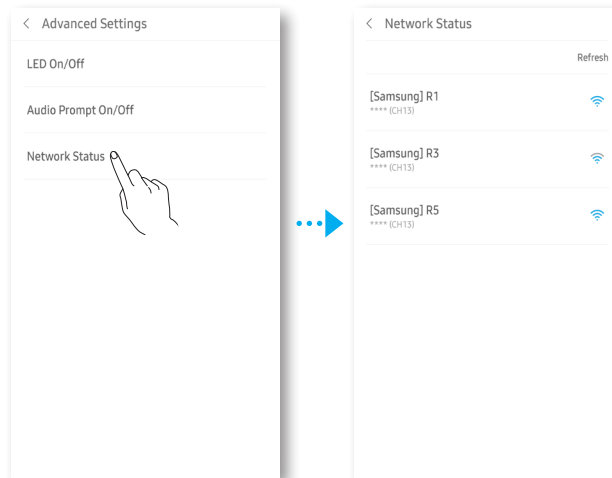


■ Speaker Software Update

View the current software version for speakers, and perform an update if necessary.

Turn on or off automatic updates for each speaker.

 To turn on or off automatic updates, toggle the switch right or left.

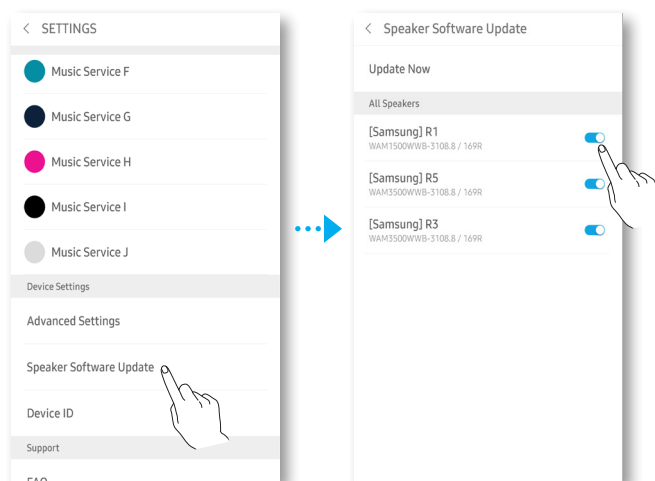

NOTES

- ✓ Updating is automatically performed if the speaker is connected to the network and the automatic update feature is on.
- ✓ If multiple speakers are connected to the network, keep the automatic update feature on for all the speakers. Using different versions of software together may cause a network issue due to incompatibility.
- ✓ Automatic update is performed only when a speaker is in standby mode.
Manually turning on standby mode on a speaker
 - 1) Turn on automatic update.
 - 2) Touch and hold a touch area for 5 seconds. Touch to wake up.

 
Update Now

You can update your speaker's software manually using **Update Now**.

Select **Update Now** to search software available for updates. If an update is available, it will download and install the update on your speaker. The message appears if the latest version is already installed.

■ Device ID

View the connected device ID.

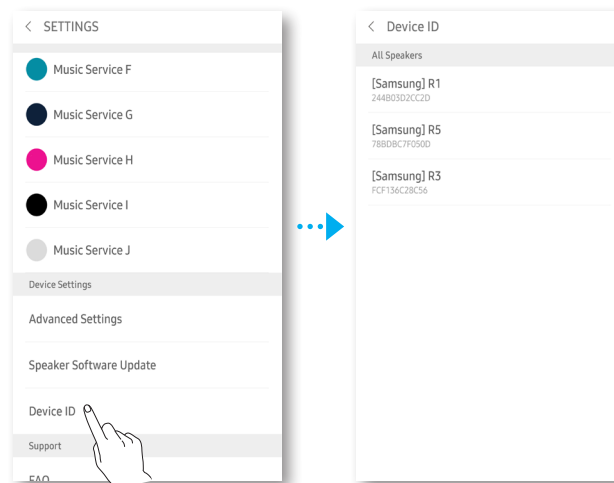

■ Support

■ FAQ

You are directed to the "Support" page of Samsung website.

■ Terms & Conditions

Lets you view the **Terms & Conditions**.

■ Contact Samsung

 
Provides a link to the Samsung website.

■ Open Source Licenses

Lets you view the Open Source Licenses.

■ Remote Management

Lets you view the Terms and Conditions for Remote Management.

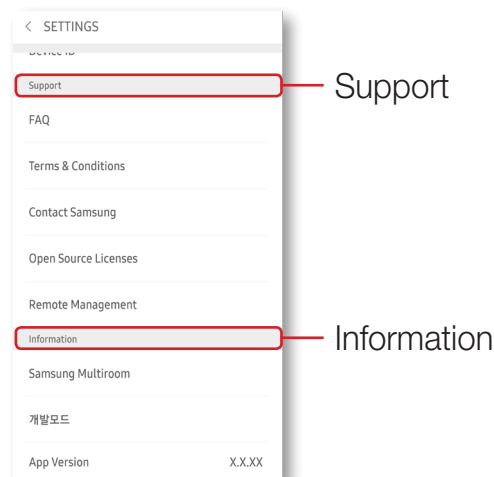

■ Information

■ Samsung Multiroom

Check the speaker model and the Wi-Fi area information.

■ App Version

Displays the Samsung Multiroom app version.

Listening to Music through Multiroom App in Smart Watch

 


NOTES

- ✓ To use the **Multiroom** app in Galaxy Gear S or Apple Watch, you have to connect your smart device to the speaker in advance.
- ✓ To use the **Multiroom** app in Galaxy Gear S, you have to download and install the exclusive **Multiroom** app.


Galaxy Gear S: Downloading Multiroom app

- 1 Select and launch **Samsung Gear**.
- 2 Select the **Samsung Gear Apps**.
- 3 Search and download the **Multiroom**.
- 4 Run the **Multiroom** app in your Galaxy Gear S.

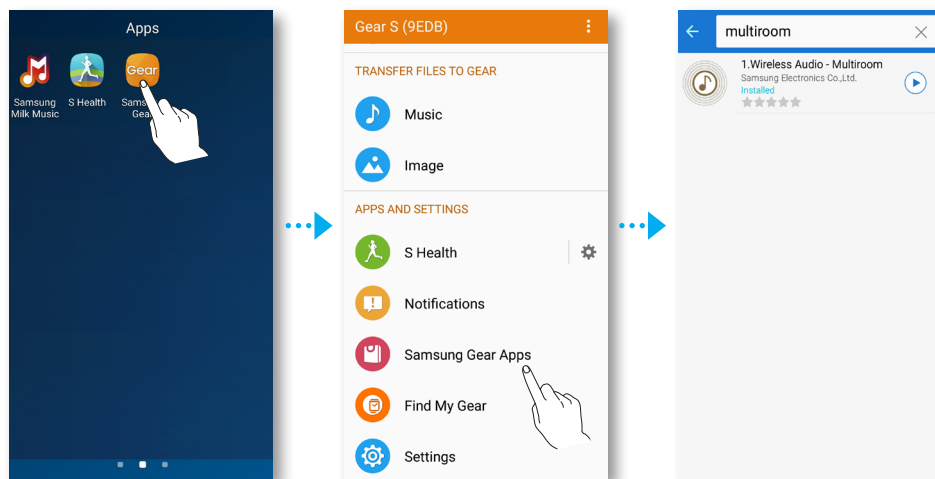

Apple Watch: Setting MultiRoom in smart device

 
- 1 Select **Apple Watch** on the smart device.
- 2 Select **My Watch > MultiRoom**.
- 3 Activate the **Show App on Apple Watch**.

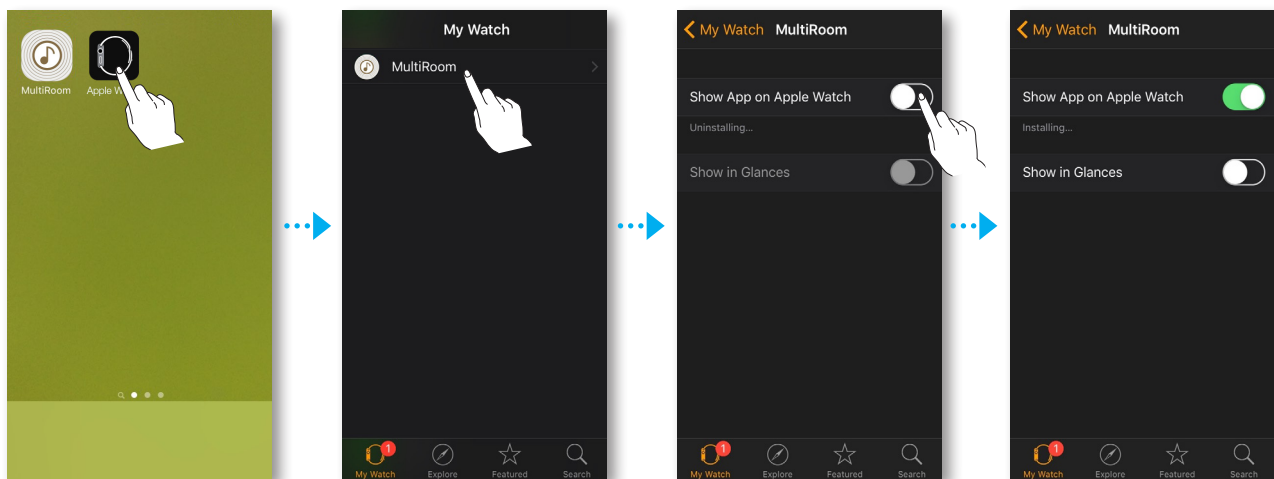

■ Using the Multiroom app in Smart Watch

■ Selecting Speaker

 
Play music using a speaker of your choice, if multiple speakers are connected.

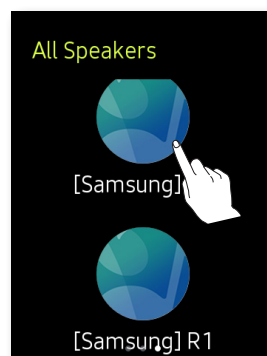

■ Adjusting Volume

Use the - and + buttons to decrease or increase the volume when playing music.

 To turn off mute mode, use the + button to increase the volume or tap the  button.

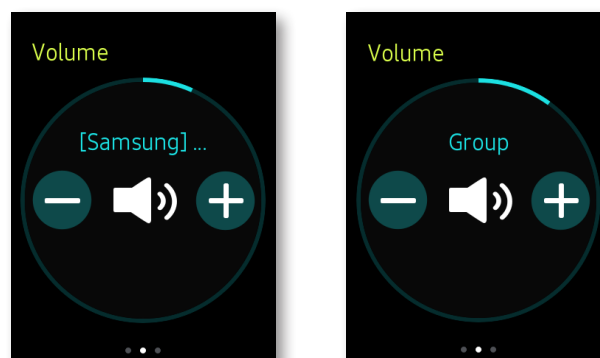

When grouped

 
■ Playing Music

You can select your desired music to enjoy while playing/pausing a music, playing previous/next music, or looking through the Queue.

On the play screen, tap the music currently playing to display a queue list.


Scroll up or down in the queue list to select and play another music.

To go back to Play screen, touch the **Queue**.

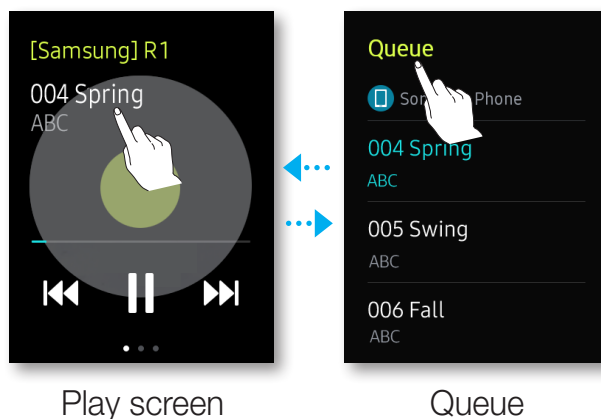

■ Group or Stereo display

 The following screens are displayed in group and stereo modes.

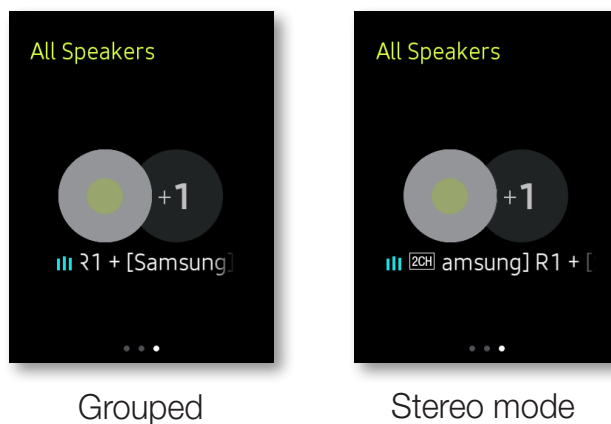

NOTE

 
- ✓ Group and stereo modes can be turned off by using **Samsung Multiroom** on the smart device.

Connecting multiple speakers

Setting Groups


You can group multiple speakers into one group that plays the same music. Grouping is available only when multiple speakers are connected to the same network.

- 1 At the top left of the home screen, select  to display the list of speakers.
- 2 Select  to display the pop-up menu and select **Group**.
- 3 Select the speakers to be grouped and select **Create Group**. (to select all speakers, select ).
- 4 Specify a group name and select **Done**.

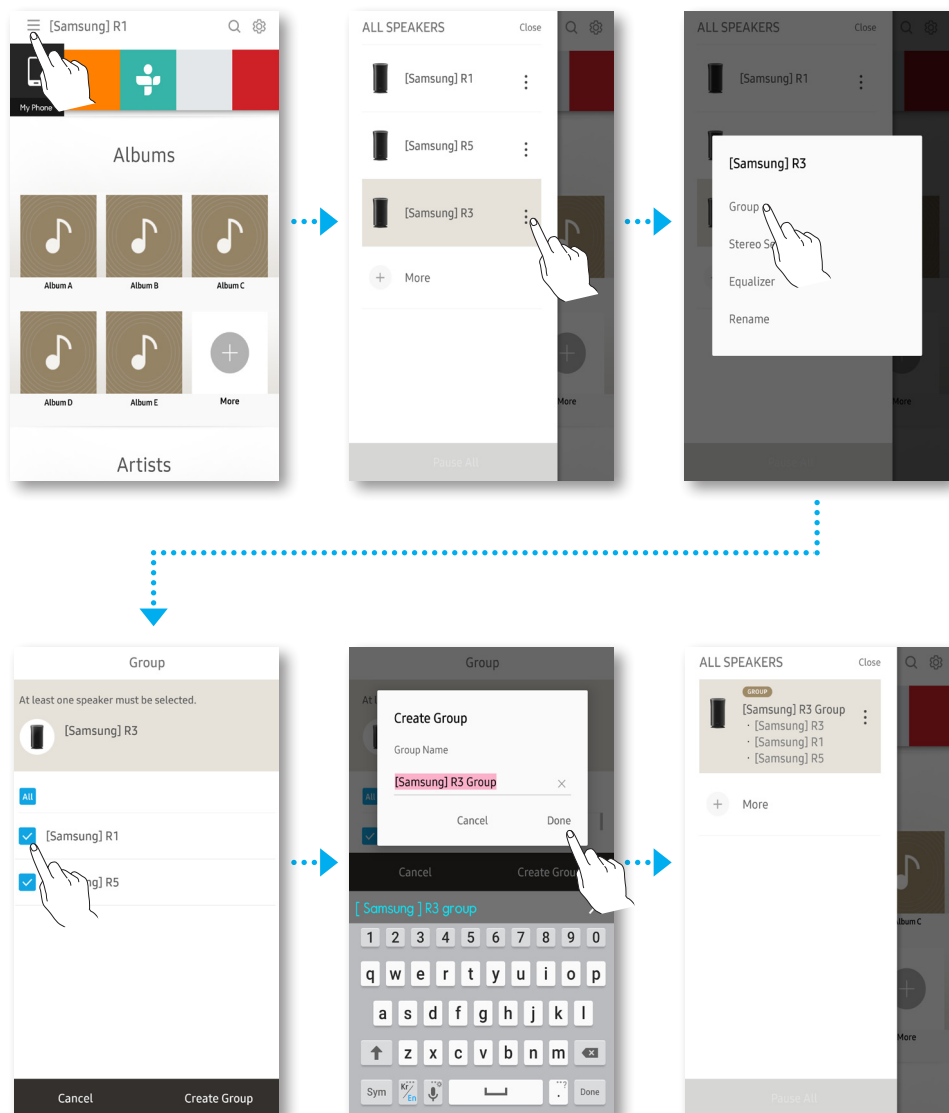

■ Ungrouping

 
- 1 Select  to display the pop-up menu.
- 2 Select **Ungroup** and select **Yes**.

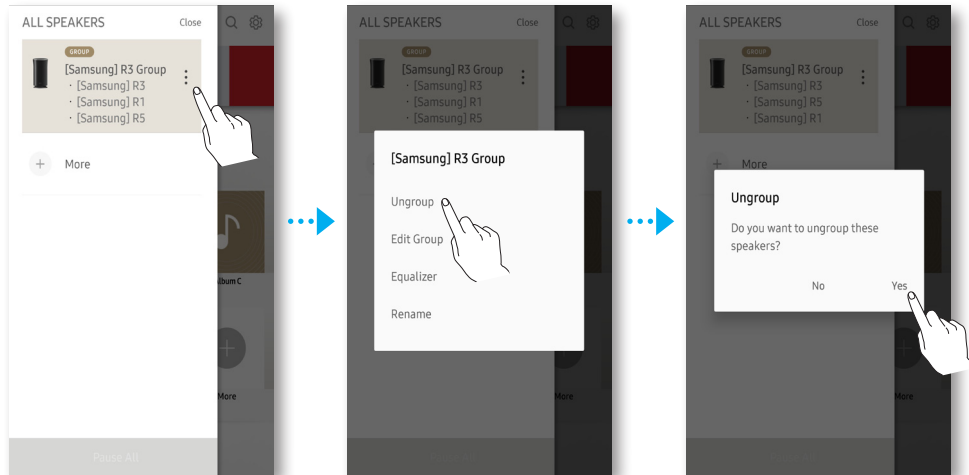

■ Editing group


Edit speakers that form a group.

 - 1 Select  to display the pop-up menu.
- 2 Select **Edit Group**.
- 3 Select the speakers to be grouped and then select **Done**.

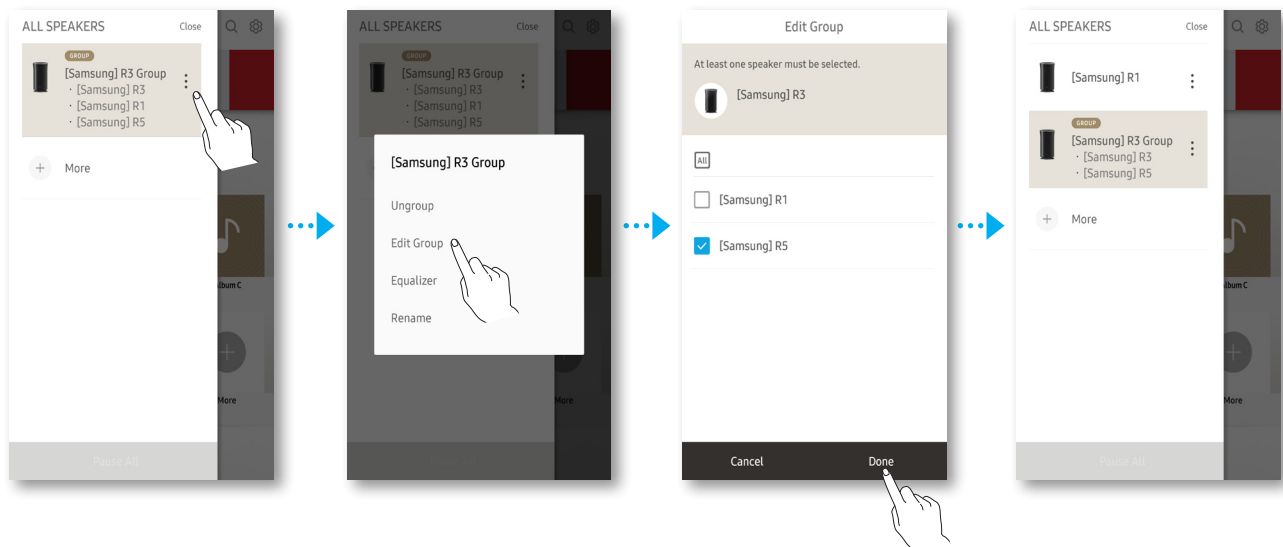

■ Renaming a group

 - 1 Select  to display the pop-up menu.
- 2 Select **Rename**.
- 3 Enter a group name and select **Done**.

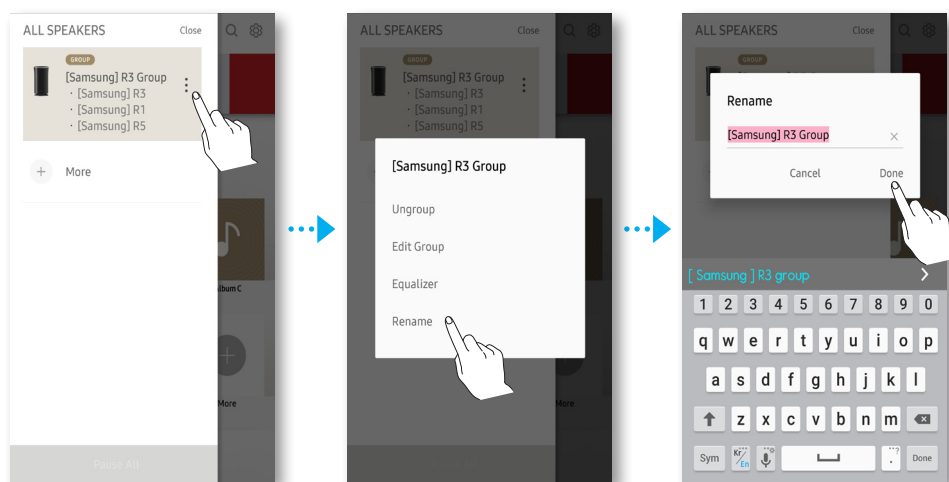


■ Adjusting Group Volume

Use the Volume button in your smart device.

Or

Alternatively, use the volume control bar   on the play screen to adjust the volume for all speakers in a group simultaneously.

 
To adjust the volume for a specific speaker, select  and use the volume control bar.

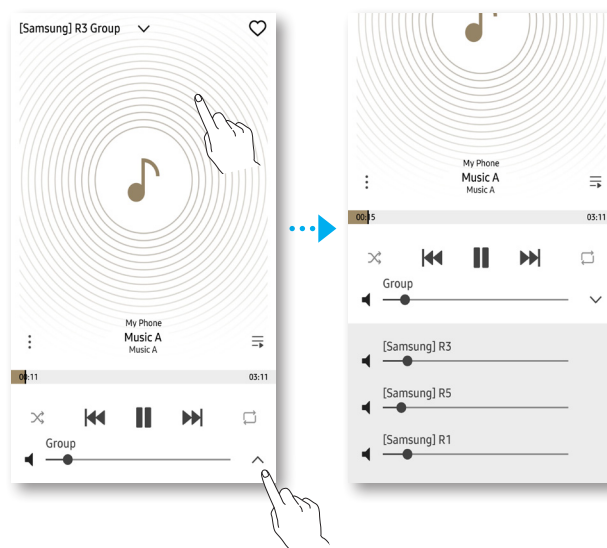


Configuring Stereo/Surround Sound Mode Settings

Use two speakers to obtain a stereo sound effect.

 - 1 At the top left of the home screen, select  to display the list of speakers.
- 2 Select  to display the pop-up menu and select **Stereo Setup**.

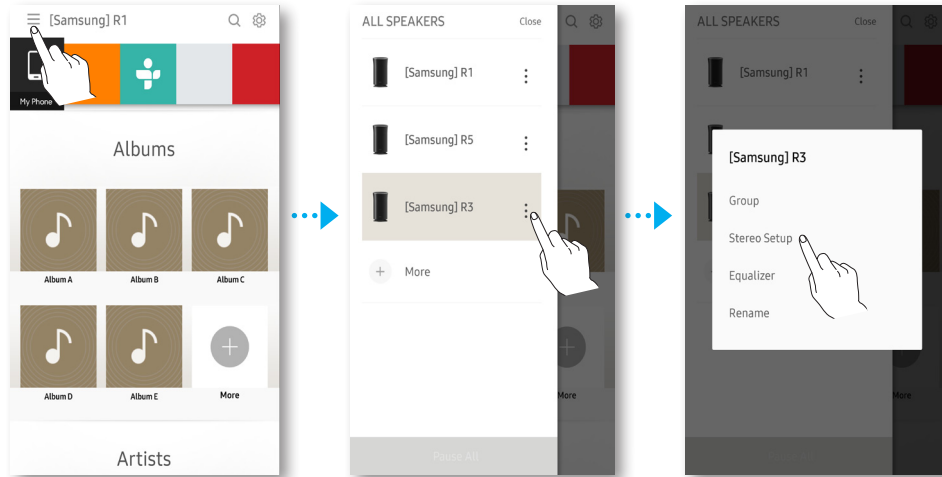


 - 3 Drag and position the speakers to use in stereo mode to **Front L** and **Front R**.
- 4 Select **Setup** and then select **Start Test**. (optional)
- 5 Adjust the volume for the left and right speakers based on the test results, and select **Done**.

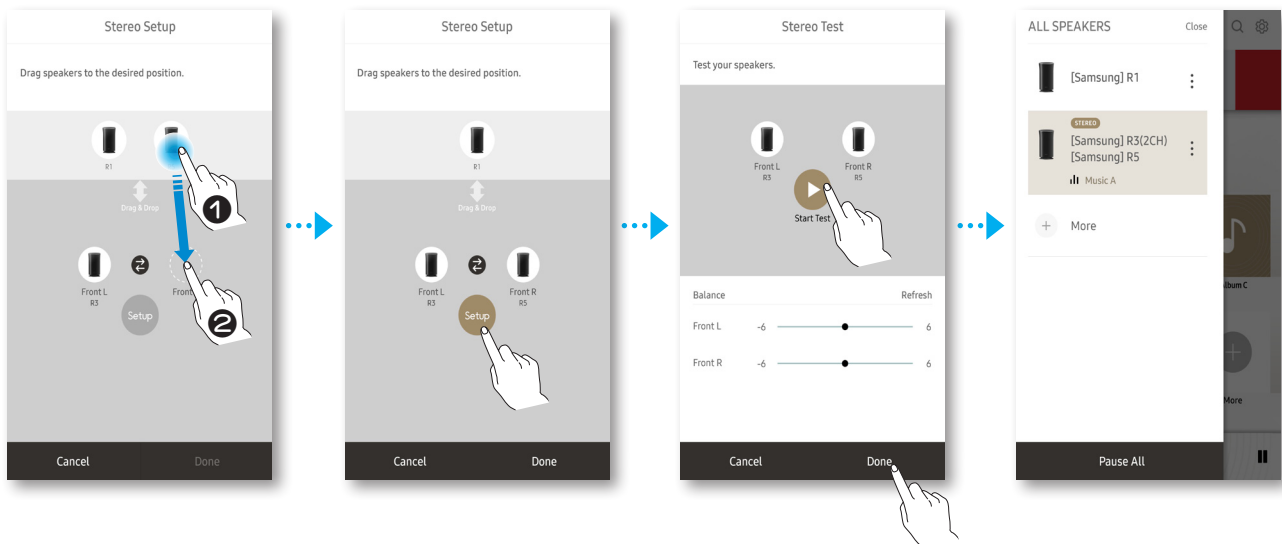

■ Configuring multi-channel by connecting TV to Multiroom speaker wirelessly

 
You can connect a Samsung TV to your Multiroom speaker(s) wirelessly to configure surround sound system for TV audio output.

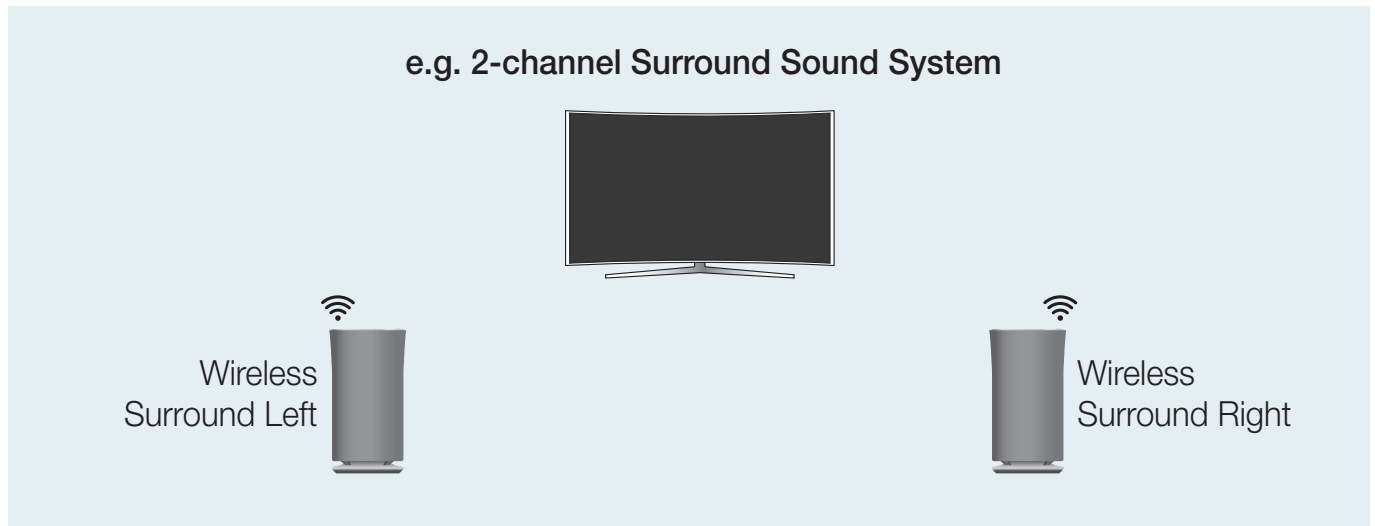


NOTES

- ✓ Both TV and Multiroom speaker(s) must be connected to the same network.
- ✓ When configuring surround sound system with your TV and a speaker, the TV does not output any sound.
- ✓ You can configure 4.1 (5.1) channel surround sound system with a soundbar and 2 speakers.
- ✓ You cannot configure surround sound system with a soundbar and one speaker.

 - 1 At the top left of the home screen, select to display the list of speakers.
- 2 On the speaker connected to the Samsung TV via Wi-Fi, select to display the pop-up menu and then select **Stereo Setup**.

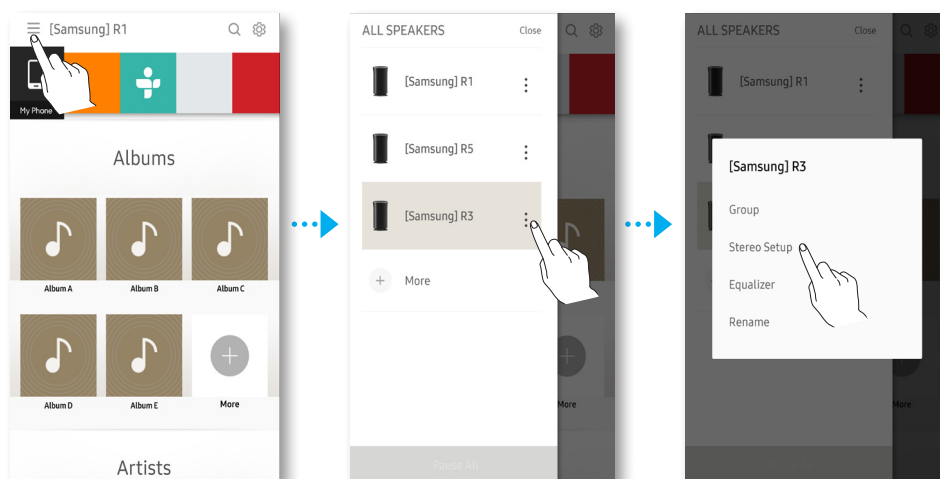

 - 3 Drag and position the speakers to use in stereo mode to **Front L** and **Front R**.
- 4 Select **Setup** and then select **Start Test**. (optional)
- 5 Adjust the volume for the left and right speakers based on the test results, and select **Done**.

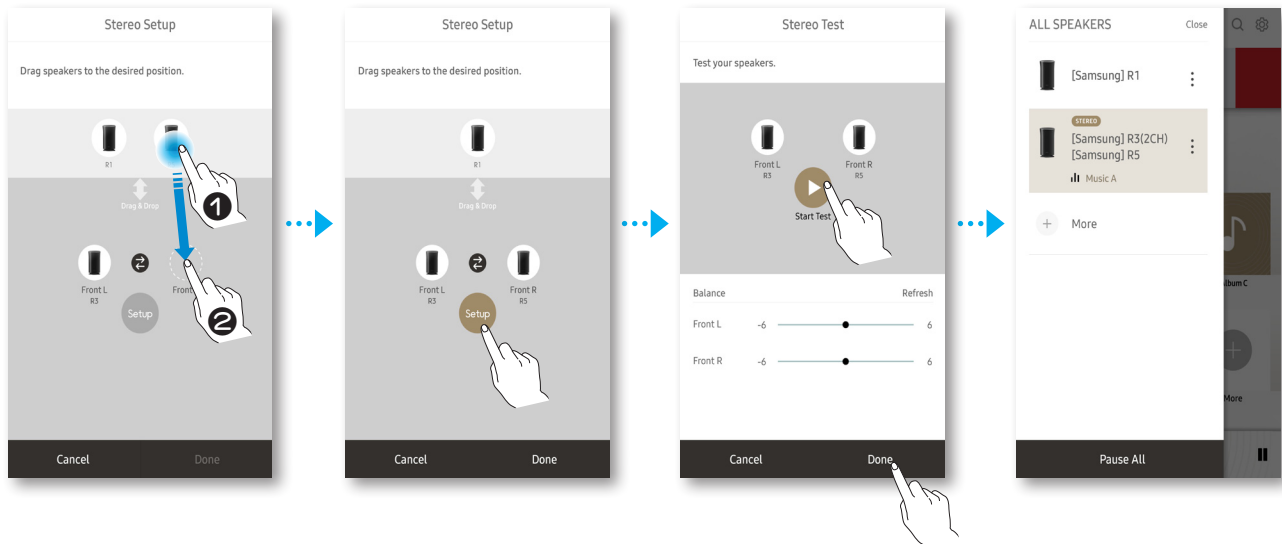

■ Configuring multi-channel by connecting TV & Soundbar to Multiroom speaker

 
If your TV supports the Multiroom function, you can configure a surround system and Soundbar mode in your Multiroom App or TV menu.




NOTES

- ✓ If the source of the Soundbar is DTS, only the speakers of **Front L** and **Front R** can output sound.
- ✓ If your TV does not support the Multimroom function, you can connect the Optical/HDMI Out port of your TV to the Soundbar to configure the 4.1 channel consisting of Soundbar and Multiroom.

- 1 At the top left of the home screen, select  to display the list of speakers.
- 2 On the Soundbar connected to the Samsung TV via Wi-Fi, select  to display the pop-up menu and then select **Surround Setup**.

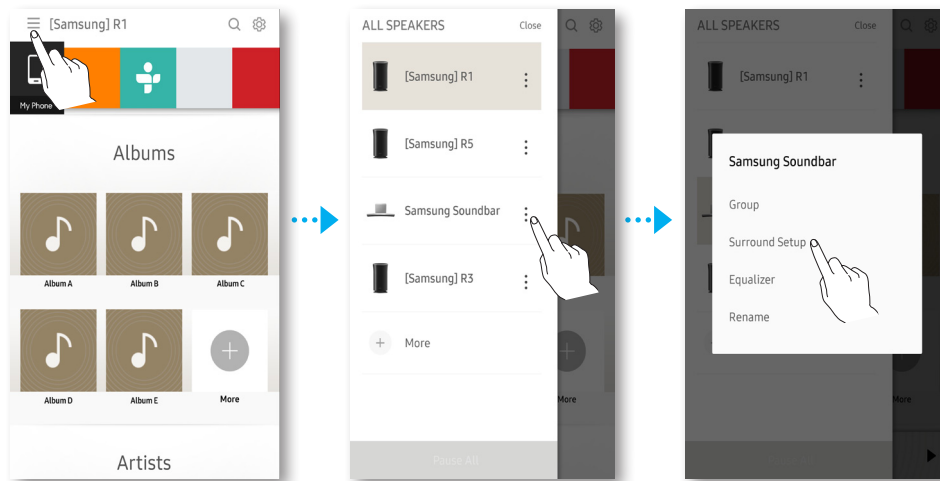

 - 3 Drag and position the speakers to use in surround sound mode to **Surround L** and **Surround R**.
- 4 Select **Setup** and then select **Start Test**. (optional)
- 5 Adjust the volume for the left and right speakers based on the test results, and select **Done**.

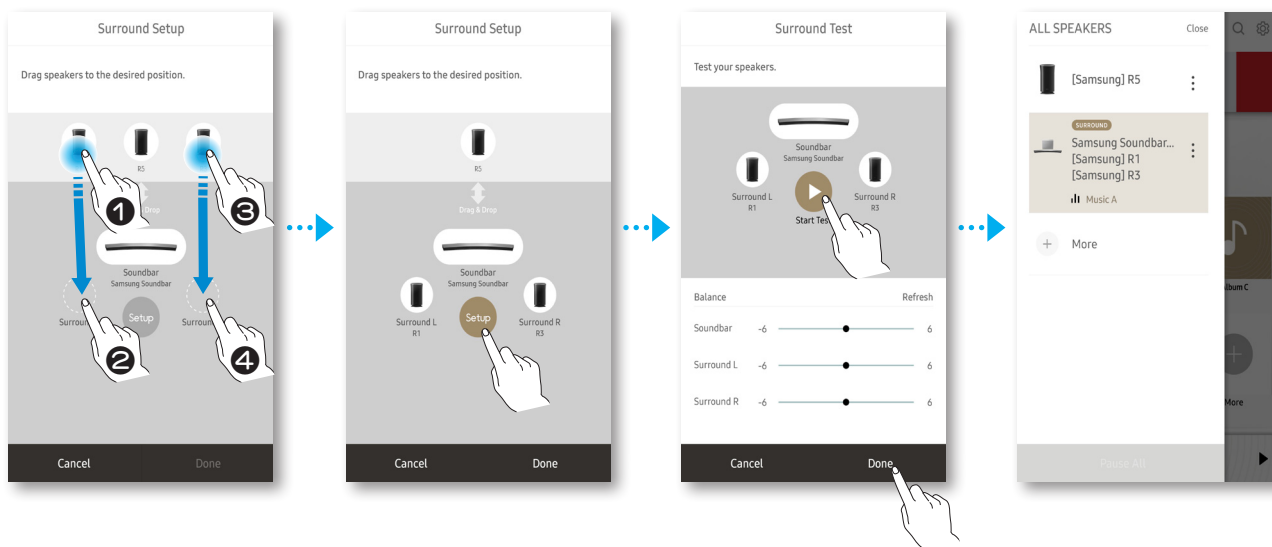

Using miscellaneous functions

 
Playing Media Content Saved on a PC

Samsung Link

Install the **Samsung Link** program for easier playback of music stored in your PC through your speaker.

Visit <http://link.samsung.com>, and then download and install the **Samsung Link** application.

- 1 Visit <http://link.samsung.com>, and then login with your Samsung account. Follow the instructions shown on the screen to install the program.
- 2 Select the folder to be shared.
 - 1) Move the mouse pointer over the **Samsung Link** icon in the icons tray, right click it, and then select "①".

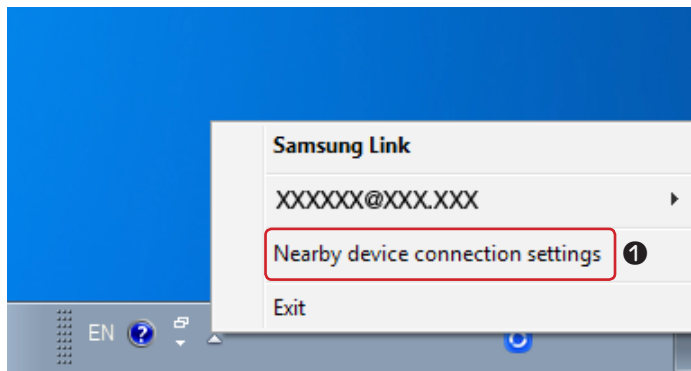

- 2) On the displayed screen, add or delete shared folders. If you add to or change the contents of any shared folders, make sure you press the  button.
- 3 Select **Devices** in the **Samsung Multiroom** app, and then select PC. Shared PC folders and music files are displayed.



NOTES

- ✓ Note that the PC containing the shared folders and your speaker must be connected to the same wireless router.
- ✓ Samsung Link software must be installed on the computer. The mobile device must support Samsung Link. For more information, visit Samsung's content and service portal at <http://link.samsung.com>.
- ✓ You may experience compatibility issues when attempting to play media files via a third-party DLNA server.
- ✓ The content shared by a computer may not play depending on the encoding type and file format of the content. In addition, some functions may not be available.
- ✓ The media content may not play smoothly depending on the network status.

■ Wireless Audio - Multiroom for Desktop

To play iTunes music files and other shared PC music files through your speaker, install the **Wireless Audio - Multiroom for Desktop** program.

To download the Wireless Audio - Multiroom for Desktop program and install it, visit www.samsung.com, and then select **Owners & Support > Manuals & Downloads**. Enter the name of your speaker in the search field (e.g. WAM5500, WAM3500 or WAM1500), and then select the name from the drop down list that appears. On the screen that appears, select **Manuals & Downloads**. Under Downloads, select **More**.

 


NOTES


- ✓ The PC containing the shared folders and your speaker must be connected to the same wireless router.
- ✓ If the connected Windows PC or the Mac switches to display-off mode, power saving, or hibernation mode, the App will stop.
- ✓ If the firewall of the Windows computer is activated, the App may not work. If this occurs, deactivate the Windows firewall and any other firewalls that are active.
- ✓ The *.pkg file is for Mac while *.msi is for Windows. Download the appropriate file for your computer and install it.
- ✓ Supported OS: Windows 7 or higher, Mac OS X 10.7 or later.

To use the Wireless Audio Multiroom for Desktop program after you have installed it, follow these steps:

- 1 Double click the program's icon on the PC's desktop.

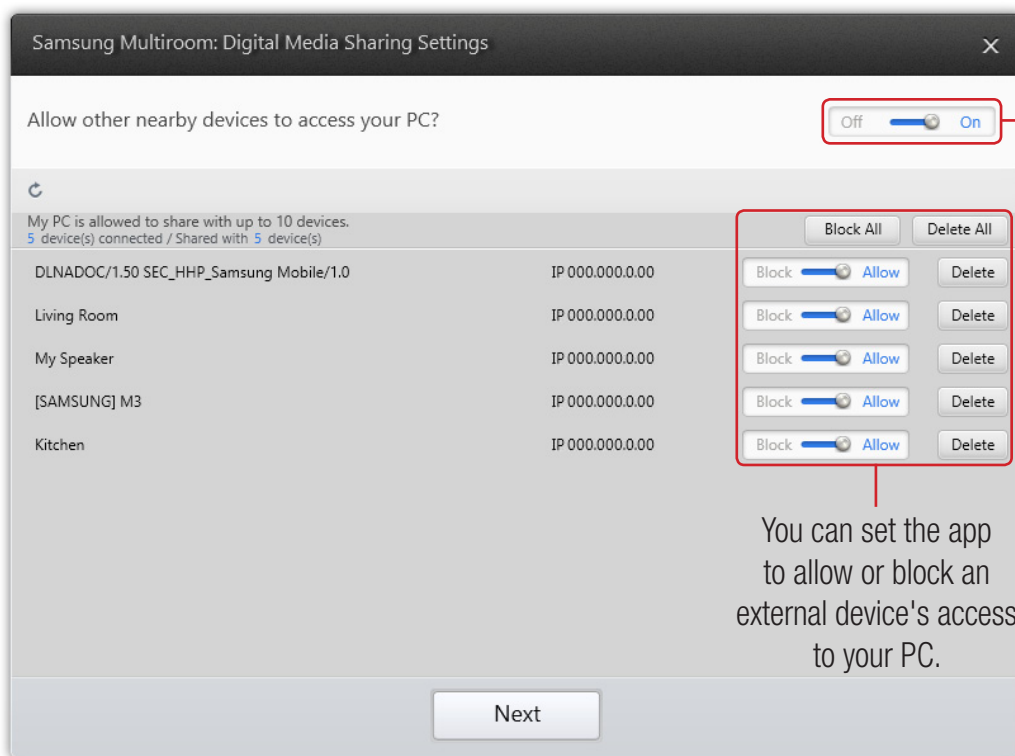

 - 2 Select **Next** to set the shared folders.
- 3 Select the content type, and then add the selected folder to the shared folders list. After sharing folders, make sure to press the **Done** button.

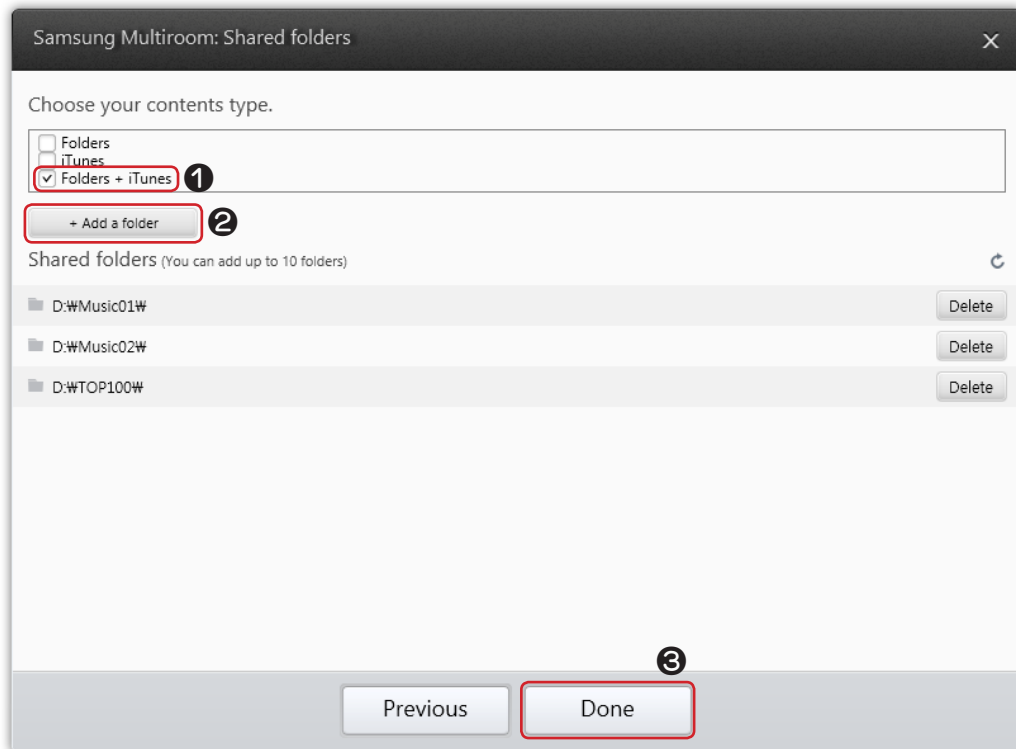

- 4 On your Smart device, select the **Samsung Multiroom** app.
- 5 Select the PC in the **Samsung Multiroom** app. The app displays the shared folders and files that are stored on the PC. (For further details, refer to page 19.) [Click here.](#)



NOTE

- ✓ If you add to or change the contents of any shared folders, make sure to press the  button. If you don't press the  button, the files shared by a computer may not be displayed in the **Samsung Multiroom** app.

Appendix

Troubleshooting

Refer to the table below when this speaker does not function properly. If the problem you are experiencing is not listed below or if the instructions below do not help, turn off the speaker, disconnect the power cord, and contact Samsung Electronics at 1-800-SAMSUNG (1-800-726-7864).

Symptom	Check	Remedy
The Multiroom app doesn't work properly.	Does an error occur when accessing the app?	- Make sure your smart device is compatible with the app. - Make sure the app is the latest version.



NOTE

- ✓ If the problem persists, contact the Samsung Call Center for troubleshooting.

Compatible devices

- Mobile : Android 4.0 (Gingerbread) or above, iOS (7.0) or above



NOTES

- ✓ Some devices may not be compatible with the speaker.
- ✓ Note that older versions of compatible speakers may not be supported.

SAMSUNG