

UCONNECT 5.0

OWNER'S MANUAL SUPPLEMENT

TABLE OF CONTENTS

SECTION

PAGE

1	SAFETY GUIDELINES	3	1
2	IDENTIFYING YOUR RADIO	9	2
3	RADIO MODE	15	3
4	MEDIA MODE	21	4
5	UCONNECT PHONE	27	5
6	UCONNECT 5.0 VOICE RECOGNITION QUICK TIPS	33	6
7	UCONNECT SETTINGS	41	7
8	MORE BUTTON	43	8

SAFETY GUIDELINES

CONTENTS

■ SAFE USAGE OF THE UCONNECT SYSTEM.	4	□ FCC Declaration	4
□ Touchscreen	4	□ Information About Radio Frequency Radiation. . .	5
□ Disc Player	4	■ CYBERSECURITY	6

SAFE USAGE OF THE UCONNECT SYSTEM

- Read all instructions in this manual carefully before using your system to ensure proper usage!
- Permanent hearing loss may occur if you play your music or the system at loud volumes. Exercise caution when setting the volume on your system.
- Keep drinks, rain and other sources of moisture away from your system. Besides damage to your system, moisture can cause electric shocks as with any electronic device.

NOTE: Many features of this system are speed dependent. For your own safety, it is not possible to use some of the touchscreen features while the vehicle is in motion.

Touchscreen

- **Do NOT attach any object to the touchscreen, doing so can result in damage to the touchscreen.**
- Do not press the touchscreen with any hard or sharp objects (pen, USB stick, jewelry, etc.) which could scratch the touchscreen surface!
- Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touchscreen.

- If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

Disc Player

- Do not insert any damaged, warped, scratched or dirty discs into the Disc Player.
- Discs that have been modified with an adhesive label should not be used in the Disc Player.
- Do not insert more than one disc at a time into the drive slot.

FCC Declaration

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio technician for help.

Information About Radio Frequency Radiation

Exposure To Radio Frequency Radiation

1

The radiated output power of the this internal wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the radio is 20 cm (200 mm) or further from the human body.

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community.

The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.

CYBERSECURITY

Your vehicle may be a connected vehicle and may be equipped with both wired and wireless networks. These networks allow your vehicle to send and receive information. This information allows systems and features in your vehicle to function properly.

Your vehicle may be equipped with certain security features to reduce the risk of unauthorized and unlawful access to vehicle systems and wireless communications. Vehicle software technology continues to evolve over time and FCA US LLC, working with its suppliers, evaluates and takes appropriate steps as needed. Similar to a computer or other devices, your vehicle may require software updates to improve the usability and performance of your systems or to reduce the potential risk of unauthorized and unlawful access to your vehicle systems.

The risk of unauthorized and unlawful access to your vehicle systems may still exist, even if the most recent version of vehicle software (such as Uconnect software) is installed.

WARNING!

- It is not possible to know or to predict all of the possible outcomes if your vehicle's systems are breached. It may be possible that vehicle systems, including safety related systems, could be impaired or a loss of vehicle control could occur that may result in an accident involving serious injury or death.
- **ONLY** insert media (e.g., USB, SD card, or CD) into your vehicle if it came from a trusted source. Media of unknown origin could possibly contain malicious software, and if installed in your vehicle, it may increase the possibility for vehicle systems to be breached.
- As always, if you experience unusual vehicle behavior, take your vehicle to your nearest authorized dealer immediately.

NOTE:

- FCA or your dealer may contact you directly regarding software updates.
- To help further improve vehicle security and minimize the potential risk of a security breach, vehicle owners should:
 - Routinely check www.driveuconnect.com/software-update to learn about available Uconnect software updates.
 - Only connect and use trusted media devices (e.g. personal mobile phones, USBs, CDs).

Privacy of any wireless and wired communications cannot be assured. Third parties may unlawfully intercept information and private communications without your consent. For further information, refer to “Onboard Diagnostic System (OBD II) Cybersecurity” in your Owner’s Manual.

IDENTIFYING YOUR RADIO

CONTENTS

■ IDENTIFYING YOUR RADIO	10	□ Uconnect 5.0 System w/o Integrated Center Stack	12
□ Uconnect 5.0 System With Integrated Center Stack	11		

IDENTIFYING YOUR RADIO

Uconnect 5.0 w/Integrated Center Stack



Uconnect 5.0 w/o Integrated Center Stack



Key Features:

- 5" Touchscreen
- Three buttons on either side of the display
- Hands-free/Bluetooth
- SiriusXM Satellite Radio (If Equipped)

Uconnect 5.0 System With Integrated Center Stack



1 — RADIO

Push the RADIO button on the faceplate to enter Radio Mode. The different tuner modes; AM, FM and SXM (if equipped), can be selected by pressing the corresponding buttons on the touchscreen in Radio Mode.

2 — COMPASS

Push the COMPASS button on the faceplate to display the current direction of the vehicle.

3 — CLIMATE

Push the CLIMATE button on the faceplate to access the Climate Controls.

4 — MORE ⁺

Push the MORE ⁺ button on the faceplate to access additional options.

5 — ENTER/BROWSE & TUNE/SCROLL

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

6 — BACK

Push the BACK button to return to a previous menu or screen.

7 — SCREEN OFF

Push the SCREEN OFF button to turn the touchscreen OFF. To turn the touchscreen back ON, just press the screen.

8 — VOLUME/MUTE

Rotate the knob to adjust the Volume. Push the VOLUME/MUTE button to mute the system.

9 — PHONE

Push the PHONE button on the faceplate to access the Uconnect Phone feature.

10 — MEDIA

Pushing the MEDIA button on the faceplate will allow you to switch to Media mode (USB/iPOD, AUX, SD Card, Bluetooth and CD — if equipped).

Uconnect 5.0 System w/o Integrated Center Stack



1 — RADIO

Push the RADIO button on the faceplate to enter Radio Mode. The different tuner modes; AM, FM and SXM (if equipped), can be selected by pressing the corresponding buttons on the touchscreen in Radio Mode.

2 — COMPASS

Push the COMPASS button on the faceplate to display the current direction of the vehicle.

3 — SETTINGS

Push the SETTINGS button on the faceplate to display the customer programmable features.

4 — MORE ⁺

Push the MORE ⁺ button on the faceplate to access additional options.

5 — ENTER/BROWSE & TUNE/SCROLL

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

6 — BACK

Push the BACK button to return to a previous menu or screen.

7 — SCREEN OFF

Push the SCREEN OFF button to turn the touchscreen OFF. To turn the touchscreen back ON, just press the screen.

8 — VOLUME/MUTE

Rotate the rotary knob to adjust the Volume. Push the VOLUME/MUTE button to mute the system.

9 — PHONE

Push the PHONE button on the faceplate to access the Uconnect Phone feature.

10 — MEDIA

 
Pushing the MEDIA button on the faceplate will allow you to switch to Media mode (USB/iPOD, AUX, SD Card, Bluetooth and CD — if equipped).

RADIO MODE

CONTENTS

■ RADIO MODE OPERATION	16	□ SiriusXM Satellite Radio Mode — If Equipped . . .	17
□ Volume/Mute	16	□ SiriusXM All Access Package	18
□ Enter/Browse & Tune/Scroll Control.	16	□ Audio.	19
□ Seek Functions	16	□ Clock Setting.	20
□ Setting Presets.	17		

RADIO MODE OPERATION

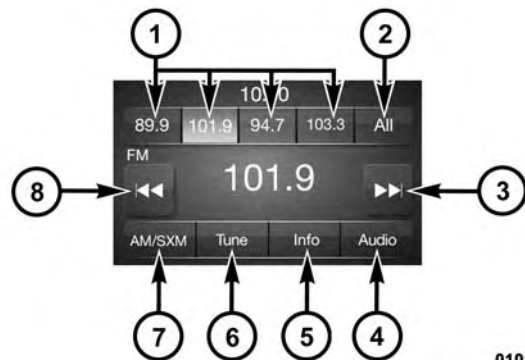

0101073162

1 — Station Presets

2 — All Presets

3 — SEEK Up ►►

4 — Audio

5 — Info

6 — Tune

7 — AM/FM/SXM

8 — SEEK Down ◄◄

Push the RADIO button on the faceplate to enter Radio Mode. The different tuner modes; AM, FM, and SXM, can then be selected by pressing the corresponding button on the touchscreen in the Radio mode.

Volume/Mute

Rotate the VOLUME/MUTE rotary knob to adjust the Volume. When the audio system is turned on, the sound will be set at the same volume level as last played.

Push the VOLUME/MUTE button to mute the system. Push the VOLUME/MUTE button again to unmute the system.

Enter/Browse & Tune/Scroll Control

Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency. Push the ENTER/BROWSE button to choose a selection.

Seek Functions

Seek Up ►►

Press and release the “Seek Up” ►► button on the touchscreen to tune the radio to the next listenable station or channel.

During a Seek Up function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

Fast Seek Up▶▶

Press and hold the “Seek Up” ▶▶ button on the touchscreen to advance the radio through the available stations or channels at a faster rate, the radio stops at the next available station or channel when the button on the touchscreen is released.

Seek Down◀◀

Press and release the “Seek Down” ◀◀ button on the touchscreen to tune the radio to the next listenable station or channel.

During a Seek Down function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

Fast Seek Down◀◀

Press and hold the “Seek Down” ◀◀ button on the touchscreen to advance the radio through the available stations or channel at a faster rate, the radio stops at the next available station or channel when the button on the touchscreen is released.

Setting Presets

The Presets are available for all Radio Modes, and are activated by pressing any of the four “Preset” buttons on the touchscreen, located at the top of the screen.

When you are receiving a station that you wish to commit into memory, press and hold the desired numbered button on the touchscreen for more than two seconds or until you hear a confirmation beep.

The Radio stores up to 12 presets in each of the Radio modes. Four presets are visible at the top of the radio screen.

Pressing the “All” button on the touchscreen will display all of the preset stations for that mode.

SiriusXM Satellite Radio Mode — If Equipped

SiriusXM Satellite Radio uses direct satellite-to-receiver broadcasting technology to provide clear, coast to coast radio content. SiriusXM is a subscription based service.

SiriusXM All Access Package

All satellite radio equipped vehicles come with a one year trial to the Sirius All Access package, providing over 160 channels of the best programming for all the places life takes you.

- In your vehicle — You'll get every channel available on your radio, including all the premium programming like Howard Stern, every NFL game, every MLB game, every NASCAR race, Oprah Radio and more.
- On the go — With a SiriusXM Internet Radio subscription included with the All Access trial, you'll get SiriusXM on your computer, smartphone, or tablet.

Including:

- A huge On Demand catalog.
- Xtra Channels featuring SiriusXM Latino — A collection of Spanish-language channels.
- MySXM — Allowing you to personalize your favorite music channels.

Go to www.siriusxm.com/getallaccess for more information. SiriusXM services require subscriptions, sold separately after the 12-month trial included with your new

vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 to cancel.** See SiriusXM Customer Agreement for complete terms at www.siriusxm.com. All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our SiriusXM satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. © 2016 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. Service available in Canada; see www.siriusxm.ca.

This functionality is only available for radios equipped with a Satellite receiver. To receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the touchscreen shows “Acquiring Signal”, you may have to change the vehicle’s position to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

Audio

1. Push the SETTINGS  button on the right side of the radio faceplate. If the settings button is not present, push the MORE  button on the faceplate then the "Settings  " button on the touchscreen.
2. Scroll down and press the "Audio" button on the touchscreen to open the Audio menu.
3. The Audio Menu shows the following options for you to customize your audio settings:
 - **Equalizer** — Press the "Equalizer" button on the touchscreen to adjust the Bass, Mid and Treble. Use the "+" or "-" buttons on the touchscreen to adjust the equalizer to your desired settings. Press the "Back Arrow" button on the touchscreen when done.
 - **Balance/Fade** — Press the "Balance/Fade" button on the touchscreen to adjust the sound from the speakers. Use the "arrow" button on the touchscreen to adjust the sound level from the front and rear or right and left side speakers. Press the Center "C" button on the touchscreen to reset the balance and fade to the factory setting. Press the "Back Arrow" button on the touchscreen when done.
 - **Speed Adjustable** — Press the "Speed Adjusted Volume" button on the touchscreen to select between OFF, 1, 2 or 3. This will decrease the radio volume relative to a decrease in vehicle speed. Press the "Back Arrow" button on the touchscreen when done.
 - **Loudness** — Press the "Loudness" button on the touchscreen to select the Loudness feature. When this feature is activated it improves sound quality at lower volumes.

Clock Setting


1. Push the SETTINGS  button on the right side of the radio faceplate. If the settings button is not present, push the MORE  button on the faceplate then the "Settings  " button on the touchscreen.
2. Select the "Clock and Date" button on the touchscreen.
3. Next, select "Set Time" to change the time.
4. Select "Set Date" to change the date.
5. To set the time, select the "Seek Up"  or "Seek Down"  arrows as appropriate. Select "12 hrs vs 24 hrs", "AM" or "PM" or select the "Time Zones" (if equipped).
6. Select "Done" when complete.

MEDIA MODE

CONTENTS

■ MEDIA MODE OPERATION	.22	□ USB/iPod Mode	.24
□ Common Media Functions	.23	□ AUX Mode	.25
□ Disc Mode — If Equipped	.24	□ Bluetooth Mode.	.26

 MEDIA MODE OPERATION

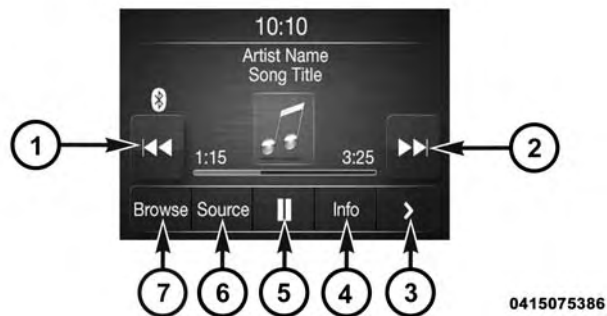

1 — SEEK Down◀◀

2 — SEEK Up▶▶

3 — Additional Functions

4 — Info

5 — Pause/Play

6 — Source

7 — Browse

Media Mode is entered by pushing the MEDIA button located on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and the desired mode button on the touchscreen. Disc (if equipped), USB, SD Card (if equipped), AUX and Bluetooth (if equipped), are the Media sources available. When available, you can select the “Browse” button on the touchscreen to be given these options:

- Now Playing
- Artists
- Albums
- Genres
- Songs
- Playlists
- Folders

You can press the “Source,” “Pause/Play” or the “Info” button on the touchscreen for artist information on the current song playing.

Common Media Functions

Seek Up ►►/Seek Down◄◄

Press and release the “Right Arrow” ►► button on the touchscreen for the next selection. Press and release the “Left Arrow” ◄◄ button on the touchscreen to return to the beginning of the current selection, or return to the beginning of the previous selection if the Disc is within the first second of the current selection.

Fast Seek Up►►

Press and hold the “Right Arrow” ►► button on the touchscreen and the desired mode will begin to fast forward through the current track until the button on the touchscreen is released.

Fast Seek Down◄◄

Press and hold the “Left Arrow” ◄◄ button on the touchscreen and the desired mode will begin to rewind through the current track until the button on the touchscreen is released.

Source

Press the “Source” button on the touchscreen to select the desired audio source: Disc (if equipped), USB, SD (if

equipped), AUX and Bluetooth (if equipped). This screen will time out after a few seconds and return to the main radio screen if no selection is made.

Info

Press the “Info” button on the touchscreen to display the current track information. Press the “X” button on the touchscreen to cancel this feature.

Shuffle

Press the “Shuffle” button on the touchscreen to play the selections on the USB/iPod device in random order to provide an interesting change of pace. Press the “Shuffle” button on the touchscreen a second time to turn this feature off.

Audio

Refer to “Operating Instructions — Radio Mode” for adjusting the audio settings.

Repeat

Press the “Repeat” button on the touchscreen to repeat the song selection. To cancel repeat, press the “Repeat” button on the touchscreen a second time.

Disc Mode — If Equipped

Your vehicle may have a remote Disc player located in the center console storage bin.

Disc Mode is entered by either inserting a CD/Disc or by pushing the MEDIA button on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and select “Disc.”

Inserting Compact Disc

Gently insert one Disc into the Disc player with the Disc label following the illustration indicated on the player. The Disc will automatically be pulled into the Disc player and the Disc icon will illuminate on the radio display. If a Disc does not go into the slot more than 1.0 inch (2.5 cm), a Disc may already be loaded and must be ejected before a new Disc can be loaded.

If you insert a Disc with the ignition ON and the radio ON, the unit will switch to Disc mode and begin to play when you insert the Disc. The display will show the track number and index time in minutes and seconds. Play will begin at the start of track 1.

Browse

Press the “Browse” button on the touchscreen to scroll through and select a desired track on the Disc. Press the “Exit” button on the touchscreen if you wish to cancel the browse function.

Eject Button — Ejecting a Disc

Push the EJECT button to eject the Disc. If you have ejected a Disc and have not removed it within 10 seconds, it will be reloaded. If the Disc is not removed, the radio will reinsert the Disc but will not play it.

A Disc can be ejected with the radio and ignition OFF.

USB/iPod Mode

USB/iPod Mode is entered by either inserting a USB Jump Drive or iPod cable into the USB port, or by pushing the MEDIA button located on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and select “USB/iPod.”

Inserting USB/iPod Device

Gently insert the USB/iPod device into the USB Port. If you insert a USB/iPod device with the ignition ON, the unit will switch to USB/iPod mode and begin to play when you insert the device. The display will show the track number and index time in minutes and seconds. Play will begin at the start of track 1.

Browse

Press the “Browse” button on the touchscreen to select Artist, Albums, Genres, Songs, Playlists or Folders from the USB/iPod device. Once the desired selection is made you can choose from the available media by pressing the button on the touchscreen. Press the “Exit” button on the touchscreen if you wish to cancel the browse function.

AUX Mode

AUX Mode is entered by inserting a AUX device using a stereo cable with a 3.5 mm audio jack into the AUX port, or by pushing the MEDIA button located on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and select “AUX.”

Inserting Auxiliary Device

Gently insert the Auxiliary device cable into the AUX Port. If you insert a Auxiliary device with the ignition ON, the unit will switch to AUX mode and begin to play when you insert the device cable.

Controlling The Auxiliary Device

The control of the Auxiliary device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead. Adjust the volume with the VOLUME/MUTE rotary knob, or with the volume of the attached device.

The vehicle radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

Bluetooth Mode

Bluetooth Streaming Audio (BTSA) or Bluetooth Mode is entered by pairing a Bluetooth device containing music to the Uconnect system.

Before proceeding, the Bluetooth device must be paired with the Uconnect Phone to communicate with the Uconnect system.

See the “Pairing Procedure” in this manual for further details.

Once the Bluetooth device is paired to the Uconnect system, push the MEDIA button located on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and select “Bluetooth.”

NOTE: For mobile phone compatibility and pairing instructions, please visit UconnectPhone.com.


UCONNECT PHONE

CONTENTS

■ UCONNECT PHONE OPERATION	28	□ Receiving A Call — Accept (And End).	31
□ Pairing A Phone	29	□ Mute (Or Unmute) Microphone During Call.	31
□ Phonebook Download — Phonebook Transfer From Mobile Phone	30	□ Transfer Ongoing Call Between Handset And Vehicle	31
□ Making A Phone Call.	31	□ Changing The Volume	32

WARNING!

 ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

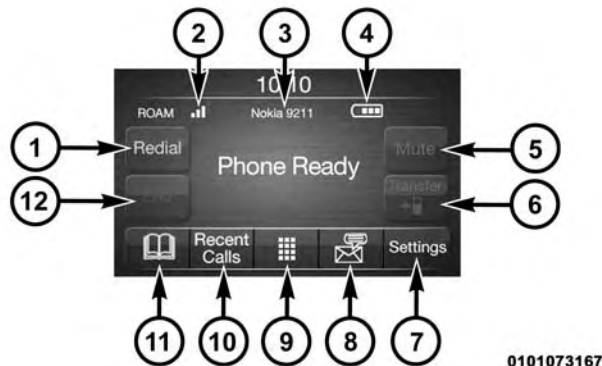UCONNECT PHONE OPERATION

- | | |
|--------------------------------------|-----------------------------|
| 1 — Call/Redial/Hold | 7 — Uconnect Phone Settings |
| 2 — Phone Signal Strength | 8 — Text Messaging |
| 3 — Paired Phone | 9 — Direct Dial Pad |
| 4 — Phone Battery Life | 10 — Recent Call Log |
| 5 — Mute Microphone | 11 — Browse Phone Book |
| 6 — Transfer To/From Uconnect System | (Contains 911) |
| | 12 — End Call |

The Uconnect Phone is a voice-activated, hands-free, in-vehicle communications system with Voice Command Capability (see Voice Command section).

The Uconnect Phone allows you to dial a phone number with your mobile phone using simple voice commands.

NOTE: The Uconnect Phone requires a mobile phone equipped with the Bluetooth Hands-Free Profile. To check mobile phone compatibility please visit UconnectPhone.com.

For Uconnect customer support:

- U.S. residents - visit UconnectPhone.com or call 1-877-855-8400
- Canadian residents - call 1-800-465-2001 (English) or 1-800-387-9983 (French)

Pairing A Phone

To begin using your Uconnect Phone, you must pair your compatible Bluetooth enabled mobile phone. Mobile phone pairing is the process of establishing a wireless connection between a cellular phone and the Uconnect system.

To complete the pairing process, you will need to reference your mobile phone Owner's Manual. Please visit UconnectPhone.com for complete mobile phone compatibility information.

NOTE:

- You must have Bluetooth enabled on your phone to complete this procedure.
 - The vehicle must be in PARK.
1. Place the ignition in the ACC or ON position.
 2. Push the PHONE button on the faceplate.
 - If there is no phones currently connected with the system, a pop-up will appear asking if you would like to pair a mobile phone.
 3. Select "Yes" to begin the pairing process.
 4. Search for available devices on your Bluetooth enabled mobile phone.
 - Press the Settings button on your mobile phone.
 - Select Bluetooth and ensure it is enabled. Once enabled, the mobile phone will begin to search for Bluetooth connections.

5. If No is selected, and you still would like to pair a mobile phone, press the “Settings” button from the Uconnect Phone main screen.
 - Select “Paired Phones” then press the “Add Device” button on the touchscreen.
 - Search for available devices on your Bluetooth enabled mobile phone (see below). When prompted on the phone, select “Uconnect” and accept the connection request.
6. Uconnect Phone will display an in progress screen while the system is connecting.
7. When your mobile phone finds the Uconnect system, select “Uconnect.”
8. When prompted on the mobile phone, accept the connection request from Uconnect Phone.

NOTE: Some mobile phones will require you to enter the PIN number.

9. When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting “Yes” will make this phone the highest priority. This phone will take precedence over other paired phones within range and will connect to the Uconnect system automatically when entering the vehicle. Only one mobile phone and/or one Bluetooth audio device can be connected to the Uconnect system at a time. If “No” is selected, simply select “Uconnect” from the mobile phone/audio device Bluetooth screen, and the Uconnect system will reconnect to the Bluetooth device.

Phonebook Download — Phonebook Transfer From Mobile Phone

If equipped and specifically supported by your phone, Uconnect Phone will ask you if you want to download names (text names) and number entries from your mobile phone’s phonebook. Specific Bluetooth Phones with Phone Book Access Profile may support this feature. See UconnectPhone.com for supported phones.

NOTE:

- Download and update, if supported, begins as soon as the Bluetooth wireless phone connection is made to the Uconnect Phone, for example, after you start the vehicle.
- You may be asked for permission to initiate the phonebook download.
- A maximum of 2,000 contact names with six numbers per contact will be downloaded and updated every time a phone is connected to the Uconnect Phone.
- Depending on the maximum number of entries downloaded, there may be a short delay before the latest downloaded names can be used. Until then, if available, the previously downloaded phonebook is available for use.
- Only the phonebook of the currently connected mobile phone is accessible.
- Only the mobile phones phonebook is downloaded. SIM card phonebook is not part of the Mobile phonebook.
- This downloaded phonebook cannot be edited or deleted on the Uconnect Phone. These can only be edited on the mobile phone. The changes are transferred and updated to Uconnect Phone on the next phone connection.

Making A Phone Call

1. Push the PHONE button on the steering wheel.
2. After the BEEP, say “dial” (or “call” a full name or phone number).

Receiving A Call — Accept (And End)

1. When an incoming call rings or is announced on Uconnect, push the PHONE button on the faceplate.
2. To end a call, push the PHONE button on steering wheel or the PHONE button on the faceplate.

5

Mute (Or Unmute) Microphone During Call

1. During a call, push the VOICE COMMAND button on the steering wheel.
2. After the BEEP, say “mute” (or “mute off”).

Transfer Ongoing Call Between Handset And Vehicle

1. During a call, push the VOICE COMMAND button on the steering wheel.
2. After the BEEP, say “transfer call.”

Changing The Volume

1. Start a dialogue by pushing the PHONE button on the faceplate, then adjust the volume during a normal call.
2. Use the radio ON/VOLUME rotary knob to adjust the volume to a comfortable level while the Uconnect system is speaking. Please note the volume setting for Uconnect phone is different than the audio system volume setting.

UCONNECT 5.0 VOICE RECOGNITION QUICK TIPS

CONTENTS

■ UCONNECT VOICE RECOGNITION.	.34	□ Media.	.37
□ Introducing Uconnect.	.34	□ Phone.	.37
□ Get Started	.34	□ Voice Text Reply	.38
□ Basic Voice Commands.	.36	□ Additional Information.	.39
□ Radio	.36		

UCONNECT VOICE RECOGNITION

WARNING!

ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Introducing Uconnect

Start using Uconnect Voice Recognition with these helpful quick tips. It provides the key Voice Commands and tips you need to know to control your Uconnect 5.0 system.

Key Features:


- 5" touchscreen
- Three buttons on either side of the display

**Get Started**

 
1. Visit UconnectPhone.com to check mobile device and feature compatibility and to find phone pairing instructions.
2. Reduce background noise. Wind and passenger conversations are examples of noise that may impact recognition.
3. Speak clearly at a normal pace and volume while facing straight ahead. The microphone is positioned on the rearview mirror and aimed at the driver.

4. Each time you give a Voice Command, you must first push either the VR or PHONE button, wait until **after** the beep, then say your Voice Command.
5. You can interrupt the help message or system prompts by pushing the VR or PHONE button and saying a Voice Command from current category.

All you need to control your Uconnect system with your voice are the buttons on your steering wheel.

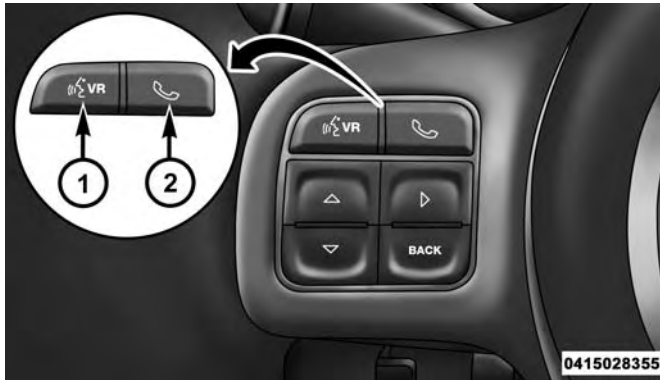

 - 1 — Push To Begin Radio Or Media Functions
- 2 — Push To Initiate, Answer/End A Phone Call, Send Or Receive A Text

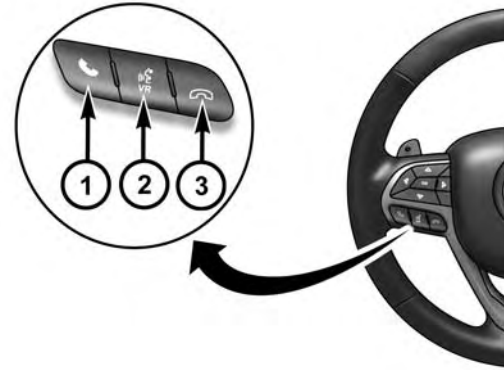

- 1 — Push To Initiate Or To Answer A Phone Call, Send Or Receive A Text
- 2 — Push To Begin Radio Or Media Functions
- 3 — Push To End Call

 
Basic Voice Commands

The basic Voice Commands below can be given at any point while using your Uconnect system.

Push the VR button . After the beep, say...

- **Cancel** to stop a current voice session
- **Help** to hear a list of suggested Voice Commands
- **Repeat** to listen to the system prompts again

Notice the visual cues that inform you of your voice recognition system's status. Cues appear on the touchscreen.

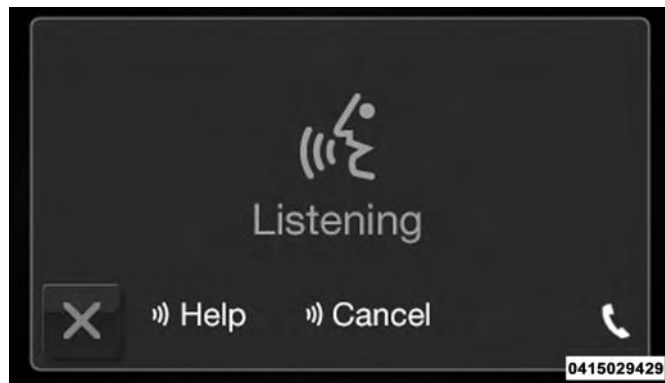

Radio

Use your voice to quickly get to the AM or FM radio stations.

Push the VR button . After the beep, say...

- **Tune to** ninety-five-point-five FM
- **Tune to Satellite** Hits 1

TIP: At any time, if you are not sure of what to say or want to learn a Voice Command, push the VR button  and say "Help." The system will provide you with a list of commands.



 
Media

Uconnect offers connections via USB, SD, Bluetooth and Auxiliary ports (If Equipped). Voice operation is only available for connected USB and iPod devices. (Remote CD player optional and not available on all vehicles.)

Push the VR button . After the beep, say one of the following commands and follow the prompts to switch your media source or choose an artist.

- **Change source to Bluetooth**
- **Change source to iPod**
- **Change source to USB**
- **Play artist** Beethoven; **Play album** Greatest Hits; **Play song** Moonlight Sonata; **Play genre** Classical

TIP: Press the “Browse” button on the touchscreen to see all of the music on your iPod or USB device. Your Voice Command must match **exactly** how the artist, album, song and genre information is displayed.

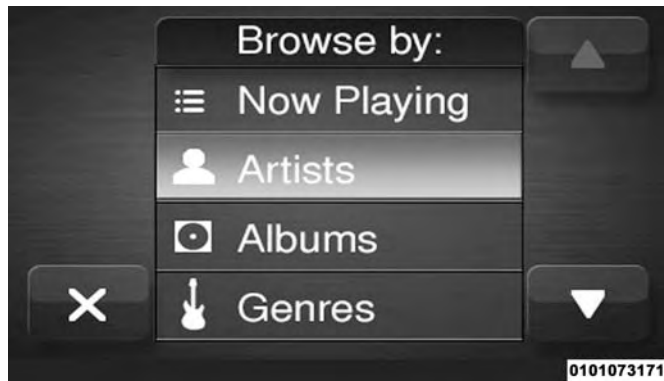

Phone

Making and answering hands-free phone calls is easy with Uconnect. When the Phonebook button is illuminated on your touchscreen, your system is ready. Check UconnectPhone.com for mobile phone compatibility and pairing instructions.

Push the PHONE button . After the beep, say one of the following commands:

- **Call** John Smith
- **Dial** 123-456-7890 and follow the system prompts
- **Redial** (call previous outgoing phone number)
- **Call back** (call previous incoming phone number)

TIP: When providing a Voice Command, push the PHONE button  and say “**Call,**” then pronounce the name **exactly** as it appears in your phone book. When a contact has multiple phone numbers, you can say “**Call** John Smith **work.**”



Voice Text Reply

Uconnect will announce **incoming** text messages. Push the PHONE button  and say **Listen**. (Must have compatible mobile phone paired to Uconnect system.)

1. Once an incoming text message is read to you, push the PHONE button . After the beep, say... “**Reply**”
2. Listen to the Uconnect prompts. After the beep, repeat one of the pre-defined messages and follow the system prompts.

PRE-DEFINED VOICE TEXT REPLY RESPONSES		
Yes.	Stuck in traffic.	See you later.
No.	Start without me.	I'll be late.
Okay.	Where are you?	I will be <number> minutes late.
Call me.	Are you there yet?	
I'll call you later.	I need directions.	See you in <number> of minutes.
I'm on my way.	Can't talk right now.	
I'm lost.		Thanks.

TIP: Your mobile phone must have the full implementation of the **Message Access Profile (MAP)** to take advantage of this feature. For details about MAP, visit UconnectPhone.com. Apple iPhone iOS6 or later supports reading **incoming** text messages only.

Additional Information

© 2016 FCA US LLC. All rights reserved. Mopar and Uconnect are registered trademarks and Mopar Owner Connect is a trademark of FCA US LLC. Android is a trademark of Google Inc. SiriusXM and all related marks and logos are trademarks of SiriusXM Radio Inc.

For Uconnect system support, visit DriveUconnect.com or call 1-877-855-8400 (24 hours a day 7 days a week.)

UCONNECT SETTINGS

CONTENTS

■ CUSTOMER PROGRAMMABLE FEATURES —	
UCONNECT 5.0 PERSONAL SETTINGS.	42

CUSTOMER PROGRAMMABLE FEATURES — UCONNECT 5.0 PERSONAL SETTINGS

WARNING!

ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Push the MORE faceplate button, and then press the Settings touchscreen button, or if equipped with the SETTINGS faceplate button, push it to display the settings menu screen. In this mode the Uconnect system allows you to access programmable features that may be equipped such as Display, Voice, Clock, Safety & Assistance, Lights, Doors & Locks, Auto-On Comfort (if equipped), Engine Off Options, Suspension, Trailer Brake, Audio, Compass Settings, Phone/Bluetooth, SiriusXM Setup (if equipped), Restore Settings, Clear Personal Data and System Information.

NOTE: Only one category may be selected at a time.

When making a selection, press the button on the touchscreen to enter the desired mode. Once in the desired mode, press and release the preferred setting until the button is highlighted. Once the setting is complete, either press the back arrow or Done button on the touchscreen or the Back button on the faceplate to return to the previous menu. Pressing the Up or Down Arrow buttons on the touchscreen on the right side of the screen will allow you to toggle up or down through the list of available settings.

NOTE: All settings should be changed with the ignition in the “RUN” position.

Refer to “Uconnect Settings” in the Owner’s Manual on the DVD for further information.

MORE BUTTON

CONTENTS

■ MORE MAIN MENU	44
----------------------------	----

MORE MAIN MENU

Push the MORE  button located on the faceplate to display the MORE Main Menu. The MORE Main Menu may contain the following options:

- *Clock*

Press the “Clock” button to change the clock display to a larger font.

- *Settings*

Press the “Settings  ” button to access the Settings main menu.

- *Cargo Camera*

Press the “Cargo Cam” button to activate or deactivate the cargo camera.

- *Headrest Fold*

Press the “Headrest Fold” button to fold the headrests.

- *Mirror Dimming*

Press the “Mirror Dimmer” button to dim the rearview mirror.

- *Screen Off*

Press the “Screen Off” button to turn the touchscreen off.

- *Compass*

Press the “Compass” button to display the compass.

All features listed may not be available on your vehicle.



17UC5CHRY-526-AC

Third Edition
Uconnect 5.0
Printed in the USA



©2016 FCA US LLC. All Rights Reserved.

Chrysler, Dodge, Jeep, Ram, Mopar and Uconnect are trademarks of FCA US LLC.
FIAT is a registered trademark of FCA Group Marketing S.p.A.,
used under license by FCA US LLC.