



Uconnect® 3.0

Owner's Manual Supplement

TABLE OF CONTENTS

SECTION

PAGE

1	UCONNECT® 3.0	3
2	RADIO MODE	7
3	MEDIA MODE	13
4	SAFETY GUIDELINES	19

1

2

3

4


Uconnect® 3.0

1

CONTENTS

■ Uconnect® 3.0 SYSTEM	4
----------------------------------	---

Uconnect® 3.0 SYSTEM

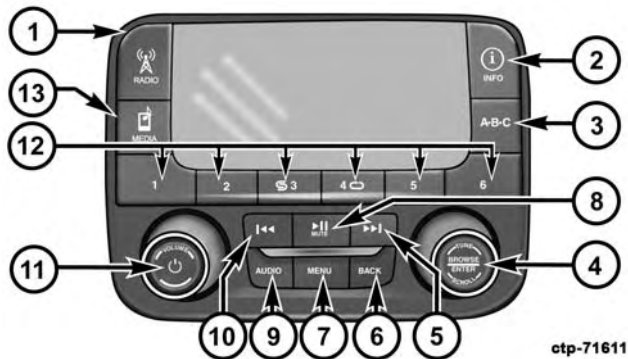

ctp-71611

1 — RADIO

Press the RADIO button on your faceplate to enter the Radio Mode. The different tuner modes; AM, FM and SXM – If Equipped can be selected by pressing the RADIO button on your faceplate until the desired tuner mode is displayed.

2 — INFO

Press the INFO button on your faceplate for a RBDS station (one with call letters displayed). The radio will return a Radio Text message broadcast from an FM station (FM mode only).

3 — A-B-C

Press the A-B-C button on your faceplate to select the A, B or C preset list.

4 — ENTER/BROWSE & TUNE/SCROLL

Press the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

5 — SEEK UP

Press the SEEK UP button on your faceplate to tune the radio to the next listenable station or channel.

6 — BACK

Press the BACK button on your faceplate to return to a previous menu or screen.

7 — MENU

Press the MENU button on your faceplate to scroll between the setting sub-menus.

8 — PLAY/PAUSE/MUTE

Press to Play, Pause or Mute the music.

9 — AUDIO

Press the AUDIO button on your faceplate to adjust the Bass, Mid Range, Treble, Balance or Fade.

10 — SEEK DOWN

Press the SEEK DOWN button on your faceplate to tune the radio to the previous listenable station or channel.

11 — ON/VOLUME

Press the ON/VOLUME control knob to turn on the radio. Press the ON/VOLUME control knob a second time to turn off the radio.

The electronic volume control turns continuously (360 degrees) in either direction without stopping. Turning the ON/VOLUME control knob to the right increases the volume and to the left decreases it.

12 — PRESETS 1-6

These buttons on your faceplate tune the radio to the stations that you commit to memory AM (A, B, C), FM (A, B, C) and Satellite (A, B, C) — 18 AM, 18 FM and 18 SAT stations.

13 — MEDIA

Pressing the MEDIA button on your faceplate will allow you to switch from AM/FM/SXM modes to Media mode (CD-if equipped, USB/iPOD®, AUX).

RADIO MODE

CONTENTS

2

■ RADIO MODE	.8	□ Setting Presets	.9
□ On/Off & Volume Control	.8	□ SiriusXM Satellite Radio Mode — If Equipped. . .	.9
□ Enter/Browse & Tune/Scroll Control	.8	□ Audio	.10
□ Seek Functions	.8	□ Clock Setting	.11

RADIO MODE

The radio is equipped with the following modes:

- FM
- AM
- SXM SiriusXM Satellite Radio (if equipped)

Press the RADIO button on your faceplate to enter the Radio Mode. The different tuner modes; AM, FM, and SXM, can then be selected by pressing the RADIO button on your faceplate until the desired tuner mode is displayed.

On/Off & Volume Control

Press the ON/OFF Volume control knob to turn on the radio. Press the ON/OFF Volume control knob a second time to turn off the radio.

When the audio system is turned on, the sound will be set at the same volume level as last played.

Enter/Browse & Tune/Scroll Control

Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency.

When scrolling a list, press the ENTER/BROWSE button on your faceplate to choose a selection.

Seek Functions

SEEK UP

Press and release the SEEK UP button on your faceplate to tune the radio to the next listenable station or channel.

During a SEEK UP function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

SEEK DOWN

Press and release the SEEK DOWN button on your faceplate to tune the radio to the next listenable station or channel.

During a SEEK DOWN function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

Setting Presets

The Presets are available for all Radio Modes, and are activated by pressing any of the six “Preset” buttons on your faceplate.

When you are receiving a station that you wish to commit into memory, press and hold the desired numbered button on your faceplate for more than two seconds or until you hear a confirmation beep.

The Radio stores up to 18 presets in each of the Radio modes. Press the A-B-C button on your faceplate to select the A, B or C preset list.

SiriusXM Satellite Radio Mode — If Equipped

SiriusXM Satellite Radio uses direct satellite-to-receiver broadcasting technology to provide clear digital sound, coast to coast. The subscription service provider is SiriusXM Satellite Radio. This service offers over 130 channels of music, sports, news, entertainment, and programming for children, directly from its satellites and broadcasting studios. A one-year SiriusXM Satellite Radio subscription is included.

SiriusXM and all related marks and logos are trademarks of SiriusXM Radio Inc. and its subsidiaries. SiriusXM Satellite Radio requires a subscription, sold separately after trial subscription included with vehicle purchase.

Prices and programming are provided by SiriusXM and are subject to change. Subscriptions governed by Terms & Conditions available at sirius.com/serviceterms. SiriusXM Radio U.S. service only available to those at least 18 years of age in the 48 contiguous United States, D.C., and PR. Service available in Canada; see www.siriuscanada.ca.

This functionality is only available for radios equipped with a Satellite receiver. In order to receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the screen shows Acquiring Signal, you may have to change the vehicle's position to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

Audio

Press the AUDIO button at the bottom of the radio to enter the Audio Menu.

The Audio Menu shows the following options for you to customize your audio settings:

- **Treble, Mid, Bass, Fade And Balance** — Select the desired setting to adjust, then press the ENTER/BROWSE button. Turn the TUNE/SCROLL knob to adjust the setting + or – 9. Press the BACK button on your faceplate when done.
- **Speed Adjusted Volume (If Equipped)** — Select “Speed Adjusted Volume” and press the ENTER/BROWSE button. Turn the TUNE/SCROLL knob to adjust the setting to Off, 1, 2, or 3. Press the BACK button on your faceplate when done.

- **Loudness (If Equipped)** — Select “Loudness” and press the ENTER/BROWSE button to mark the check box on or off. Press the BACK button on your faceplate when done.
 - **AUX Volume Offset (If Equipped)** — Select “AUX Volume Offset” and press the ENTER/BROWSE button. Turn the TUNE/SCROLL knob to adjust the setting + or – 3. Press the BACK button on your faceplate when done.
2. Adjust the hours or minutes by turning the TUNE/SCROLL knob, then press the ENTER/BROWSE button to move to the next entry. You can also select 12hr or 24hr format by turning the TUNE/SCROLL knob, then pressing the ENTER/BROWSE button on the desired selection.
 3. Once the time is set, select “OK” to exit the time screen.

Clock Setting

1. Press the MENU button on your faceplate on the bottom of the radio and press the ENTER/BROWSE button for System Settings. Select the Time and Format setting then select Set Time by pressing the ENTER/BROWSE button.

MEDIA MODE

CONTENTS

■ MEDIA MODE	.14	□ Audio	.15
□ Common Media Functions	.14	□ Disc Mode	.15
□ Source	.14	□ USB/iPod® Mode	.16
□ Info	.15	□ AUX Mode	.16

MEDIA MODE

Media Mode is entered by pressing the MEDIA button on your faceplate located to the left of the display. Once in Media Mode, select your media Source by rotating the TUNE/SCROLL rotary knob and pressing the ENTER/BROWSE button on your faceplate.

Common Media Functions

SEEK UP/DOWN

Press and release the SEEK UP button on your faceplate on the radio faceplate for the next selection.

Press and release the SEEK DOWN button on your faceplate on the radio faceplate to return to the beginning of the current selection, or return to the beginning of the previous selection if the Media is within the first second of the current selection.

Fast SEEK UP

Press and hold the SEEK UP button on your faceplate on the radio faceplate and the desired mode will begin to fast forward through the current track until the button on your faceplate is released.

Fast SEEK DOWN

Press and hold the SEEK DOWN button on your faceplate on the radio faceplate and the desired mode will begin to rewind through the current track until the button on your faceplate is released.

Source

Press the MEDIA button on your faceplate on the radio faceplate to select the desired audio source, Disc (if equipped), AUX or USB/iPod®. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

Info

Press the INFO button on your faceplate on the radio faceplate to display the current track information.

Audio

Refer to “Radio Mode” for adjusting the audio settings.

Disc Mode

If equipped, your vehicle may have a remote Disc player located in the lower center console storage bin.

Disc Mode is entered by either inserting a Disc or by pressing the MEDIA button on your faceplate on the radio faceplate located to the left of the display. Once in Media Mode, select “Disc Mode.”

Inserting Compact Disc

Gently insert one Disc into the Disc player following the illustration indicated on the player. The Disc will automatically be pulled into the Disc player and the Disc icon will illuminate on the radio display. If a Disc does not go into the slot more than 1.0 in (2.5 cm), a disc may already be loaded and must be ejected before a new Disc can be loaded.

If you insert a Disc with the ignition ON and the radio ON, the unit will switch to CD/Disc mode and begin to play when you insert the Disc. The display will show the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

Eject Button — Ejecting A Disc

Press the EJECT button on your faceplate to eject the Disc. If you have ejected a Disc and have not removed it within 10 seconds, it will be reloaded. If the Disc is not removed, the radio will reinsert the Disc but will not play it.

A Disc can be ejected with the radio and ignition OFF.

USB/iPod® Mode

USB/iPod® Mode is entered by either inserting a USB Jump Drive or iPod® cable into the USB port or by pressing the MEDIA button on your faceplate located left of the display. Once in Media Mode, press the MEDIA button on your faceplate and select USB/iPod®.

Inserting USB/iPod® Device

Gently insert the USB/iPod® device into the USB Port. If you insert a USB/iPod® device with the ignition ON and the radio ON, the unit will switch to USB/iPod® mode and begin to play when you insert the device. The display will show the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

AUX Mode

AUX Mode is entered by inserting an AUX device using a cable with a 3.5 mm stereo audio jack into the AUX port or by pressing MEDIA button on your faceplate located left of the display. Once in Media Mode, press the MEDIA button on your faceplate and select AUX.

Inserting Auxiliary Device

Gently insert the Auxiliary device cable into the AUX Port. If you insert an Auxiliary device with the ignition ON and the radio ON, the unit will switch to AUX mode and begin to play when you insert the device cable.

Controlling The Auxiliary Device

The control of the auxiliary device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead. Adjust the volume with the ON/OFF VOLUME rotary knob, or with the volume of the attached device.

NOTE: The vehicle radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

SAFETY GUIDELINES

CONTENTS

■ SAFETY GUIDELINES	.20
-------------------------------	-----

SAFETY GUIDELINES**WARNING!**

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect® features and applications in this vehicle. Only use Uconnect® when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

All persons should read this manual carefully before using the radio system. It contains instructions on how to use the system in a safe and effective manner.

Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- Glance at the screen only when necessary and safe to do so. If prolonged viewing of the screen is necessary, park in a safe location and set the parking brake.
- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Make certain that the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.

Safe Usage Of The Uconnect® System

- Read all instructions in this manual carefully before using your system to ensure proper usage!
- Your system is a sophisticated electronic device. Do not let young children use your system.
- Permanent hearing loss may occur if you play your music or the system at loud volumes. Exercise caution when setting the volume on your system.
- Driving is a complex activity that requires your full attention. If you're engaged in driving or any activity that requires your full attention, we recommend that you not use your system.
- Keep drinks, rain, and other sources of moisture away from your system. Besides damage to your system, moisture can cause electric shocks as with any electronic device.

Touchscreen

- Do not touch the screen with any hard or sharp objects (pen, USB stick, jewelry, etc.) which could scratch the touchscreen surface!
- Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touchscreen.
- If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

Disc Drive

- Do not insert any damaged, warped, scratched or dirty Discs into the Disc Player.
- Discs that have been modified with an adhesive label should not be used in the Disc Player.
- Do not insert more than one Disc at a time into the drive slot.

FCC Declaration

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio technician for help.

Safety Information

Exposure to Radio Frequency Radiation

The radiated output power of the this internal wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the radio is 20 cm (200 mm) or further from the human body.

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community.

The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.



14UC3-526-AC
Third Edition
Uconnect® 3.0
Chrysler Group LLC
Printed in the USA



DODGE

CHRYSLER

Jeep®

