



Uconnect® 5.0/5.0N

Owner's Manual Supplement

TABLE OF CONTENTS

SECTION

PAGE

1	UCONNECT® 5.0	3	1
2	SAFETY GUIDELINES	107	2

Uconnect® 5.0

1

CONTENTS

 
■ Uconnect® 5.0 System	.5	□ Clock Setting	.14
■ Radio Mode	.7	■ Media Mode	.14
□ Volume & Mute	.7	□ Common Media Functions	.15
□ Enter/Browse & Tune/Scroll Control	.7	□ Disc Mode	.16
□ Seek Functions	.8	□ USB/iPod® Mode	.17
□ Direct Tune	.9	□ AUX Mode	.18
□ Setting Presets.	.10	□ Bluetooth® Mode	.19
□ SiriusXM Satellite Radio Mode	.10	■ Uconnect® Phone Mode	.19
□ SiriusXM Premier	.11	□ Pairing a Phone	.20
□ Audio	.12	□ Start Pairing Procedure	.20

4 Uconnect® 5.0

□ Phonebook Download — Phonebook Transfer From Mobile Phone	21	■ More Main Menu	101
□ Making A Phone Call	22	■ Settings	102
□ Receiving A Call — Accept (And End)	23	□ Display	102
□ Mute (Or Unmute) Microphone During Call	23	□ Clock & Date	103
□ Transfer Ongoing Call Between Handset And Vehicle	23	□ Safety/Assistance — If Equipped	104
□ Changing The Volume	23	□ Lights — If Equipped.	104
■ Uconnect® Voice Command	23	□ Doors & Locks	104
□ Voice Command Operation	24	□ Audio	105
■ Navigation (Uconnect® 5.0N Only)	38	□ Phone/Bluetooth®	105
□ Read Me First	38	□ SiriusXM Setup	105
		□ Restore Default Settings	105

Uconnect® 5.0 System

1

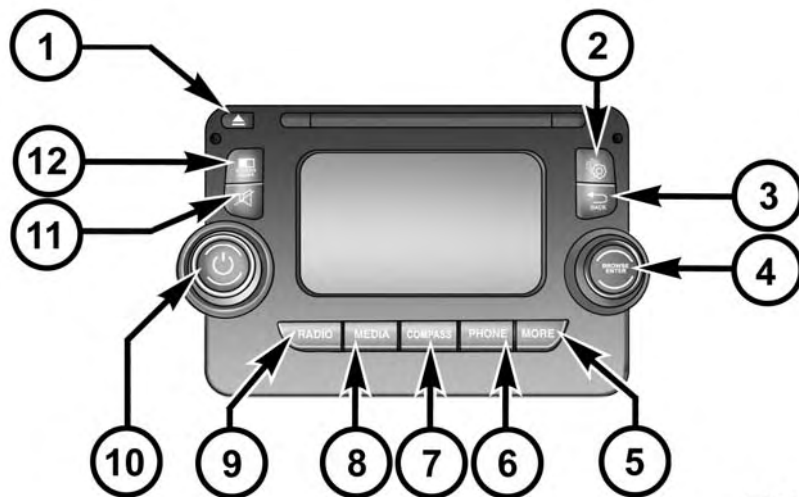

0401008744

1. *EJECT*

Press the EJECT button to eject the disc.

2. *SETTINGS*

Press the Settings button to access the Uconnect® setting features.

3. *BACK*

Press the BACK button to return to a previous menu or screen.

4. *ENTER/BROWSE & TUNE/SCROLL*

Press the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

5. *MORE*

Press the MORE hard-key to access additional options such as: Trip and Clock.

6. *PHONE*

Press the Phone button to access the Uconnect® Phone feature.

7. *COMPASS*

Press the COMPASS hard-key to display the current direction of the vehicle.

8. *MEDIA*

Pressing the MEDIA button will allow you to switch to Media mode (CD, USB/iPOD®, AUX, Bluetooth®).

9. RADIO

Press the RADIO hard-key to enter Radio Mode. The different tuner modes; AM, FM and SXM – If Equipped can be selected by touching the corresponding soft-keys in the Radio Mode.

10. ON/VOLUME

Rotate the rotary knob to adjust the Volume. Press the ON/VOLUME button to turn on the system. Press the ON/VOLUME button a second time to turn off the system.

11. MUTE

Press the Mute button for activation/deactivation of the volume.

12. DISPLAY ON/OFF

Press the DISPLAY ON/OFF hard-key to turn the display ON or OFF.

Radio Mode

Volume & Mute

- Rotate the rotary knob to adjust the Volume. When the audio system is turned on, the sound will be set at the same volume level as last played.
- Press the Mute button to mute the system. Press the Mute button again to un-mute the system.

Enter/Browse & Tune/Scroll Control

- Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency. Push the ENTER/BROWSE button to choose a selection.

Seek Functions

Seek Up

- Touch and release the Seek Up soft-key to tune the radio to the next listenable station or channel.
- During a Seek Up function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

Fast Seek Up

- Touch and hold the Seek Up soft-key to advance the radio through the available stations or channels at a faster rate, the radio stops at the next available station or channel when the soft-key is released.

Seek Down

- Touch and release the Seek Down soft-key to tune the radio to the next listenable station or channel.
- During a Seek Down function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

Fast Seek Down

- Touch and hold the Seek Down soft-key to advance the radio through the available stations or channel at a faster rate, the radio stops at the next available station or channel when the soft-key is released.

Direct Tune



The Direct Tune soft-key screen is available in AM, FM, and SAT radio modes and can be used to direct tune the radio to a desired station or channel. Press the Tune soft-key located at the bottom of the radio screen.

Press the available number soft-key to begin selecting a desired station. Once a number has been entered, any numbers that are no longer possible (stations that cannot be reached) will become deactivated/grayed out.

If you accidentally entered the wrong station number, touch the CLR soft-key to clear the radio station numbers and reenter the correct station number.

Once the last digit of a station has been entered, the DIRECT TUNE screen will close and the system will automatically tune to that station. The selected Station or Channel number is displayed in the Direct Tune text box.

Setting Presets



The Presets are available for all Radio Modes, and are activated by touching any of the four Preset soft keys, located at the top of the screen.

When you are receiving a station that you wish to commit into memory, press and hold the desired numbered soft-key for more than two seconds or until you hear a confirmation beep.

The Radio stores up to 12 presets in each of the Radio modes. Four presets are visible at the top of the radio screen.

Touching the “all” soft-key on the radio home screen will display all of the preset stations for that mode.

SiriusXM Satellite Radio Mode

SiriusXM Satellite Radio uses direct satellite-to-receiver broadcasting technology to provide clear, coast to coast radio content. SiriusXM is a subscription based service.

SiriusXM Premier



Get over 160 channels on your satellite radio, and enjoy all you want, all in one place. Hear commercial-free music plus sports, news, talk and entertainment. Get all the premium programming, including Howard Stern, every NFL game, Oprah Radio®, every MLB® and NHL® game, every NASCAR® race, Martha Stewart and

more. And get 20+ extra channels, including SiriusXM Latino, offering 20 channels of commercial free music, news, talk, comedy, sports and more dedicated to Spanish language programming.

SiriusXM services require subscriptions, sold separately after the 12-month trial included with the new vehicle purchase. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call SiriusXM at 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** All fees and programming subject to change. Our satellite service is available only to those at least 18 and older in the 48 contiguous USA and D.C. Our Sirius satellite service is also available in PR (with coverage limitations). Our Internet radio service is available throughout our satellite service area and in AK and HI. © 2012 Sirius XM Radio Inc. Sirius, XM and all related

marks and logos are trademarks of Sirius XM Radio Inc. Service available in Canada; see www.siriuscanada.ca.

 
This functionality is only available for radios equipped with a Satellite receiver. In order to receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the screen shows Acquiring Signal, you might have to change the vehicle's position in order to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

Audio



Equalizer

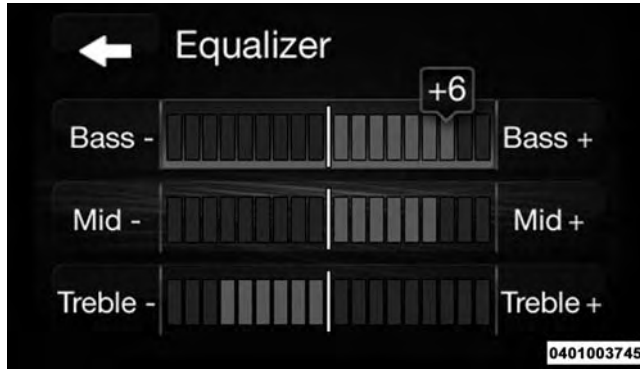

- Touch the Equalizer soft-key to adjust the Bass, Mid and Treble. Use the + or - soft-key to adjust the equalizer to your desired settings. Press the “Done” soft-key when done.

Balance/Fade

- Touch the Balance/Fade soft-key to adjust the sound from the speakers. Use the arrow soft-key to adjust the sound level from the front and rear or right and left side speakers. Touch the Center “C” soft-key to reset the balance and fade to the factory setting. Press the “Done” soft-key when done.

Speed Adjustable

- Touch the Speed Adjusted Volume soft-key to select between OFF, 1, 2 or 3. This will decrease the radio volume relative to a decrease in vehicle speed. Press the “Done” soft-key when done.

Loudness

- Touch the Loudness soft-key to select the Loudness feature. When this feature is activated it improves sound quality at lower volumes. Press the “Done” soft-key when done.

Auto On Radio

- Touch the Auto On Radio soft-key to set how the radio behaves when the Ignition is switched to ON. The options are: Radio On, Radio Off or Reset to the last turned to stop condition. Press the “Done” soft-key when done.

Radio Off Delay

- Touch the Radio Off Delay to keep the radio On for a preset amount of time after the Ignition is switched OFF. Press the “Done” soft-key when done.

Clock Setting

1. To start the clock setting procedure, perform either of the following:
- Press the More hard-key on the right side of the display, next press the Time soft-key and then press the Set soft-key.

- Press the Settings hard key on the right side of the display, then Clock and Date soft key, and then Set Time and Date soft key. Select the up or down arrows as appropriate. Select Done when complete.
2. Touch the Up or Down arrows to adjust the hours or minutes, next select the AM or PM soft-key. You can also select 12hr or 24hr format by touching the desired soft-key.
 3. Once the time is set press the “Done” soft-key to exit the time screen.

Media Mode

Media Mode is entered by touching the Media hard-key below the display. Once in Media Mode, touch Source soft-key and the desired mode soft-key. Disc, USB, AUX and Bluetooth® are the Media sources available. You can select the Browse soft-key to be given these options: Now Playing, Artists, Albums, Genres, Songs, Playlists or

Folders. You can select the Source soft-key, Pause/Play soft-key, Info soft-key for artist information on current song playing.

Common Media Functions

Seek Up/Down

Touch and release the right arrow soft-key for the next selection. Touch and release the left arrow soft-key to return to the beginning of the current selection, or return to the beginning of the previous selection if the Disc, USB, AUX and Bluetooth® is within the first eight seconds (less time for some devices) of the current selection.

Fast Seek Up

Touch and hold the right arrow soft-key and the desired mode will begin to fast forward through the current track until the soft-key is released.

Fast Seek Down

Touch and hold the left arrow soft-key and the desired mode will begin to rewind through the current track until the soft-key is released.

Source

Touch the Source soft-key to select the desired audio source, Disc, AUX, USB/iPod® or Bluetooth®. This screen will time out after a few seconds and return to the main radio screen if no selection is made.

Info

Touch the Info soft-key to display the current track information. Touch the “X” soft-key to cancel this feature.

Shuffle

Touch the shuffle soft-key to play the selections on the USB/iPod® or Bluetooth® (if supported) device in random order to provide an interesting change of pace. Touch the soft-key a second time to turn this feature off.

Audio

Refer to Operating Instructions – Radio Mode for adjusting the audio settings.

Disc Mode

Disc Mode is entered by either inserting a CD/Disc into the Disc player above the display or by touching the Media hard-key located on the side of the display. Once in Media Mode, touch the source soft-key and select Disc.

Inserting Compact Disc

Gently insert one Disc into the Disc player with the Disc label following the illustration indicated on the player. The Disc will automatically be pulled into the Disc player and the Disc icon will illuminate on the radio display. If a Disc does not go into the slot more than 1.0 in (2.5 cm), a disc may already be loaded and must be ejected before a new Disc can be loaded.

If you insert a Disc with the ignition ON and the radio ON, the unit will switch to Disc mode and begin to play

when you insert the Disc. The display will show the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

Browse

Touch the browse soft-key to scroll through and select a desired track on the Disc. Touch the exit soft-key if you wish to cancel the browse function.

Eject Button – Ejecting a Disc

Press the EJECT button to eject the Disc. If you have ejected a Disc and have not removed it within 20 seconds, it will be reloaded. If the Disc is not removed, the radio will reinsert the Disc but will not play it.

A Disc can be ejected with the radio and ignition OFF.

USB/iPod® Mode

USB/iPod® Mode is entered by either inserting a USB Jump Drive or iPod® cable into the USB port or by touching the Media hard-key located left of the display. Once in Media Mode, touch the source soft-key and select USB/iPod®.

Inserting USB/iPod® Device

Gently insert the USB/iPod® device into the USB Port. If you insert a USB/iPod® device with the ignition ON, the unit will switch to USB/iPod® mode and begin to play when you insert the device. The display will show the Artist and Title name, and index time in minutes and seconds.

Browse

Touch the Browse soft-key to select Artist, Albums, Genres, Songs, Playlists or Folders from the USB device only. Once the desired selection is made you can chose from the available media by touching the soft-key. Touch the exit soft-key if you wish to cancel the browse function.

AUX Mode

AUX Mode is entered by inserting a AUX device using a cable with a 3.5 mm audio jack into the AUX port or by touching the Media hard-key located below the display. Once in Media Mode, touch the source soft-key and select AUX.

Inserting Auxiliary Device

Gently insert the Auxiliary device cable into the AUX Port. If you insert a Auxiliary device with the ignition ON, the unit will switch to AUX mode and begin to play when you insert the device cable.

Controlling the Auxiliary Device

The control of the auxiliary device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead. Adjust the volume with the VOLUME rotary knob, or with the volume of the attached device.

NOTE: The vehicle radio unit is acting as the amplifier for audio output from the Auxiliary device. Therefore if the volume control on the Auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

Bluetooth® Mode

Bluetooth® Streaming Audio (BTSA) or Bluetooth® Mode is entered by pairing a Bluetooth® compatible device (A2DP\AVRCP), containing music, to the Uconnect® system.

Before proceeding, the Bluetooth® device needs to be paired through Uconnect® Phone to communicate with the Uconnect® System.

NOTE: See the pairing procedure in this manual for further details.

Once the Bluetooth® device is paired to the Uconnect® System, touch the Media hard-key located on below the display. Once in Media Mode, touch the source soft-key and select Bluetooth®.

Uconnect® Phone Mode

The Uconnect® is a voice-activated, hands-free, in-vehicle communications system with Voice Command Capability (see Voice Command section).

The Uconnect® allows you to dial a phone number with your mobile phone using simple voice commands.

NOTE:

- The Uconnect® requires a mobile phone equipped with the Bluetooth® Hands-Free Profile, Version 1.0 or higher. For Uconnect® customer support:
- U.S. residents - visit www.UconnectPhone.com or call 1-877-855-8400
- Canadian residents - call 1-800-465-2001 (English) or 1-800-387-9983 (French)

- Prior to starting the pairing procedure, ensure all additional Bluetooth® devices or phones within the vehicle have their Bluetooth® disabled.

Pairing a Phone

To use the Uconnect® feature, you must first pair your Bluetooth® phone with the Uconnect® system. Refer to www.UconnectPhone.com for pairing procedure unique to your phone.

Start Pairing Procedure

1. Activate the Bluetooth® on your mobile phone.
2. Press the Phone button on the radio faceplate.
3. If no phone is paired with the system, the display shows a dedicated screen.
4. Touch the Yes soft-key to start the pairing procedure the search for the Uconnect® device on the mobile phone (if No is selected, the Phone main screen is displayed).
5. When prompted by the mobile phone, use its keyboard to enter the PIN code shown on the system display or confirm on the mobile phone the PIN displayed.
6. From the Phone screen you can always pair a mobile phone pressing the Settings button and then touch the Add Device soft-key and proceed as described above.
7. During the pairing stage a screen is displayed showing the progress of the operation.

8. If the pairing procedure is completed successfully, a screen is displayed. Touch Yes to the question to pair the mobile phone as favorite (the mobile phone will have priority on all other mobile phones that will be paired later on). If no other devices are paired, the system will consider the first associated device as favorite.

NOTE:

- The priority is determined according to the order of connection for mobile phones which are not set as favorite. The last phone connected will have the highest priority.
- For assistance in pairing your phone, contact Uconnect® customer support:
 - U.S. residents - visit www.UconnectPhone.com for phone compatibility, pairing instructions and details or call 1-877-855-8400

- Canadian residents - call 1-800-465-2001 (English) or 1-800-387-9983 (French)

Phonebook Download — Phonebook Transfer From Mobile Phone

If equipped and specifically supported by your phone, Uconnect® will ask you if you want to download names (text names) and number entries from your mobile phone's phonebook. Specific Bluetooth® Phones with Phone Book Access Profile may support this feature. See www.UconnectPhone.com for supported phones.

Download and update, if supported, begins as soon as the Bluetooth® phone connection is made to the Uconnect® , for example, after you start the vehicle.

NOTE:

- A message on the screen may ask for permission to initiate the phonebook download.
- A maximum of 1000 entries per phone will be downloaded and updated every time a phone is connected to the Uconnect®.
- Depending on the maximum number of entries downloaded, there may be a short delay before the latest downloaded names can be used. Until then, if available, the previously downloaded phonebook is available for use.
- Only the phonebook of the currently connected mobile phone is accessible.

- Both the SIM card and the mobile phone's phonebook is downloaded. SIM card phonebook is not part of the Mobile phonebook. It is possible that the SIM card phonebook may not be downloaded depending on the mobile phone and the phone's software.
- This downloaded phonebook cannot be edited or deleted on the Uconnect®. These can only be edited on the mobile phone. The changes are transferred and updated to Uconnect® Phone on the next phone connection.

Making A Phone Call

Press the "Phone Pick-up" button.

After the BEEP, say "dial" a number (or "call" a name).

Receiving A Call — Accept (And End)

When an incoming call rings or is announced on Uconnect®, press the Phone Pick-up button.

To end a call, press the Phone Hang-up button on steering wheel or the Answer soft-key on the radio screen.

Mute (Or Unmute) Microphone During Call

During a call, press the “Voice Command” button.

After the BEEP, say “mute” to mute the microphone (or “mute off” to un-mute the microphone).

Transfer Ongoing Call Between Handset And Vehicle

During a call, press the “Voice Command” button.

After the BEEP, say “transfer call.”

Changing The Volume

During a phone call, use the radio VOLUME rotary knob to adjust the volume to a comfortable level while the Uconnect® system is speaking. Please note the volume setting for Uconnect® is different than the audio system.

Uconnect® Voice Command

The Uconnect® Voice Command system allows you to control your AM, FM, satellite radio, CD player, Uconnect® Phone and supported portable media devices (USB/iPod®).

When you press the “Voice Command” button located on the steering wheel, you will hear a beep. The beep is your signal to give a command. If you do not say a command within a few seconds, the system will present you with a list of options. If the system is saying a help voice message and you know the command to give to the system, pressing the “Voice Command or “Phone Pick-up” button will interrupt the voice message and you can say the wished voice command directly (without having to listen to the whole help voice message).

Voice Command Operation

Start a dialogue by pressing the “Voice Command” button , you will hear a beep. The beep is your signal to give a command. Below are a list of voice commands for each of the different modes.

NOTE: To access the tutorial, press the “Voice Command” button . After the BEEP, say “tutorial”. Press the “X” soft-key on this display to cancel the vocal session.

Common Global Voice Commands (Examples)

These commands can be given by any display after pressing the “Voice Command” or “Phone Pick-up” button on the steering wheel, provided that there are no ongoing phone calls.

“Help” (Provides the user with a generic support, suggesting some available commands.)

 
“Cancel” (Closes current voice tutorial.)

“Repeat” (Repeats the last voice message.)

“Voice Tutorial” (Provides the user detailed description on the use of the voice system.)

Uconnect® VOICE COMMANDS
GLOBAL voice commands

These commands can be given by any display after pressing control button  or  on the steering wheel, provided that there are ongoing phone calls.

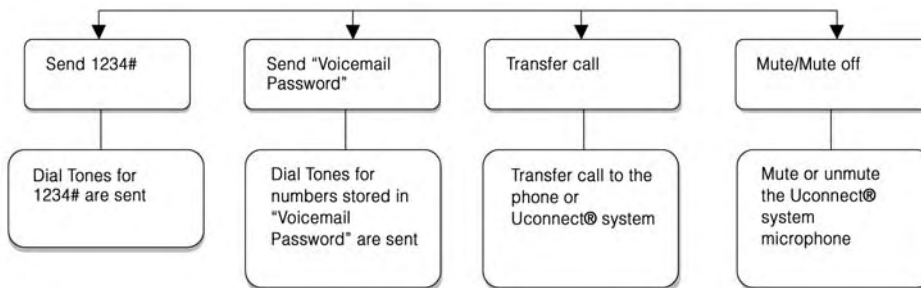



0401008621

Uconnect® VOICE COMMANDS

GLOBAL voice commands

  These commands can be given by any display after pressing control button (ⓘ or 📞) on the steering wheel, provided that there are no ongoing phone calls.

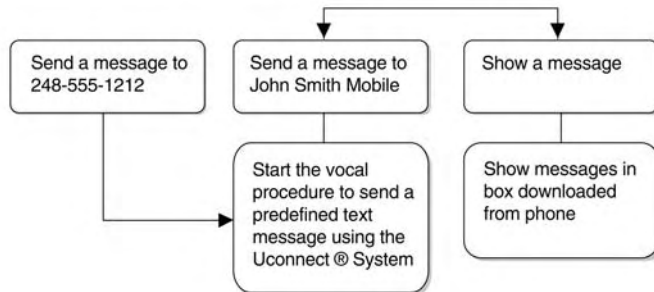


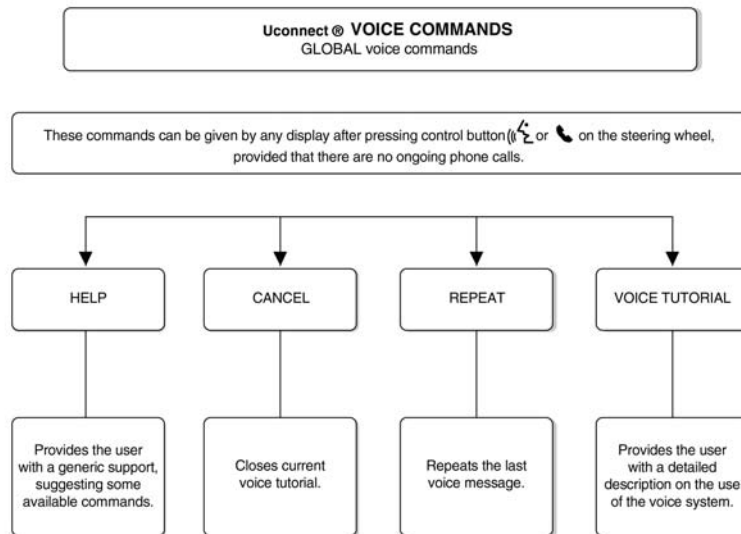



Uconnect® VOICE COMMANDS
PHONE voice commands

If a phone is connected via **Bluetooth®** to the **Uconnect®** system, these commands can be given by any of the main displays after pressing button  provided that there are no ongoing phone calls.

   If no phone is connected via **Bluetooth®**, the **Uconnect®** system will provide voice message: "There are no paired phones. Pair a phone and try again" and session will be ended.

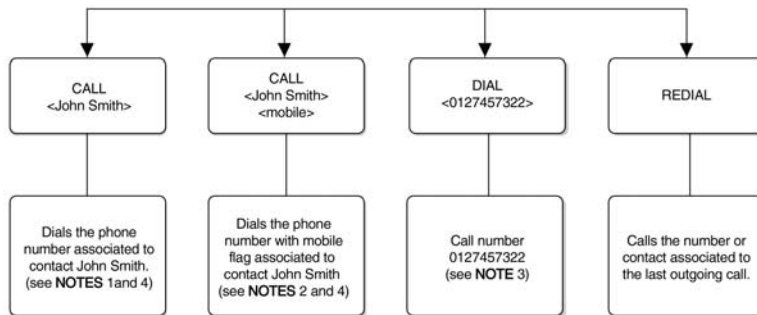

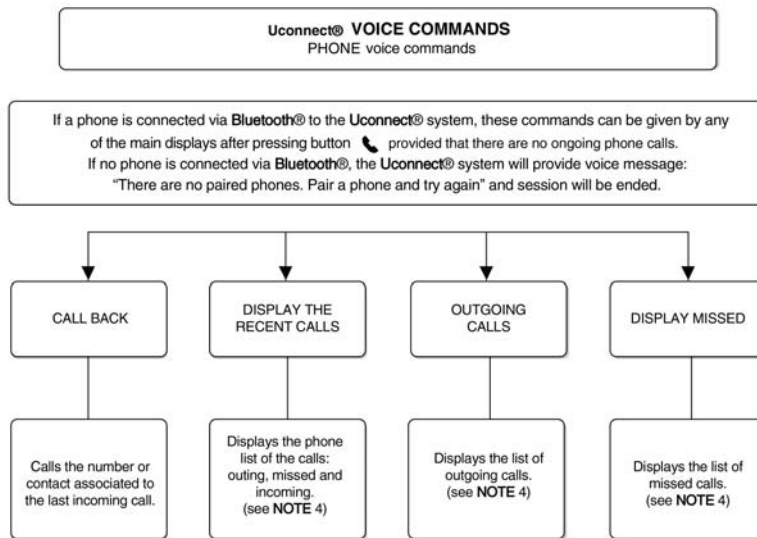

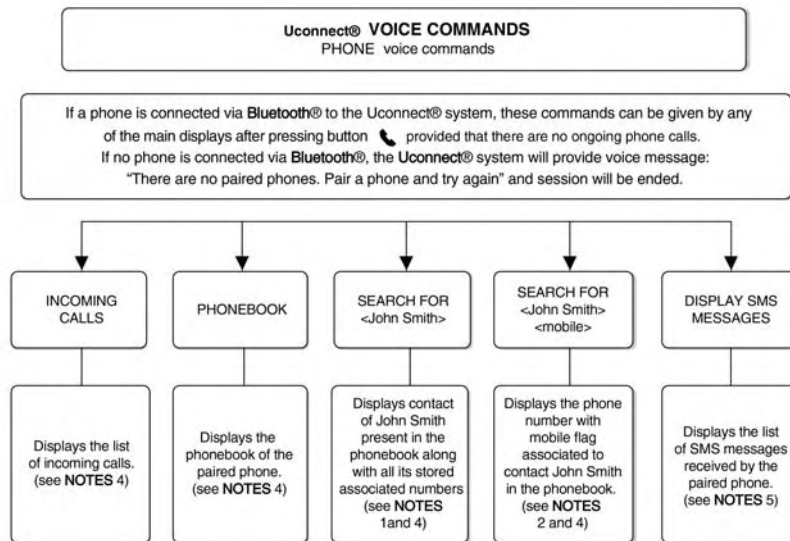

NOTE:

1. <John Smith> can be replaced with any name in the phonebook of your mobile phone.

If the phone allows storing of <name> (John) and <surname> (Smith) in two different fields, the following voice commands can be given:

- CALL <John> <Smith>
 - CALL <Smith> <John>
 - SEARCH FOR <John> <Smith>
 - SEARCH FOR <Smith> <John>
2. <mobile> can be replaced with one of the 3 available flags: <home>, <office>, <other>.

If the phone allows storing of <name> (John) and <surname> (Smith) in two different fields, the following voice commands can be given:

- CALL <John> <Smith> <mobile>
 - CALL <Smith> <John> <mobile>
 - SEARCH FOR <John> <Smith> <mobile>
 - SEARCH FOR <Smith> <John> <mobile>
3. Phone number <248-555-1212> can be replaced with any other phone number.
 4. This function is only available if the phone, connected via Bluetooth®, supports download of the phonebook and of the last calls on the Uconnect® system and if the download has been carried out.
 5. This function is only available if the phone, connected via Bluetooth® to the Uconnect® system, supports SMS message voice reading function.

Uconnect® VOICE COMMANDS
RADIO AM/FM/DAB voice commands

These commands can be given by any display main after pressing control button  on the steering wheel, provided that there are no ongoing phone calls.

TUNE TO
<105.5> <FM>

Tune the radio
to frequency
105.5 FM band
(see **NOTE 1**)

TUNE TO
<940> <AM>

 
Tune the radio
to frequency
940 AM band
(see **NOTE 2**)

 
TUNE TO SiriusXM
CHANNEL
<Radio Octane>

Tune the SiriusXM
radio to channel
Radio Octane
(see **NOTE 3**)

NOTE:

1. <105.5> can be replaced with any other available frequency of the FM band.
2. <940> can be replaced with any other available frequency of the AM band.
3. <Radio Octane> can be replaced with any other SAT channel name received by the SAT radio. Not all the SAT channels provide this service.

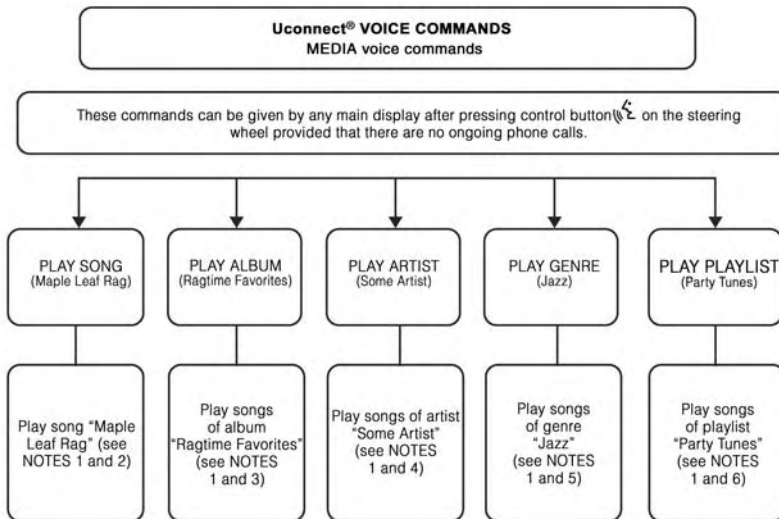

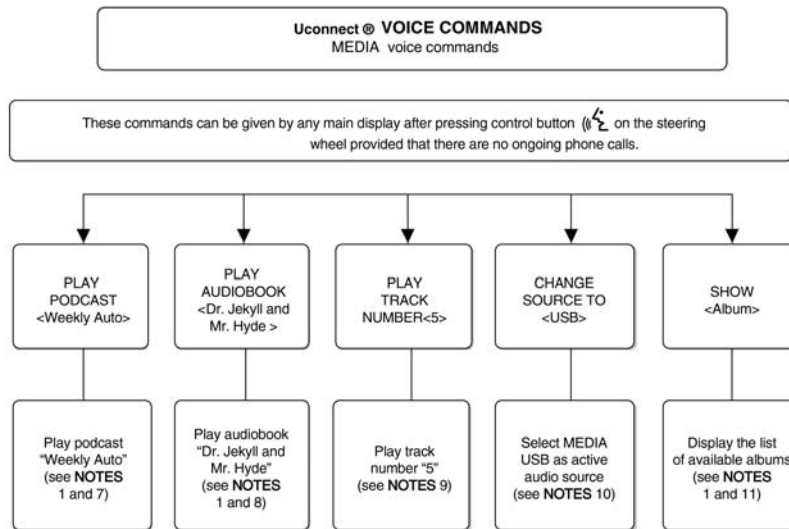

NOTE:

1. Multimedia files stored in MEDIA sources (USB memory stick, iPod® via USB, MP3 CD) should have information about songs correctly set (song title, artist, album, genre, podcast, audiobook) otherwise they will not be available via voice commands.
2. <Maple Leaf Rag> can be replaced with any other title of a song available in the MEDIA source (available on USB memory stick, iPod® via USB, MP3 CD) inserted and active.
3. <Ragtime Favorites> can be replaced with any other title of an album available in the MEDIA source (available on USB memory stick, iPod® via USB, MP3 CD) inserted and active.
4. <Scott Joplin> can be replaced with any other name of an artist available in the MEDIA source (available on USB memory stick, iPod® via USB, MP3 CD) inserted and active.
5. <Jazz> can be replaced with any other genre available in the MEDIA source (available on USB memory stick, iPod® via USB, MP3 CD) inserted and active.
6. <Recent> can be replaced with any other name of a playlist available in the MEDIA source (available on USB memory stick, iPod® via USB, MP3 CD) inserted and active.
7. <Weekly Auto> can be replaced with any other name of a podcast available in the MEDIA source (available on USB memory stick, iPod® via USB, MP3 CD) inserted and active.

 
8. <Dr. Jekyll and Mr. Hyde> can be replaced with any other title of an audiobook available in the MEDIA source (available on USB memory stick, iPod® via USB, MP3 CD) inserted and active.
9. <5> can be replaced with any track number available in the MEDIA source (available on USB memory stick, iPod® via USB, MP3 CD) inserted and active.
10. <USB> can be replaced with any other MEDIA source: "USB," "iPod®," "CD," "AUX" and "Bluetooth®."
11. <Album> can be replaced with any other category:
 - "Songs," "Artists," "Albums," "Genres," "Playlists" (available on USB memory stick, iPod® via USB, MP3 CD)

- "Folders" (available on USB memory stick, MP3 CD)
- "podcasts", "audiobooks" (available on iPod® via USB).

WARNING!

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect® features and applications in this vehicle. Only use Uconnect® when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Navigation (Uconnect® 5.0N Only)

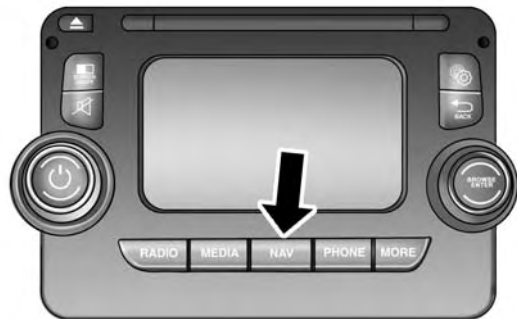

0401008751

Read Me First

Switching On

To switch on navigation, press the **NAV** button.

Setting Up

When you first switch on navigation, you have to answer a few set-up questions. Answer the questions by tapping the screen.

GPS Reception

When you first start TomTom navigation, the system may need a few minutes to determine your GPS position and show your current position on the map. In future, your position will be found much faster, usually within a few seconds.

Large objects such as tall buildings can sometimes interfere with GPS reception.

The Update Portal

The Update Portal will be used for updating the content of your navigation system, such as the map.

Please refer to your dealer for more information on the content update procedure.

Safety Settings

We recommend using the safety settings to make your driving as safe as possible.

These are some of the options included in the safety settings:

- Show safety reminders.
- Warn when driving faster than allowed.

You can also drive more safely by using voice commands to control navigation.

Getting help to use your Navigation System

You can get further help by going to tomtom.com/support.

Planning a Route

CAUTION!

In the interest of safety and to reduce distractions while you are driving, you should always plan a route before you start driving.

To plan a route, do the following:

1. Tap the screen to open the Main Menu.



0401008831

2. Tap **Drive to**.

3. Tap **Address**.

You can change the country or state setting by tapping the flag before you select a city.

4. Enter the town or city name, or the ZIP code.

Towns with similar names are shown in the list while you type.

NOTE: Tap the arrow to the right of the list to expand the list of suggested towns.

When the correct city or town appears in the list, tap the name to select the destination.

 


0401008832


5. Enter the street name.

Streets with similar names are shown in the list while you type.

When the correct street name appears in the list, tap the name to select the destination.

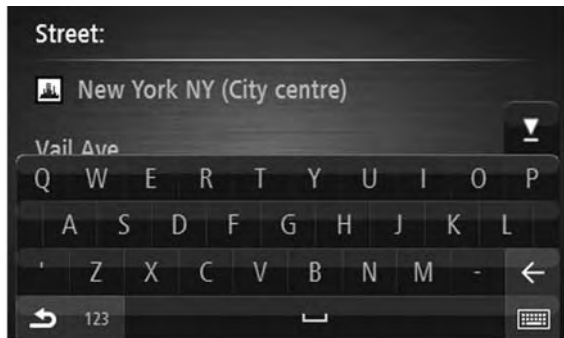

0401008833

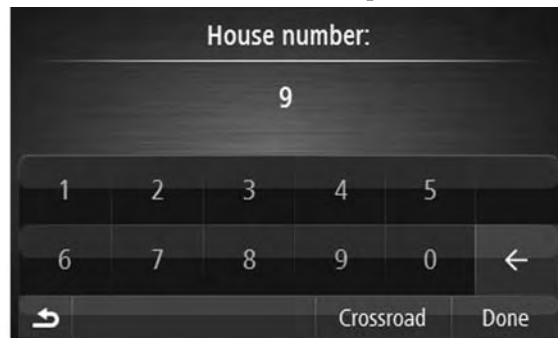 
6. Enter the house number, then tap **OK**.

0401008834

7. The location is shown on the map. Tap **Select** to continue or tap **Back** to enter another address.

1

 NOTE: If you want your final destination to be a parking lot, tap **Parking lot** and select a location from the list of parking lots close to your general destination.

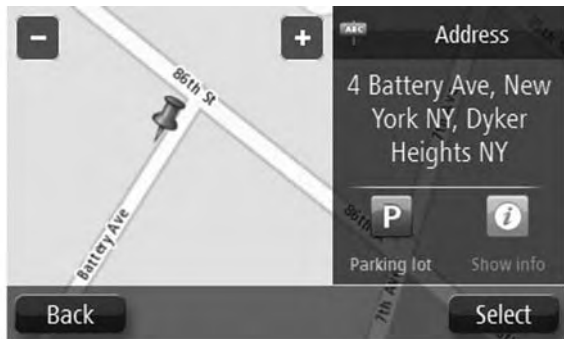

0401008835

8. When the new route is shown, tap **Done**.

For more information about the route, tap **Details**.

To change your route, for example, to travel via a particular location or to select a new destination, tap **Change route**.



0401008836

You are guided you to your destination, using spoken instructions and on-screen directions.

Safety mode

The navigation SW will switch to “Safety mode”, with a dedicated menu structure, when driving above a threshold speed of 5 mph. In this mode, only that functionality is available that can be used safely when driving. Below, the main menu in Safety mode is displayed.



0401008837

So, in Safety mode, you can enter a destination (without use of typewriter, see below), go into map display, and toggle 3 settings. The “Navigate to” submenu in “safety mode” has reduced functionality:

1



0401008838

In Safety mode, it is only possible to enter destinations that do not require the use of the typewriter.

Route Summary

The route summary shows an overview of your route, the remaining distance to your destination and the remaining estimated journey time.

To view the route summary, tap the right-hand panel on the status bar in the Driving view or tap **View route** in the Main Menu and then tap **Show route summary**.



0401008839

Selecting a Route Type

Every time you plan a route, you can choose to be asked about the type of route you want to plan.

To do this, tap **Settings** followed by **Route planning**, then **Route types**. Tap **Ask me every time I plan**.



0401008841

The types of route you can choose from are as follows:

- **Fastest Route** - Route which takes the least time.
- **Eco route** - Most fuel-efficient route for your journey.
- **Shortest route** - Shortest distance between the locations you set. This may not be the quickest route, especially if the shortest route is through a town or city.
- **Avoid motorways** - Route which avoids motorways.

Using Arrival Times

You can set your navigation system to ask you if you need to arrive at a particular time when you plan a route.



Tap **Status bar** in the Settings menu, to enable or disable arrival time notifications.

To enable arrival time notifications, select **Leeway**.

After entering a destination, tap **YES** when asked about an arrival time to enter a preferred arrival time.

The navigation system calculates your arrival time and shows you whether you will arrive on time.

You can also use this information to work out when you need to leave. If route planning shows that you will arrive 30 minutes early, you can wait and leave in 30 minutes time, rather than arrive early.

Your arrival time is constantly recalculated during your journey. The status bar shows whether you will arrive on time or if you are going to be late, as shown below:

	You will arrive 55 minutes before the arrival time you entered. If the estimated arrival time is more than five minutes before the time you entered, it is shown in green.
	You will arrive 3 minutes before the arrival time you entered. If the estimated arrival time is less than 5 minutes before the time you entered, it is shown in yellow.
	You will arrive 19 minutes late. If the estimated arrival time is later than the time you entered, it is shown in red.

Navigation Menu Options

When you tap **Drive to**, you can set your destination in many ways, not just by entering the address. The other options are listed below:

1

	Tap this button to navigate to your Home location. You will probably use this button more than any other.
	Tap this button to select a Favorite as your destination.



Tap this button to enter an address as your destination.



Tap this button to select your destination from a list of places you have recently used as destinations.



Tap this button to navigate to a Point of Interest (POI).



Tap this button to enter a destination using latitude and longitude values.



Tap this button to select your last recorded position as your destination.

Planning a Route in Advance

You can use your navigation system to plan a route in advance, selecting your starting point and your destination.

Here are more reasons to plan a route in advance:

- Find out how long a journey is going to take before you start.
- You can also compare journey times for the same route at different times of the day or on different days of the week. Navigation uses IQ Routes when planning a route. IQ Routes calculates routes based on the real average speeds measured on roads.
- Study the route of a journey you are planning.
- Check a route for someone who is coming to visit you and then explain the route to them in detail.

To plan a route in advance, follow these steps:

1. Tap the screen to bring up the Main menu.
2. Tap **Plan route**.



This button is shown when no route has been planned.

3. Select the starting point for your journey in the same way that you would select your destination.
4. Set the destination for your journey.
5. If Route planning settings are set to **Ask me every time I plan**, select the type of route you want to plan:
 - **Fastest route** - Route which takes the least time.
 - **Eco route** - Most fuel-efficient route for your journey.

- **Shortest route** - Shortest distance between the locations you set. This may not be the quickest route, especially if the shortest route is through a town or city.

- **Avoid motorways** - Route which avoids motorways.
6. Choose the date and time that you will make the journey you are planning.

Navigation uses IQ Routes to work out the best possible route at that time. This is useful to see how long a journey takes at different times of the day or on different days of the week.

Your navigation system plans the route between the two locations you selected.

Viewing Route Information

You can then select from the following options:

You can access these options for the route you last planned by tapping **View route** in the Main Menu or the **Details** button on the route summary screen.

	Tap this button for a list of all the turn instructions on the route. This is very useful if you need to explain a route to someone else.
	Tap this button to see an overview of the route using the map browser.



Tap this button to watch a demo of the journey.
You can interrupt the demo at any time by tapping the screen.



Tap this button to open the route summary screen.



Tap this button to see a preview of your destination. You can navigate to a parking lot near your destination, and view any available information about your destination, for example, the phone number.

Voice Control

About Voice control

Instead of tapping the screen to control your navigation system, you can use your voice to control navigation.

For example, to switch to 2D view, you can say "2D view".

To view a list of available commands, tap **Help** in the Main menu and then tap **What can I say?**

Using Voice Control

The following example shows how to use voice control to plan a journey to your Home address:

1. Press the **Push-to-talk** button on the steering wheel to turn on the microphone.

You see a screen with examples of commands you can say.



NOTE: Tap **Help** in the Main menu then tap **What can I say?** to see a full list of commands you can say.

2. When you hear a beep, say a command of your choice.
For example, you can say "Navigate home."

For some phrases, you are asked for confirmation.

NOTE: For the best recognition of what you say, speak normally without trying to articulate words in an unnatural way. If there is excessive road noise, for example, you may need to speak in the direction of the microphone.

3. If the command is correct, say "Yes."

If the command is incorrect, say "No" and repeat the command after you hear the prompt and tone again.

Your navigation system plans a route from your current location to your destination.

NOTE: To stop your navigation system from listening out for further commands, say "Cancel."

The Driving View



0401008863

About the Driving View

When your TomTom navigation system starts for the first time, you are shown the Driving View along with detailed information about your current position.

Tap the center of the screen at any time to open the Main Menu.

The Driving View



0401008863

1. *Zoom button*

Tap the magnifying glass to show buttons for zooming in and out.

2. *Quick menu*

To enable the quick menu, tap **Make your own menu** in the Settings menu. If there are only one or two buttons in your menu, both buttons are shown in the Driving view.

3. *Your current position.*

4. *Road sign information or the next street name.*

5. *Speed limit, if known.*

To see the difference between your preferred arrival time and your estimated arrival time, check the Lee-way checkbox in the Status bar settings.

Tap this part of the status bar to switch between a 3D map and a 2D map.

6. *Name of the street you are on.*

7. *Navigation instruction for the road ahead and the distance to next instruction.*

If the second instruction is less than 150m after the first instruction, you see it shown immediately instead of the distance.

Tap this part of the status bar to repeat the last voice instruction.

8. *Remaining journey time, the remaining distance and your estimated arrival time.*

Tap this part of the status bar to open the Route Summary screen.

To change the information shown in the status bar, tap Status bar in the Settings menu.

Driving View Symbols



Navigation instructions muted

This symbol is shown when the navigation instructions have been muted.

To hear navigation instructions again, tap the middle panel in the status bar.

Advanced Lane Guidance

About Lane Guidance

NOTE: Lane guidance is not available for all junctions or in all countries.

Your navigation system helps you prepare for motorway exits and junctions by showing the correct driving lane for your planned route.

As you approach an exit or junction, the lane you need is shown on the screen.

Using Lane Guidance

There are two types of lane guidance:

1. Lane images



0401008808

To turn lane images off, tap **Settings** in the Main menu, then tap **Advanced settings**. Clear the checkbox for **Show lane images**.

NOTE: Tap anywhere on the screen to return to the Driving View.

2. Instructions in the status bar



0401008809

NOTE: If no lane guidance is shown in the status bar and all lanes are highlighted, you can use any lane.

Changing Your Route

Making Changes to Your Route

After you plan a route, you may want to change the route or even the destination. There are various ways to change your route without the need to completely replan the entire journey.

To change the current route, tap **Change route** in the Main menu:

1

Tap this button to change the current route.
This button is only shown while there is a planned route.

Change Route Menu

To change the current route or your destination, tap one of the following buttons:



Tap this button to change the current destination.
When you change the destination, you are shown the same options and asked to enter the new address in the same way as when you plan a new route.



Tap this button while driving on a planned route, to avoid a roadblock or traffic congestion on the road ahead.
Your navigation system will suggest a new route which avoids the roads on your current route for the selected distance.



Tap this button to find an alternative to the current route. This button is only shown while there is a planned route. This is a simple way to search for a different route to your current destination. Your navigation system calculates a new route from your current location, to reach your destination using completely different roads. The new route is shown next to the original route so that you can select the route you want to use.



Tap this button to change your route by selecting a location you want to travel past, maybe so you can meet someone on the way. When you select a location to travel past, you are shown the same options and asked to enter the new address in the same way as when you plan a new route. Your navigation system calculates the route to your destination via the selected location. The selected location is shown on the map using a marker. You receive a warning when you reach your destination and when you travel past a marked location.



Tap this button to avoid part of the current route.

You are shown a list of the street names on your route.

When you tap one of the street names, your navigation system calculates a detour to avoid the selected street.

The route summary shows both the new route and your original route.

Tap the panel on the right to select one of the routes and then tap **Done**.

If you do not want to use either of the routes shown in the route summary, tap **Change route** to find another way to change your route.

CAUTION!

Be aware that when a new route is calculated, you might immediately be asked to turn off the current road.

About Waypoints

You can choose to use waypoints for any of the following reasons:

- You want to travel along a certain road or through a certain area on the way to your destination.
- You want to make stops before reaching your final destination.

Adding the First Waypoint to your Route

To add the first waypoint to your route, do the following:

1. Tap the screen to bring up the Main menu.
2. Tap **Change route**.
3. Tap **Travel via**.

NOTE: You can also use Voice control to add Waypoints.

4. Choose the location for your waypoint from a choice of Home, Favorite, Address, Recent destination, POI, longitude/latitude, or position of last stop.

On the route summary screen, a message confirms that the route is being recalculated to include the waypoint. In the Change route menu, the Travel via button changes to show that you now have one waypoint on your current route.

NOTE: The maximum number of waypoints you can add is three.

Adding further Waypoints to your Route

To add more waypoints to your route after the first one has been added, do the following:

1. Tap the screen to bring up the Main menu.
2. Tap **Change route**.
3. Tap **Travel via**.

NOTE: You can also use Voice control to add waypoints.

4. Tap **Add**.
5. Choose the location for your waypoint from a choice of Home, Favorite, Address, Recent destination, POI, latitude/longitude, or position of last stop.

A message tells you where in the list of waypoints the new one has been inserted.

6. Tap **Done**.

On the route summary screen, a message confirms that the route is being recalculated to include your waypoints.

7. Repeat to add more waypoints.

On the Change route menu, the Travel via button changes to show that you now have several Waypoints on your current route.

Changing the order of Waypoints

Waypoints are automatically added in an optimized order but you can still change the order manually if you need to. To change the order of waypoints, do the following:

1. Tap the screen to bring up the Main menu.
2. Tap **Change route**.
3. Tap **Travel via**.

4. Tap the waypoint you want to move up or down.

You see a screen with the name of your waypoint at the top.

5. Tap **Move up** or **Move down**.

Your Waypoint changes its position in the list and you are immediately returned to your list of waypoints.

NOTE: You cannot move an unvisited waypoint into a list of already visited waypoints.

Deleting a Waypoint

To delete a waypoint, do the following:

1. Tap the screen to bring up the Main Menu.
2. Tap **Change route**.
3. Tap **Travel via**.

4. Tap the waypoint you want to delete.

You see a screen with the name of your waypoint at the top.

5. Tap **Delete**.

Your waypoint is deleted and you are immediately returned to your list of waypoints.

Reactivating a Waypoint

NOTE: You can only reactivate a waypoint that has already been visited. Visited waypoints are greyed out.

To reactivate a waypoint, do the following:

1. Tap the screen to bring up the Main menu.
2. Tap **Change route**.
3. Tap **Travel via**.

4. Tap the visited waypoint that you want to reactivate.

You see a screen with the name of your waypoint at the top.

5. Tap **Reactivate**.

The waypoint is deleted and reinserted into the list of waypoints that haven't yet been visited.

View Map

About Viewing the Map

You can view the map in the same way as you might look at a traditional paper map. The map shows your current location and many other locations such as Favorites and POIs.

To view the map in this way, tap **View map** or **View route**, then **Show map of route** in the Main menu.

You view different locations on the map by moving the map across the screen. To move the map, touch the screen and drag your finger across the screen.

View Map



0401008816

1. Options button

2. Find button

Tap this button to find specific addresses, favorites or Points of Interest.

3. Zoom bar

Zoom in and out by moving the slider.

Options

Tap the **Options** button to set the information shown on the map and show the following information:

- **Names** - Select this option to show street and city names on the map.
- **Points of interest** - Select this option to show POIs on the map. Tap Choose POIs to choose which POI categories are shown on the map.
- **Favorites** - Select this option to show your Favorites on the map.

Sounds and Voices

About Sounds and Voices

Your TomTom navigation system uses sound for some or all of the following:

- Driving directions
- Warnings that you set

There are two types of voice available when navigating:

1. *Computer voices*

Computer voices are generated by your navigation system. They read traffic and voice command responses.

2. *Human voices*

These are recorded by an actor and only provide route instructions.

Changing the Volume Level

You can change the volume for your navigation system on the main unit.

You can turn navigation instructions on/off by doing the following:

- *In the Driving view* - Tap the central panel on the status bar to hear navigation instructions again if they were previously muted.
- *In the Settings menu* - Tap **Settings** in the Main menu, then tap **Turn on/off voice guidance**.

Settings

About Settings

You can change the way your navigation system looks and behaves. Most of the settings on your system can be accessed by tapping **Settings** in the Main Menu.



Tap this button to set the default view of the map. To switch between 2D and 3D views while driving, tap the left side of the status bar in Driving View.

It is sometimes easier to view the map from above, such as when navigating a complex road network.

The 2D view shows a two dimensional view of the map as though viewed from above.

The 3D view shows a three dimensional view of the map as though you are driving through the landscape.

The following buttons are available:

- **In 2D view: rotate map in direction of travel**

Tap this button so the map is rotated automatically with the direction you are travelling always at the top.

- **Switch to 3D view when following a route**

Tap this button to show the map automatically in 3D view when you are following a route.



Tap this button to select the following advanced settings:

- **Show house number before street name**

When this setting is selected, addresses are shown with the house number followed by the street name, such as 10 Downing Street.

- **Show street names**

When this setting is selected, street names are shown on the map in the Driving View.

- **Show next street name**

When this setting is selected, the name of the next street on your route is shown at the top of the Driving view.

- **Show current street name on map**

When this setting is selected, the name of the street you are on is shown at the bottom of the Driving view.

- **Show location preview**

When this setting is selected, a graphical preview of your destination is shown during route planning.

- **Enable automatic zooming in 2D view**

- **Enable automatic zooming in 3D view**



Tap this button to select the following advanced settings:

- **Show lane images**

When this setting is selected, a graphical view of the road ahead shows which lane you need when you approach a junction or motorway exit. This feature is not available for all roads.

- **Show tips**

This setting switches tips on and off.



 
Tap this button to select the car symbol that shows your current location in the Driving view.



Tap this button to add, rename or delete Favorites.

Favorites provide an easy way to select a location without the need to enter the address. They do not need to be favorite places, they can simply be seen as a collection of useful addresses.

To create a new Favorite, tap **Add**. Then enter the location address in the same way that you enter an address when you plan a route.

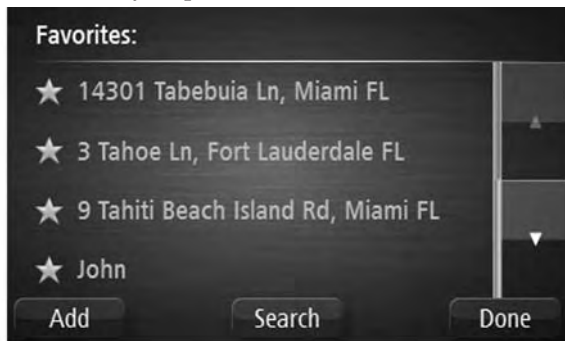

0401008819

To view or change an existing Favorite, tap one of the items in the list. To see more Favorites on the map, tap the left or right buttons.



0401008820



Tap this button to see the current status of GPS reception on your navigation system.



Tap this button to set or change your Home location. You enter the address in the same way as you do when you plan a route.

Your Home location provides an easy way to plan a route to an important location. For most people, your Home location will be your home address. However, you might prefer to set the location to another regular destination, such as your workplace.



Tap this button to select the keyboards that will be available for your use and the layout of the Latin keyboard.

You use the keyboard to enter names and addresses, such as when you plan a route or search for the name of a town or a local restaurant.



Tap this button to add up to six buttons to your own personalized menu.

If there are only one or two buttons in your menu, both buttons are shown in the Driving view.

If you have three or more buttons in your menu, then a single button is shown in the Driving view which opens your menu when tapped.



Tap this button to manage your own Point of Interest (POI) categories and locations. You can set your navigation system to let you know when you are near to selected POI locations. For example, you could set the navigation system to let you know when you are approaching a gas station.

You can create your own POI categories and add your own POI locations to these categories. You can, for example, create a new POI category called Friends. You could then add all your friends' addresses as POIs in this new category.

Tap the following buttons to create and maintain your own POIs:

- **Add POI**

Tap this button to add a location to one of your own POI categories.

- **Warn when near POI**

Tap this button to set your system to warn you when you are near selected POIs.

- **Delete POI**

Tap this button to delete a POI.

- **Add POI category**

Tap this button to create a new POI category.

- **Delete POI category**

Tap this button to delete one of your own POI categories.



Tap this button to select the color schemes for day and night map colors for 2D and 3D mode. Tap **Search** to search for a color scheme by typing the name.



Tap this button to find technical information about your navigation system and to select whether you want to share information with TomTom. A menu opens with the following options:



Tap this button to find technical information about your navigation system, such as the serial number, application version and the map version.



Tap this button to change whether you want to share information with TomTom.



Tap this button to delete all your personal navigation settings and restore the standard factory settings to your navigation system.

This is not a software update and will not affect the version of the software application installed on your system.

This feature deletes all your personal settings!

- If you want to keep your personal information and settings, you should perform a full back up before you reset the navigation system. You can then restore all your personal information and settings after the reset.
- This includes items such as your Home and Favorite locations, your personal menu and your POI categories and POI locations.



Tap the **Route planning** button to set the way your navigation system calculates the routes that you plan.

Tap the button for each option to change the settings.

Route Types

Set the type of route you want your navigation system to calculate.

Toll roads, Ferries, Carpool lanes and Unpaved roads settings

Set how your navigation system should manage each of these road features when the system calculates a route.

Carpool lanes are sometimes known as High Occupancy Vehicle Lanes and are not present in every country. To travel on these lanes, you may need to have more than one person in the car, for example, or the car may need to use environmentally-friendly fuel.

Route Summary

Set whether you want the route summary screen to close automatically after you plan a route. If you select No, then you will need to tap Done to close the route summary screen every time you plan a route.



Tap this button to select the safety features you want applied to your navigation.



Tap this button to select the types of Point of Interest (POI) you want to see on the map.

Tap **Show POI on map** in the Settings menu.

Select the POI categories you want to be shown on the map.

Tap **Search** and use the keyboard to search for a category name.

Select whether you want POIs to be shown in 2D or 3D views of the map.

Tap **Done**.

Point of Interest locations are shown on the map as symbols.



Tap this button to select the information you want to see on the status bar:

- **Horizontal**

Show the status bar at the bottom of the Driving view.

- **Vertical**

Show the status bar on the right-hand side of the Driving view.

- **Maximum speed**

- **Remaining distance**

The distance to your destination.

- **Leeway**

Your navigation system shows how late or early you will arrive, compared with your preferred arrival time that was set when you planned the route.

CAUTION!

- If you drive faster than the speed limit, you see a warning indicator in the status bar, for example the status bar pane turns red.

CAUTION! (Continued)

- Information about speed limits is not available for all roads.

(Continued)



Tap this button to select the map you want to use for route planning and navigation. Although you can store more than one map on the navigation system, you can only use one map at a time for planning and navigation. To switch from the current map to plan a route in another country or region, simply tap this button.



Tap this button to switch off voice guidance. You will no longer hear spoken route instructions but you will still hear information such as traffic information and warnings. Voice guidance is also switched off when the main unit volume is muted.



Tap this button to switch on voice guidance and hear spoken route instructions.



Tap this button to set the units used for navigation features such as route planning.



Tap this button to display the map in darker colors.

NOTE: Your navigation system can switch between day and night colors depending on the time of day. To automatically switch between night and day colors, tap Map colors in the Settings menu and select Switch to night colors when dark.



Tap this button to display the map in brighter colors.



Tap this button to set the type of spoken directions and other route instructions that your navigation system will read aloud.

Points of Interest

About Points of Interest

Points of Interest or POIs are useful places on the map.

Here are some examples:

- Restaurants
- Hotels
- Museums
- Parking lots
- Gas stations

Creating POIs

1. Tap the screen to open the Main menu.
2. Tap *Settings*.

3. Tap *Manage POIs*.

4. If there are no POI categories or the one you want to use does not exist, tap **Add POI category** and create a new category.



Every POI must be assigned to a POI category. This means you need to have created at least one POI category before you can create your first POI.

You can only add POIs to POI categories you have created.

For more information on creating POI categories, read **Managing POIs**.

5. Tap *Add POI*.
6. Select the POI category you want to use for the new POI.
7. Tap a button to enter the POI address in the same way that you plan a route.
8. The POI is created and saved in the selected category.

1



Tap this button to set your Home location as a POI. This is useful if you decide to change your Home location, but first want to create a POI using the current Home address.



Tap this button to create a POI from a Favorite. You might want to create a POI from a Favorite because you can only create a limited number of Favorites. If you want to create more Favorites you need to delete some Favorites. To avoid losing a Favorite, save the location as a POI before you delete the Favorite.



Tap this button to enter an address as a new POI.
When you enter an address, you can choose from four options.

- **City center**
- **Street and house number**
- **ZIP code**
- **Crossing or intersection**



Tap this button to select a POI location from a list of places you have recently used as destinations.



Tap this button to add a Point of Interest (POI) as a POI.
For example, if you are creating a category of POIs for your favorite restaurants, use this option instead of entering the addresses of the restaurants.



Tap this button to add your current location as a POI.
For example, if you stop somewhere interesting, you can tap this button to create a new POI at the current location.



Tap this button to create a POI by entering latitude and longitude values.



Tap this button to select the last location where you switched off your car.

Using POIs to Plan a Route

When you plan a route, you can use a POI for the destination or as a waypoint.

The following example shows how to plan a route to a parking lot in a city:

1. Tap **Drive to** Drive to
2. Tap **Point of Interest**.
3. Tap **POI in city**.

NOTE: The last POI you viewed on your navigation system is also shown in the menu.

4. Enter the name of the town or city and select it when it is shown in the list.
5. Tap the arrow button to expand the list of POI categories.

NOTE: If you already know the name of the POI you want to use, you can tap Search by name to enter the name and select this location.

6. Scroll down the list and tap **Parking lot**.
7. The parking lot closest to the city center is shown at the top of the list.
8. The following list explains the distances shown next to each POI. How the distance is measured varies depending on how you initially searched for the POI:
 - **POI near you** - Distance from your current location.
 - **POI in city** - Distance from the city center.
 - **P OI near Home** - Distance from your Home location.
 - **POI along route** - Distance from your current location.
 - **POI near destination** - Distance from your destination.

9. Tap the name of the parking lot you want to use and tap **Done** when the route has been calculated.

Your navigation system starts to guide you to the parking lot.

Showing POIs on the Map

You can select the types of POI locations you want to see on your maps.

1. Tap **Show POI on map** in the Settings menu.
2. Select the categories you want to be shown on the map.
3. Tap **Done**.
4. Select whether you want to see POI locations in 2D and 3D views of the map.

5. Tap **Done**.

The types of POI you have selected are shown as symbols on the map.

Setting Warnings for POIs

You can set a warning sound to be played when you approach a selected type of POI, such as a gas station.

The following example will show how to set a warning sound to be played when you are 500 yards from a gas station.

1. Tap **Manage POIs** and then **Warn when near POI** in the Settings menu.
2. Scroll down the list and tap **Gas station**.

NOTE: To remove a warning, tap on the category name and then tap **Yes**. POI categories which have been set with a warning have a sound symbol next to the category name.

3. Set the distance as 500 yards and tap **OK**.
4. Select **Sound effect** and then tap **Next**.
5. Select the warning sound for the POI and then tap **Next**.
6. If you only want to hear the warning when the POI is directly on a planned route, select **Warn only if POI is on route**. Then tap Done.

The warning is set for the selected POI category. You will hear a warning sound when you are 500 yards from a gas station on your route.

Manage POIs

Tap **Manage POIs** to manage your POI categories and locations.



You can set your navigation system to let you know when you are near to selected POI locations. In this way you could, for example, set the navigation system to let you know you when you are approaching a gas station.

You can create your own POI categories and add your own POI locations to these categories.

This means you can, for example, create a new POI category called Friends. You could then add all your friends' addresses as POIs in this new category.

Tap the following buttons to create and maintain your own POIs:

- **Add POI** - Tap this button to add a location to one of your own POI categories.
- **Warn when near POI** - Tap this button to set your system to warn you when you are near selected POIs.
- **Delete POI** - Tap this button to delete one of your own POI categories.
- **Edit POI** - Tap this button to edit one of your own POIs.
- **Add POI category** - Tap this button to create a new POI category.
- **Delete POI category** - Tap this button to delete one of your own POI categories.

Help

About Getting Help

Tap **Help** in the Main menu to navigate to emergency services centers and other specialist services.

For example, if you are involved in a car accident, you could use the Help menu to find the contact details for the nearest hospital, call them using a phone and tell them your exact location.

Using Help to Phone a Local Service

To use Help to locate a service center, contact the center by phone and navigate from your current location to the center, do the following:

1. Tap the screen to show the Main Menu.
2. Tap **Help**.
3. Tap **Call for help**.

4. Select the type of service you require, for example, **Nearest hospital**.
5. Select a center from the list, the nearest is shown at the top of the list.
6. To navigate your way to the center by car, tap **Navigate there**.

Your navigation system starts guiding you to your destination.

Your navigation system shows your position on the map along with a description of the location. This helps you explain where you are while making a call.

The phone number is displayed for you to call using a phone.

Help Menu Options

NOTE: In some countries, information may not be available for all services.



Tap this button to find the contact details and location of a service center.



Tap this button to plan a driving route to a service center.



Tap this button to see your current location on the map.



Tap this button to read a selection of guides, including a First Aid guide.



Tap this button to view a selection of guided tours relating to your navigation system.



Tap this button to see a list of commands you can say when using voice control.

Favorites

About Favorites

Favorites provide an easy way to select a location without the need to enter the address. They do not need to be favorite places, they can simply be seen as a collection of useful addresses.

Using a Favorite

You can use a Favorite as a way of navigating to a place without having to enter the address. To navigate to a Favorite, do the following:

1. Tap the screen to bring up the Main menu.
2. Tap **Drive to**.
3. Tap **Favorite**.

4. Select a Favorite from the list.

Your navigation system calculates the route for you.

5. When the route is calculated, tap **Done**.

Your navigation system immediately starts guiding you to your destination with spoken instructions and visual instructions on the screen.

Changing the Name of a Favorite

To change the name of a Favorite, do the following:

1. Tap the screen to bring up the Main menu.
2. Tap **Settings** to open the Settings menu.
3. Tap **Favorites**.
4. Tap the Favorite you want to rename.
Use the left and right arrows to choose another Favorite from your list.
5. Tap **Rename**.
6. Type in the new name and then tap **Done**.
7. Tap **Done**.

Deleting a Favorite

To delete a Favorite, do the following:

1. Tap the screen to bring up the Main menu.

2. Tap **Settings** to open the Settings menu.
3. Tap **Favorites**.
4. Tap the Favorite you want to delete.
Use the left and right arrows to choose another Favorite from your list.
5. Tap **Delete**.
6. Tap **Yes** to confirm the deletion.
7. Tap **Done**.

Important Safety Notices and Warnings

Global Positioning System

The Global Positioning System (GPS) is a satellite-based system that provides location and timing information around the globe. GPS is operated and controlled under the sole responsibility of the Government of the United States of America which is responsible for its availability

and accuracy. Any changes in GPS availability and accuracy, or in environmental conditions, may impact the operation of this navigation system. TomTom does not accept any liability for the availability and accuracy of GPS.

Use with Care

Use of TomTom navigation while driving still means that you need to drive with due care and attention.

This Document

Great care was taken in preparing this document. Constant product development may mean that some information is not entirely up to date. The information in this document is subject to change without notice.

TomTom shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the performance

or use of this document. This document contains information protected by copyright. No part of this document may be photocopied or reproduced in any form without prior written consent from TomTom N.V.

Copyright Notices

© 2013 TomTom. All rights reserved. TomTom and the "two hands" logo are registered trademarks of TomTom N.V. or one of its subsidiaries. Please see tomtom.com/legal for warranties and end user license agreements applying to this product.

© 2013 TomTom. All rights reserved. This material is proprietary and the subject of copyright protection and/or database rights protection and/or other intellectual property rights owned by TomTom or its suppliers. The use of this material is subject to the terms of a license agreement. Any unauthorized copying or disclosure of this material will lead to criminal and civil liabilities.

Data Source © 2013 TomTom All rights reserved.

The software included in this product contains copyrighted software that is licensed under the GPL. A copy of that license can be viewed in the License section. You can obtain the complete corresponding source code from us for a period of three years after our last shipment of this product. For more information, visit **tomtom.com/gpl** or contact your local TomTom customer support team via **tomtom.com/support**. Upon request, we will send you a CD with the corresponding source code.

Linotype, Frutiger and Univers are trademarks of Linotype GmbH registered in the U.S. Patent and Trademark Office and may be registered in certain other jurisdictions. MHei is a trademark of The Monotype Corporation and may be registered in certain jurisdictions.

More Main Menu

Press the More hard-key to display the following options:

1

TRIP COMPUTER

Press the Trip button to display the trip information of the car.

This function allows you to display the consumption levels and define two separate trips called Trip A and Trip B for monitoring the car's complete journey in a reciprocally independent manner.

 
Both functions can be reset (reset - start of a new journey): to reset the desired Trip hold down the Trip A or Trip B buttons.

CLOCK

Show the Clock setting in full screen mode.

Settings

Press the Settings hard-key to display the following options:

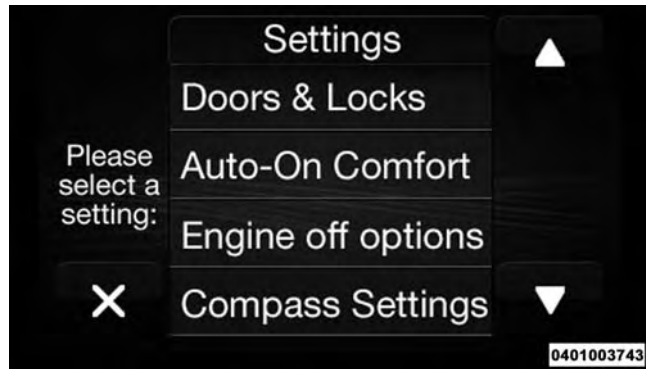

Display

- *Brightness (this setting is not available when the display mode is set to Automatic)* - Select Brightness and press

the + or – buttons to adjust the display brightness with the headlights on or off (the setting not corresponding to the active headlight condition is greyed out).

- *Display Mode* - Press the Display Mode button to set the display brightness according to Day, Night or Auto condition. In Auto mode the display brightness is aligned to that of the instrument panel.
- *Language* - Press the Language button to select one of the languages available.
- *Units* - Press the Units button to select the correct unit for Temperature (°C or °F), Distance (mi or km) and Fuel Consumption. If the distance is in mi (miles), miles per gallon (mpg) are set automatically. If the distance is in km, km/l or l/100km can be selected.
- *Voice Resp. Length* - Press the relevant button to set the detail level of the voice messages supplied by the system and the suggestions displayed.

- *Touchscreen Beep* - Press the relevant button to activate/deactivate the acoustic signal when the buttons on the displayed are pressed.
- *Display Trip B* - Press the relevant button to activate/deactivate the displaying of the Trip B on the instrument panel display.

Clock & Date

Use this function to set the clock.

- *Time Setting:*
 1. Press the SETTINGS hard-key on the front panel then select Clock & date.
 2. Select Set Time and Format and then press the up or down buttons to adjust hours and minutes.



3. Press the 12h or 24h buttons to select the time.
 - The AM and PM are available in 12h mode.

NOTE: In the Clock Setting Menu you can also select Display Clock. Display Clock turns the clock display in the status bar on or off. Also in the Clock Setting Menu, Sync Time can be selected to allow the time to be set automatically.

- *Date setting* - To set the date proceed as for the time setting: select Set Date to adjust day, month and year.

Safety/Assistance — If Equipped

Use this function to make the following adjustments:

- *ParkView Backup Camera (if equipped)* - Activation/Deactivation. ParkView Backup Camera can be activated/deactivated to display while in reverse.

Lights — If Equipped

Use this function to carry out the following:

- *Twilight sensor (if equipped)* - Adjustment of headlight switching on sensitivity.
- *Daytime Lights (DRL) (if equipped)* - Activation/deactivation of daytime lights.
- *Cornering Lights (if equipped)* - Activation/deactivation of cornering lights.

Doors & Locks

Use this function to activate/deactivate the automatic door locking when the car is moving (Autoclose function).

Audio

See the Audio section for more information.

Phone/Bluetooth®

See the description in the paragraph Phone Mode.

SiriusXM Setup

Use this function to configure the following options:

- Skip Channel
- Subscription Info

Restore Default Settings

Use this function to restore the settings for display, time, date, audio and radio to the default values set by the manufacturer.

SAFETY GUIDELINES

CONTENTS

2

■ Safety Guidelines	108	□ Disc Drive.	110
□ Safe Usage of the Uconnect® Access System. . .	108	□ FCC Declaration	110
□ Touchscreen	109	□ Safety Information	111

Safety Guidelines

WARNING!

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect® features and applications in this vehicle. Only use Uconnect® when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

Ensure that all persons read this manual carefully before using the system. It contains instructions on how to use the system in a safe and effective manner.

Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- Glance at the screen only when necessary and safe to do so. If prolonged viewing of the screen is necessary, park in a safe location and set the parking brake.
- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Make certain that the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.

Safe Usage of the Uconnect® Access System

- Read all instructions in this manual carefully before using your system to ensure proper usage!
- Your system is a sophisticated electronic device. Do not let young children use your system.

- Permanent hearing loss may occur if you play your music or the system at loud volumes. Exercise caution when setting the volume on your system.
- Driving is a complex activity that requires your full attention. If you're engaged in driving or any activity that requires your full attention, we recommend that you not use your system.

NOTE: Many features of this system are speed dependent. For your own safety, it is not possible to use some of the touch screen features while the vehicle is in motion.

- Keep drinks, rain, and other sources of moisture away from your system. Besides damage to your system, moisture can cause electric shocks as with any electronic device.

Touchscreen

- Do not touch the screen with any hard or sharp objects (pen, USB stick, jewelry, etc.) which could scratch the touch screen surface!
- Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touch screen.
- If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol, or an isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

Disc Drive

- Do not insert any damaged, warped, scratched or dirty Discs into the Disc player.
- Discs that have been modified with an adhesive label should not be used in the Disc player.
- Do not insert more than one Disc at a time into the drive slot.

FCC Declaration

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Increase the separation between the equipment and receiver. - Consult the dealer or an experienced radio technician for help.

 
Safety Information

Exposure to Radio Frequency Radiation

The radiated output power of the this internal wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the radio is 20 cm or further from the human body.

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community.

The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.



14UCR5-526-AB
Second Edition
Uconnect® 5.0/5.0N

Chrysler Group LLC
Printed in the USA

