



Radio 3.0/Uconnect® 3.0

Owner's Manual Supplement

TABLE OF CONTENTS

SECTION

PAGE

1	SAFETY GUIDELINES	3
2	INTRODUCTION	9
3	RADIO MODE	23
4	MEDIA MODE	29
5	UCONNECT PHONE	35
6	UCONNECT 3.0 VOICE RECOGNITION QUICK TIPS	43

1

2

3

4

5

6

SAFETY GUIDELINES

1

CONTENTS

■ SAFETY GUIDELINES	4
■ CYBERSECURITY	7

SAFETY GUIDELINES

WARNING!

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

All persons should read this manual carefully before using the radio system. It contains instructions on how to use the system in a safe and effective manner.

Please read and follow these safety precautions. Failure to do so may result in injury or property damage.

- Glance at the screen only when safe to do so. If prolonged viewing of the screen is necessary, park in a safe location and set the parking brake.
- Stop use immediately if a problem occurs. Failure to do so may cause injury or damage to the product. Return it to your authorized dealer to repair.
- Make certain that the volume level of the system is set to a level that still allows you to hear outside traffic and emergency vehicles.

Safe Usage Of The Uconnect System

- Read all instructions in this manual carefully before using your system to ensure proper usage!
- Your system is a sophisticated electronic device. Do not let young children use your system.

- Permanent hearing loss may occur if you play your music or the system at loud volumes. Exercise caution when setting the volume on your system.
- Keep drinks, rain, and other sources of moisture away from your system. Besides damage to your system, moisture can cause electric shocks as with any electronic device.

Touchscreen

- Do not touch the screen with any hard or sharp objects (pen, USB stick, jewelry, etc.) which could scratch the touchscreen surface!
- Do not spray any liquid or caustic chemicals directly on the screen! Use a clean and dry micro fiber lens cleaning cloth in order to clean the touchscreen.
- If necessary, use a lint-free cloth dampened with a cleaning solution, such as isopropyl alcohol or an

isopropyl alcohol and water solution ratio of 50:50. Be sure to follow the solvent manufacturer's precautions and directions.

Disc Player

- Do not insert any damaged, warped, scratched or dirty discs into the disc player.
- Discs that have been modified with an adhesive label should not be used in the disc player.
- Do not insert more than one disc at a time into the player slot.

FCC Declaration

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2)

this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio technician for help.

Safety Information

Exposure to Radio Frequency Radiation:

The radiated output power of the this internal wireless radio is far below the FCC radio frequency exposure limits. Nevertheless, the wireless radio shall be used in such a manner that the radio is 20 cm (200 mm) or further from the human body.

The internal wireless radio operates within guidelines found in radio frequency safety standards and recommendations, which reflect the consensus of the scientific community.

The radio manufacturer believes the internal wireless radio is safe for use by consumers. The level of energy emitted is far less than the electromagnetic energy emitted by wireless devices such as mobile phones. However, the use of wireless radios may be restricted in some situations or environments, such as aboard airplanes. If you are unsure of restrictions, you are encouraged to ask for authorization before turning on the wireless radio.

CYBERSECURITY

Your vehicle may be a connected vehicle and may be equipped with both wired and wireless networks. These networks allow your vehicle to send and receive information. This information allows systems and features in your vehicle to function properly.

Your vehicle may be equipped with certain security features to reduce the risk of unauthorized and unlawful access to vehicle systems and wireless communications. Vehicle software technology continues to evolve over time and FCA US LLC, working with its suppliers, evaluates and takes appropriate steps as needed. Similar to a computer or other devices, your vehicle may require software updates to improve the usability and performance of your systems or to reduce the potential risk of unauthorized and unlawful access to your vehicle systems.

The risk of unauthorized and unlawful access to your vehicle systems may still exist, even if the most recent version of vehicle software (such as Uconnect software) is installed.

WARNING!

- It is not possible to know or to predict all of the possible outcomes if your vehicle's systems are breached. It may be possible that vehicle systems, including safety related systems, could be impaired or a loss of vehicle control could occur that may result in an accident involving serious injury or death.
- **ONLY** insert media (e.g., USB, SD card, or CD) into your vehicle if it came from a trusted source. Media of unknown origin could possibly contain malicious software, and if installed in your vehicle, it may increase the possibility for vehicle systems to be breached.
- As always, if you experience unusual vehicle behavior, take your vehicle to your nearest authorized dealer immediately.

NOTE:

- FCA or your dealer may contact you directly regarding software updates.
- To help further improve vehicle security and minimize the potential risk of a security breach, vehicle owners should:
 - Routinely check www.driveuconnect.com/software-update to learn about available Uconnect software updates.
 - Only connect and use trusted media devices (e.g. personal mobile phones, USBs, CDs).

Privacy of any wireless and wired communications cannot be assured. Third parties may unlawfully intercept information and private communications without your consent. For further information, refer to "Onboard Diagnostic System (OBD II) Cybersecurity" in "Maintaining Your Vehicle" in your Owner's Manual on the DVD.

INTRODUCTION

CONTENTS

2

■ RADIO 3.0.	.10	■ Uconnect 3.0 SYSTEM VOICE COMMAND	.18
■ RADIO 3.0.	.14		

RADIO 3.0

WARNING!

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.



0701074900

1 — RADIO

Push the RADIO button on the faceplate to enter the Radio Mode. The different tuner modes; AM, FM and SXM (if equipped) can be selected by pushing the RADIO button on the faceplate until the desired tuner mode is displayed.

2 — INFO

Push the INFO button on the faceplate for a RBDS station (one with call letters displayed). The radio will return a Radio Text message broadcast from an FM station (FM mode only).

3 — AUDIO

Push the AUDIO button on the faceplate to adjust the Bass, Mid Range, Treble, Balance or Fade.

4 — MENU

Push the MENU button on the faceplate to scroll between the setting sub-menus.

5 — ENTER/BROWSE & TUNE/SCROLL

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL knob to scroll through a list or tune a radio station.

6 — PRESETS 1-6

These buttons on the faceplate tune the radio to the stations that you commit to memory AM (A, B, C), FM (A, B, C) and Satellite (A, B, C) — 18 AM, 18 FM and 18 SAT stations.

7 — BACK

Push the BACK button on the faceplate to return to a previous menu or screen.

8 — SEEK UP

Push the SEEK UP button on the faceplate to tune the radio to the next listenable station or channel.

9 — SEEK DOWN

Push the SEEK DOWN button on the faceplate to tune the radio to the previous listenable station or channel.

10 — PLAY/PAUSE/MUTE

Push to Play, Pause or Mute the music.

11 — ON/VOLUME

Push the ON/VOLUME control knob to turn on the radio. Push the ON/VOLUME control knob a second time to turn off the radio.

The volume control turns continuously (360 degrees) in either direction without stopping. Turning the ON/VOLUME control knob to the right increases the volume and to the left decreases it.

12 — A-B-C


Push the A-B-C button on the faceplate to select the A, B or C preset list.

13 — MEDIA

Pushing the MEDIA button on the faceplate will allow you to switch from AM/FM/SXM modes to Media mode (CD – if equipped, USB/iPod, AUX).

RADIO 3.0**WARNING!**

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

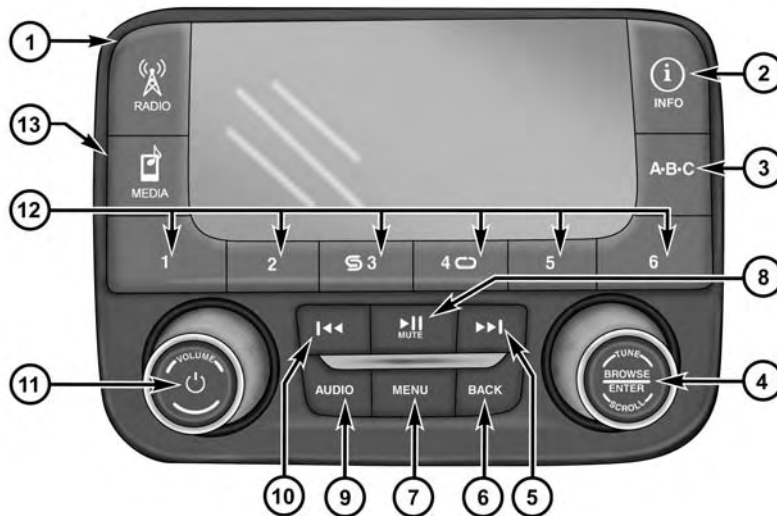

1 — RADIO

Push the RADIO button on the faceplate to enter the Radio Mode. The different tuner modes; AM and FM can be selected by pushing the RADIO button on the faceplate until the desired tuner mode is displayed.

2 — INFO

Push the INFO button on the faceplate for a RBDS station (one with call letters displayed). The radio will return a Radio Text message broadcast from an FM station (FM mode only).

3 — A-B-C

Push the A-B-C button on the faceplate to select the A, B or C preset list.

4 — ENTER/BROWSE & TUNE/SCROLL

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL rotary knob to scroll through a list or tune a radio station.

5 — SEEK UP

Push the SEEK UP button on the faceplate to tune the radio to the next listenable station or channel.

6 — BACK

Push the BACK button on the faceplate to return to a previous menu or screen.

7 — MENU

Push the MENU button on the faceplate to scroll between the setting sub-menus.

8 — PLAY/PAUSE/MUTE

Push to Play, Pause or Mute the music.

9 — AUDIO

Push the AUDIO button on the faceplate to adjust the Bass, Mid Range, Treble, Balance or Fade.

10 — SEEK DOWN

Push the SEEK DOWN button on the faceplate to tune the radio to the previous listenable station or channel.

11 — ON/VOLUME

Push the ON/VOLUME control knob to turn on the radio. Push the ON/VOLUME control knob a second time to turn off the radio.

The electronic volume control turns continuously (360 degrees) in either direction without stopping. Turning the ON/VOLUME control knob to the right increases the volume and to the left decreases it.

12 — PRESETS 1-6


These buttons on the faceplate tune the radio to the stations that you commit to memory AM (A, B, C), FM (A, B, C) — 18 AM and 18 FM stations.

13 — MEDIA

Pushing the MEDIA button on the faceplate will allow you to switch from AM and FM modes to Media mode (CD – if equipped, USB/iPOD, AUX).

Uconnect 3.0 SYSTEM VOICE COMMAND**WARNING!**

ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

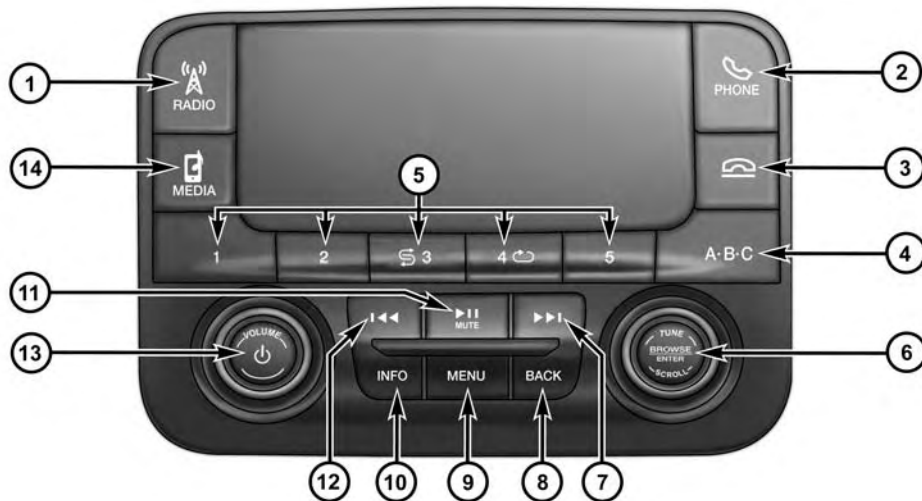

0601074909

1 — RADIO

Push the RADIO button on the faceplate to enter the Radio Mode. The different tuner modes; AM, FM and SXM (if equipped) can be selected by pushing the RADIO button on the faceplate until the desired tuner mode is displayed.

2 — PHONE PICK UP

Push the PHONE PICK UP button to initiate or answer a phone call, send or receive a text.

3 — PHONE HANG UP

Push the PHONE HANG UP button to end a call.

4 — A-B-C

Push the A-B-C button on the faceplate to select the A, B or C preset list.

5 — PRESETS 1-5

These buttons on the faceplate tune the radio to the stations that you commit to memory AM (A, B, C), FM (A, B, C) and Satellite (A, B, C) — 18 AM, 18 FM and 18 SAT stations.

6 — ENTER/BROWSE & TUNE/SCROLL

Push the ENTER/BROWSE button to accept a highlighted selection on the screen. Rotate the TUNE/SCROLL knob to scroll through a list or tune a radio station.

7 — SEEK UP

Push the SEEK UP button on the faceplate to tune the radio to the next listenable station or channel.

8 — BACK

Push the BACK button on the faceplate to return to a previous menu or screen.

9 — MENU

Push the MENU button on the faceplate to scroll between the setting sub-menus.

10 — INFO

Push the INFO button on the faceplate for a RBDS station (one with call letters displayed). The radio will return a Radio Text message broadcast from an FM station (FM mode only).

11 — PLAY/PAUSE/MUTE

Push to Play, Pause or Mute music or Mute an active phone call.

12 — SEEK DOWN

Push the SEEK DOWN button on the faceplate to tune the radio to the previous listenable station or channel.

13 — ON/VOLUME

Push the ON/VOLUME control knob to turn on the radio. Push the ON/VOLUME control knob a second time to turn off the radio.

The volume control turns continuously (360 degrees) in either direction without stopping. Turning the ON/VOLUME control knob to the right increases the volume and to the left decreases it.

14 — MEDIA

Pushing the MEDIA button on the faceplate will allow you to switch from AM/FM/SXM modes to Media mode (CD – if equipped, USB/iPod, AUX).

RADIO MODE

CONTENTS

■ OPERATING RADIO MODE.	.24	□ Setting Presets.	.25
□ ON/OFF Volume Control.	.24	□ SiriusXM Satellite Radio Mode — If Equipped .	.25
□ ENTER/BROWSE & TUNE/SCROLL Control .	.24	□ Audio	.26
□ Seek Functions	.24		

OPERATING RADIO MODE

The radio is equipped with the following modes:

- FM
- AM
- SXM SiriusXM Satellite Radio (if equipped)

Push the RADIO button on the faceplate to enter the Radio Mode. The different tuner modes; AM, FM, and SXM, can then be selected by pushing the RADIO button until the desired tuner mode is displayed.

ON/OFF Volume Control

Push the ON/OFF Volume Control knob to turn on the radio. Push the ON/OFF Volume Control knob a second time to turn off the radio.

When the audio system is turned on, the sound will be set at the same volume level as last played.

ENTER/BROWSE & TUNE/SCROLL Control

Turn the rotary TUNE/SCROLL control knob clockwise to increase or counterclockwise to decrease the radio station frequency.

When scrolling a list, push the ENTER/BROWSE button on the faceplate to choose a selection.

Seek Functions

SEEK UP▶▶

Push and release the SEEK UP ▶▶ button on the faceplate to tune the radio to the next listenable station or channel.

During a SEEK UP function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

SEEK DOWN◀◀

Push and release the SEEK DOWN ◀◀ button on the faceplate to tune the radio to the next listenable station or channel.

During a SEEK DOWN function, if the radio reaches the starting station after passing through the entire band two times, the radio will stop at the station where it began.

Setting Presets

The Presets are available for all Radio Modes, and are activated by pushing any of the six PRESET buttons on the faceplate.

When you are receiving a station that you wish to commit into memory, push and hold the desired numbered button on the faceplate for more than two seconds or until you hear a confirmation beep.

The Radio stores up to 18 presets in each of the Radio modes. Push the A-B-C button on the faceplate to select the A, B or C preset list.

SiriusXM Satellite Radio Mode — If Equipped

SiriusXM Satellite Radio uses direct satellite-to-receiver broadcasting technology to provide clear digital sound, coast to coast. The subscription service provider is SiriusXM Satellite Radio. This service offers over 130 channels of music, sports, news, entertainment, and programming for children, directly from its satellites and broadcasting studios. A one-year SiriusXM Satellite Radio subscription is included.

SiriusXM and all related marks and logos are trademarks of SiriusXM Radio Inc. and its subsidiaries. SiriusXM Satellite Radio requires a subscription, sold separately after trial subscription included with vehicle purchase. Prices and programming are provided by SiriusXM and are subject

to change. Subscriptions governed by Terms & Conditions available at www.siriusxm.com/customeragreement. SiriusXM Radio U.S. service only available to those at least 18 years of age in the 48 contiguous United States, D.C., and PR. Service available in Canada; see www.siriusxm.ca.

This functionality is only available for radios equipped with a Satellite receiver. In order to receive satellite radio, the vehicle needs to be outside with a clear view to the sky.

If the screen shows Acquiring Signal, you may have to change the vehicle's position to receive a signal. In most cases, the satellite radio does not receive a signal in underground parking garages or tunnels.

Audio

Push the AUDIO button on the faceplate to enter the Audio Menu. Turning the TUNE/SCROLL knob, highlight the desired selection.

The Audio Menu shows the following options for you to customize the audio settings:

- **Treble, Mid, Bass, Fade And Balance** — Select the desired setting to adjust, then push the ENTER/BROWSE button. Turn the TUNE/SCROLL knob to adjust the setting + or – 9. Push the BACK button on the faceplate when done.

- **Speed Adjusted Volume (If Equipped)** — Select “Speed Adjusted Volume” and push the ENTER/BROWSE button. Turn the TUNE/SCROLL knob to adjust the setting to Off, 1, 2, or 3. Push the BACK button on the faceplate when done.
- **Loudness (If Equipped)** — Select “Loudness” and push the ENTER/BROWSE button to mark the check box on or off. Push the BACK button on the faceplate when done.
- **AUX Volume Offset (If Equipped)** — Select “AUX Volume Offset” and push the ENTER/BROWSE button. Turn the TUNE/SCROLL knob to adjust the setting + or – 3. Push the BACK button on the faceplate when done.

MEDIA MODE

CONTENTS

■ OPERATING MEDIA MODE.	.30	□ Disc Mode	.31
□ Common Media Functions	.30	□ USB/iPod Mode	.32
□ Source	.30	□ AUX Mode.	.32
□ Info	.31	□ Bluetooth Mode	.33
□ Audio	.31		

OPERATING MEDIA MODE

Media Mode is entered by pushing the MEDIA button on the faceplate located to the left of the display. Once in Media Mode, press the MEDIA button in order to select the desired media source.

Common Media Functions

SEEK UP ►►/SEEK DOWN◄◄

Push and release the SEEK UP ►► button on the faceplate for the next selection.

Push and release the SEEK DOWN ◄◄ button on the faceplate to return to the beginning of the current selection, or return to the beginning of the previous selection if the Media is within the first three seconds of the current selection.

Fast SEEK UP►►

Push and hold the SEEK UP ►► button on the faceplate and the desired mode will begin to fast forward through the current track until the button on the faceplate is released.

Fast SEEK DOWN◄◄

Push and hold the SEEK DOWN ◄◄ button on the faceplate and the desired mode will begin to rewind through the current track until the button on the faceplate is released.

Source

Push the MEDIA button on the faceplate to select the desired audio source, disc (if equipped), AUX or USB.

Info

Push the INFO button on the faceplate to display the current track information.

Audio

Refer to “Radio Mode” for adjusting the audio settings.

Disc Mode

If equipped, the vehicle may have a remote disc player located in the lower center console storage bin.

Disc Mode is entered by either inserting a disc or by pushing the MEDIA button on the faceplate located to the left of the display. Once in Media Mode, select “Disc Mode.”

Inserting Compact Disc

Gently insert one disc into the disc player following the illustration indicated on the player. The disc will automatically be pulled into the disc player and the disc icon will illuminate on the radio display. If a disc does not go into the slot more than 1.0 inch (2.5 cm), a disc may already be loaded and must be ejected before a new disc can be loaded.

If you insert a disc with the ignition ON and the radio ON, the unit will switch to CD/Disc mode and begin to play when you insert the disc. The display will show the track number and index time in minutes and seconds. Play will begin at the start of track 1.

Eject Button — Ejecting A Disc

Push the EJECT button on the faceplate to eject the disc. If you have ejected a disc and have not removed it within

10 seconds, it will be reloaded. If the disc is not removed, the radio will reinsert the disc but will not play it.

A disc can be ejected with the radio and ignition OFF.

USB/iPod Mode

USB/iPod Mode is entered by either inserting a USB Jump Drive or iPod cable into the USB port, or by pushing the MEDIA button on the faceplate located to the left of the display. Once in Media Mode, push the MEDIA button and select USB/iPod.

Inserting USB/iPod Device

Gently insert the USB/iPod device into the USB port. If you insert a USB/iPod device with the ignition ON and the radio ON, the unit will switch to USB/iPod mode and begin to play when you insert the device. The display will show the track number, and index time in minutes and seconds. Play will begin at the start of track 1.

AUX Mode

AUX Mode is entered by inserting an AUX device using a cable with a 3.5 mm stereo audio jack into the AUX port, or by pushing MEDIA button on the faceplate located to the left of the display. Once in Media Mode, push the MEDIA button and select “AUX.”

Inserting Auxiliary Device

Gently insert the auxiliary device cable into the AUX port. If you insert an auxiliary device with the ignition ON and the radio ON, the unit will switch to AUX mode and begin to play when you insert the device cable.

Controlling The Auxiliary Device

The control of the auxiliary device (e.g., selecting playlists, play, fast forward, etc.) cannot be provided by the radio; use the device controls instead. Adjust the volume with the ON/OFF VOLUME rotary knob, or with the volume of the attached device.

NOTE: The vehicle radio unit is acting as the amplifier for audio output from the auxiliary device. Therefore if the volume control on the auxiliary device is set too low, there will be insufficient audio signal for the radio unit to play the music on the device.

Bluetooth Mode

Bluetooth Streaming Audio (BTSA) or Bluetooth Mode is entered by pairing a Bluetooth device containing music to the Uconnect system.

Before proceeding, the Bluetooth device must be paired with the Uconnect Phone to communicate with the Uconnect system.

See the “Pairing Procedure” in this manual for further details.

Once the Bluetooth device is paired to the Uconnect system, push the MEDIA button located on the faceplate. Once in Media Mode, press the “Source” button on the touchscreen and select “Bluetooth.”

NOTE: For mobile phone compatibility and pairing instructions, please visit UconnectPhone.com.

UCONNECT PHONE

CONTENTS

■ OPERATING UCONNECT PHONE	36	□ Receiving A Call — Accept (And End)	40
□ Pairing A Phone	37	□ Mute (Or Unmute) Microphone During Call . . .	41
□ Phonebook Download — Phonebook Transfer From Mobile Phone	39	□ Transfer Ongoing Call Between Handset And Vehicle	41
□ Making A Phone Call	40	□ Changing The Volume	41

WARNING!

ALWAYS drive safely with your hands on the wheel. You have full responsibility and assume all risks related to the use of the Uconnect features and applications in this vehicle. Only use Uconnect when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

OPERATING UCONNECT PHONE**Please say a command****Listen****Ignore****Call**

0701073934

The Uconnect Phone is a voice-activated, hands-free, in-vehicle communications system with Voice Command Capability (see Voice Command section).

The Uconnect Phone allows you to dial a phone number with your mobile phone using simple voice commands.

NOTE: The Uconnect Phone requires a mobile phone equipped with the Bluetooth Hands-Free Profile. To check mobile phone compatibility please visit UconnectPhone.com.

Uconnect System Support:

- U.S. residents - visit DriveUconnect.com or call 1-877-855-8400 (24 hours a day 7 days a week)
- Canadian residents call 1-800-465-2001 (English) or 1-800-387-9983 (French) or visit DriveUconnect.ca

Mon. – Fri., 8:00 am – 8:00 pm, ET

Sat., 9:00 am – 5:00 pm, ET

Sun., Closed

WARNING!

Any voice commanded system should be used only in safe driving conditions following all applicable laws. Your attention should be focused on safely operating the vehicle. Failure to do so may result in a collision causing serious injury or death.

Pairing A Phone

To begin using your Uconnect Phone, you must pair your compatible Bluetooth enabled mobile phone. Mobile phone pairing is the process of establishing a wireless connection between a cellular phone and the Uconnect system.

To complete the pairing process, you will need to reference your mobile phone Owner's Manual. Please visit UconnectPhone.com for complete mobile phone compatibility information.

NOTE:

- You must have Bluetooth enabled on your phone to complete this procedure.
 - The vehicle must be in PARK.
1. Place the ignition in the ACC or ON position.
 2. Push the "Phone" button on the faceplate.

NOTE: If there is no phones currently connected with the system, a pop-up will appear asking if you would like to pair a mobile phone.

3. Select "Yes" to begin the pairing process.

4. Search for available devices on your Bluetooth enabled mobile phone.
 - Press the Settings button on your mobile phone.
 - Select Bluetooth and ensure it is enabled. Once enabled, the mobile phone will begin to search for Bluetooth connections.
5. If No is selected, and you still would like to pair a mobile phone, press the "Settings" button from the Uconnect Phone main screen.
 - Select "Paired Phones" then press the "Add Device" button on the touchscreen.
 - Search for available devices on your Bluetooth enabled mobile phone (see below). When prompted on the phone, select "Uconnect" and accept the connection request.
6. Uconnect Phone will display an in progress screen while the system is connecting.

7. When your mobile phone finds the Uconnect system, select "Uconnect."
8. When prompted on the mobile phone, accept the connection request from Uconnect Phone.

NOTE: Some mobile phones will require you to enter the PIN number.

9. When the pairing process has successfully completed, the system will prompt you to choose whether or not this is your favorite phone. Selecting "Yes" will make this phone the highest priority. This phone will take precedence over other paired phones within range and will connect to the Uconnect system automatically when entering the vehicle. Only one mobile phone and/or one Bluetooth audio device can be connected to the Uconnect system at a time. If "No" is selected, simply select "Uconnect" from the mobile phone/audio device Bluetooth screen, and the Uconnect system will reconnect to the Bluetooth device.

Phonebook Download — Phonebook Transfer From Mobile Phone

If equipped and specifically supported by your phone, Uconnect Phone will ask you if you want to download names (text names) and number entries from your mobile phone's phonebook. Specific Bluetooth Phones with Phone Book Access Profile may support this feature. See UconnectPhone.com for supported phones.

NOTE:

- Download and update, if supported, begins as soon as the Bluetooth wireless phone connection is made to the Uconnect Phone, for example, after you start the vehicle.
- You may be asked for permission to initiate the phonebook download.

- A maximum of 2,000 contact names with six numbers per contact will be downloaded and updated every time a phone is connected to the Uconnect Phone.
- Depending on the maximum number of entries downloaded, there may be a short delay before the latest downloaded names can be used. Until then, if available, the previously downloaded phonebook is available for use.
- Only the phonebook of the currently connected mobile phone is accessible.
- Only the mobile phones phonebook is downloaded. SIM card phonebook is not part of the Mobile phonebook.
- This downloaded phonebook cannot be edited or deleted on the Uconnect Phone. These can only be edited on the mobile phone. The changes are transferred and updated to Uconnect Phone on the next phone connection.

Making A Phone Call

1. Push the PHONE button on the steering wheel.
2. After the BEEP, say “dial” (or “call” a full name or phone number).

Receiving A Call — Accept (And End)

1. When an incoming call rings or is announced on Uconnect, push the PHONE button on the faceplate.
2. To end a call, push the PHONE button on steering wheel or the PHONE button on the faceplate.

Mute (Or Unmute) Microphone During Call

- Push the “Play/Pause/Mute” hard button on the radio or during a call, push the VOICE COMMAND button on the steering wheel. After the BEEP, say “mute” (or “mute off”).

Transfer Ongoing Call Between Handset And Vehicle

- With a call in progress use the browse/enter scroll wheel to select “transfer” then press the enter button or push the “Phone Pickup” button on the steering wheel controls during a call, push the VOICE COMMAND button on the steering wheel. After the BEEP, say “transfer call.”

Changing The Volume

1. Start a dialogue by pushing the PHONE button on the faceplate, then adjust the volume during a normal call.
2. Use the radio ON/VOLUME rotary knob to adjust the volume to a comfortable level while the Uconnect system is speaking. Please note the volume setting for Uconnect phone is different than the audio system volume setting.

UCONNECT 3.0 VOICE RECOGNITION QUICK TIPS

CONTENTS

■ UCONNECT VOICE RECOGNITION	.44	□ Radio	.47
□ Introducing Uconnect	.44	□ Media	.47
□ Get Started	.45	□ Phone	.48
□ Basic Voice Commands	.46	□ Additional Information	.48

UCONNECT VOICE RECOGNITION

Introducing Uconnect

Start using Uconnect Voice Recognition with these helpful quick tips. It provides the key Voice Commands and tips you need to know to control your Uconnect 3.0 system.

Key Features:

- 3" display
- Three buttons on either side of the display

WARNING!

Any voice commanded system should be used only in safe driving conditions following all applicable laws. Your attention should be focused on

WARNING! (Continued)

safely operating the vehicle. Failure to do so may result in a collision causing serious injury or death.




0415077825

(Continued)


Get Started

1. Visit UconnectPhone.com to check mobile device and feature compatibility and to find phone pairing instructions.
2. Reduce background noise. Wind and passenger conversations are examples of noise that may impact recognition.
3. Speak clearly at a normal pace and volume while facing straight ahead. The microphone is positioned on the rearview mirror and aimed at the driver.
4. Each time you give a Voice Command, you must first push either the VR or PHONE button, wait until **after** the beep, then say your Voice Command.
5. You can interrupt the help message or system prompts by pushing the VR or PHONE button and saying a Voice Command from current category.

All you need to control your Uconnect system with your voice are the buttons on your steering wheel.

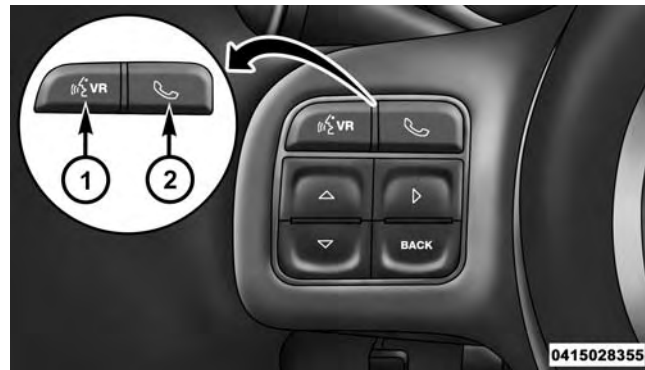

- 1 — Push To Begin Radio Or Media Functions
 2 — Push To Initiate, Answer, Or End A Phone Call, Send Or Receive A Text

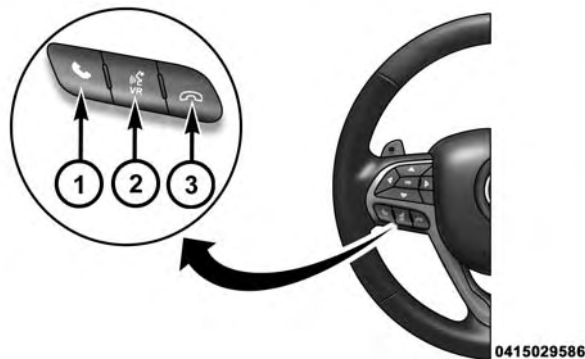

- 1 — Push To Initiate Or To Answer A Phone Call, Send Or Receive A Text
2 — Push To Begin Radio Or Media Functions
3 — Push To End Call
-

Basic Voice Commands

The basic Voice Commands below can be given at any point while using your Uconnect system.

Push the VR button . After the beep, say...

- **Cancel** to stop a current voice session
- **Help** to hear a list of suggested Voice Commands
- **Repeat** to listen to the system prompts again

Notice the visual cues that inform you of your voice recognition system's status. Cues appear on the screen.

Radio

Use your voice to quickly get to the AM, FM or SiriusXM Satellite Radio stations you would like to hear. (Subscription or included SiriusXM Satellite Radio trial required.)

Push the VR button . After the beep, say...

- **Tune to** ninety-five-point-five FM
- **Tune to** Satellite Channel Hits 1

TIP: At any time, if you are not sure of what to say or want to learn a Voice Command, push the VR button  and say **“Help.”** The system will provide you with a list of commands.

Media

Uconnect offers connections via USB, SD, Bluetooth and Auxiliary ports (If Equipped). Voice operation is only available for connected USB and iPod devices. (Remote CD player optional and not available on all vehicles.)

Push the VR button . After the beep, say one of the following commands and follow the prompts to switch your media source or choose an artist.

- **Change source** to Bluetooth
- **Change source** to iPod
- **Change source** to USB
- **Play artist** Beethoven; **Play album** Greatest Hits; **Play song** Moonlight Sonata; **Play genre** Classical

Phone

Making and answering hands-free phone calls is easy with Uconnect. Check UconnectPhone.com for mobile phone compatibility and pairing instructions.

Push the PHONE button . After the beep, say one of the following commands:

- **Call** John Smith
- **Dial** 123-456-7890 and follow the system prompts
- **Redial** (call previous outgoing phone number)
- **Call back** (call previous incoming phone number)

TIP: When providing a Voice Command, push the PHONE button  and say “**Call,**” then pronounce the name **exactly** as it appears in your phone book. When a contact has multiple phone numbers, you can say “**Call John Smith work.**”

Additional Information

© 2015 FCA US LLC. All rights reserved. Mopar and Uconnect are registered trademarks and Mopar Owner Connect is a trademark of FCA US LLC. Android is a trademark of Google Inc.

DriveUconnect.com



16UC3-526-AC
Third Edition Rev 1
Radio 3.0/Uconnect® 3.0
Printed in the USA



©2015 FCA US LLC. All Rights Reserved.
Chrysler, Dodge, Jeep, Ram and Mopar are registered trademarks of FCA US LLC.
FIAT is a registered trademark of Fiat Group Marketing
& Corporate Communication S.p.A., used under license by FCA US LLC.