



ALPHA 3 PRO LiFePO₄ Battery

User Manual



MODEL: ALPHA 3 PRO

THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS FOR LiFePO₄ BATTERY. PLEASE READ THIS MANUAL AND FOLLOW THE INSTRUCTIONS EXACTLY.

02	IMPORTANT NOTES
02	EXPLANATION OF SYMBOLS
03	SAFETY INSTRUCTIONS
04	SCOPE OF DELIVERY
05	TARGET GROUP
05	INTENDED USE
05	TECHNICAL DESCRIPTION
07	INSTALLATION
08	CONFIGURATION
10	CLEANING
11	STORAGE
11	TROUBLESHOOTING
12	DISPOSAL
13	TECHNICAL DATA
17	FCC STATEMENT
18	APP QUICK-START GUIDE

IMPORTANT NOTES

Please read these instructions carefully and follow all instructions, guidelines, and warnings included in this product manual in order to ensure that you install, use, and maintain the product properly at all times. These instructions **MUST** stay with this product.

By using the product, you hereby confirm that you have read all instructions, guidelines, and warnings carefully and that you understand and agree to abide by the terms and conditions as set forth herein. You agree to use this product only for the intended purpose and application and in accordance with the instructions, guidelines, and warnings as set forth in this product manual as well as in accordance with all applicable laws and regulations. A failure to read and follow the instructions and warnings set forth herein may result in an injury to yourself and others, damage to your product or damage to other property in the vicinity. This product manual, including the instructions, guidelines, and warnings, and related documentation, may be subject to changes and updates. For up-to-date product information, please visit **www.richsolar.com**.

EXPLANATION OF SYMBOLS

WARNING!

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

CAUTION!

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE!

Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

 **Note:** Supplementary information for operating the product.

SAFETY INSTRUCTIONS

WARNING! Risk of injury

- Batteries contain aggressive and caustic acids. Avoid battery fluid coming into contact with your body. If your skin does come into contact with battery fluid, wash that part of your body thoroughly with water. If you sustain any injuries from acids, contact a doctor immediately.

- When working on batteries, do not wear any metal objects such as watches or rings. LiFePO₄ batteries can cause short circuits which can cause serious injuries.

- Only use insulated tools.
- Do not place any metal parts on the battery.
- Wear goggles and protective clothing when working on batteries. Do not touch your eyes when working on batteries.
- Do not use defective batteries.

WARNING! Health hazard

Keep the battery out of the reach of children.

CAUTION! Electrocutation hazard

- Keep the battery away from water.
- Avoid short circuits.
- Avoid clothing rubbing against the battery.
- Wear antistatic clothing when handling the battery.

CAUTION! Explosion hazard

- Do not place the battery in an area with flammable liquids.
- Never attempt to charge a frozen or defective battery. Place the battery in a frost-free area and wait until the battery has acclimatized to the ambient temperature. Then start the charging process.
- Do not smoke, use an open flame, or cause sparking near the engine or a battery.
- Keep the battery away from heat sources.

NOTICE! Damage hazard

- Only use rechargeable batteries.
- Prevent any metal parts from falling on the battery. This can cause sparks or short-circuit the battery and other electrical parts.
- Ensure that the polarity is correct when connecting the battery.
- Follow the instructions of the battery manufacturer and those of the manufacturer of the system or vehicle in which the battery is used.
- If the battery has to be removed, first disconnect the ground connection. Disconnect all connections and all consumers from the battery before removing it.
- Recharge stored batteries regularly.
- Do not carry the battery by its terminals.

Safety precautions when handling lithium batteries

CAUTION! Risk of injury

Only use batteries with integrated battery management system and cell balancing.

NOTICE! Damage hazard

Avoid deep discharge of the batteries.

SCOPE OF DELIVERY

ITEM	Name	Specifications	Unit	QTY	Remark
1	Battery	12.8V314Ah (ALPHA 3 PRO)	Set	1	
2	Screw	SUS304_M8x12_triple combination machine tooth screw	PCS	2	PE bag packaging
3	Screw	SUS304_M8x16_triple combination machine tooth screw	PCS	2	PE bag packaging
4	Screw	SUS304_M8x20_triple combination machine tooth screw	PCS	2	PE bag packaging
5	Manual	ALPHA 3 PRO Manual	PCS	1	PE bag packaging

TARGET GROUP

The electrical power supply must be connected by a qualified electrician who has demonstrated skill and knowledge related to the construction and operation of electrical equipment and installations, and who is familiar with the applicable regulations of the country in which the equipment is to be installed and/or used, and has received safety training to identify and avoid the hazards involved.

INTENDED USE

The device is intended to be used as a storage of electrical power for motorhomes, RVs, camping. This product is only suitable for the intended purpose and application in accordance with these instructions.

This manual provides information that is necessary for proper installation and/or operation of the product. Poor installation and/or improper operating or maintenance will result in unsatisfactory performance and a possible failure.

The manufacturer accepts no liability for any injury or damage to the product resulting from:

- Incorrect assembly or connection, including excess voltage.
- Incorrect maintenance or use of spare parts other than original spare parts provided by the manufacturer.
- Alterations to the product without express permission from the manufacturer.
- Use for purposes other than those described in this manual.

RICH SOLAR reserves the right to change product appearance and product specifications.

TECHNICAL DESCRIPTION

The advanced LiFePO₄ battery offers the desired features like charging below freezing as well as Bluetooth. The batteries are equipped with a Battery Management System (BMS) which is built in the battery housing. The battery management system can be used to prevent deep discharge, overcharge, and over-temperature of the battery. This battery has the following features:

Simple Explanation – BMS Activation After Protection

RICH SOLAR batteries include an internal Battery Management System (BMS) that protects the cells from unsafe conditions such as over-discharge, over-charge, or over-current. When one of these protections is triggered, the BMS will temporarily “shut off” the battery to prevent damage.

During this protection state:

- The battery will only show **1–3V DC** at the terminals.
- This low voltage is intentional—it allows **Li-compatible chargers** to detect that a battery is present.

To reactivate the battery, the BMS simply needs to see a **nominal 12-volt source**. A lithium-compatible charger will automatically pulse the battery with ~12V, the BMS wakes up, clears the protection, and normal charging can resume.

This process is automatic for most Li-profile chargers.

Heating function

When it's active: If the battery's charging protection system detects low temperatures, the heating function automatically turns on, but only when there is charging current present. The battery cannot use its own internal power to activate the heater.

When it turns off: Once the temperature rises above the set threshold, the heating function will automatically turn off.


There is a heater inside the battery. The heater is controlled by a BMS, allowing the battery to be charged at low temperatures.

Heating Opening Temperature	≤41°F
Heating Opening Conditions	Charge
Heating Closing Conditions	Disconnect the charger or Temperature ≥50°F
Heating Power	100W

(Temperature refers to the temperature detected by the internal temperature probe of the battery, not the ambient temperature.)

INSTALLATION


The ALPHA 3 PRO battery has the following components:

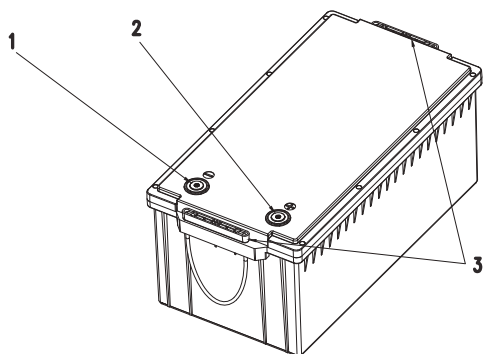


1. Negative battery terminal (M8)
2. Positive battery terminal (M8)
3. Battery case handle

Mounting Instructions


YES

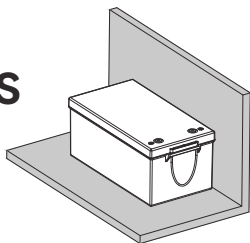


NO

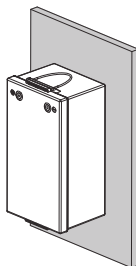

NO

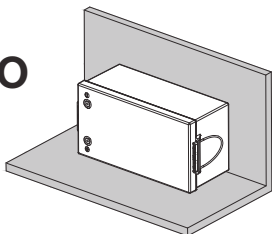

NO

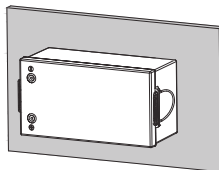

Place the battery smoothly with the positive and negative poles facing up.

Do not mount the battery on the wall without the mounting bracket.

Maximum of 4 batteries can be connected in parallel.


CONFIGURATION

i Note! Damage Hazard

Wiring


Parallel connection-1:

Positive

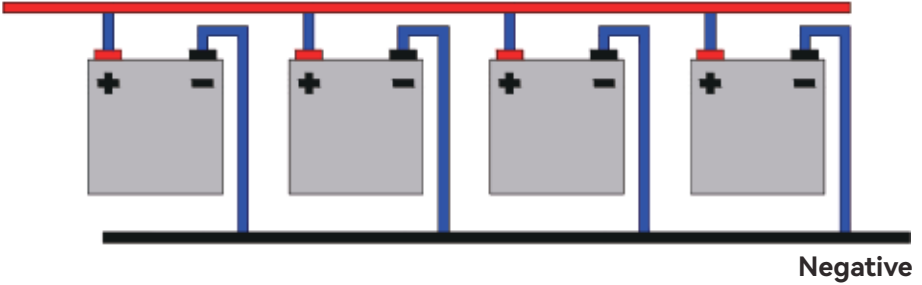

Parallel connection-2:

Positive

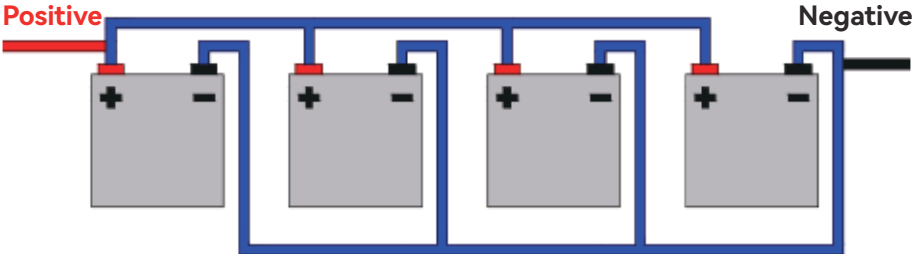

WARNING! Damage hazard

- Refer the connection diagram to connect battery pack in parallel.
- A maximum of 4 batteries in parallel.
- Fully charge each battery pack separately or the max difference voltage between battery packs is within 1V. When multiple batteries are used in parallel, each individual battery should be fully charged or fully discharged separately to ensure that the voltage difference between each battery pack is as small as possible, and then connected in parallel.
- When multiple battery packs are used in parallel, the total charging surge current of the charger may be applied to a single battery pack. It should be ensured that the total charging surge current of the charger does not exceed the maximum charging surge current of a single battery.
- When connecting battery with cables, make sure not to reverse the polarity of the connections. If it is indeed connected incorrectly, the BMS may be damaged. It needs to be retested and qualified before use.

• Battery parallel precautions:

It is strictly prohibited to connect battery packs of different brands, models and specifications in parallel. Battery cables connected in parallel must have the same length and specifications, and the busbar must have sufficient current carrying capacity.

Charging

WARNING! Damage hazard

- Do not hot-swap the battery pack connection with RV system unless necessary, it will cause surge current.
- Do not charge with higher current than recommended value. It will damage the battery electrical, mechanical and safety performance and could lead to heat generation or leakage.
- Charging current should be less than maximum charging current.
- Charging voltage should be less than 14.4V. Charging beyond this absolute maximum voltage is strictly prohibited.
- The battery should be charged within the charging temperature range.
- Reverse charging is prohibited.

- The battery should be connected correctly and the polarity to be confirmed before wiring.
- In case the battery is connected improperly, the battery cannot be charged.
- The reverse charging may cause damaging to the battery which may lead to degradation of battery performance and damage the battery safety and could cause heat generation or leakage.

Discharging

- The battery should be discharged at less than the maximum discharge current. High discharging current may reduce the discharging capacity significantly or cause over-heat.
- The battery should be discharged within the discharging temperature range.
- To prevent over-discharging, the battery should be charged periodically to keep about 40-50% charge.
- Over-discharging may cause loss of battery performance, characteristics or battery functions.
- The charger prevent the battery to be further discharged beyond the end-of-discharge voltage.

CLEANING

The lithium batteries are maintenance-free. Occasionally clean the product with a damp cloth.

STORAGE

The battery is in transit, and SOC is about 30% by air shipment, about 50 % SOC by sea shipment. The storage environment requirement is as follows:

Storage Temperature	-22 ~ 131°F 90%RH Max	Less than 1 month
	14 ~ 113°F 90%RH Max	More than 3 months
Recommended Storage Temperature	50 ~ 95°F 85%RH Max	The battery life would be reduced if battery is stored in high temperature

If you want to store it for a long time (more than 3 months), store it in an environment where the temperature ranges from 50°F to 95°F @ 85% RH Max and does not contain corrosive gases. Charge and discharge it every 3 months and keep the SOC between 40-50%.

TROUBLESHOOTING

Problem	Possible cause	Suggested remedy
Battery displays 1-3V and will not turn on	BMS protection triggered (over-discharge, over-current, or over-charge event).	Connect a lithium-compatible charger to the battery. The charger will detect the 1-3V signal and deliver a nominal 12V activation pulse to wake up the internal BMS. Once activated, the battery will resume normal charging.
Battery cannot discharge	• Protection against over-temperature. (cell temperature is higher than 149°F) • Protection against under voltage protection. • Protection against over current protection. • Battery output terminal is short circuit. • System failure.	• Regulate battery pack discharge ambient temperature lower than 122°F. • Charge battery. • RV discharge power is over load, should decrease discharge power. • Check the connection wire and try charge battery. • Shutdown system and check the RV system function.

Problem	Possible cause	Suggested remedy
Battery cannot charge	• Protection against over voltage protection. • Protection against over current protection. • Protection against over-temperature or under-temperature. (cell temperature is lower than 32°F or higher than 131°F). • Battery output terminal is short circuit. • System failure.	• Disconnect the charger and load discharge current for few minutes. Try again to charge the battery. • Charge is abnormal and the output current is over value. • Regulate battery pack charge ambient temperature from 41°F to 113°F. If charged in freezing weather, need to wait until it is heated up to 50°F by inner heater. • Check the connection wire and try charge battery. • Shutdown system and check the RV system function.
Bluetooth cannot connect	• Poor signal. • The battery goes to sleep.	• Approach RV system and try connect again. • Try charge the battery.

DISPOSAL



Recycling products with batteries, rechargeable batteries and light sources: Remove any batteries, rechargeable batteries, and light sources before recycling the product. Return defective or used batteries to your retailer or dispose of them at collection points. Do not dispose of any batteries, rechargeable batteries, and light sources with general household waste. If you wish to finally dispose of the product, ask your local recycling center or specialist dealer for details about how to do this in accordance with the applicable disposal regulations. The product can be disposed free of charge.



Recycling packaging material: Place the packaging material in the appropriate recycling waste bins wherever possible.

TECHNICAL DATA

For the below table, all items are minimum performance values and “must have” UNLESS indicated otherwise.

Battery Technical Parameters

Project Specifications	Standard Parameters	Remarks
Battery model	12.8V 314Ah	The battery supports a maximum of four strings or four parallel batteries
Battery type	LFP battery	
Nominal voltage	12.8V	
Nominal capacity	314Ah	77±3.6°F, 0.5C Charge, 0.5C Discharge
Minimum capacity	314Ah	77±3.6°F, 0.5C Charge, 0.5C Discharge, Factory capacity
Nominal energy	4019Wh	
Maximum charging voltage	14.4V	
Nominal discharging cutoff voltage	10V	
Standard charging current	157A	0.5C, 77±3.6°F
Maximum charging current	200A	77±3.6°F, not support cycling
Standard discharge current	157A	0.5C, 77±3.6°F
Continuous discharge current	157A	0.5C, 77±3.6°F
Maximum discharge current	200A	77±3.6°F, not support cycling
Shell material	Plastic shell	
Weight	About 71.7lb/32.5kg	Net battery weight
Initial internal resistance	≤50mΩ	New battery within 3 months, ACIR, 1000Hz
Monthly self-discharge rate	≤5%	Standard charged to 100% SOC, and storage for 28 days at 77±3.6°F

Overall dimensions	20.5x10.6x8.7in/ 520x268x220mm	Length x Width x Height (Box size, without handle, terminal)
Delivery voltage	12 ~ 14.0V	50 ~ 60% SOC
Cycle life (times)(77±3.6°F)	≥4800 Capacity retention: ≥70%	a) At room temperature, continue charging at 157A constant current until the battery voltage is 14.4V, and charge at constant voltage until the current is 0.05C, let stand 2h b) Discharged at 157A to the cut-off voltage 10V at room temperature, let stand 3h c) Repeating steps of a) ~ b), until the discharge capacity reached the 70% of rated capacity, the number of cycles completed was defined as the battery cycle life
Communication mode	Bluetooth	
Charging temperature	62.8A	32 ~ 50°F / 0 ~ 10°C
	100A	50 ~ 68°F / 10 ~ 20°C
	157~200A	68 ~ 104°F / 20 ~ 40°C
	62.8A	104 ~ 131°F / 40 ~ 55°C
Discharge temperature	-4 ~ 140°F /-20 ~ 60°C	The surface temperature of the cell should not exceed 140°F
Storage temperature	-22 ~ 131°F / -30 ~ 55°C 90%RH Max	Less than 1 month
	14 ~ 113°F / -10 ~ 45°C 90%RH Max	More than 3 months
Recommended storage temperature	50 ~ 95°F / 10 ~ 35°C 85%RH Max	The battery life would be reduced if battery is stored in high temperature

Battery Management System

Function	Test project	Min	Typical	Max	Unit
Operation voltage	Voltage range	10.0	/	14.4	V
Operation current	Charging current	/	100	200	A
	Discharge current	/	100	200	A
Over charge protection	Charger voltage (CC/CV)	/	/	14.4	V
	Over charge protection voltage (Cell)	3.60	3.65	3.70	V
	Over charge protection delay time	1000	2000	3000	ms
	Over charge protection recovery voltage (Cell)	3.5	3.55	3.65	V
Over discharge protection	Over discharge protection voltage (Cell)	2.4	2.5	2.6	V
	Over discharge protection delay time	1000	2000	3000	ms
	Over discharge protection recovery voltage (Cell)	2.9	3.0	3.1	V
	Over discharge protection release conditions	Charging recovery. Voltage self recovery within 60 ± 20s.			
Over-current charge	Primary charge over current protection value	210	220	230	A
	First stage charge over current delay	7	10	13	s
	Secondary charge over current protection value	/	/	/	A
	Secondary charge over current delay	/	/	/	ms
	Over-current charge release conditions	Automatic recover after a delay of 32±7s.			

Over-current discharge	Primary discharge over current protection value	210	220	230	A
	Primary discharge over current protection delay	3	5	7	s
	Secondary discharge over current protection current value	608	760	912	A
	Secondary discharge over current protection delay	170	320	500	ms
	Over-current discharge release	Automatic recover after a delay of 32±7s.			
Discharge high temperature protection	Temperature protection value	140	149	158	°F
	Temperature protection release value	131	140	149	°F
Discharge low temperature protection	Temperature protection value	-13	-4	5	°F
	Temperature protection release value	5	14	23	°F
Charging high temperature protection	Temperature protection value	122	131	140	°F
	Temperature protection release value	113	122	131	°F
Charging low temperature protection	Temperature protection value	32	41	50	°F
	Temperature protection release value	41	50	59	°F
High temperature protection of FET (Built-in)	Temperature protection value	212	221	230	°F
	Temperature protection release value	176	185	194	°F
Balance function	Balance start voltage	3.4	3.45	3.5	V
	Balance start voltage difference	15			mV
	Balance current	50	/	150	mA
Heating function	The charging low temperature protection is turned on, and the battery is in the charging state, and the heating is turned on	100			W
	After low temperature protection release, heat off				

Note: Test should be at temperature 77±3.6°F, and relative humidity 65±20% of surroundings.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20cm (7.87in) between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

APP QUICK-START GUIDE

Download The App

Option 1: Scan the QR code below to go directly to the **"RICH SOLAR"** download page (supports iOS and Android).

(This QR code can also be found on the side of your device.)



iOS



Android


Option 2: Search for **"RICH SOLAR"** in the Google Play Store (Android) or App Store (iOS).

Pairing Your Device


If you are using the battery for the first time, you first need to pair the battery with your phone using the **RICH SOLAR** app.

1. Ensure Bluetooth and Location Services are enabled on your phone.
2. On the Rich Solar app's home screen, which displays all devices, tap the "Add Now" icon in the center of the screen.


Note: The ⓘ icon in the upper left corner is used to access the "parallel connection".

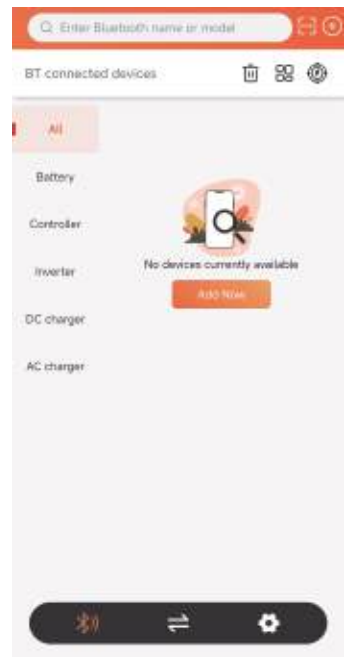

3. When devices appear on the screen, select the device you wish to add. Be sure to select the one with the strongest signal.

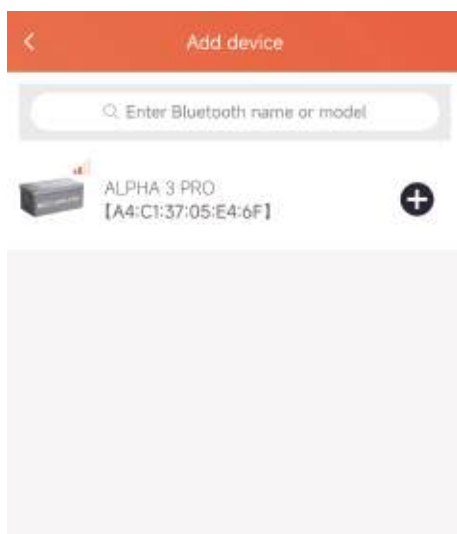

4. You can also find the **"MAC Code / Device Address"** on the lower side of the device. This facilitates pairing when multiple devices are displayed on the screen.

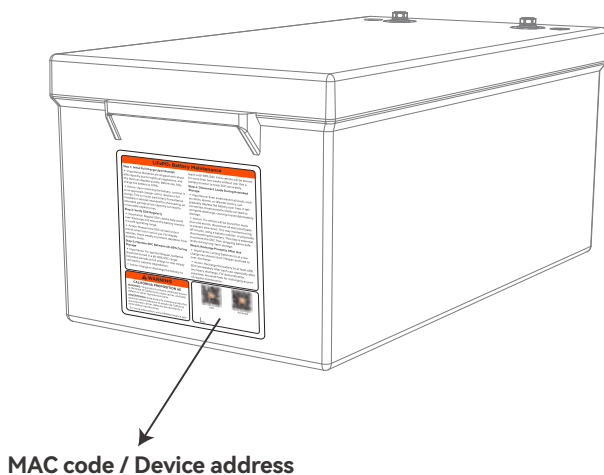


App Settings

To access the settings menu, on the Rich Solar app's home screen (which displays all devices), tap the  icon in the lower right corner, then navigate to the "App Settings" page. Here, you can change the app language, temperature unit, etc.

App Operation

If you are using the **RICH SOLAR** app for the first time, you will land on the main screen shown below. There are four main navigation tabs at the bottom: Real-time, History, Control, and Parameters. The following sections describe each tab.

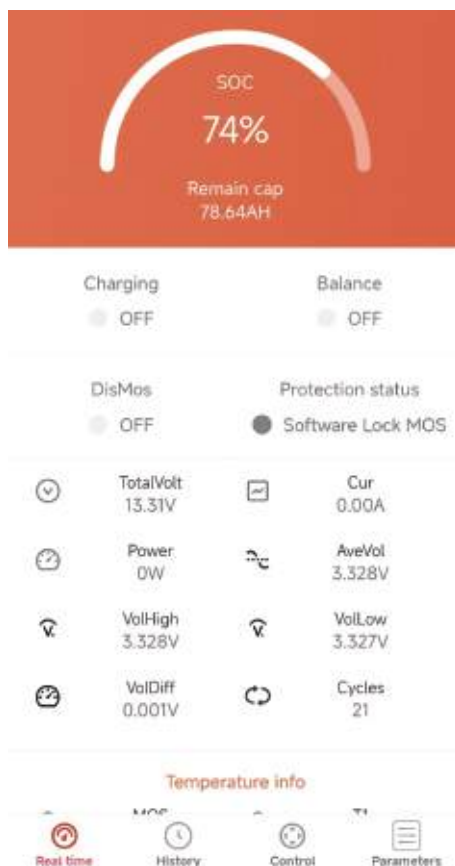

Real-time Tab

This tab provides real-time monitoring and a clear overview of the battery's operating status.

Key Status Indicators:

- **SOC (State of Charge):** Displays the current battery charge level.
- **Remaining Capacity:** Shows the usable energy stored in the battery.
- **Charge Status:** OFF -- Indicates the battery is not charging.
- **Balance Status:** OFF -- Indicates the cell voltage balancing function is not active.
- **Discharge MOSFET (DisMos) Status:** OFF -- Indicates the discharge circuit is open.
- **Protection Status:** Software Lock MOS -- Indicates the MOSFET is locked by software for safety.

Electrical Parameters:

- **Total Voltage:** The total voltage of the battery pack.
- **Current (Cur):** 0.00 A -- No current detected.
- **Power:** 0 W -- No charge or discharge power.
- **Average Cell Voltage (AveVol).**
- **Highest Cell Voltage (VolHigh).**
- **Lowest Cell Voltage (VolLow).**
- **Voltage Difference (VolDiff):** Indicates the balance between cells.
- **Cycle Count:** The total number of charge and discharge cycles.

Temperature Readings:

- **MOS (MOSFET Temperature), T1, T2, T3.**

Individual Cell Voltages:

- **Cell 1 --- Cell 4:** Displays the voltage of each cell independently.

History Tab

This tab provides a comprehensive, real-time overview of battery performance and status through charts. It displays multiple synchronized charts for precise monitoring and in-depth analysis.

Voltage & Current Chart:

- **Voltage (V):** Monitors cell voltage levels, including Average Voltage (AveVol), Highest Cell Voltage (VolHigh), and Lowest Cell Voltage (VolLow).
- **Current (A):** Tracks battery charge and discharge current.



Capacity & Current Chart:

- **Capacity (Ah):** Shows the battery's Remaining Capacity (Cap).
- **Current (A):** Provides corresponding current trends for comparison.



Temperature & Current Chart:

- **Temperature (°F):** Displays real-time cell temperature variations.
- **Current (A):** Facilitates correlation analysis between current flow and temperature behavior.



Control Tab


This tab allows users to manually enable or disable the charging and discharging functions of the battery system.

Charge Switch:

- Turn ON to allow charging. Turn OFF to block all input current.


Discharge Switch:

- Turn ON to supply power to loads. Turn OFF to stop output for safety and maintenance purposes.

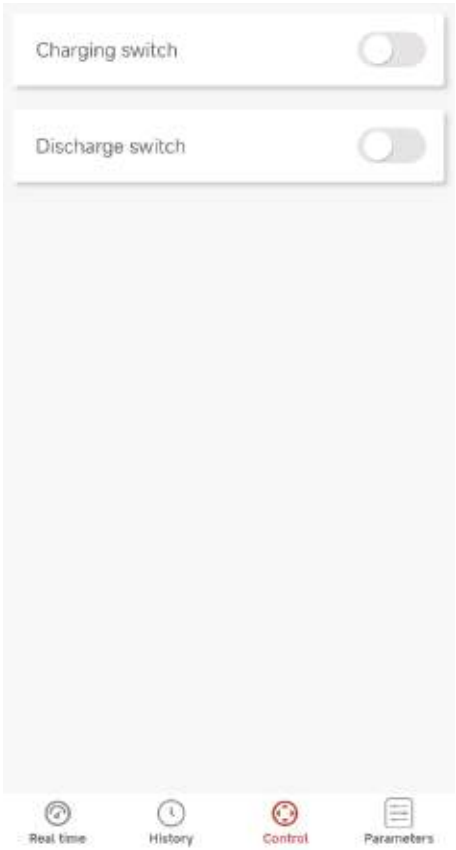

Parameters Tab

This tab displays basic product information and protection counts.

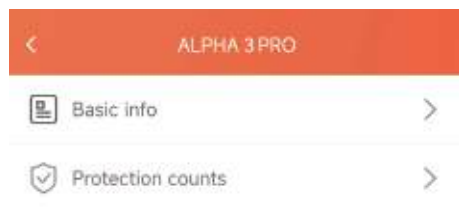

The Protection Count function provides a complete overview of all safety protection events. This page is read-only and records the total number of times each protection mechanism has been triggered.

< Protection counts	
Short circuit protection count	0
Charging overcurrent count	0
Discharge overcurrent count	0
Cell overvoltage count	0
Charging high temperature count	0
Charging low temperature count	0
Discharge high temperature count	0
Discharge low temperature count	0
Pack overvoltage count	0
Pack undervoltage count	0
System restart count	0

 1-800-831-9889

 support@richsolar.com

 www.richsolar.com

 1900 Mountain Ave, Norco, CA 92860

V 1.0