

REPAIR SHEET

BRAND

RYOBI

DESCRIPTION


18 Volt Brushless Grass Shear/Shrubber

MODEL NO.

PBLSH01

MFG. NO.

106651001

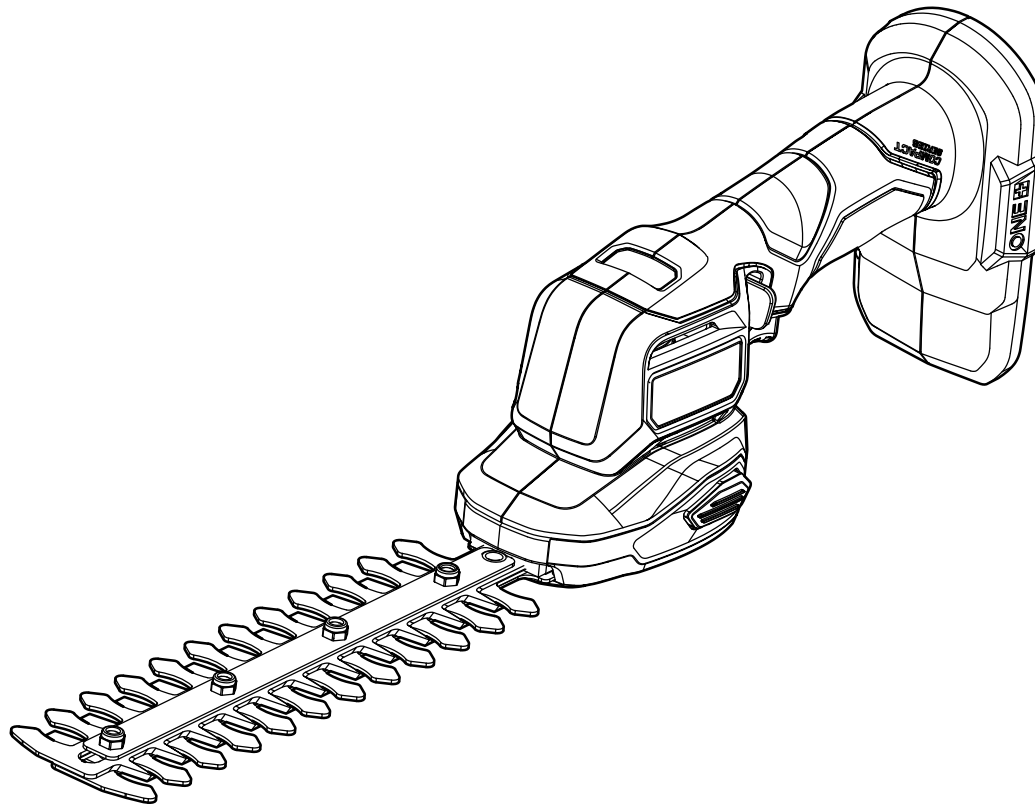


TTI OUTDOOR POWER EQUIPMENT, INC.

P.O. Box 1288, Anderson, SC 29622 ■ 1-800-525-2579 ■ www.ryobitools.com

3-9-26 (Rev:01)

The model number and manufacturing location will be found on a label attached to the product. Always mention this information in all communications regarding this product and when ordering parts.

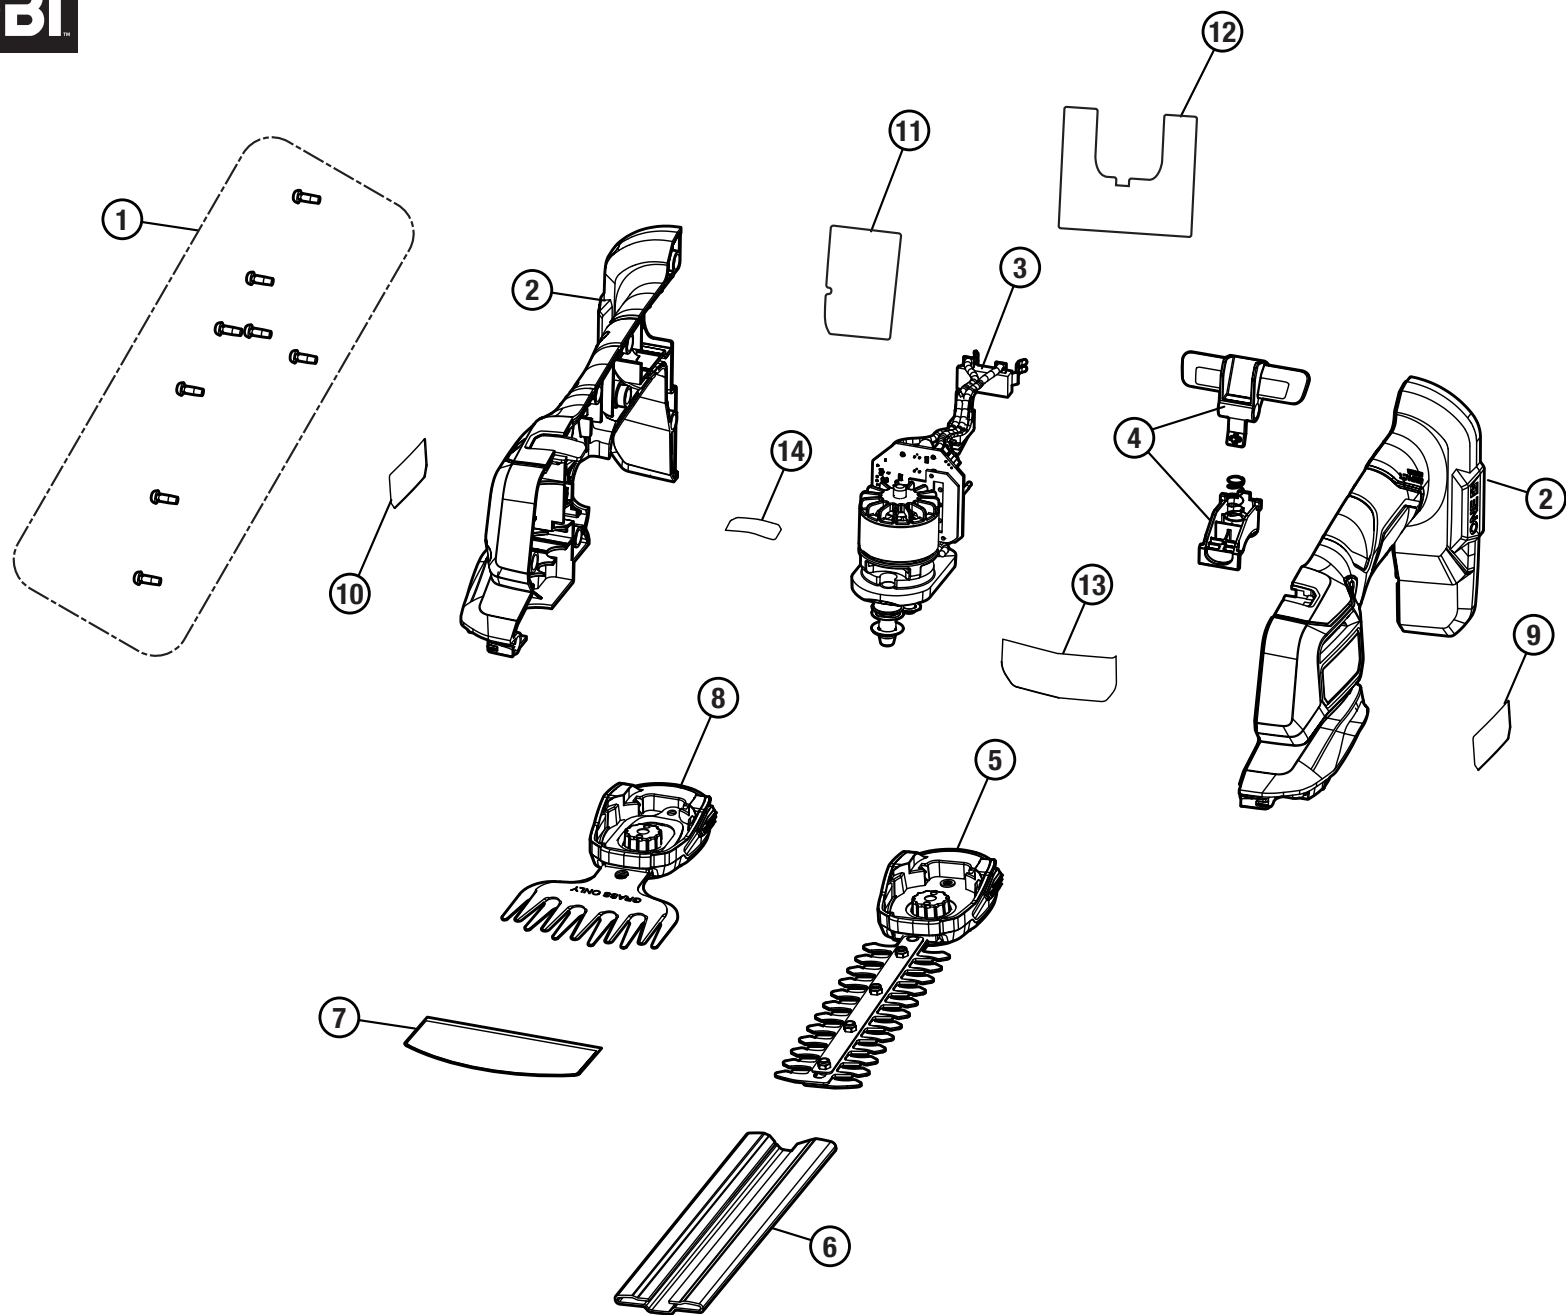




PBLSH01

PARTS LIST

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	660031023	Screw (M3.5 x 10 mm, T10 Torx Pan Hd.)	9
2	205015003	Housing Assembly (Inc. Key Nos. 9-14)	1
3	205501006	Motor and Circuit Board Assembly	1
4	516708006	Trigger and Lock-Off Button	1
5	205111018	Hedge Trimmer Blade Assembly (Inc. Key No. 6)	1
6	546691033	Scabbard	2
7	903318002	Sheath	1
8	205111017	Grass Shear Blade Assembly (Inc. Key No. 7)	1
9	941201150	Logo Label One+ HP	1
10	941263566	Danger Label	1
11	941263568	QR Label	1
12	941263564	Data Label	1
13	941097020	Icon Label	1
14	941263567	Logo Label	1
	Not Shown:		
	999000607	Operator's Manual	

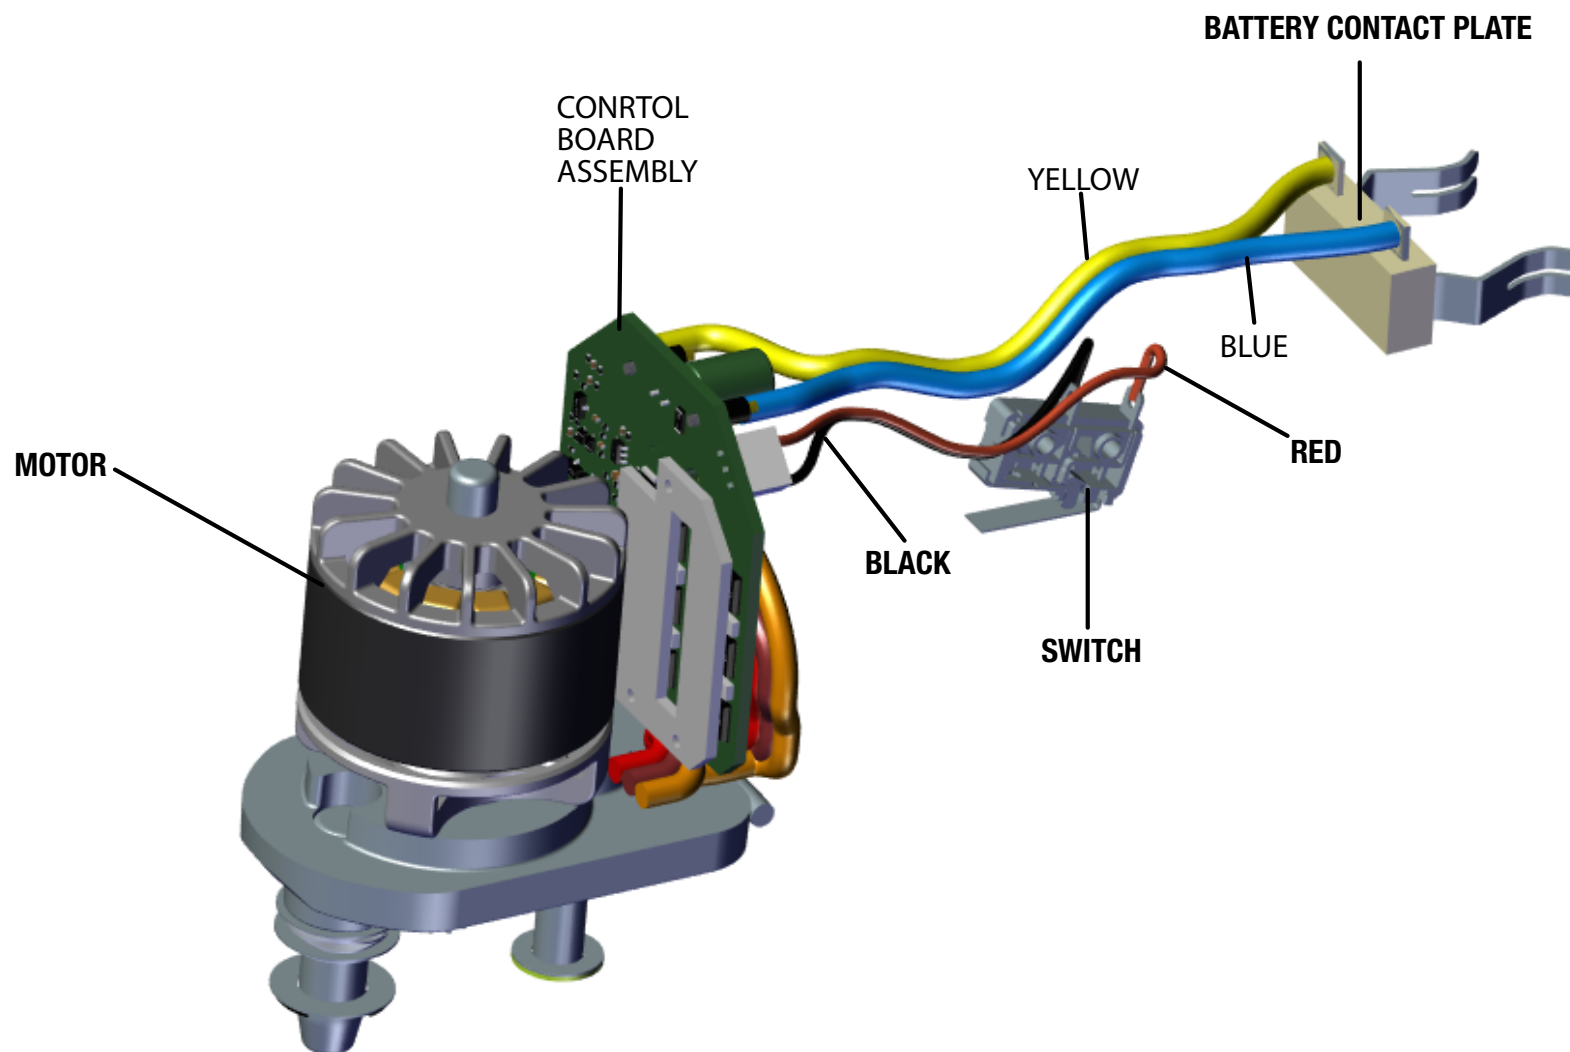**WIRING DIAGRAM**